

 
**PRODUCT MODEL NUMBERS**

EV150FXM

**Electrical:** A 115 Volt, 60 Hz., AC only 15 or 20 amp fused (or circuit breaker), grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

**Water Supply:** Connect the ice maker to a cold water line with water pressure between 30 and 120 psi.


**OVERALL DIMENSIONS**

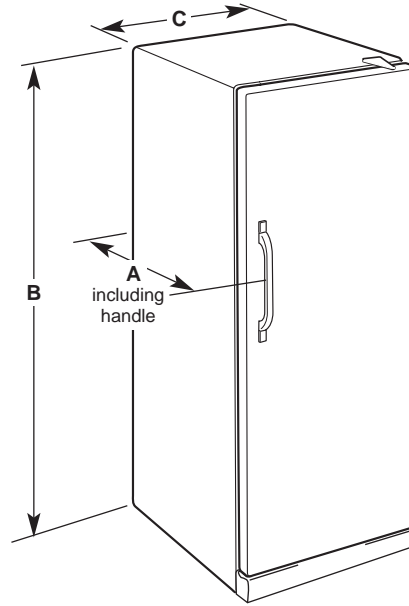

Door swing is right-fixed.

Model	Depth "A"	Cabinet Height "B"	Width "C"
EV150FXM	30"	60 1/2"	30"

**LOCATION REQUIREMENTS**

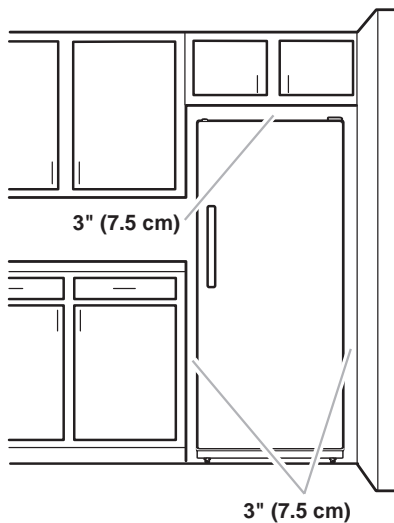 

Allow at least 3 in. (7.5 cm) of air space at the top and on both sides of the freezer and 1 in. (2.5 cm) between the back of the freezer and the wall. If the freezer is to be against a wall, leave extra space on the hinge side so the door can open wider. Your freezer operates most efficiently when located in an area where the temperature is normally between 40°F (4°C) and 90°F (32°C).

**NOTE:** Keep flammable materials and vapors, such as gasoline, away from freezer. Do not install freezer near an oven, radiator or other heat source.