

QUICK START GUIDE

DishDrawer™ dishwasher (Designer)

NZ AU US CA

Fisher&Paykel

Wash program controls

- Keep this document handy for easy reference.
- For detailed information on the features of your dishwasher, see your 'User guide'.
  - Before using your dishwasher, make sure you read the full 'User guide', with special attention to the 'Safety and warnings' section.
  - For contact information or if you require service, assistance or replacement parts, see the end of this document or your 'Service & warranty' booklet.

Your model

Note: each drawer in double models has its own controls and can run independently of the other drawer.

 
DD60DDFX7  
DD60DDFM7  
DD24DDF(T)X7

DD60SDF(T)X7  
DD60SDF(T)M7  
DD24SDF(T)X7

DD90SDFTX2  
DD90SDFTM2  
DD36SDFTX2

Operating instructions - Starting a wash


1

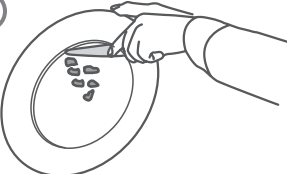

Discard scraps

Scrape large food particles off (e.g. bones, fruit stones) and remove any foreign objects (e.g. toothpicks, strings, paper).

 
2

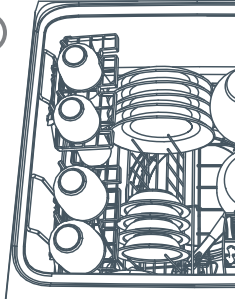

Load dishes carefully

To help with wash performance, arrange dishes so they are evenly spaced and not nesting.

 
3

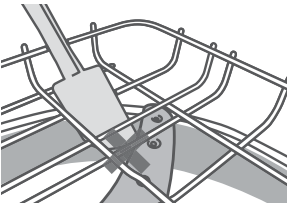

Check spray arm(s)

Ensure there are no items blocking the spray arm(s) from rotating.

 4

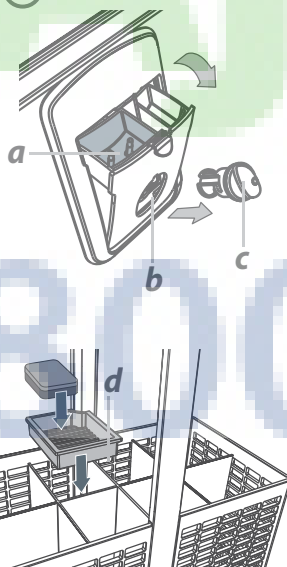

Add detergent and check rinse aid


Fill the detergent dispenser (a) with powdered detergent and close the dispenser door.

**Important!**  
Do not place liquid detergent or tablets in the detergent dispenser.

If the indicator on its plug (c) glows bright red, refill the rinse aid dispenser (b) with liquid rinse aid. Make sure you then refit the rinse aid plug back into its original position.

If using a tablet, place it in the cutlery basket (d) or at the bottom of the drawer.


5



Select wash

Power the dishwasher on then select wash program.


6



Start wash or set Delay start

Close the drawer and press.


Main controls



Power on/off

Press to turn the dishwasher on or off.

Opening the drawer will automatically turn the dishwasher on for 30 seconds.



Start/Pause

Press to start, pause, or resume a wash.

After pausing a wash, wait for 3 beeps before opening the drawer. Forcing it open in mid-cycle may cause damage or injury.

Cancel wash/Cancel Delay start

Press to cancel a wash that has already started or to cancel the Delay start setting.


If there is any water in the drawer, it will automatically drain before the dishwasher turns off.

Set Delay start

- Press and hold until the light above it changes from blue to purple, then release. You are now in Delay start mode.
- Press briefly again, repeating as many times as the number of hours you want to delay the start of a wash by. The dishwasher will emit a beep for every hour of delay time (1 to 12 hours).

You have now set Delay start. The wash will start once the delay time is over, provided the drawer is closed.

Wash program indicators  
These show which program is selected.



Wash program selector

Press to scroll through the wash programs.

HEAVY	NORMAL	FAST	DELICATE	RINSE	ECO
STANDARD PROGRAMS - designed to clean and dry your dishes					
HEAVY	NORMAL	FAST	DELICATE	RINSE	ECO selector and indicator
Heavily soiled pots, pans and dishes.	Dishes with normal soils for optimum performance.	Lightly soiled dishes.	Lightly soiled and heat sensitive crockery.	Prevents odors and soils drying on dishes.	Press if you'd like the program to use less energy. The indicator will glow red when an Eco program has been selected. If you require enhanced drying, we do not recommend selecting an Eco program.
ECO PROGRAMS - designed to clean your dishes energy-efficiently					
HEAVY ECO	NORMAL ECO	FAST ECO	DELICATE ECO		
Heavily soiled everyday dishes.	Normal soiled dishes for optimum water and energy use.	Lightly soiled, non-greasy dishes.	Lightly soiled, non-greasy and heat sensitive crockery.		



Keylock

Keylock disables all the buttons – helpful when cleaning the dishwasher.

To activate, press and hold until you hear one beep (3 seconds). The light above the button will glow steadily.

To cancel, press and hold until the light above it goes out.

Childlock

Childlock locks the drawer and disables all the buttons, preventing unauthorized use by children.

To activate, press and hold until you hear two beeps (5 seconds). The light above the button will glow steadily.

To cancel, press and hold until the light above it goes out.

 
After the wash

The dishwasher will beep six times to indicate the end of the wash program.

- You may notice the following noises at the end of the wash. These are all part of normal operation:
- In double models, both drawers may be draining simultaneously.
  - The drying fan may continue to run after a wash program has finished for a set time or until the drawer is opened. The fan assists with drying and uses negligible amounts of energy.


For best drying results, we recommend unloading the dishes once they have cooled.

Dos and don'ts of loading

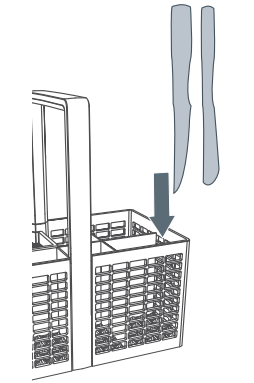


✓

 Sharp or pointed items must be placed horizontally or with sharp edges/points facing down to avoid risk of injury.

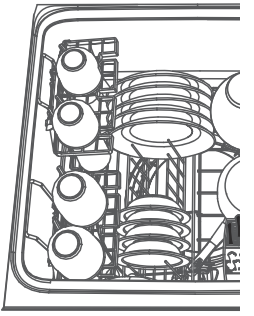


✓

 A neatly arranged load with evenly spaced dishes helps wash performance.

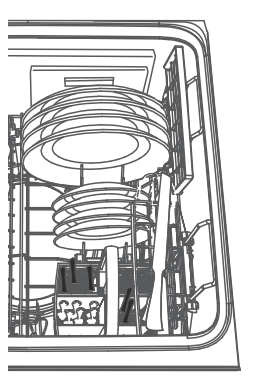


✓

 Ensure there is enough space between plates. Mix spoons, knives and forks within the cutlery basket to prevent them from nesting.

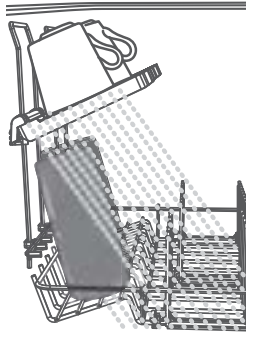


✓

 Ensure that water reaches all items on the adjustable racks.

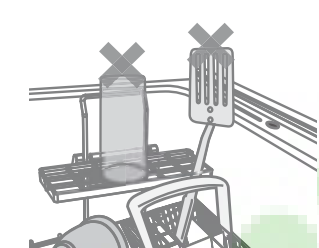


✗

 Protruding items will stop the internal lid of the drawer from sealing properly, which could result in a service call.

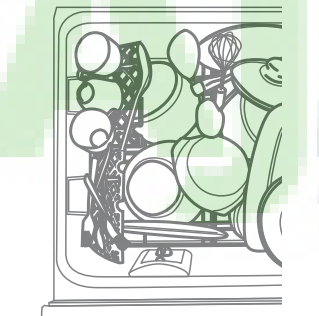


✗

 Overcrowding reduces wash performance.

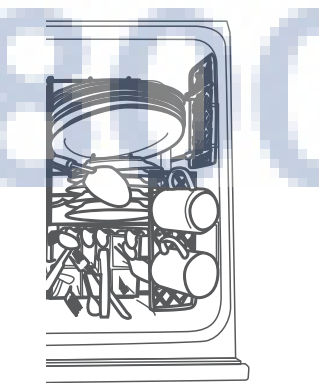

✗

 If plates and cutlery are nesting, they are less likely to be cleaned well.

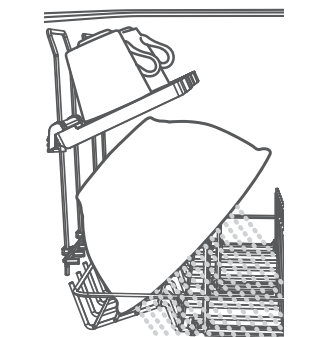

✗

Dishware is blocking water from reaching items on the adjustable racks.

Preference options

You can change the setting of these options to suit your preferences or circumstances. We recommend selecting the most suitable settings before you start using your dishwasher.

Option	Rinse aid	Water softener*	Open drawer auto power-on	Beeps at end of wash	Closed drawer autolock
What does it do?	Regulates the amount of rinse aid dispensed. Reduce this setting if there is excess foam after a wash. Increase this setting if dishes are wet or streaky after a wash.	Refer to the 'Water softener' section of the 'User guide' for details.	Your dishwasher is factory-set to automatically power on for 30 seconds whenever you open the drawer. You can turn this setting off.	Your dishwasher is factory-set to beep six times at the end of a wash. You can turn this setting off.	When this setting is on, the drawer will automatically lock 30 seconds after it's closed. It can then be unlocked by pressing  (unless Keylock or Childlock is also activated). Useful in boats or motor homes.

How to change the setting of an option

- 1 CHECK & OPEN  
Check that there is no wash underway, press , then open the drawer.
- 2 ENTER MENU & SCROLL TO OPTION  
**To enter the menu:** press the selector on top first with one finger, then the button on the front with another finger, hold both until one long beep sounds, then release.
- You are now in the Rinse aid option of the preference options menu.
  - If you want to change the Rinse aid setting, go to step 3 now.
  - If you want to change the setting of another option, you will need to scroll to that option first.

**To scroll to the next option:** press . To know which option you're in, watch the lights above and (see table below). When you have scrolled to the end of the sequence, it will start again with Rinse aid (after the lower tone).

Option	Rinse aid	Water softener*	Open drawer auto power-on	Beeps at end of wash	Closed drawer autolock
Which option am I in?					
Possible settings	1 to 5	0 to 5	On or Off	On or Off	On or Off
Example	 HEAVY NORMAL FAST DELICATE RINSE 4 indicators lit = setting is 4		 On HEAVY NORMAL FAST DELICATE RINSE Off HEAVY NORMAL FAST DELICATE RINSE		

- 3 CHANGE SETTING  
Press to change the setting within an option. For example, to change the Rinse aid setting from 4 (factory default) to 2, you need to press 3 times.
- 4 SAVE SETTING & QUIT MENU  
Press . This will save the new setting and quit the preference options menu.

\*This option is disabled on models without water softener. It appears in the sequence of options but cannot be adjusted.

For more info

For detailed information on the features of your dishwasher

➤ see your 'User guide'

For warranty information

➤ see your 'Service and warranty' booklet

If you...

- have any questions or comments
- need a Fisher & Paykel authorized technician to service your product
- need replacement parts or accessories
- want to register your product

see your 'Service and warranty' booklet or contact us

NZ	toll-free, 24/7	0800 372 273	www.fisherpaykel.co.nz
AU	toll-free, 24/7	1300 650 590	www.fisherpaykel.com.au
USA	toll-free, 24/7	1 888 936 7872	www.fisherpaykel.com
CA	toll-free, 24/7	1 888 936 7872	www.fisherpaykel.ca