

Frigidaire

Factory Parts Catalog

Product No.	FEB27T5DBB	FEB27T5DSB
	37054741E4062	37054741E4012
Series	27" double	27" double
Color	black	white
Market	North America	North America
Wiring Diagram	318046119	318046119
Owner's Guide	318200924	318200924
Installation Instructions	316201514	316201514
Service Data Sheet	318047305	318047305
Timer Guide	318200132	318200132

 **Electrolux**

Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917

 
Publication No.
5995442984
05/07/28
(EN/SERVICE/)
377

**DOUBLE ELECTRIC
WALL OVEN**

Model No.
FEB27T5D

Copyright © 2005 Electrolux Home Products, Inc.
All rights reserved.

CONTROL PANEL

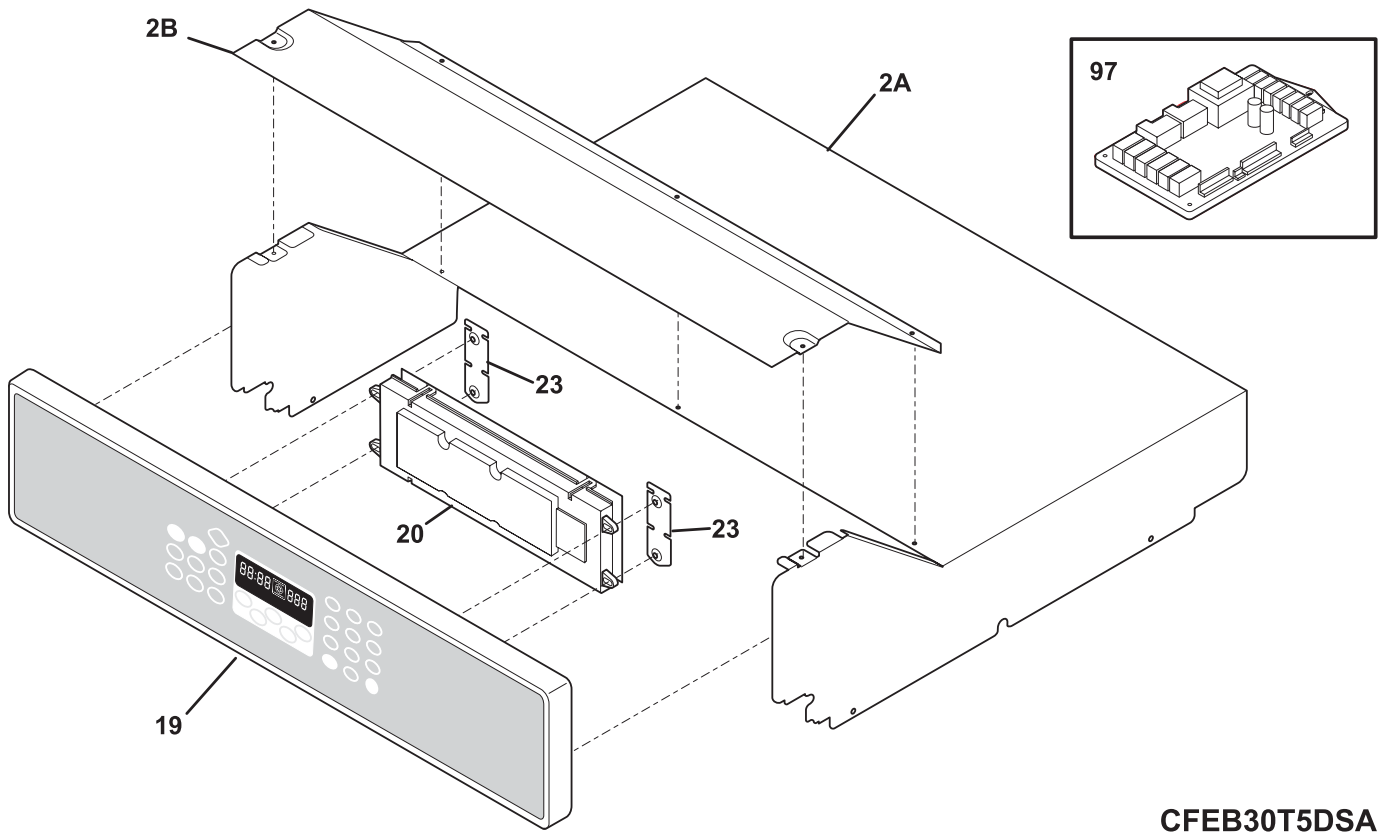

CFEB30T5DSA

CONTROL PANEL

Model Index: A FEB27T5D (FEB27T5DBB)
 B FEB27T5D (FEB27T5DSB)


POS. NO	PART NO.		DESCRIPTION
2A	318257301	A B	Shield, oven top
2B	318260101	A B	Cover, box
19	318274415	A -	Control Panel Assembly, glass, black, w/touch pad
19	318274414	- B	Control Panel Assembly, glass, white, w/touch pad
20 #	316429702	A B	Control, electronic, 5800W1, dual oven
*	316021107	A B	Screw, hex head, 8-32, silver
23	318262900	A B	Bracket, control mtg., (2)
97	316429800	A B	Board, relay, dual oven
*	318231704	A B	Harness, wiring, control-relay
*	5303211311	A B	Screw, 8 x 0.500

UPPER OVEN

Model Index: A FEB27T5D (FEB27T5DBB)
B FEB27T5D (FEB27T5DSB)

POS. NO	PART NO.		DESCRIPTION
1	318259210	A B	Back, main
2	318258910	A B	Shield, insulation, upper
6	318262602	A B	Rack, oven, (2)
9	5303317977	A B	Pan, broiler
10	5303317976	A B	Insert, broiler pan
12 #	318089917	A B	Switch, light
14	318224000	A B	Receptacle, oven light
14*	318268099	A B	Insulation, oven light
15	5303013071	A B	Bulb/Lamp, oven light
16	3201911	A B	Cover, oven light, glass
17	5304400195	A B	Retainer, light cover
29	318147411	A B	Bumper, (2)
37 #	316217002	A B	Probe, oven temp
41	5303310526	A B	Cover, hinge cutout
54	318222400	A B	Housing, oven light
58A	318285060	A B	Insulation, rear & bottom, oven wrapper
58B	318285059	A B	Insulation, top & sides, oven wrapper
58D	318285058	A B	Insulation, 1/2" thick, 43 x 9.5
59	318072560	A B	Duct, oven vent
59A	318261600	A B	Bracket, vent tube
66 #	318255601	A B	Element, broil, 3400W
67 #	318255103	A B	Element, bake, 2300W
68	5304403015	A B	Support, hanger, (2), broil element
70	318259100	A B	Shield, insulation, sides, (2)
71	318260001	A B	Panel, rear box
76	318056222	A B	Front, oven
80	5303320846	A B	Plate, oven mtg
81	318192400	A B	Spring, oven
82	318258710	A B	Shield, insulation, lower
83	318261502	A B	Liner, oven assy
86	5303310524	A B	Receptacle, hinge
89 #	318261202	A B	Motor, latch assy
*	318231705	A B	Harness, latch
99	318252800	A B	Support, side
108#	318073018	A B	Motor, blower
*	08016432	A B	Screw, truss head, 8-18 x 0.375
108A	318251300	A B	Bracket, fan support
119#	318004900	A B	Switch, thermal
127	318317100	A B	Adapter Assembly, vent tube, w/converter
131	318272900	A B	Box, vent
132	318003000	A B	Plate, shield
142	318123910	A B	Deflector
143	318172904	A B	Support, wire/glass
163	318014111	A B	Spacer
185	318014700	A B	Spacer, oven shield, (4)
219#	318003614	A B	Thermostat, safety
264	318257711	A B	Trim, oven, black, front
310	5304440067	A B	Cabinet Mounting Kit
311	318246010	A B	Bracket, cabinet mtg, (2)

 UPPER OVEN

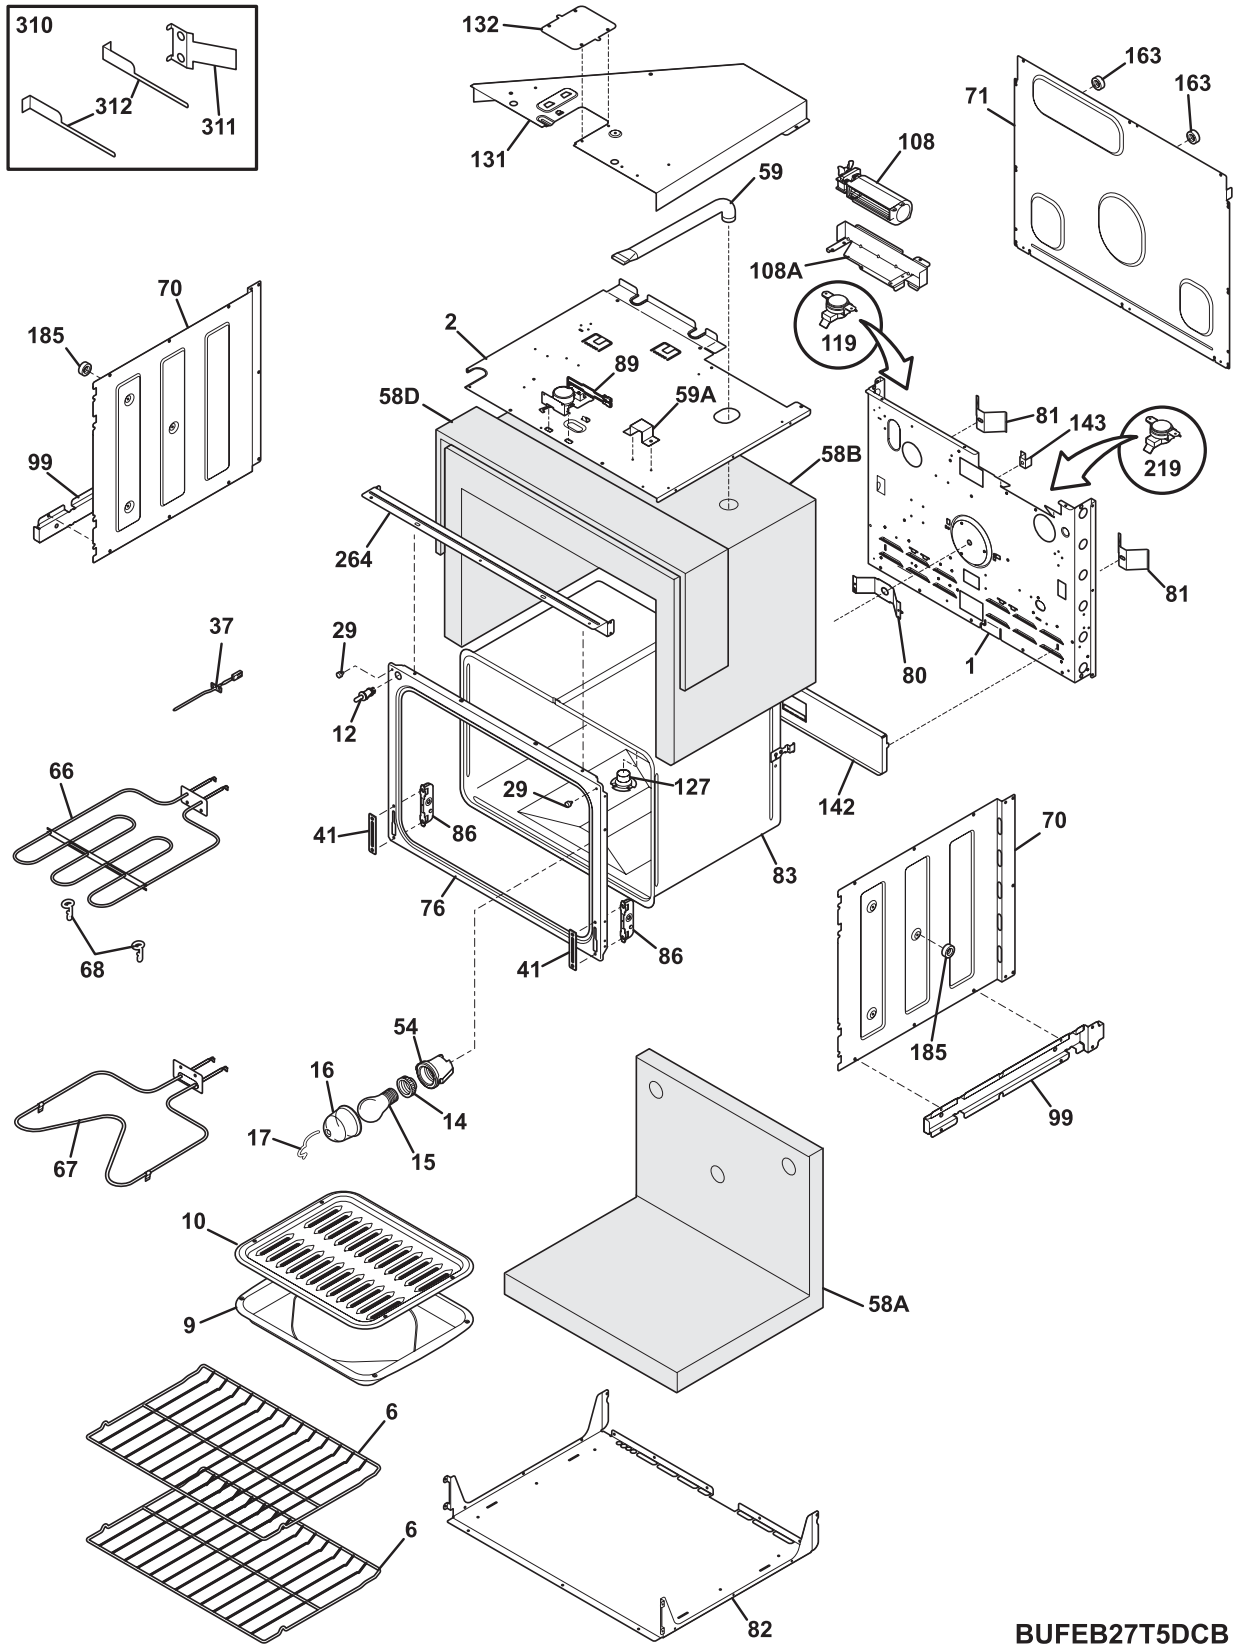

BUFEB27T5DCB

UPPER OVEN

Model Index: A FEB27T5D (FEB27T5DBB)
 B FEB27T5D (FEB27T5DSB)


POS. NO	PART NO.		DESCRIPTION
311*	5304438005	A B	Screw, 6 x 1, black
312	318246702	A B	Tool, cabinet bracket, RH
312	318246703	A B	Tool, cabinet bracket, LH
*	3201861	A B	Screw, 6 x 0.375, (4)
*	5303211311	A B	Screw, 8 x 0.500
*	5303300265	A B	Screw, 8-18 x 0.500, chrome, (3)
*	5303323277	A B	Screw, 8-18 X 13/32
*	5304436875	A B	Screw, 8-18 X 1/2, black

LOWER OVEN

Model Index: A FEB27T5D (FEB27T5DBB)
B FEB27T5D (FEB27T5DSB)

POS. NO	PART NO.		DESCRIPTION
1	318259210	A B	Back, main
2	318258910	A B	Shield, insulation, upper
6	318262602	A B	Rack, oven, (2)
12 #	318089917	A B	Switch, light
14	318224000	A B	Receptacle, oven light
14*	318268099	A B	Insulation, oven light
15	5303013071	A B	Bulb/Lamp, oven light
16	3201911	A B	Cover, oven light, glass
17	5304400195	A B	Retainer, light cover
29	318147411	A B	Bumper, (2)
37 #	316217002	A B	Probe, oven temp
41	5303310526	A B	Cover, hinge cutout
54	318222400	A B	Housing, oven light
56	318259914	A -	Trim, side filler, black, RH
56	318259912	- B	Trim, side filler, white, RH
56A	318259915	A -	Trim, side filler, black, LH
56A	318259913	- B	Trim, side filler, white, LH
58A	318285060	A B	Insulation, rear & bottom, oven wrapper
58B	318285059	A B	Insulation, top & sides, oven wrapper
58D	318285058	A B	Insulation, 1/2" thick, 43 x 9.5
59	318072560	A B	Duct, oven vent
59A	318261600	A B	Bracket, vent tube
62	316056000	A B	Terminal Block
62*	5303323139	A B	Screw, 10-24 x 0.906
62*	5303323144	A B	Nut, 10-32
66 #	318255601	A B	Element, broil, 3400W
67 #	318255103	A B	Element, bake, 2300W
68	5304403015	A B	Support, hanger, (2), broil element
70	318259100	A B	Shield, insulation, sides, (2)
71	318260001	A B	Panel, rear box
76	318056222	A B	Front, oven
80	5303320846	A B	Plate, oven mtg
81	318192400	A B	Spring, oven
82	318258710	A B	Shield, insulation, lower
83	318261502	A B	Liner, oven assy
86	5303310524	A B	Receptacle, hinge
87	318260601	A B	Bracket, cable mtg.
89 #	318261202	A B	Motor, latch assy
*	318231705	A B	Harness, latch
90	318259711	A -	Trim, oven front, black, bottom
90	318259710	- B	Trim, oven front, white, bottom
99	318256200	A B	Bracket, side, bottom, (2)
108#	318073018	A B	Motor, blower
*	08016432	A B	Screw, truss head, 8-18 x 0.375
108A	318251300	A B	Bracket, fan support
119#	318004900	A B	Switch, thermal
127	318317100	A B	Adapter Assembly, vent tube, w/converter
142	318123910	A B	Deflector
143	318172904	A B	Support, wire/glass

 LOWER OVEN

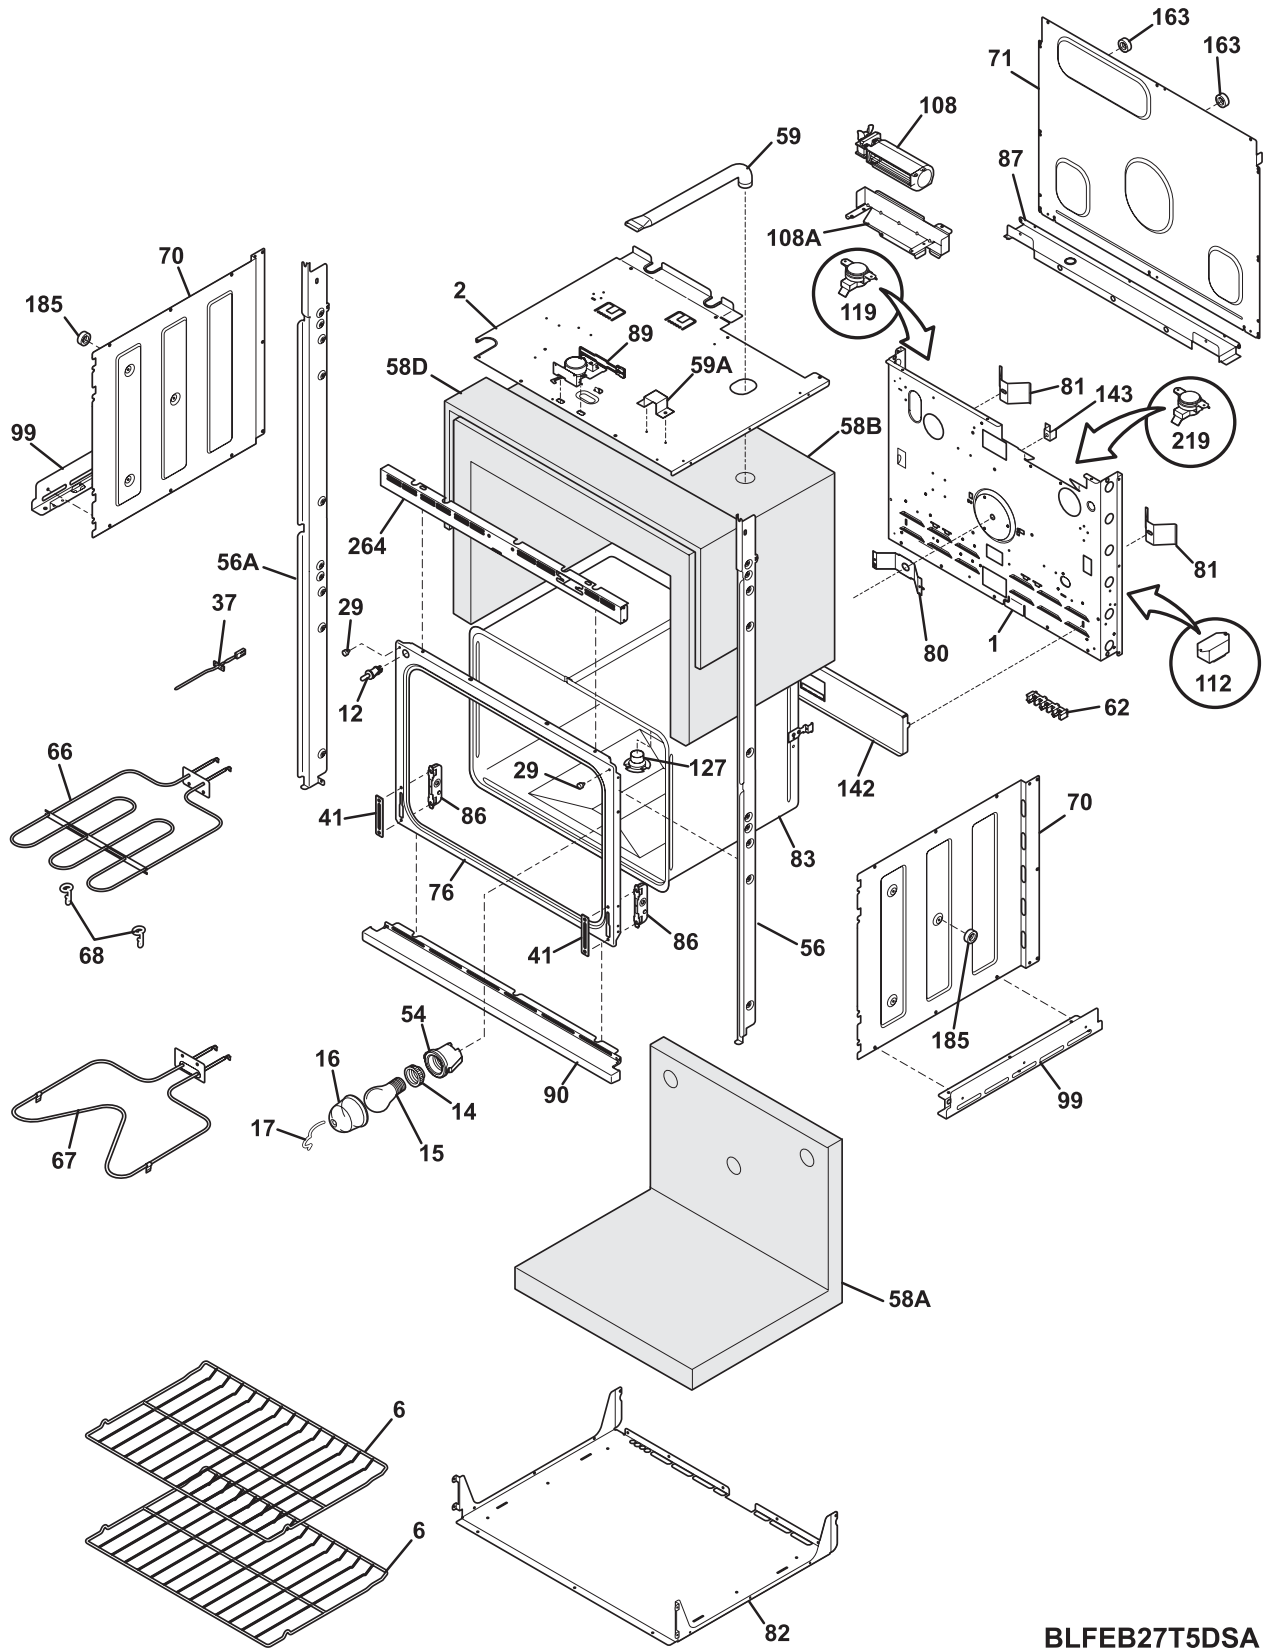


BLFEB27T5DSA

LOWER OVEN

Model Index: A FEB27T5D (FEB27T5DBB)
 B FEB27T5D (FEB27T5DSB)

POS. NO	PART NO.		DESCRIPTION
163	318014111	A B	Spacer
185	318014700	A B	Spacer, oven shield, (4)
219#	318003614	A B	Thermostat, safety
264	318257811	A B	Trim, oven, black, front
* #	318078543	A B	Box & wires assy
*	318231740	A B	Harness, wiring, main
*	3201861	A B	Screw, 6 x 0.375, (4)
*	5303211311	A B	Screw, 8 x 0.500
*	5303323277	A B	Screw, 8-18 X 13/32
*	5304436875	A B	Screw, 8-18 X 1/2, black

 DOORS

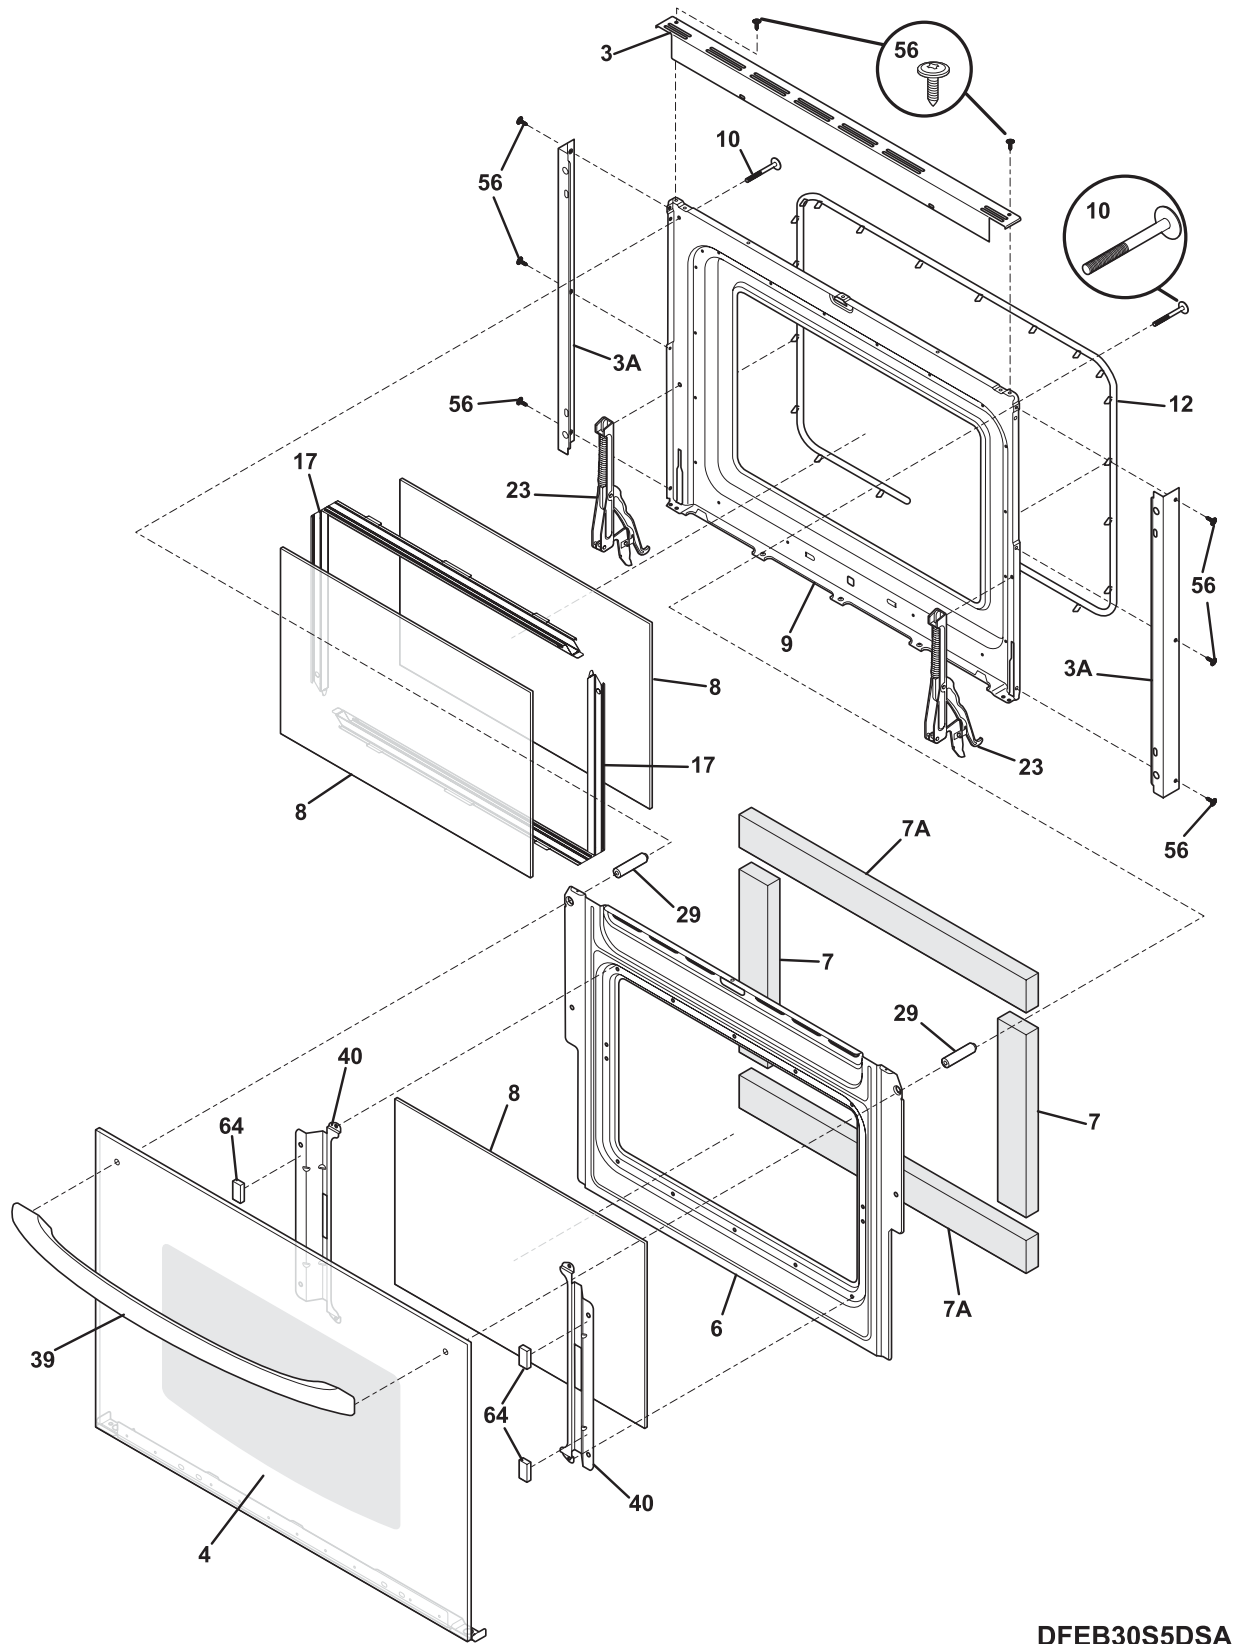


DFEB30S5DSA

DOORS

Model Index: A FEB27T5D (FEB27T5DBB)
 B FEB27T5D (FEB27T5DSB)

POS. NO	PART NO.		DESCRIPTION
3	318260211	A B	Trim, oven door, black, upper
3A	318260401	A B	Trim, oven door, side, (2)
4	318261350	A -	Glass Assy., oven door, black, outer, w/trim
4	318261351	- B	Glass Assy., oven door, white, outer, w/trim
6	318260510	A B	Baffle, door
7	318285057	A B	Insulation, oven door
7A	318285061	A B	Insulation, (2)
8	318212200	A B	Glass, oven door, heat barrier
9	318259611	A B	Liner, oven door, upper
10	5304416408	A B	Screw, 10-24 x 1.750, handle mtg
12	318053125	A B	Seal, upper door
17	318264700	A B	Spacer, glass, (2)
23	318024722	A B	Hinge, upper door, (2)
29	318014402	A B	Spacer, door
39	318264500	A -	Handle, oven door, black
39	318264501	- B	Handle, oven door, white
40	318242700	A B	Bracket, glass holder, (2)
56	5304436875	A B	Screw, 8-18 X 1/2, black
64	318165800	A B	Spacer, (2)
*	5303323277	A B	Screw, 8-18 X 13/32

 WIRING DIAGRAM

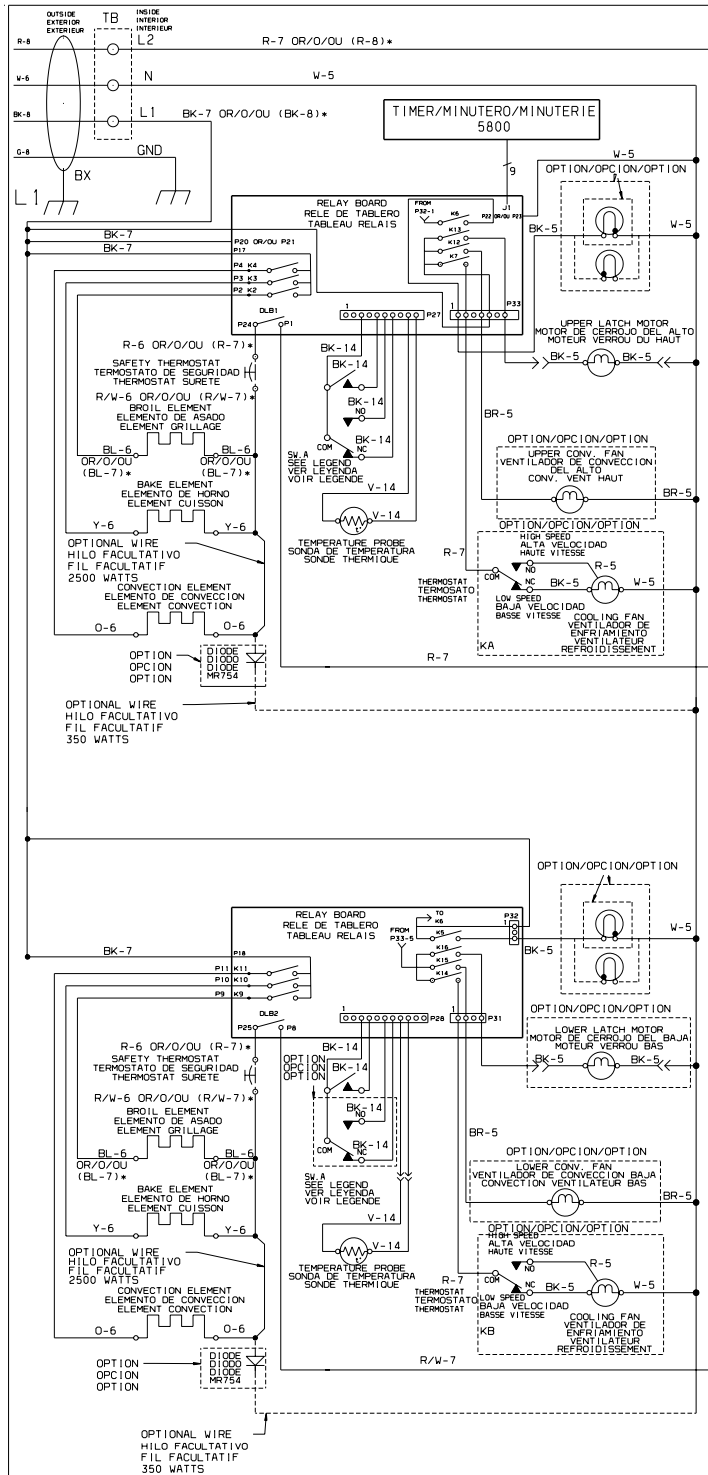

COLORS / COLOR / COULEURS



BK - BLACK/NEGRO/NOIR
 W - WHITE/BLANCO/BLANC
 O - ORANGE/MARANJA/GRANGE
 BR - BROWN/MORENO/BRUN
 PK - PINK/ROSA/ROSE
 V - VIOLET/IOLETA/VIOLET
 G - GREEN/VERDE/VERT
 R - RED/ROJO/ROUGE
 Y - YELLOW/AMARILLO/JAUNE
 BL - BLUE/AZUL/BLEU
 BR/W - BROWN/WHITE // MORENO/BLANCO // BRUN/BLANC
 BL/W - BLUE/WHITE //AZUL/BLANCO // BLEU/BLANC

CODE/CODIGO/CODE

CODE	GAUGE/MED. CALIBRE	TEMP. °C	STYLE	CSA	UL
1	18	125	CL-1251	3173	
2	16	125	CL-1251	3173	
3	14	125	CL-1251	3173	
4	12	125	CL-1251	3173	
5	18	150	EXL-150	3321	
6	16	150	EXL-150	3321	
7	14	150	EXL-150	3321	
8	12	150	EXL-150	3321	
9	10	150	EXL-150	3321	
10	18	200	SEW-1	3122	
11	16	200	SEW-1	3122	
12	12	250		3252	
13	16	250		3252	
14	20	150	EXL-150	3321	
15	8	150	EXL-150	3321	
16	8	60			
17	10	60			

EXAMPLE/EJEMPLO/EXEMPLE: (R-8)*

  - WHEN USING 4000 W. BROIL ELEMENT
- CUANDO SE USA 4000 W. ELEMENTO DE ASADO
- QUAND UTILISE AVEC 4000 W. ELEMENT GRILLAGE

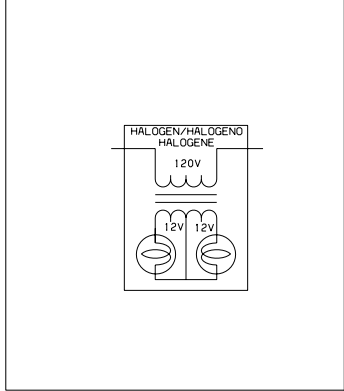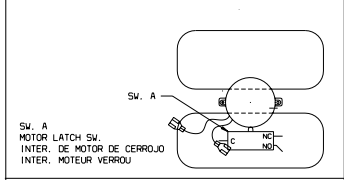

CAUTION: DISCONNECT POWER BEFORE SERVICING UNIT.
ATENCION: CORTAR EL CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.
ATTENTION: COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.

318046119 REV. A