



WARNING: Please read the *Important Safety Instructions* section of the **Discovery Wall Oven Use Care Manual** before operating your oven.

Welcome...

to the world of **dacor**.cooking!

Here's How to Start Using Your New Oven...
...Right Now!

WALL OVEN QUICK START GUIDE

1 If you have a double oven, select the oven you want to use by pressing UPPER or LOWER.

2 Select the way you want to cook the food using one of these keys.

3 Select the cooking temperature*. For example: press 3, then 2, then 5, for 325°F.

4 Press START.

If you have a double oven, press **UPPER** or **LOWER** to turn an oven off.

If you have a single oven, press **CANCEL/SECURE** to turn off your oven.

It's that easy!

* Skip this step if the temperature already showing on the display is what you want.

dacor
The Life of the Kitchen.®

WALL OVEN QUICK START GUIDE

About...

The Control Panel

IF THE CONTROL PANEL IS NOT LIT:

Press any key on the control panel or open the door to "wake" the display.

START Key

Press start after selecting the cooking function and setting the temperature.

Display Panel

Display screen changes when the variable function keys are pressed to describe available options and oven operations.

Number Keypad

Use to set the temperature, time and date, etc.

CANCEL/SECURE Key

Single Ovens: Press to turn the oven off.
Double ovens: Press to turn off both ovens. Also returns display to home screen on both double and single ovens.

UPPER & LOWER ON/OFF Keys

Double oven only: Use to turn the upper & lower ovens on and off.

TIMER Key

Press to access the oven's 2 timers.

BACK/RECALL Key

Returns the display to the previous "screen".

Variable Function Keys

Use to select the cooking functions, change the control panel settings, etc. Available options change based on the screen shown on display.

Light Key

Use to turn the oven lights on and off when the oven door is closed.

