

Breville®

the Temp Select™

Instruction Book - Manuel d'instructions



Suits all BKE720 models
Convient à tous les modèles BKE720

CONGRATULATIONS

On the purchase of your Breville product

Register online for product support
and exclusive offers.*

USA Consumers: www.brevilleusa.com

Canadian Consumers: www.breville.ca

*Registering is not a substitute for proof of purchase when submitting a Warranty Claim.

CONTENTS

- 4** Breville recommends safety first
- 8** Know your Breville product
- 9** Features of your Breville product
- 11** Operating your Breville product
- 13** Care & Cleaning

BREVILLE RECOMMENDS SAFETY FIRST

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

IMPORTANT SAFEGUARDS



READ ALL INSTRUCTIONS

- Carefully read all instructions before operation and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- This appliance has been designed specifically for the purpose of heating and boiling drinking quality water only. Under no circumstances should this product be used to heat or boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water.
- Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- Keep the kettle clear of walls, curtains and other heat or steam sensitive materials. Minimum 8 inch distance.
- Do not operate the kettle on a sink drain board.
- Always ensure the kettle is properly assembled before connecting to a power outlet and operating. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.

BREVILLE RECOMMENDS SAFETY FIRST

- The kettle is not intended to be operated by means of an external timer or separate remote control system.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.
- Always remove the power plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning and storing. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour the water too quickly.
- To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or reached the selected temperature, before removing the kettle from the power base. If the kettle is removed from the power base during the KEEP WARM function, the kettle will automatically switch off.
- Do not move the appliance while it is switched on.
- Do not open the lid during operation as scalding may occur.
- Keep the appliance clean. Refer to care and cleaning.
- The use of accessory attachments not recommended by Breville may result in fire, electric shock or injury to persons.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind cord before use.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Do not let the cord hang over the edge of a bench or table, touch hot surfaces, or become knotted.
- Do not leave the appliance unattended when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is recommended for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- It is recommended to regularly inspect the appliance. Do not use the appliance if the power cord, power plug, or appliance becomes damaged in anyway. Immediately cease use and call Breville Consumer Service.
- For any maintenance other than cleaning, call Breville Consumer Service.
- This appliance is equipped with a power cord having a grounding wire with a grounding plug. The appliance must be grounded using a 3-hole properly grounded outlet. In the event

BREVILLE RECOMMENDS SAFETY FIRST

of an electrical short circuit, grounding reduces the risk of electrical shock.

- If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.
- If the power outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.
- Do not, under any circumstances, cut or remove the third (ground) prong from the power cord or use an adapter.
- Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.



WARNING

Do not operate the kettle on an inclined surface. Do not move the appliance while it is switched on.

SHORT CORD INSTRUCTIONS

Your Breville appliance is fitted with a short power supply cord to reduce personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. If an extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, (2) the cord should be arranged so that it will not drape over the countertop or table-top where it can be pulled on by children or tripped over unintentionally and (3) the extension cord must include a 3-prong grounding plug.

BREVILLE ASSIST™ PLUG

Your Breville appliance comes with a unique Assist™ Plug, conveniently designed with a finger hole to ease removal from the wall outlet. For safety reasons it is recommended you plug your Breville appliance directly into its own electrical outlet on a dedicated circuit separate from other appliances.

If the electric circuit is overloaded with other appliances, your appliance may not function properly. It is not recommended to use with a power strip.

CALIFORNIA PROPOSITION 65:

(Applicable to California residents only).

This product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

KNOW YOUR BREVILLE PRODUCT



- A. Premium quality brushed stainless steel
- B. 1.7 litre/7 cup capacity
- C. BPA Free* dual water windows
- D. 5 temperature settings
- E. BPA Free* Soft opening lid with viewing window
- F. Stainless steel handle with lid release button
- G. **START/CANCEL** button
- H. 20 minute Keep Warm function
- I. Multi-directional cord-free power base with power cord storage.

NOT SHOWN

Fast boil 1500W

Safety auto cut off

Boil dry protection

* Breville makes its BPA free claim for this product based on independent laboratory testing performed for all the food contact plastic materials of the product per EU Commission regulation No. 10/2011.

FEATURES YOUR BREVILLE PRODUCT

KEEP WARM FUNCTION

The kettle offers a convenient KEEP WARM function that can be used before, during or on completion of the water heating cycle.

When the water has reached the selected temperature, the KEEP WARM function will hold the selected temperature for 20 minutes.

If the 212°F button is selected when using the KEEP WARM function, the boiled water will remain at approximately 200°F for 20 minutes.

To activate the KEEP WARM function, first press the desired water temperature button from the five options on the control panel. Then press the KEEP WARM button, followed by the START|CANCEL button to commence heating the water.

Alternatively, the KEEP WARM button can be activated at any time during the heating cycle and/or within one minute after the heating cycle has completed.

If the kettle is removed from the power base during the KEEP WARM function the kettle will automatically switch off.

NOTE

If the temperature is changed during the KEEP WARM function, the START|CANCEL button surround will illuminate.

VARIABLE TEMPERATURE CONTROL

The variable electronic control panel offers five different Fahrenheit temperatures for optimal tea and coffee brewing:

175°F, 185°F, 195°F, 200°F, and 212°F.

NOTE

This product is not calibrated for commercial or scientific use.

Temperatures may vary $\pm 6^\circ\text{F}$ (3°C), however still within range for optimal brewing for each type of tea or coffee.

OPTIMAL BREWING

Tea varieties are grown and produced in different environments and require specific water temperatures to allow their unique flavor and aroma to develop during brewing. To bring out the optimal quality and taste of more delicate tea leaves, a lower temperature will produce a better flavored cup of tea. For example, steeping green, white or oolong teas in boiling water may scald the tea leaves and result in a bitter, astringent brew.

Brewing the tea for too long may also result in a bitter, unpleasant taste, while brewing for too short a period may leave the tea bland. For best results always follow the specific directions on the tea/coffee packet.

VARIABLE TEMPERATURE CONTROL TABLE

This table lists some common tea and coffee varieties and the recommended temperature to select. It is a guideline only and may vary depending on preference, brand and age of tea/coffee used.

Experiment with your favorite tea/coffee and adjust the temperatures and steeping times to suit personal taste.

GREEN TEA (Suited to 175°F)	WHITE TEA (Suited to 185°F)	OOLONG TEA (Suited to 195°F)	FRENCH PRESS (Suited to 200°F)	BOIL / BLACK TEA (Suited to 212°F)
Arabian Night	Apple	Most Oolong Teas	Coffee/ Decaffeinated Coffee	Assam
Asatsuyu	Black Cherry		Instant Coffee Granules	Ancient Tree
Bancha	Blackcurrent		Plunger Coffee	Bagged Tea
Ceylon Green	China Yin Zhen		SUGGESTED TEAS (Suited to 200°F)	Chai
China Chun Mee	Coconut		Ceylon	Chamomile
Darjeeling Green	Elderflower		China Lapsang Souchong	Cinnamon
Dragon Well	Ginger		China Rosa	Golden Yunnan
Genmaicha	Lemon		China Yunnan	Herbal
Gunpowder	Lychee		Darjeeling	Hua
Gyokuro	Mango		Earl Grey	Lapsang Souchong
Jasmine	Orange		English Breakfast	Lemongrass
Nepal Green Tea	Strawberry		Indian Chai	Kenya
Peach			Irish Breakfast	Peppermint
Sencha			Keeman	Pu-errh
Shincha			Nilgiri	Red
			Orange Pekoe	Rooibos
			Passionfruit	Spearmint
			Russian Samovar	Whole Leaf
			Vanilla	Wulong
			Viennese Blend	

OPERATING YOUR BREVILLE PRODUCT

BEFORE FIRST USE

Remove and safely discard any packaging material or promotional labels attached to your kettle. It is recommended that before first use to fill the kettle to the maximum level with cold tap water, bring to the boil by selecting the BOIL 212° button, then discard the water. Your kettle will only operate when positioned on the power base. The kettle will automatically switch off when the water has reached the selected temperature.

OPERATION OF YOUR KETTLE

1. To fill the kettle, remove the kettle from the power base and open the lid by pressing the lid release button. Fill with the desired amount of water. Always fill the kettle between the minimum (500 MIN) and maximum (1700 MAX) marks on the water window. Too little water will result in the kettle switching off before the water has boiled or reached the selected temperature.
2. Ensure the lid is closed and locked firmly into place. Position the kettle securely onto the power base. Insert the power plug into a 110/120V power outlet. The START|CANCEL and 212°F BOIL button surrounds will illuminate in white for one minute. A beep will sound for two seconds. The START|CANCEL button surround will automatically switch off after one minute if not selected.

NOTE

This appliance is designed for boiling or heating water only. Never use it to heat or boil any other liquids or food stuffs. Never insert tea or coffee into the kettle.

3. Select the desired water temperature by pressing one of the five variable temperature buttons (175°F, 185°F, 195°F, 200°F, 212°F). The selected button and the START|CANCEL button surround will illuminate in white.

NOTE

If a temperature button is not selected and the START|CANCEL button is pressed, the kettle will start heating water to the default 212°F or the last selected temperature.

NOTE

The KEEP WARM function can be selected before, during or on completion of the water heating cycle (refer page 10).

4. Press the START|CANCEL button and the button surround will illuminate in red and the kettle will start heating. Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or the selected temperature has been reached before removing the kettle from the power base.
5. When the kettle has heated the water to the selected temperature, 3 beeps will sound, the START|CANCEL button surround illumination will switch off, and the selected temperature button surround will illuminate for 1 minute before switching off.

OPERATING YOUR BREVILLE PRODUCT

6. If the KEEP WARM function has been selected, the KEEP WARM button surround will remain illuminated in red, the selected temperature button surround will remain illuminated in white, and the kettle will continue to cycle on and off for 20 minutes. If the kettle is removed from the power base during the KEEP WARM function the kettle will automatically switch off.
7. If further heating of the kettle is not required, unplug the power cord and empty the water from the kettle. Replace the kettle onto the power base and close the lid.

NOTE

Through regular use over time, scale build-up in the kettle can affect the performance and the life of the kettle. Lime and phosphate are common forms of scale that can damage your kettle.

Lime scale, a harmless mineral, comes in the appearance of white-colored or rusty looking build up on the inner walls of the kettle.

Phosphate scale can't be seen, however, it can cause the water to appear cloudy when heated.

To prevent scale from damaging your kettle, ensure that the kettle is de-scaled regularly – refer to Care and Cleaning (Page 17). To avoid scale build-up, empty the kettle after use and do not allow water to stand in the kettle overnight.

NOTE

The default temperature setting of the kettle when switched on at the power outlet is 212°F.

When the kettle is unplugged at the power outlet and plugged back in, it will automatically default to the 212°F temperature setting.

When the kettle remains plugged in at the power outlet and different temperature settings have been selected, the kettle will default to the last selected temperature setting.

WARNING

Do not open the lid during and after operation. This may result in hot or boiling water splashing from the kettle. Pour all the hot water from the kettle before opening the lid to refill.

NOTE

This kettle must be used only with the power base supplied. Use caution when pouring water from your kettle, as boiling / heated water and steam will scald. Do not pour the water too quickly.

NOTE

Always fill the kettle to between the minimum (500 MIN) and maximum (1700 MAX) marks on the water window on the kettle. Too little water will result in the kettle switching off.

Filling above the maximum mark on the water window of the kettle may result in boiling / heated water splashing from the kettle.

OPERATING YOUR BREVILLE PRODUCT

SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device which protects against overheating should the appliance be operated with insufficient water. If this occurs, the kettle will stop heating.

Press the START|CANCEL button and allow the kettle to cool for approximately 5-10mins before refilling between the minimum (500) and maximum (MAX 1700) marks on the water window. The safety device will automatically reset when the kettle has cooled sufficiently.

Press the START|CANCEL button to recommence heating. For additional safety your kettle is also fitted with a thermal cut out. In the event of severe overheating the kettle will automatically shut down to prevent further damage. Should this occur, contact Breville Consumer Service.



WARNING

This appliance is designed for boiling or heating drinking quality water only.

Never use it to heat or boil any other liquids or food stuffs.

Never insert tea or coffee into the kettle. The lid should always be locked securely into the closed position before use.



WARNING

Use the handle for lifting and carrying the kettle as the jug surface may be hot.

CARE & CLEANING

Always unplug the appliance from the power outlet before cleaning.

REMOVAL OF MINERAL DEPOSITS

Mineral deposits in tap water may cause the kettle interior and water window to discolor over time. Mineral deposits may be removed by using a proprietary kettle descaler available from most leading supermarkets, department stores and hardware stores.

Alternatively:

1. Fill the kettle until two-thirds full with 1 part vinegar and 2 parts water. Boil and allow to stand overnight.
2. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use.

TO CLEAN THE EXTERIOR

The outside of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth

NOTE

Do not use chemicals, steel wool, or abrasive cleaners to clean the inside or outside of the kettle.



WARNING

To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and mild detergent.



WARNING

Never immerse the kettle base, power base, power cord or power plug in water, or allow moisture to come in contact with these parts.

STORAGE

Ensure the kettle is switched off, cleaned and dried before storing. Ensure that the lid is closed and locked securely into place. Wrap the power cord around the power cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.



Breville Consumer Support

USA

Mail: Breville USA
19400 S. Western Ave
Torrance CA
90501-1119

Phone: 1-866-273-8455
1-866-BREVILLE

Web: brevilleusasupport.com

Canada

Mail: Breville Canada
3595 Boulevard Cote-Vertu,
Saint-Laurent,
Québec H4R 1R2

Phone: 1-855-683-3535

Email: askus@breville.ca

www.breville.com

Breville is a registered trademark of Breville Pty, Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty, Ltd. 2015.

Due to continued product improvement, the products illustrated/photographed
in this book may vary slightly from the actual product.

BKE720 USC B15