


SERVICE **MANUAL**

CLASSIC PLUS 14

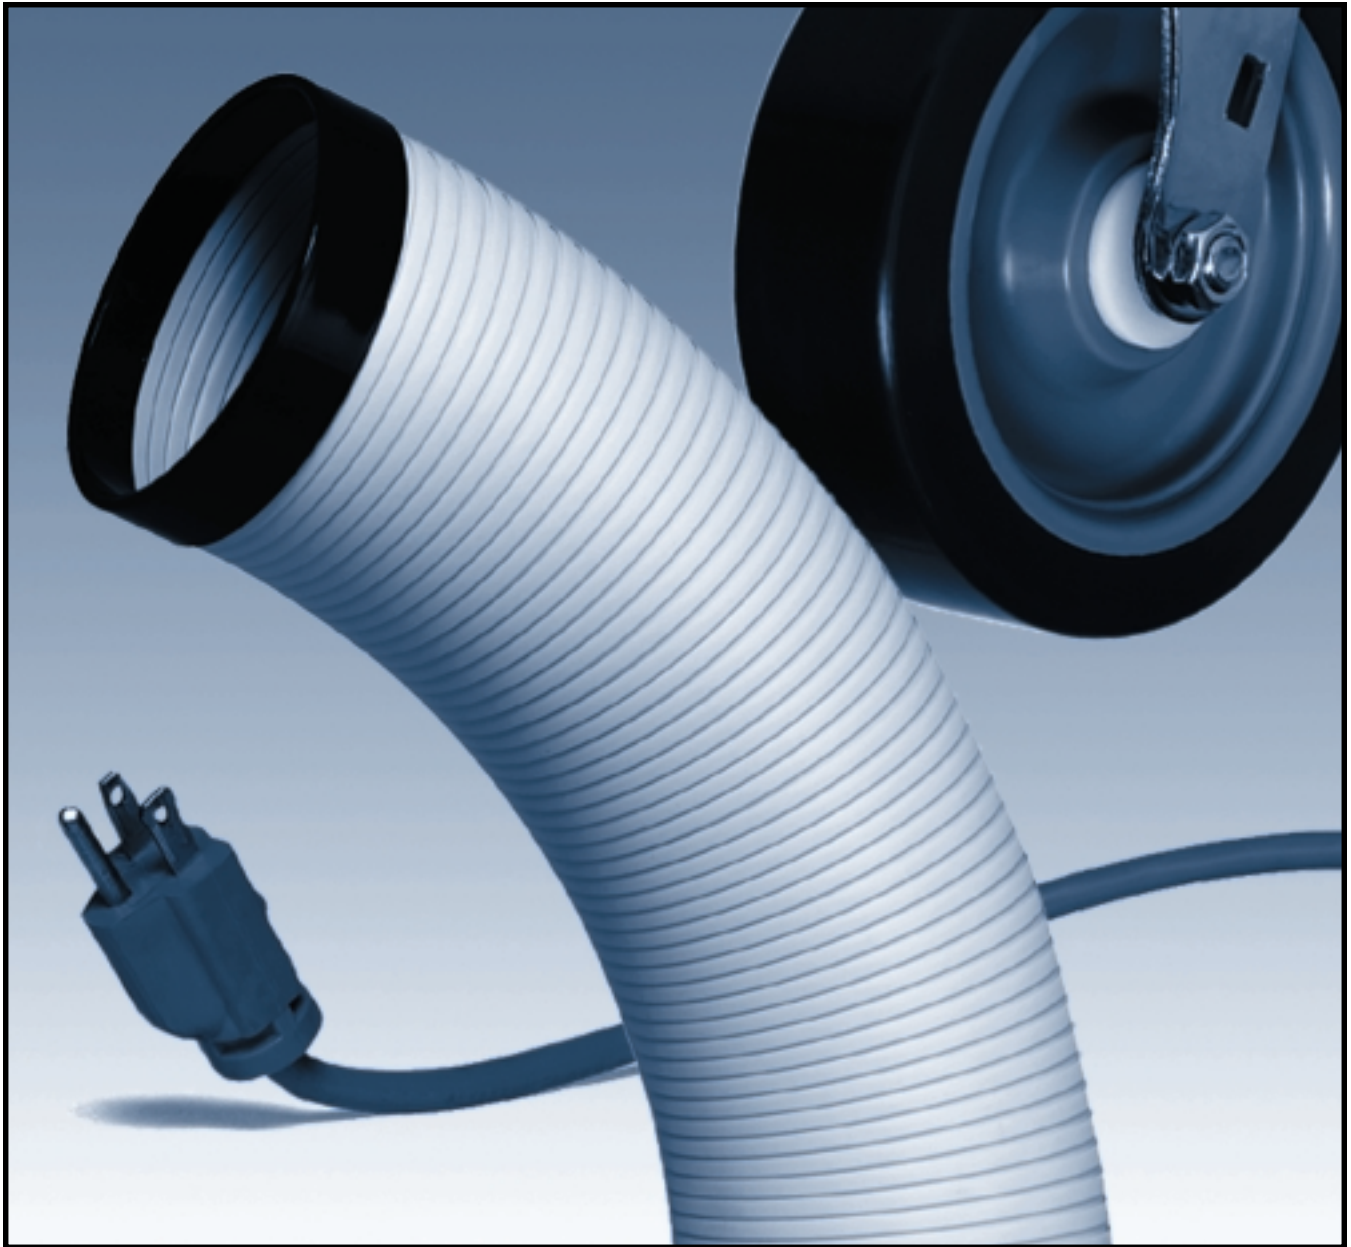

DENSO SALES CALIFORNIA, INC.
REGISTERED TO ISO 9002
FILE NO. A5537

MOVIN**COOL**®

Pioneering New Solutions With Portable Air-Conditioning

(800) 264-9573

www.movincool.com

© 2000 DENSO SALES CALIFORNIA, INC.

All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of the publisher. DENSO SALES CALIFORNIA, INC. reserves the right to make changes without prior notice. MovinCool is a registered trademark of DENSO CORPORATION.

DSCA P/N: LA990009-0379-E

FOREWORD

This manual has been published to service the MovinCool Classic Plus 14. Please use this service manual only when servicing the Classic Plus 14.

DEFINITION OF TERMS

⚠WARNING: Describes precautions that should be observed in order to prevent injury to the user during installation or unit operation.


⚠CAUTION: Describes precautions that should be observed in order to prevent damage to the unit or its components, which may occur during installation or unit operation if sufficient care is not taken.

NOTE: Provides additional information that facilitates installation or unit operation.

GENERAL PRECAUTIONS


⚠WARNINGS:

- All electrical work if necessary, should only be performed by qualified electrical personnel. Repair to electrical components by non-certified technicians may result in personal injury and/or damage to the unit. All electrical components replaced must be genuine MovinCool, purchased from an authorized reseller.
- When handling refrigerant, always wear proper eye protection and do not allow the refrigerant to come in contact with your skin.
- Do not expose refrigerant to an open flame.
- The proper electrical outlet for MovinCool units must be equipped with a “UL” approved ground-fault breaker to prevent electrical shock from the unit.
- When brazing any tubing, always wear eye protection and work only in a well ventilated area.

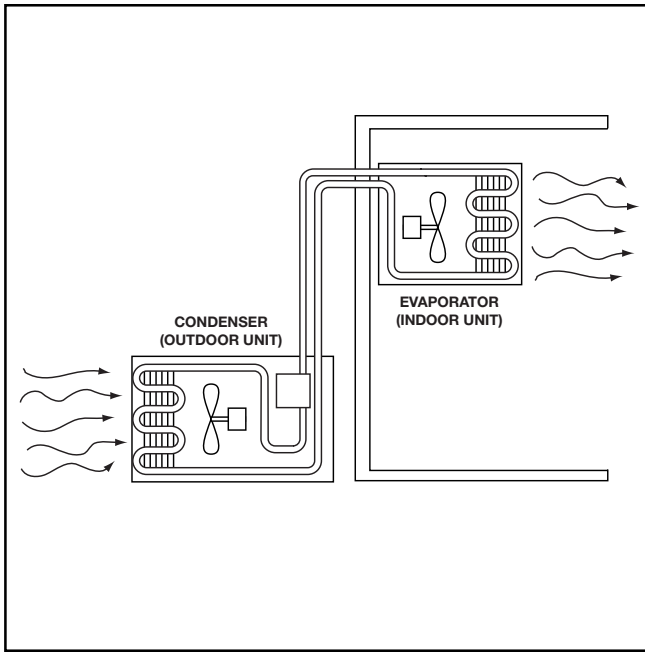

Conventional Air Conditioner


Generally speaking, conventional air conditioners cool the entire enclosed environment. They act as “heat exchangers”, requiring an interior unit (evaporator) to blow cool air into the interior and an exterior unit (condenser) to exhaust exchanged heat to the outdoors. Unlike conventional air conditioners, the MovinCool Spot Cooling System is a spot cooler which directs cool air to particular areas or objects. MovinCool Spot Cooling Systems have the following features:

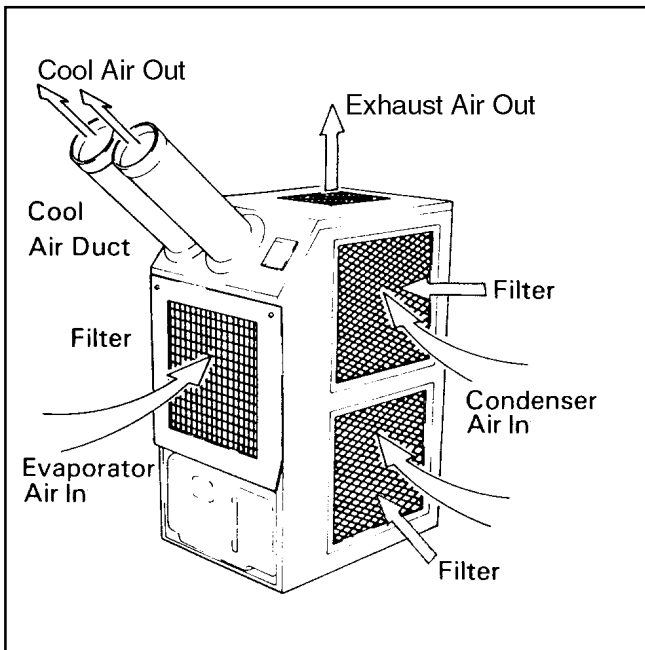

Air Flow of MovinCool Spot Cooling System


1. **Compact Design**
The innovative design of MovinCool has resulted in one compact unit, replacing the need for two separate units.
2. **Easy Transportation and Installation**
With the whole cooling system built into one compact unit, MovinCool requires no piping and can be easily transported and installed.
3. **Energy Conservation**
MovinCool is economical because it cools only the area or objects which need to be cooled.

CONSTRUCTION, SPECIFICATIONS & DATA

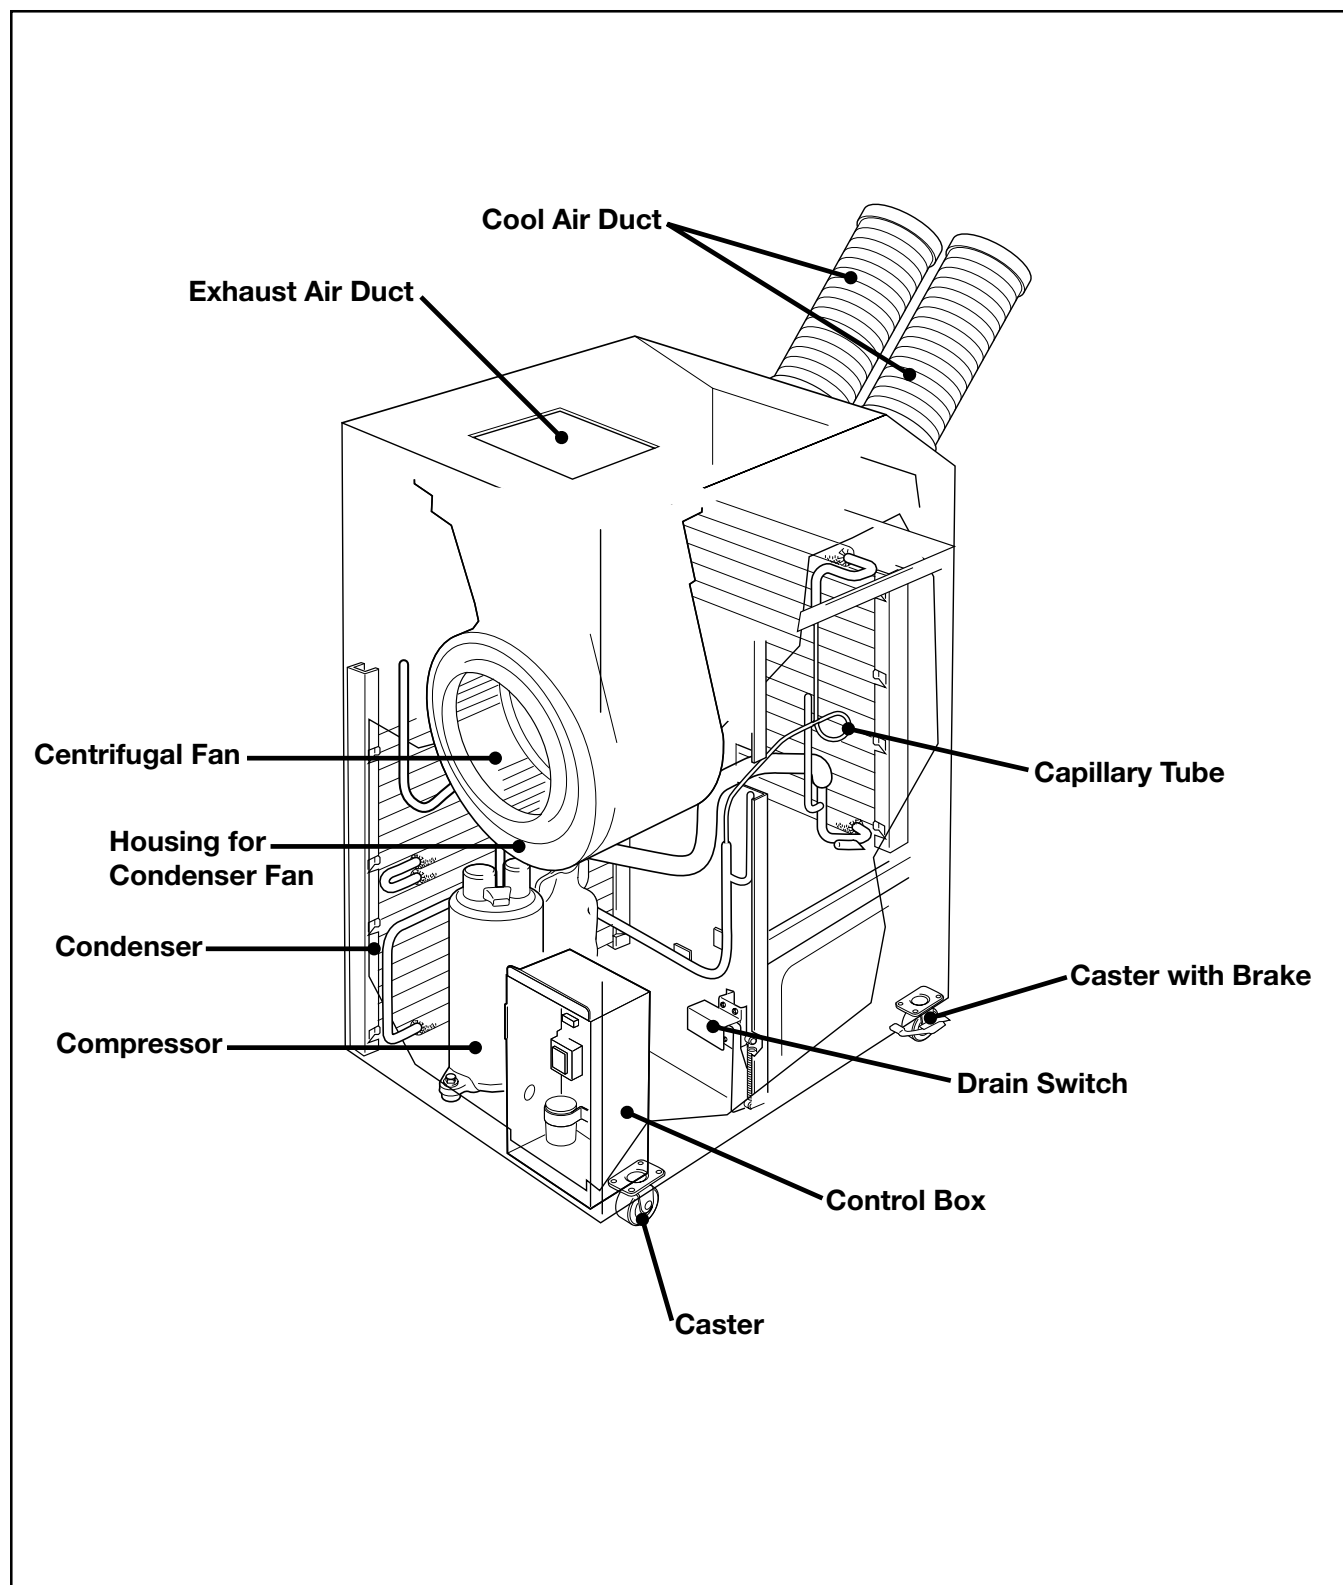


Construction of Classic Plus 14

CONSTRUCTION, SPECIFICATIONS & DATA

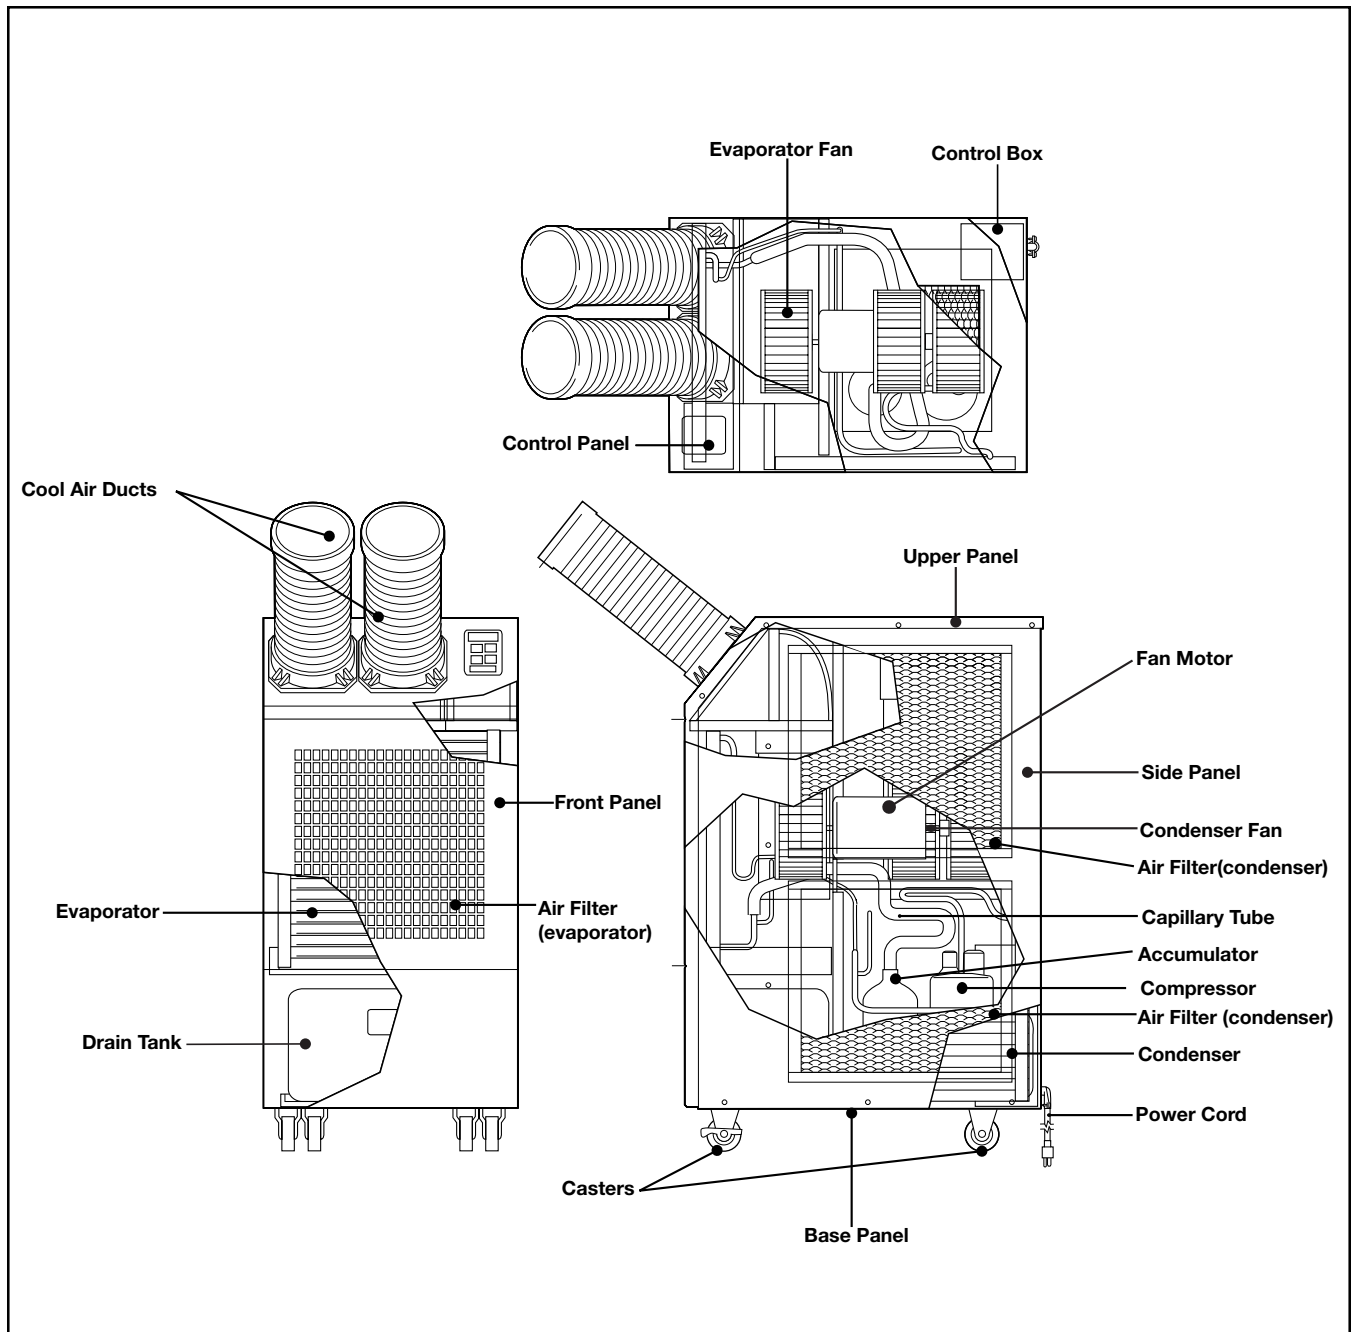

Construction Diagram

CONSTRUCTION, SPECIFICATIONS & DATA

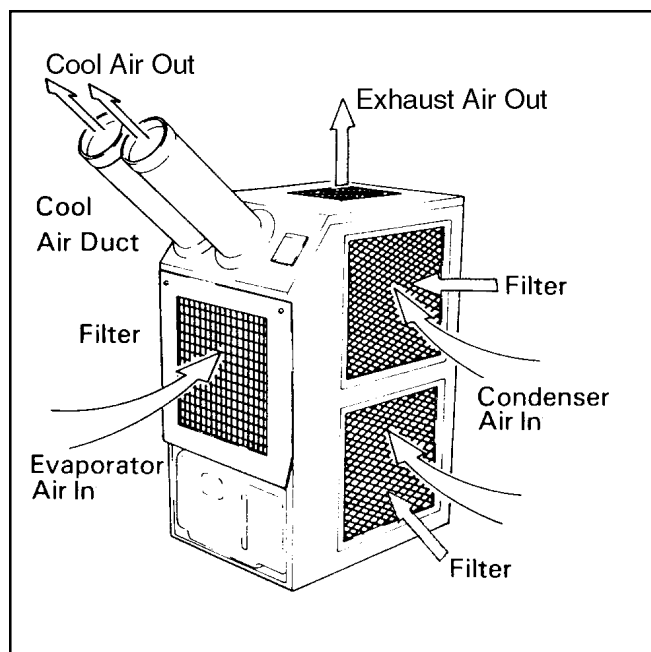

Air Flow

1. **Basic Construction**
The MovinCool Spot Cooling System is compact in construction because the condenser and the evaporator are enclosed in one unit. The interior is divided into three sections. The upper front face is equipped with the evaporator, while the lower front face contains the drain tank. The rear section contains the condenser, the compressor and the control box.
2. **Air Flow**
Air drawn from the right side face passes through the condenser which extracts the heat. This hot air is blown out through the upper exhaust air duct. Air taken in from the front face is cooled by the evaporator and then blown through the cool air duct which can be turned in any direction. All the air inlets are equipped with filters, while the exhaust air duct is protected by wire mesh.
3. **Compressor and Fans**
The compressor is hermetically sealed. A two-speed fan motor is used with two centrifugal fans to draw air across the evaporator and condenser.
4. **Drain Tank**
The capacity of the drain tank is 5.0 gallons (19 liters). The unit is equipped with a "Tank Full" LED and a device to automatically stop the operation of the unit when the drain tank reaches a level of approximately 4.0 gallons (15 liters).

CONSTRUCTION, SPECIFICATIONS & DATA

Rating Conditions

<i>dry bulb</i>	95°F (35 °C)
<i>wet bulb</i>	83°F (28.3 °C)
<i>humidity</i>	(60%)

Specifications

<i>power frequency</i>	60Hz
<i>line voltage</i>	single phase 115 V
<i>power consumption</i>	1.41 Kw
<i>current consumption</i>	12.3 Amps
<i>power factor</i>	95%
<i>starting current</i>	32A
<i>power wiring</i>	14 (3-core) AWG

Cooling Unit

<i>cooling capability</i>	3,300 Kcal/hr
.....	13,200 BTU/hr
<i>cooling system</i>	direct expansion

Blower

<i>type of fan</i>	centrifugal fan
<i>air volume: Evaporator (Hi speed)</i>	470 ft ³ /min
<i>Condenser (Hi speed)</i>	882 ft ³ /min
<i>motor output</i>	0.24 Kw (High)
.....	0.19 Kw (Low)

Compressor

<i>type</i>	rotary
<i>output</i>	0.8 Kw
<i>refrigerant type</i>	R-22
<i>refrigerant capacity</i>	1.50 lbs (0.68 kg)

Safety Devices

<i>compressor overload relay</i>	included
<i>fan motor protector</i>	included
<i>anti-freezing thermister</i>	included
<i>full drain tank switch</i>	included
<i>power interruption restart feature</i>	included
<i>time delay feature</i>	included

Dimensions & Weight

<i>W x D x H</i>	19.4" x 26.5" x 41.5"
.....	493 x 673 x 1054 (mm)
<i>weight</i>	165lbs (75kg)

Operating Conditions

<i>inlet air (relative humidity)</i>	113°F (45 °C), ≤ 50%
.....	70°F (21.1 °C), ≥ 50%


Control Device

<i>temperature control</i>	included
<i>two speed fan</i>	included

Specifications



Specifications are subject to change without notice.

CONSTRUCTION, SPECIFICATIONS & DATA

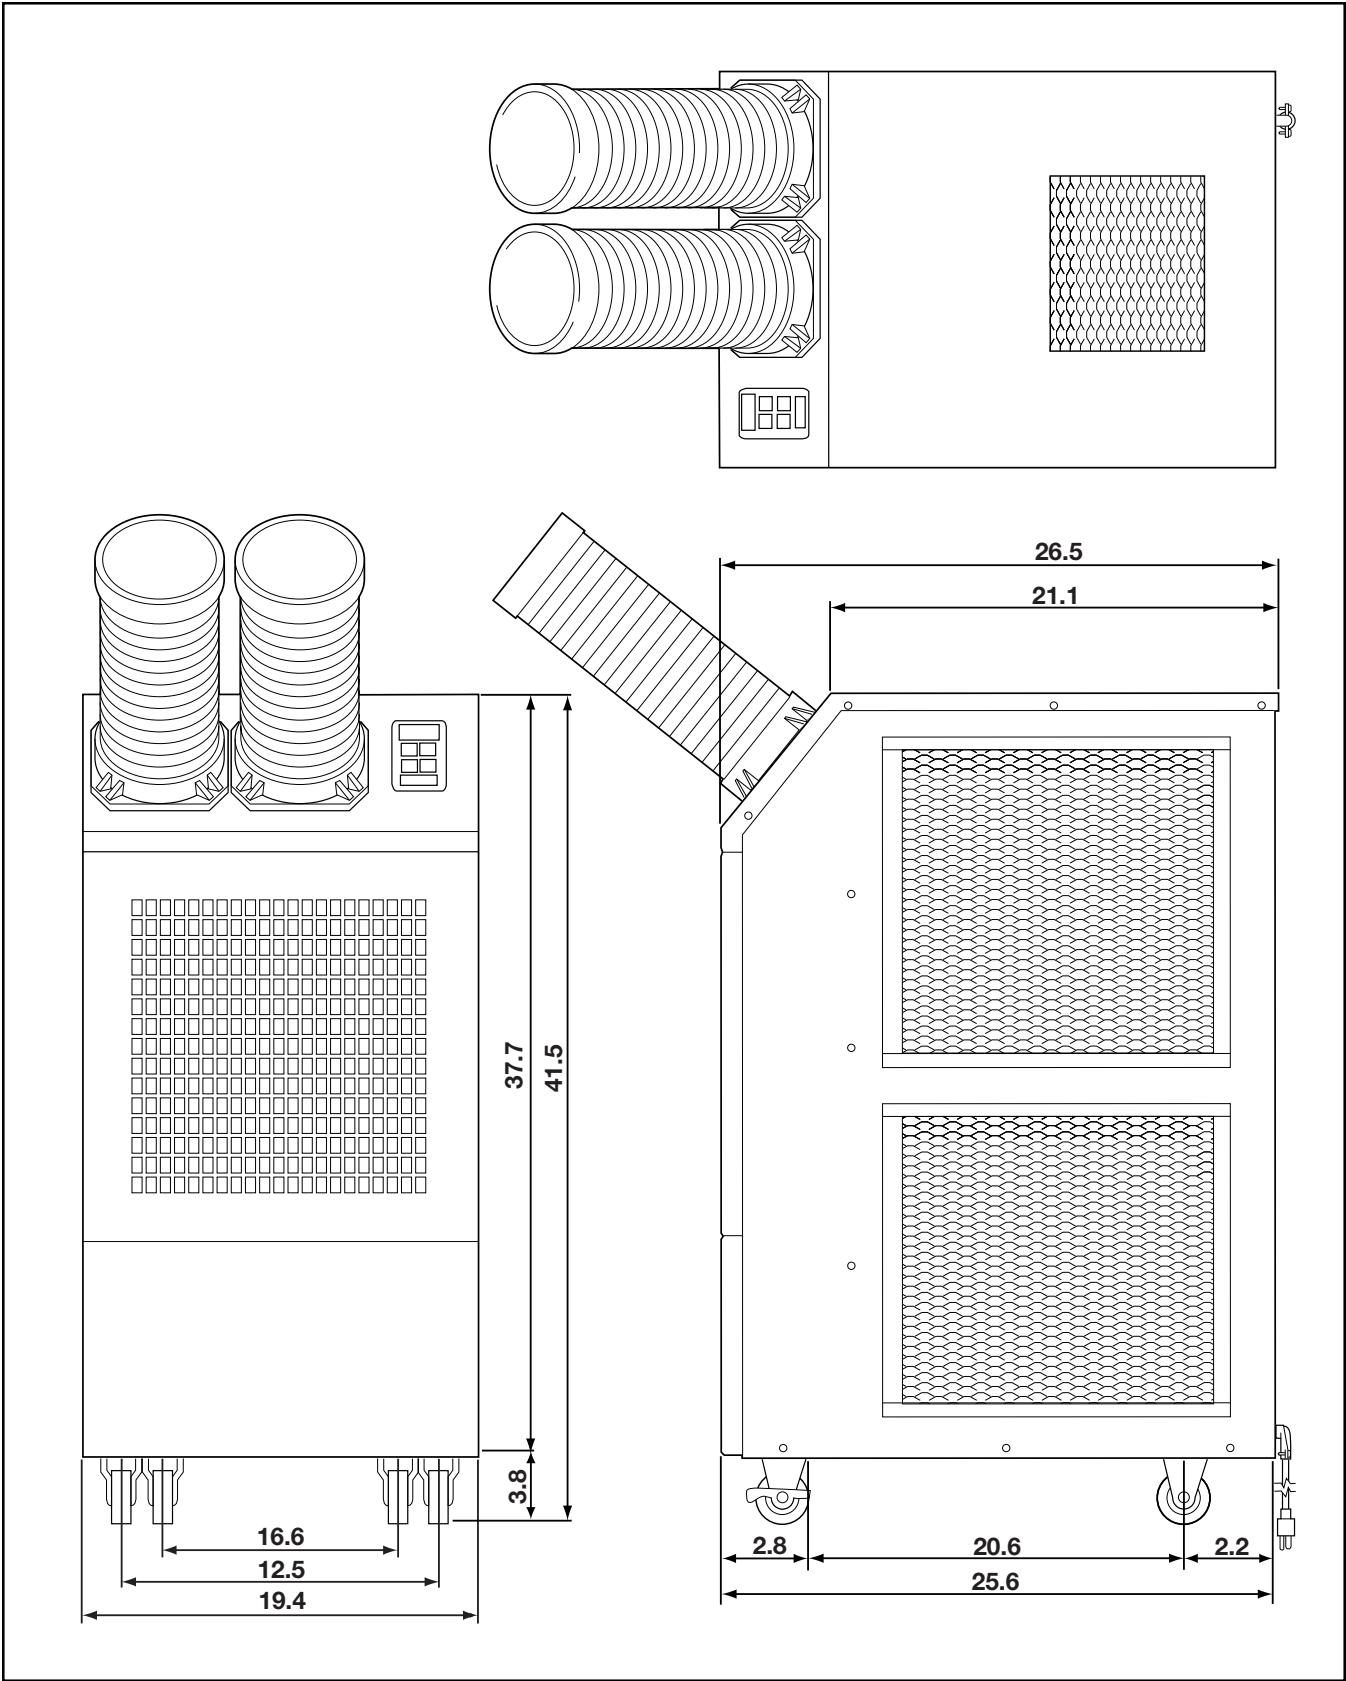


Exterior Dimensions



CONSTRUCTION, SPECIFICATIONS & DATA

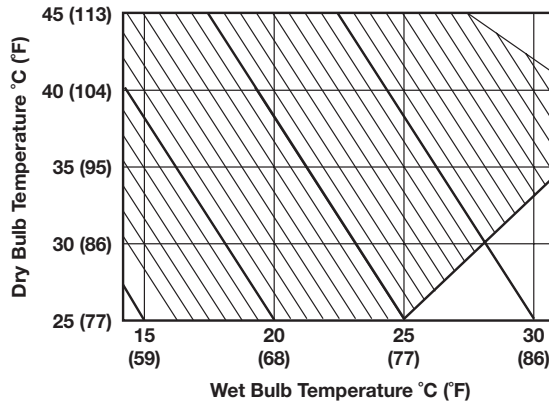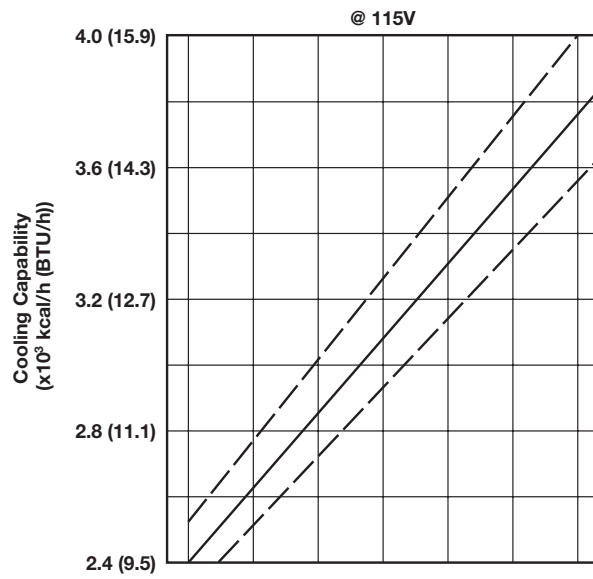

Cooling Capacity Curve

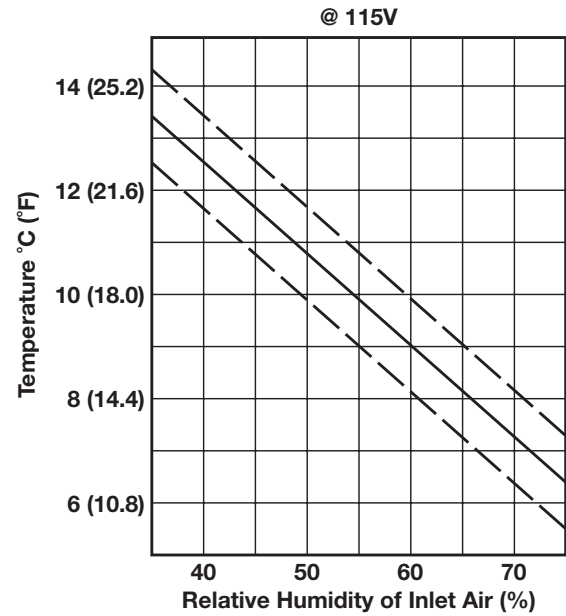

Cool Air Temperature Difference Curve

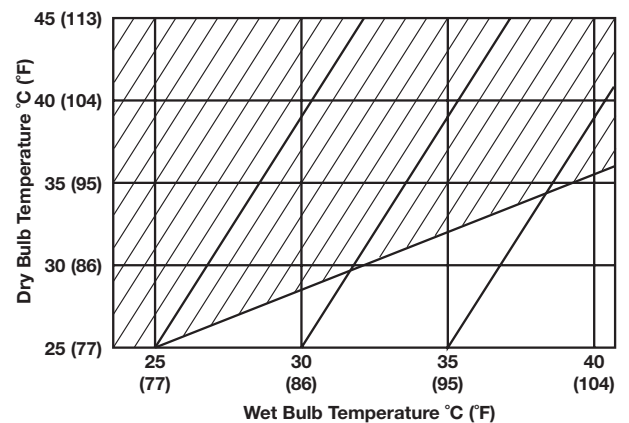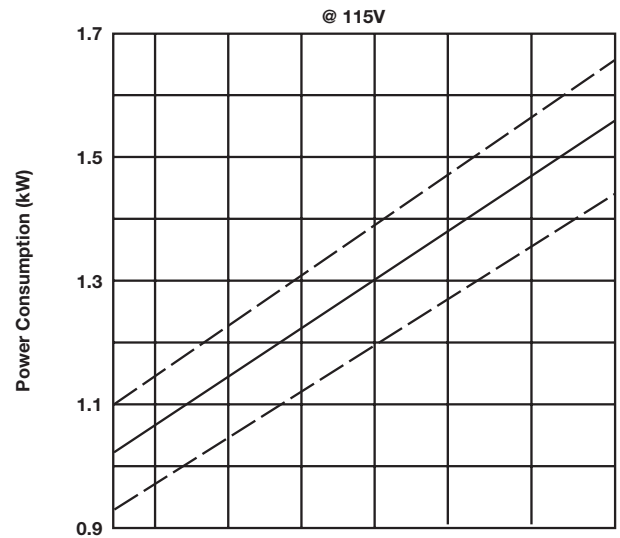


Power Consumption Curve

REFRIGERANT SYSTEM

1. The component parts of the refrigerant system include the following:

- Accumulator
- Capillary tube
- Compressor
- Evaporator
- Condenser

These parts are all connected by copper tubing. All the connections have been brazed.

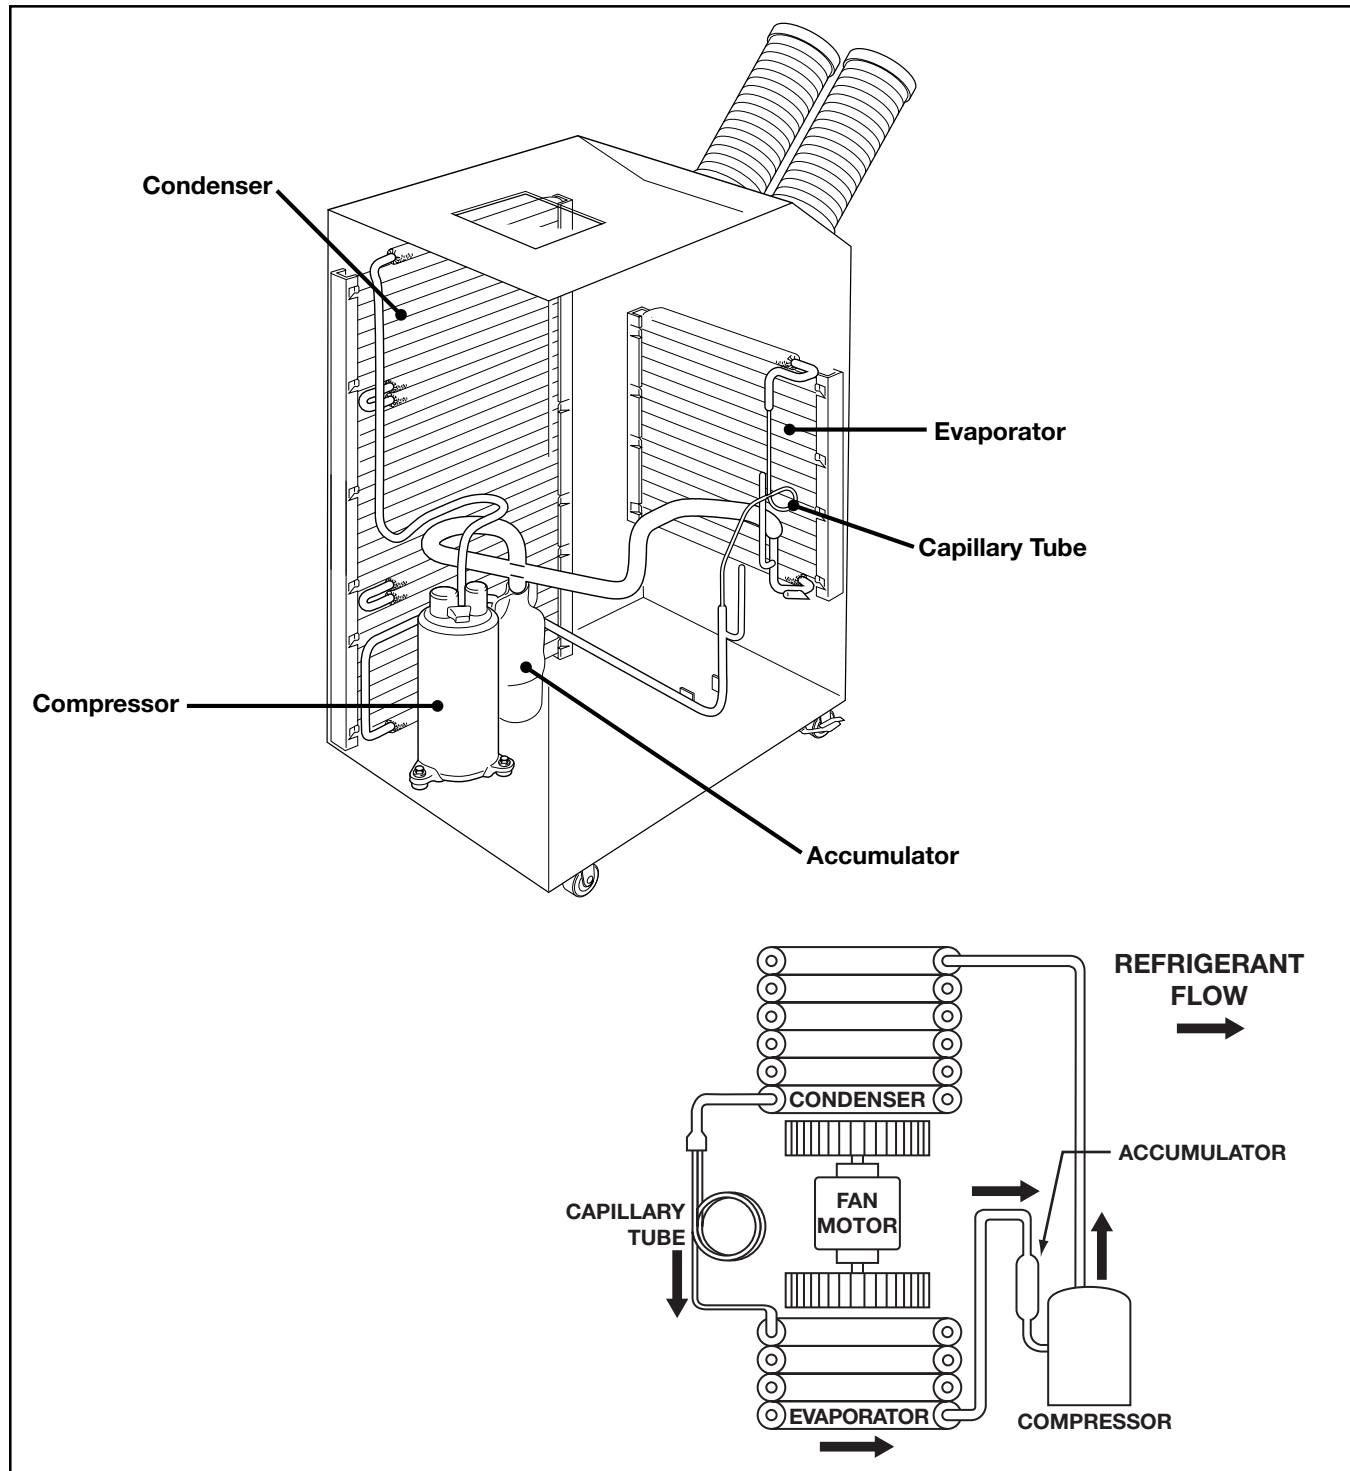

Refrigerant System

2. Compressor

The compressor used for the unit is hermetically sealed. The compressor and the compressor motor are in one casing.

A. Compressor Construction


The construction of a rotary type compressor is divided into two mechanisms - the drive mechanism (compressor motor) and the compression mechanism (compressor). When the rotor shaft of the motor (drive mechanism) turns, the roller of the compressor (compression mechanism) rotates to compress the refrigerant.

B. Basic Compressor Operation

The roller (compression mechanism) is set eccentrically with a certain distance given from the axis of the center of the cylinder. A spring loaded blade is mounted on the cylinder. The roller turns to compress the refrigerant in the space between the cylinder and eccentrically mounted roller.

The blade is in contact with the roller by means of spring force. It partitions the space between the suction side and the discharge side to keep compressed refrigerant from returning to the suction side.

There is no suction valve. The discharge valve is designed not to open until the pressure of the refrigerant within the cylinder reaches or exceeds that of the refrigerant on the discharge side. This design prevents the backward flow of discharge gas.

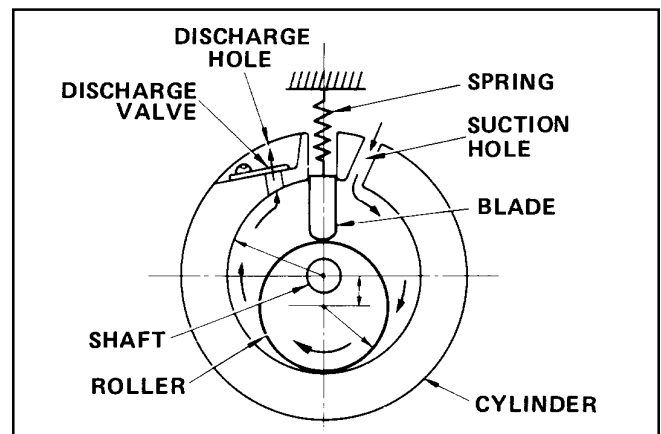


Compressor Operation

3. Condenser

The condenser is a heat exchanger with copper tubes that are covered with thin aluminum projections called spine fins. Heat is given off and absorbed by air being pulled across the condenser fins by the centrifugal fan and then expelled through the exhaust air duct.

REFRIGERANT SYSTEM

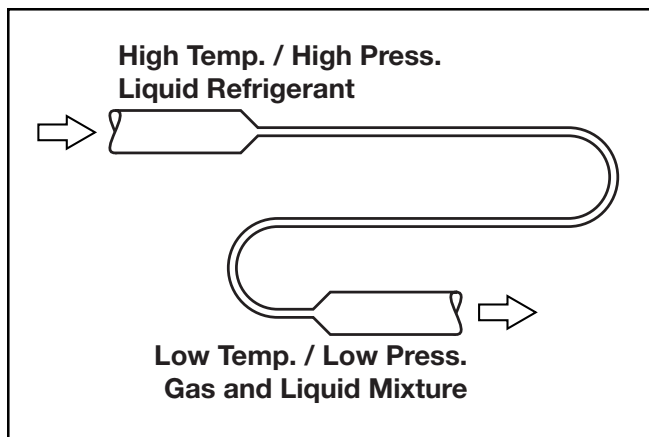

Capillary Tube


4. Capillary Tube

The capillary tube is a long thin tube utilizing line flow resistance to serve as an expansion valve. The length and the inner diameter of the capillary tube are determined by the capacity of refrigeration system, operating conditions, and the amount of refrigerant.

The capillary tube causes the high pressure, high temperature liquid refrigerant sent from the condenser to expand rapidly as the refrigerant is sprayed out through the fixed orifice in the capillary tube. As a result, the temperature and state of the refrigerant become low and mist-like respectively, causing it to evaporate easily.

5. Evaporator


The evaporator, like the condenser, is a heat exchanger covered with spine fins. Heat is removed from the air being pulled across the evaporator by the centrifugal fan and the resulting cool air is expelled through the cool air ducts.

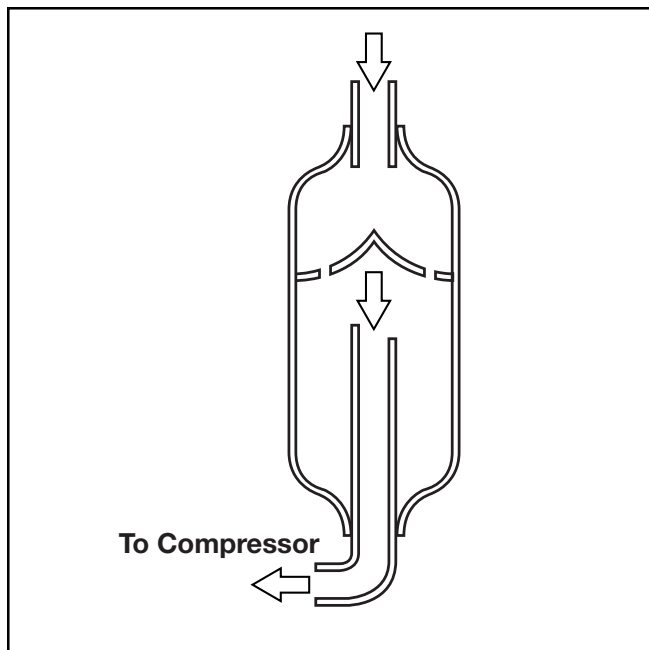

Accumulator


6. Accumulator

The accumulator is mounted on the suction gas piping between the evaporator and the compressor. The accumulator separates the liquid refrigerant from the gas refrigerant - letting only the gas refrigerant enter the compressor. The construction of the accumulator is as shown. In the accumulator, suction gas is led into a vessel having a cylindrical body, and the gas speed is decreased inside the vessel. This separates the refrigerant contained in the gas by the force of gravity causing it to accumulate at the bottom of the vessel. This protects the compressor from possible damage caused by the intake of liquid refrigerant.

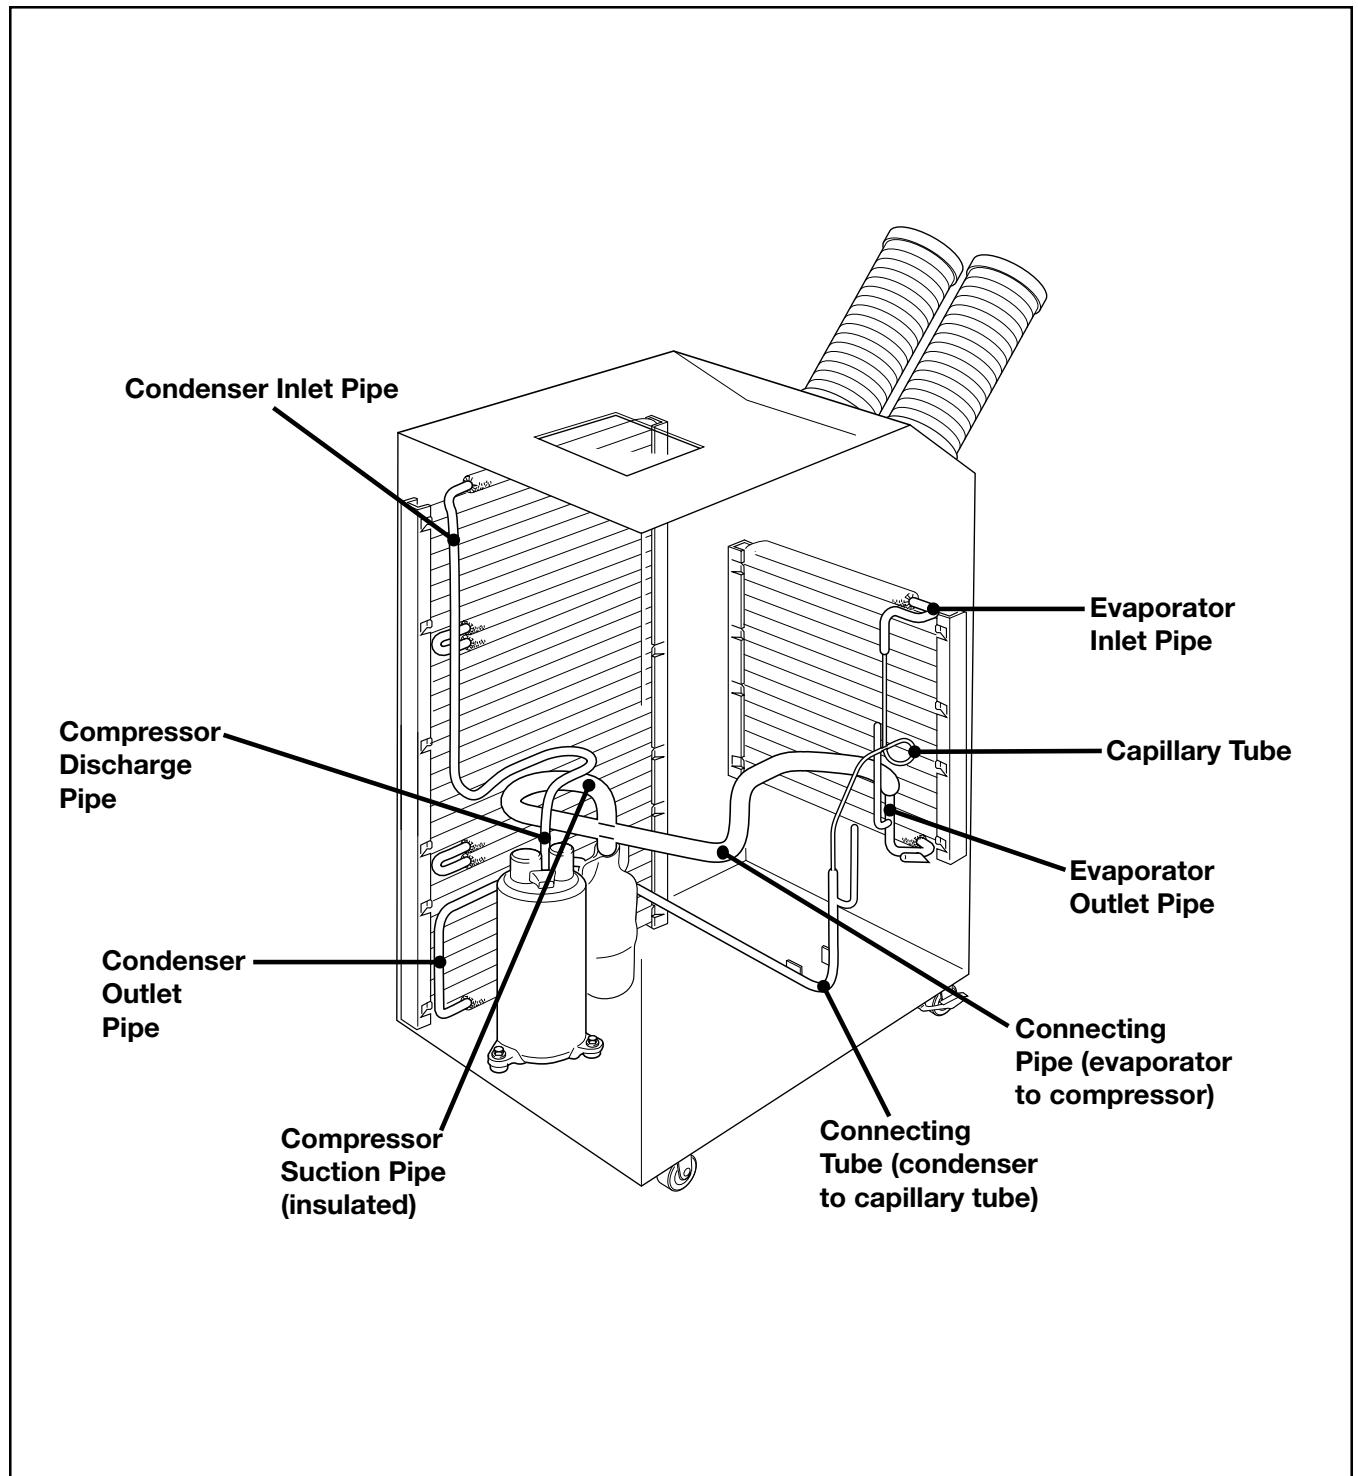


Refrigerant System Piping

ELECTRICAL SYSTEM

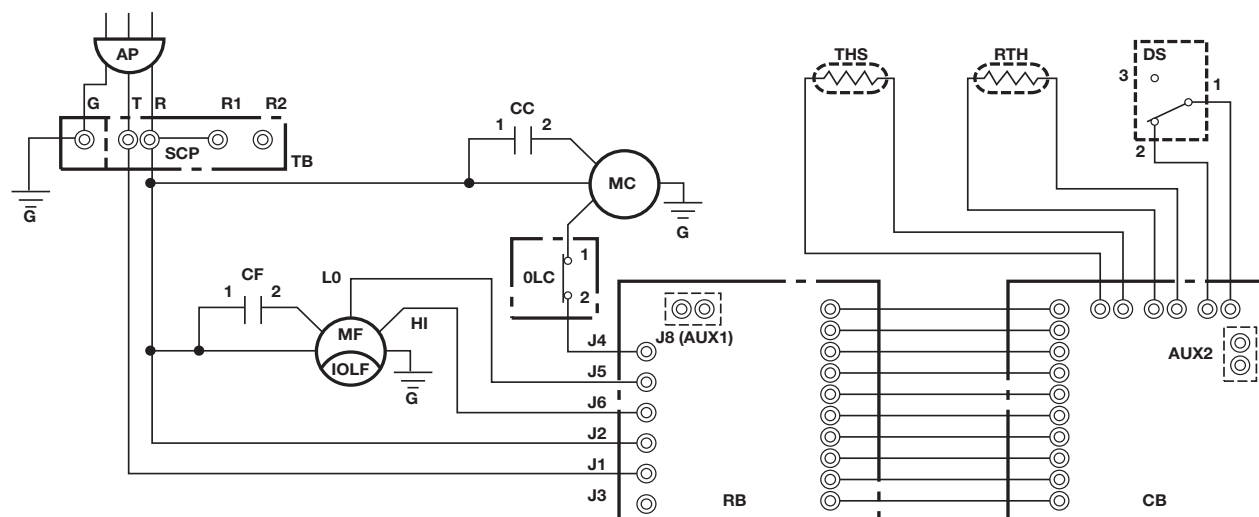

- | | | | |
|----|--------------------------|-----------|--------------------------------|
| AP | Attachment Plug | OLC | Overload Relay of Compressor |
| TB | Terminal Block | DS | Full Drain Warning Switch |
| CB | Control Board | THS | Freeze Protection Thermistor |
| RB | Relay Board | RTH | Room Thermistor |
| MF | Fan Motor | SCP | Short Circuit Plate |
| MC | Compressor Motor | G | Ground |
| CF | Capacitor for Fan | J8 (AUX1) | Auxiliary Connector (CPK3) |
| CC | Capacitor for Compressor | AUX2 | Auxiliary Connector (Not Used) |

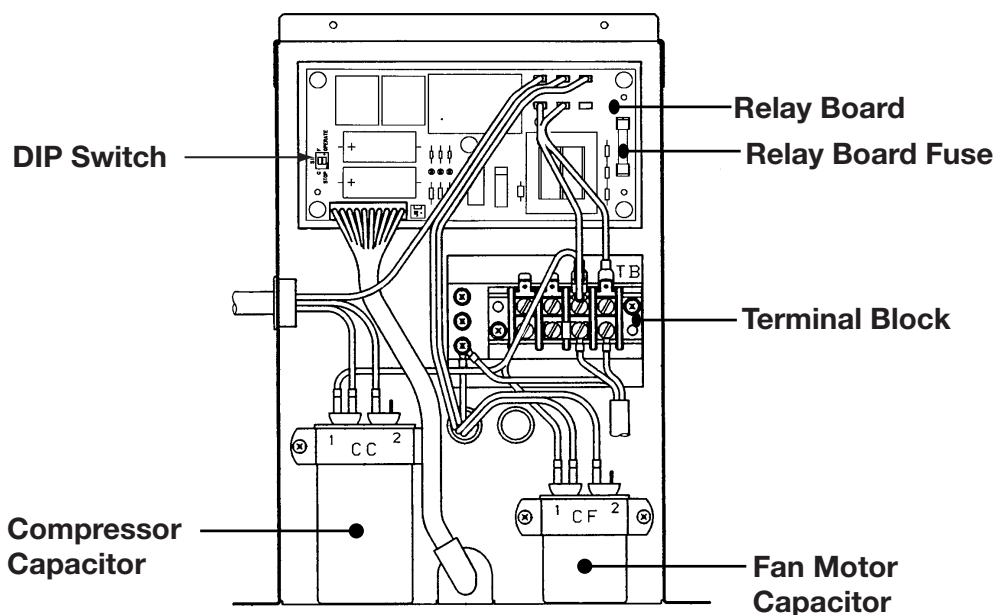

1. **Basic Operation of Classic Plus 14 Electrical Circuit**

There are two basic components used to control the operation of the Classic Plus 14 Electrical System:

- Control Panel Assembly
- Control Box

The Control Panel Assembly contains the Control Panel, Control Board (with inputs for the freeze and room temperature thermistors), drain switch, and a microprocessor.

A. Fan “Only” Mode


Low Fan Mode - When the “Low” Fan Mode button on the control panel is pressed, the microprocessor turns on the button’s LED and activates the Fan “On” Relay (Relay Board), sending line voltage (115 VAC) to the N.C. (Normally Closed) contacts of the fan “mode” relay. This output is connected to the J5 terminal (relay board) where the LOW SPEED wire of the fan motor is connected.

High Fan Mode – When the “High” Fan Mode button on the control panel is pressed, the microprocessor turns on the button’s LED and activates both the Fan “On” Relay and Fan “Mode” Relay. This sends line voltage (115 VAC) from the Fan “On” Relay to the N.O. (Normally Open) contacts of the Fan “Mode” Relay. This output is connected to the J6 terminal (Relay Board) where the HIGH SPEED wire of the Fan Motor is connected.


B. Cool Mode - In Addition to Fan “Only” Mode (as described above)

When the Cool On/Off button on the control panel is pressed, the microprocessor turns on the button’s LED and if the Temperature Set Point is less than the current room temperature, activates the Compressor Relay (Relay Board). This sends line voltage (115 VAC) to the J4 terminal (Relay Board) where the wire from pin 2 of the Compressor Overload Relay is connected. Pin 1 of the Compressor Overload Relay is connected (by wire) to the compressor.


ELECTRICAL SYSTEM

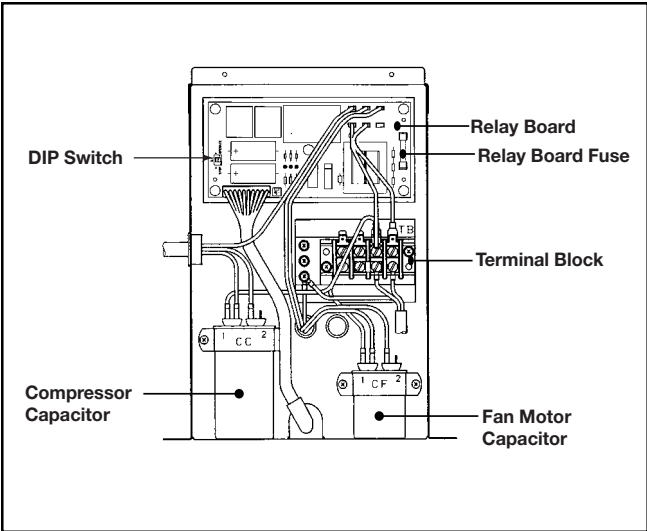

Control Box

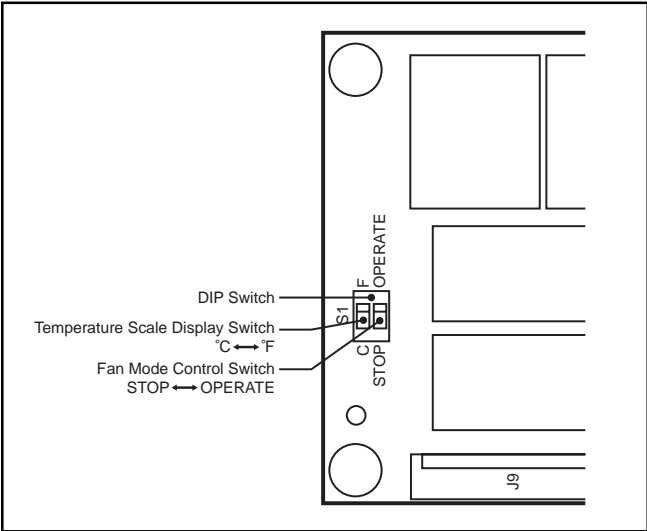

Relay Board

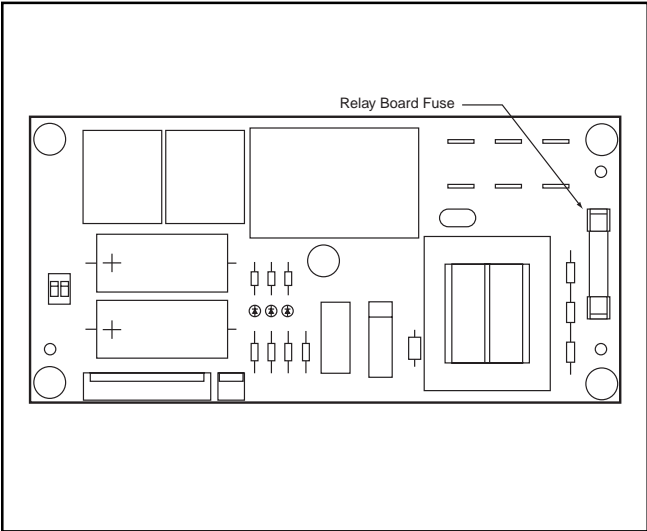

DIP Switch

2. Control Box

A. Capacitors

The capacitors are used to temporarily boost the power output available to the fan motor and the compressor at start-up.

The specifications of each capacitor are listed below:

CAPACITOR APPLICATION	VOLTAGE RATING	CAPACITANCE (μf)
Fan Motor	370	7.5
Compressor	370	45

B. Relay Board

The Relay Board receives signals and outputs from the control board that contains a microprocessor. The relay board contains the compressor, fan on and fan mode (speed) relays. It also contains a step-down transformer that converts the line voltage (115 VAC) to 12 volts. This is then converted from AC to DC and used for relay coil activation. The 12(DC) power is sent to the Control Panel Assembly where it is further reduced to 5 volts for the system logic.

The relay board also contains the DIP-Switch. The DIP-Switch is used to change the Fan Mode operation from Stop to Operate and change the Set Point temperature display from °F to °C.

NOTE: The relay board must be serviced as a complete assembly. It has only one serviceable component, the fuse.

(a) Relay Board Fuse

NOTE: The relay board fuse is the only serviceable component on the relay board assembly.

This fuse provides protection against damage to the step-down transformer. It must be replaced with the exact type of fuse or an equivalent.

Fuse Specifications: 2/10A 250V


⚠CAUTION: Failure to use the exact type of fuse could result in damage to the unit and/or to components. It will also void the warranty of the unit.

3. Fan Motor

The fan motor is a single phase, induction type two-speed motor. The motor rotates fans on the evaporator side and the condenser side at the same time.

Specifications: Rated Voltage: 115 volts 60 Hz
 Rated Output – High – 243 watts
 Low – 188 watts
 UL Listed File Number – E-49807

NOTE: An internal overload relay is used to protect the fan motor. This relay is built into the fan motor and will interrupt the flow of current when there is an overcurrent situation or if abnormally high temperature builds up in the fan motor.

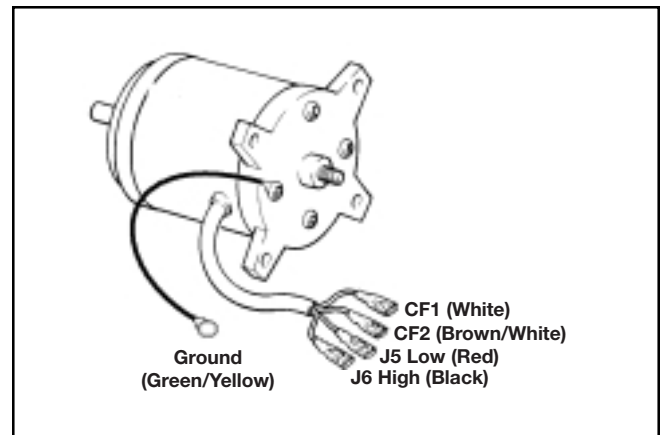

Fan Motor

4. Compressor Motor

The compressor motor is a single phase motor. It is contained within the same housing as the compressor.

Specifications: Rated Voltage 115 volts
 Rated Output 800 Watts

5. Compressor Overload Relay

An external compressor overload relay is used to protect the compressor motor. This relay is mounted within the connector housing that attaches to the top of the compressor. The relay will interrupt the flow of current when there is an overload caused by a high temperature condition in the compressor.

Specifications:


	Temperature	Variance	Trip Time (seconds)
Contacts Open	284°F / 140°C	± 41°F / ± 5°C	2 – 12
Contacts Closed	165°F / 74°C	± 48°F / ± 9°C	

ELECTRICAL SYSTEM

6. Drain Switch

The Classic Plus 14 is equipped with a drain tank switch. When the drain tank accumulates approximately 4.0 gallons (15 liters) of condensate (water) in the drain tank, the drain tank switch sends a signal to the microprocessor. The microprocessor stops all operation of the unit and flashes the "Tank Full" LED.

This system utilizes a .1 AMP, 250 VAC micro-switch for this function. When drain water accumulates approximately 4.0 gallons (15 liters) in the drain tank, the drain tank base plate, which is supported at its fulcrum, is pushed down in the direction of the arrow as shown in the figure below. When the drain tank base plate is forced down, the top of the drain tank base plate turns off the contacts (1) – (2) of the micro switch. This causes the ground signal at the J103 connector of the control panel assembly to go open. When the microprocessor detects this event, it turns the unit off and flashes the "Tank Full" LED.

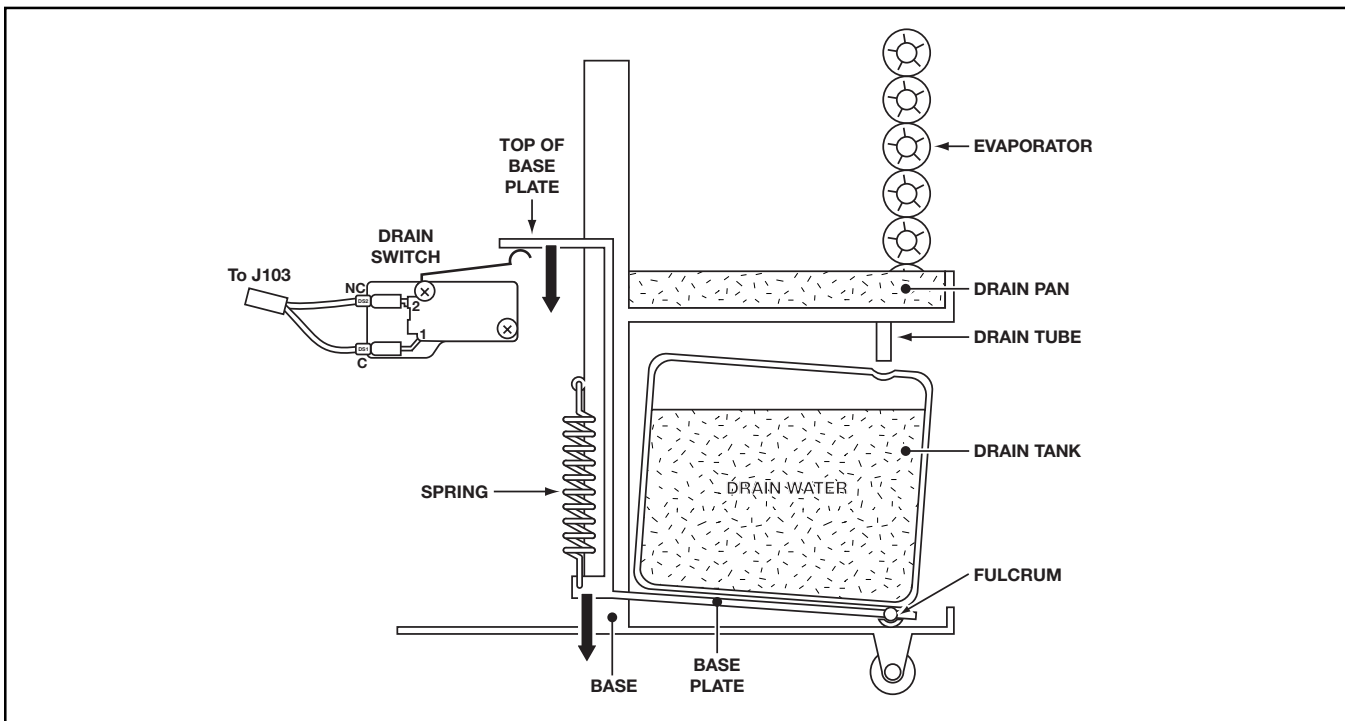

Operation of Drain Switch

When the drain tank is removed (or the drain tank is emptied), the top of the drain tank base plate returns to its original position by the tension of the coil spring. Then contacts (1) – (2) of the drain tank switch close. This provides a ground to the microprocessor through the J103 connector. To re-start the unit, press one of the fan mode buttons or the "Cool On/Off" button. The unit will return to the previous Temperature Set Point.

7. Condensate Pump Kit (optional)

The Classic Plus 14 model comes standard with a drain tank, which collects the water that forms on the evaporator during normal cooling operation. If the unit is required to operate continuously without periodic emptying of this tank, a condensate pump may be needed. A condensate pump kit (CPK-3) is available for the Classic Plus 14 model.

8. **Automatic Restart After Power Interruption**

The program within the microprocessor of the Classic Plus 14 contains a feature that will automatically restart the unit after power is lost and then regained. The unit also has memory in order to return itself back to the operating mode (including temperature set point) it was in prior to the loss of power.

9. **Compressor Protection**

There is a Time Delay program within the microprocessor. This prevents a heavy load from being applied on the Compressor Motor when restarting the unit (Cool Mode) after a very short period of time. This "delay" is in effect any time when the compressor is turned on by either the "Cool On/Off" button, temperature set point (thermostatic control), power interruption restart or Condensate Pump (optional) operation.

Time Delay Program Specifications: 120 ± 10 sec.

10. **Temperature Control**

The compressor operation (Cool Mode) is controlled by the microprocessor which receives input signals from the room temperature thermistor (evaporator inlet air) and the setting of the Temperature Set Point. The Temperature Set Point (desired room temperature) can be adjusted by pressing the ▲ / ▼ buttons on the Control Panel. The adjustment range of the Temperature Set point is 70°F to 95°F (21.1°C to 35°C).

11. **Fan Mode Control Switch**

The fan motor operation is controlled by relays on the relay board through a microprocessor in the control panel assembly. The fan program in the microprocessor can be changed by a DIP-Switch on the left side of the Relay Board located in the Control Box. There are two settings:

A. Cool to Stop

When the DIP-Switch is set to the "Down" or "Stop" position, the microprocessor controls the fan motor using the same room temperature thermistor that it uses to control the compressor. In this case, both the fan and the compressor stop when the microprocessor receives a sufficiently low intake air (room temperature) signal from the thermistor (equal to or less than the set point). When the temperature increases (exceeds the set point) the microprocessor will restart the fan and compressor automatically. However, if the unit has been off for less than 130 sec., the fan will start before the compressor (time delay feature).

B. Cool to Operate

When the DIP-Switch is set in the "Up" or Operate position, the microprocessor controls the fan operation using control panel inputs only. The fan will operate continuously during Fan Only and Cool Modes. (This is the factory default setting.)

12. **Temperature Scale Display Switch**

When the DIP Switch is set in the "down" or °C position, the Set Point Temperature will be displayed in degrees Celsius. The LED that indicates °C will also be illuminated.

When the DIP Switch is set in the "Up" or °F position, the Set Point Temperature will be displayed in degrees Fahrenheit.. The LED that indicates °F will also be illuminated. (This is the "Factory Default" setting.)

TROUBLESHOOTING AND REPAIR

Before troubleshooting the system, the following inspection should be performed.

1. Inspection of Power Source Voltage

Check the voltage of the power source.

Single phase 115 volts (60Hz)

Check the operation and condition of the fuse or circuit breaker in the power source.

2. Inspection of Air Filters

Remove the air filters and check the element. If the element is dirty, wash it as described in the OPERATION MANUAL supplied with the unit.

3. Inspection of Drain Tank

Be sure tank is fully drained.

The following chart is provided as a guide for categorized problem remedies. Detailed information is contained in the OPERATION MANUAL supplied with the unit.

4. Troubleshooting Chart


Trouble	Probable Cause	Trouble	Probable Cause
Unit does not operate at all	<ul style="list-style-type: none"> • Check for Power at Receptacle • Check for Power at Terminal Board • Check for Power at Relay Board • Check all wire connections • Defective Drain Tank Switch • Check Relay Board Fuse • Defective Relay Board • Defective Control Board 	Insufficient Cooling (cont'd)	<ul style="list-style-type: none"> • Clogged spine fins • Set point temperature exceeds room temperature • Defective room temperature thermistor • Leak in refrigerant system • Restriction in refrigerant system • Compressor not operating
Unit starts, but stops immediately	<ul style="list-style-type: none"> • Defective Overload Relay • Defective Fan Motor • Defective Compressor Motor • Defective Relay Board 	Compressor not operating	<ul style="list-style-type: none"> • Set point temperature exceeds room temperature • Unit is operating in Fan Only Mode (Cool Mode not activated) • Jumper on Control Board (J104) not installed correctly • Jumper on Relay Board (J8) not installed correctly • Defective Condensate Pump (optional) • Defective Compressor Capacitor • Defective overload relay • Defective Thermistor • Defective Compressor Motor • Check wiring connections • Defective Relay Board • Defective Control Board
Unit operates, but stops after a few minutes	<ul style="list-style-type: none"> • Defective Compressor Motor • Defective Overload Relay • Defective Fan Motor • Drain Tank Full • Fan Mode Switch is set to "Stop" and compressor cycled off 		
Water leakage from the unit	<ul style="list-style-type: none"> • Drain Tank not installed • Drain Tank is defective (cracked) • Drain Pan hole is obstructed 		
Abnormal noise and/or shaking	<ul style="list-style-type: none"> • Loose Compressor mounting nut • Deformed or worn rubber grommet on the compressor mounting bolt • Internal interference with other components • Damaged or out of balance fan and scroll 	Fan Motor not operating	<ul style="list-style-type: none"> • Fan mode switch is set to "Stop" and current Set Point Temperature exceeds Room Temperature • Fan mode switch is set to "Stop" and unit has been equipped with optional Condensate Pump that is defective • Fan mode switch is set to "Stop" and Jumper on Control Board (J104) or Relay Board (J8) is not installed correctly • Check wire connections • Defective fan motor capacitor • Defective fan motor • Defective Relay Board • Defective Control Board
Insufficient Air Flow	<ul style="list-style-type: none"> • Clogged spine fins or Evaporator or Condenser (running unit without filter(s)) • Fan mode switch on "Low" • Defective fan motor 		
Insufficient Cooling	<ul style="list-style-type: none"> • Environmental conditions exceed design specifications • Clogged air filter 		

TROUBLESHOOTING AND REPAIR

In case of trouble, perform the following inspection before disassembly.

5. Inspection of Spine Fins


To inspect the spine fins of either the evaporator or condenser you must remove the air filters. After removal of the air filters, inspect the spine fins for any dirt, dust, lint, or debris that may have caused poor cooling performance of the unit. If cleaning of the spine fins is necessary, it is recommended that this service be performed by a qualified service technician.

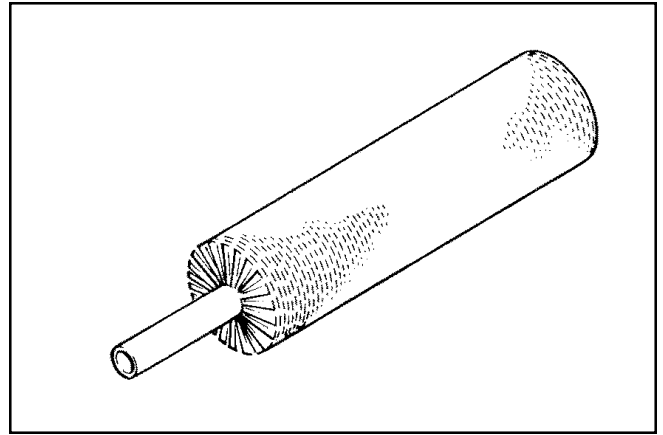

Spine Fins

6. Examination of Operating Environment


Operating environments will vary depending on location, climate and surrounding conditions. Installation location also can cause operational problems. Consult your reseller concerning operational environment requirements.

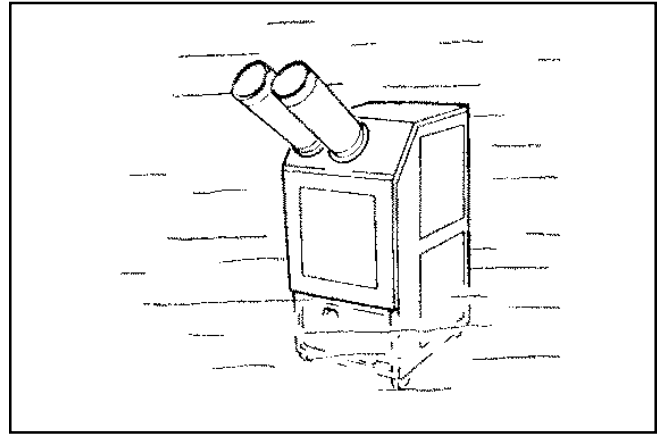

Operating Environment

7. Inspection of Cooling Capacity


Measure the difference in temperature between the inlet of the evaporator and the cool air duct. If the difference is out of the range given in the graphs on page 8 proceed with the remedy suggested in the troubleshooting chart on page 19.

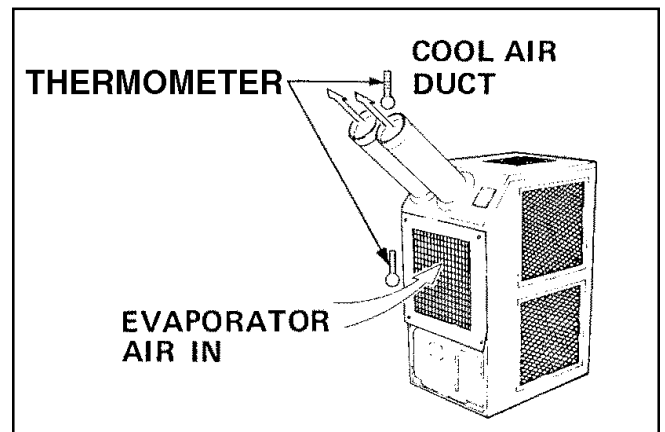

Inspection of Cooling Capacity

TROUBLESHOOTING AND REPAIR

8. Disassembly

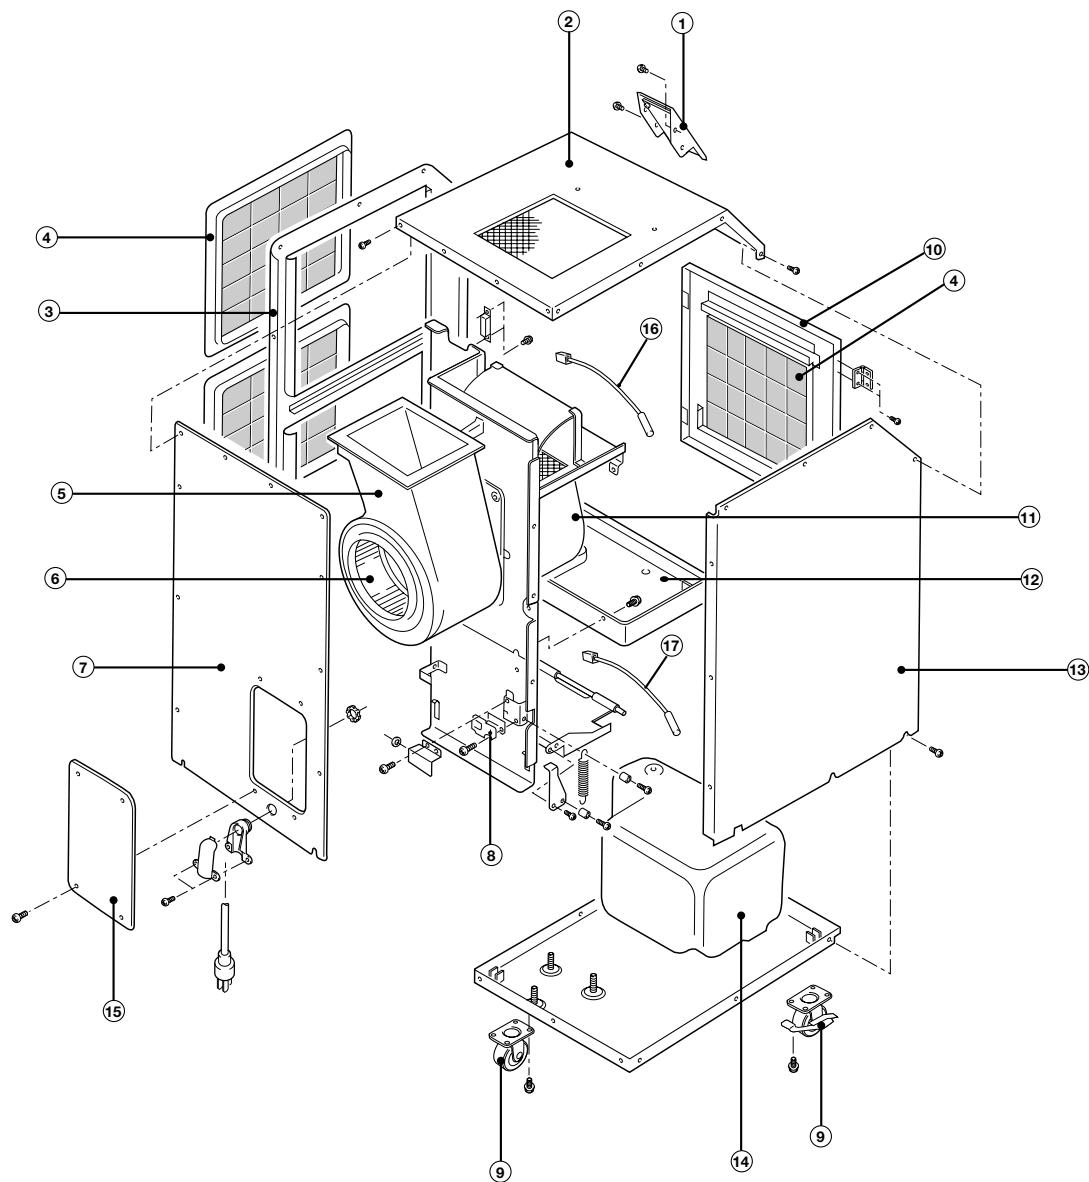


- 1. Control panel
- 2. Upper panel
- 3. Right side panel
- 4. Air filter
- 5. Blower housing (condenser)
- 6. Condenser fan
- 7. Rear panel
- 8. Drain Switch
- 9. Caster

- 10. Front panel
- 11. Blower housing (evaporator)
- 12. Drain pan
- 13. Left side panel
- 14. Drain tank
- 15. Service panel
- 16. Room thermistor
- 17. Freeze thermistor

Disassembly


TROUBLESHOOTING AND REPAIR

- A. Remove Drain Tank.

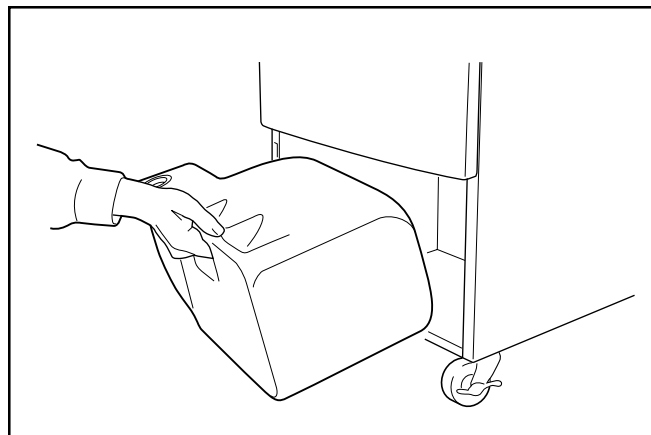


Removal of Drain Tank

- B. Remove (8) screws from the ducts, then remove the 2-ducts.

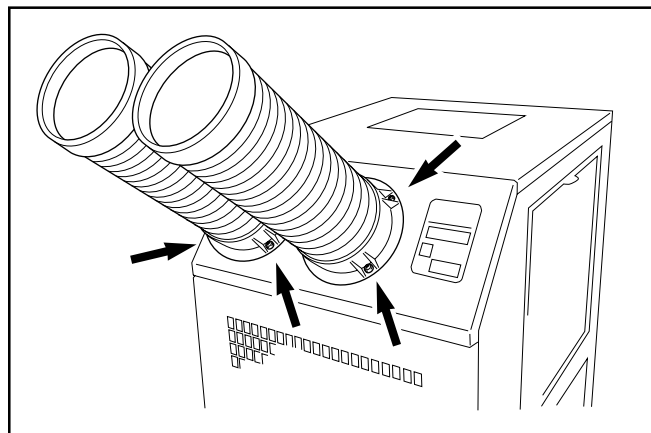


Removal of Duct Screws and Ducts

- C. Remove (4) screws from the Service Panel.

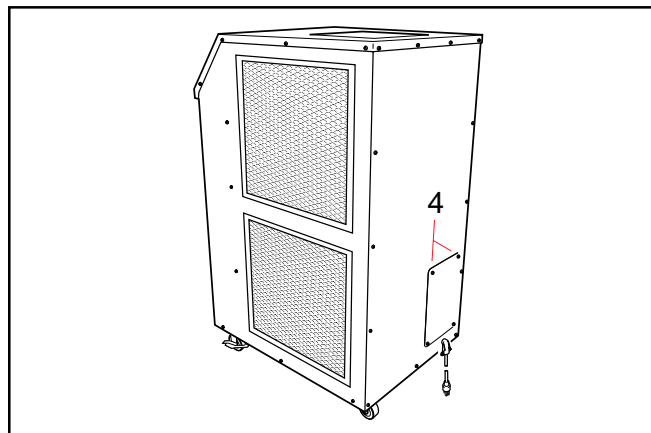


Removal of Service Panel Screws

- D. Remove 3 wires, then remove the power cord.

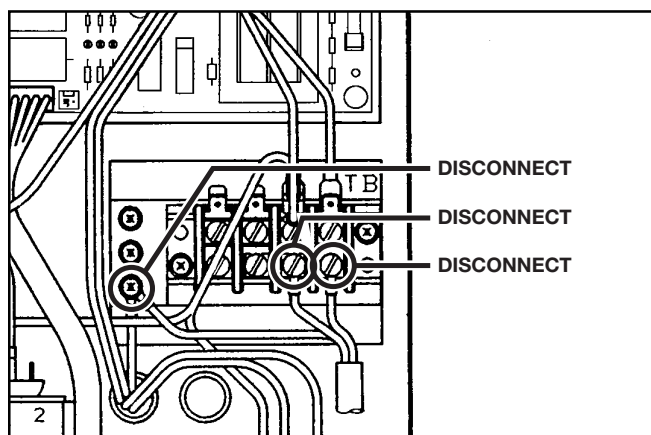


Removal of Power Cord Screws

TROUBLESHOOTING AND REPAIR

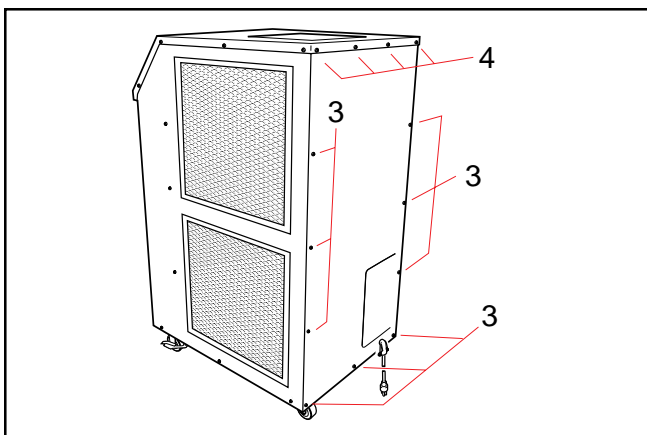


- E. Remove remaining (13) screws and the back panel.

Removal of Back Panel Screws

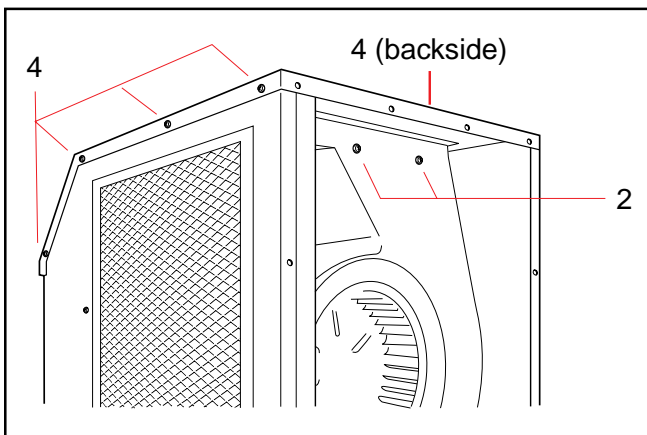

- F. Remove (14) screws from the Top Panel.


Removal of Top Panel Screws

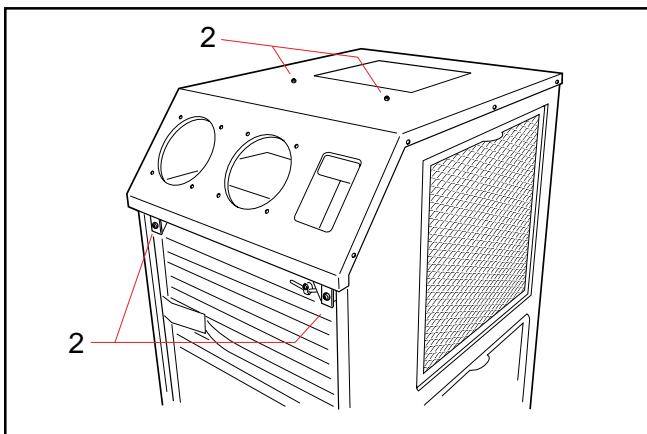

- G. Top Panel (4).


Removal of Top Panel

9. Removal of Electrical Parts

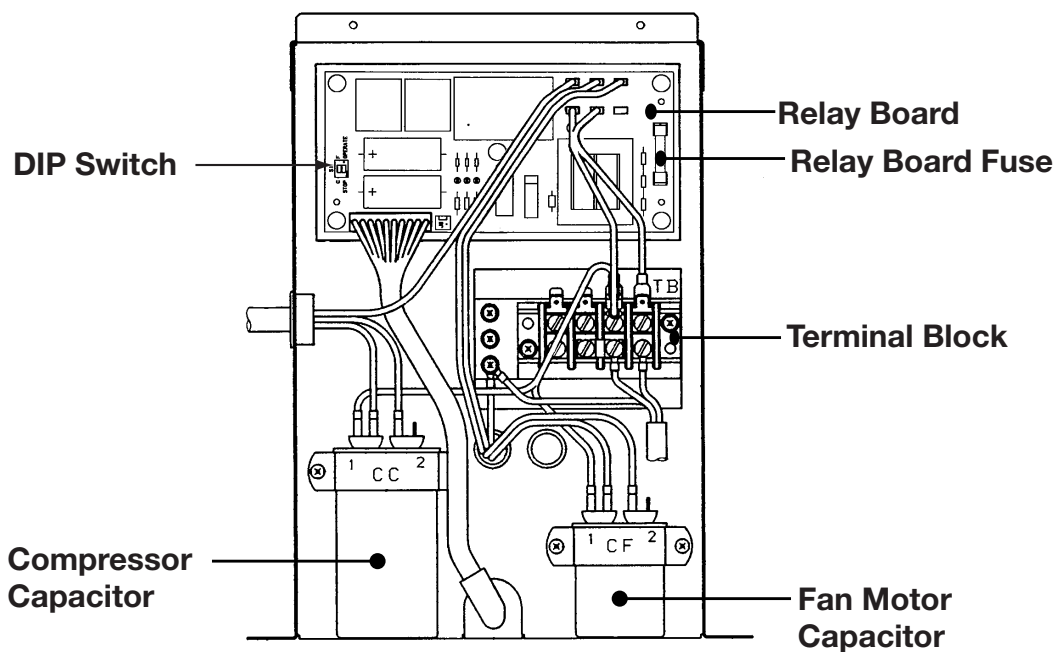


Removal of Electrical Parts in the Control Box

TROUBLESHOOTING AND REPAIR

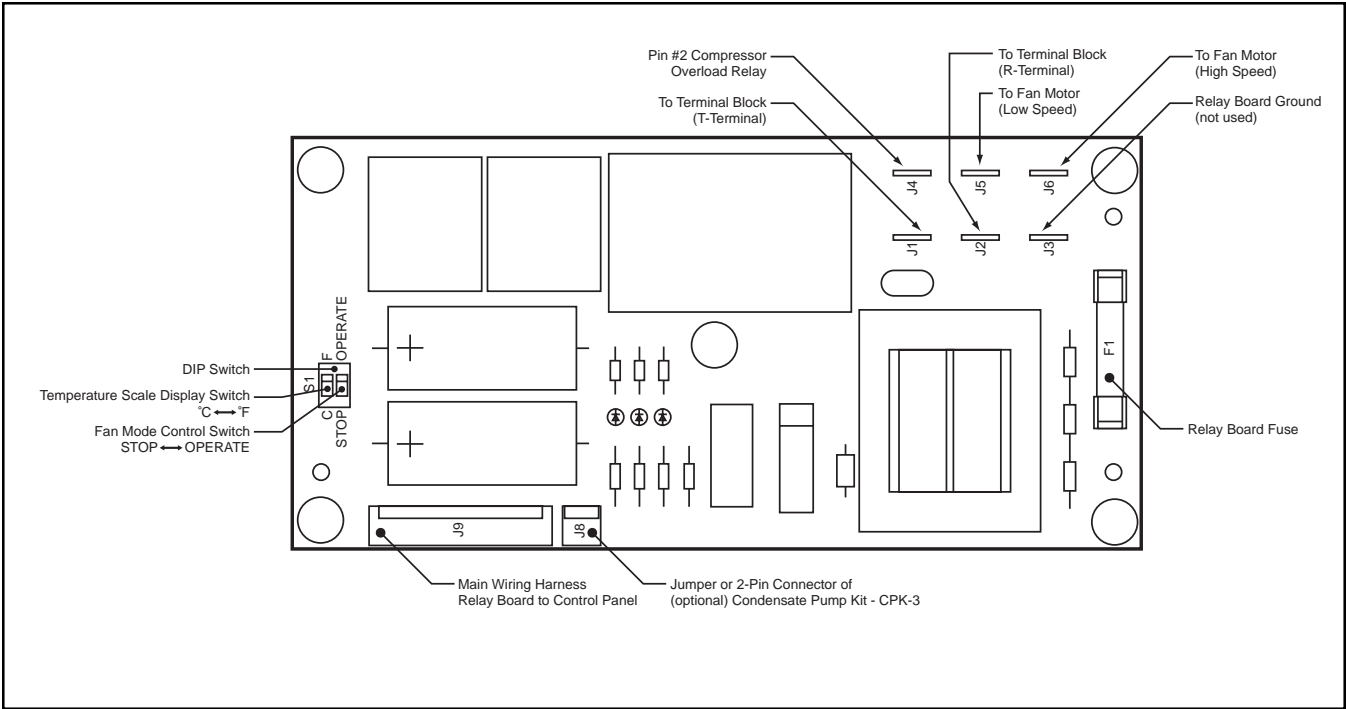


Connections to Relay Board

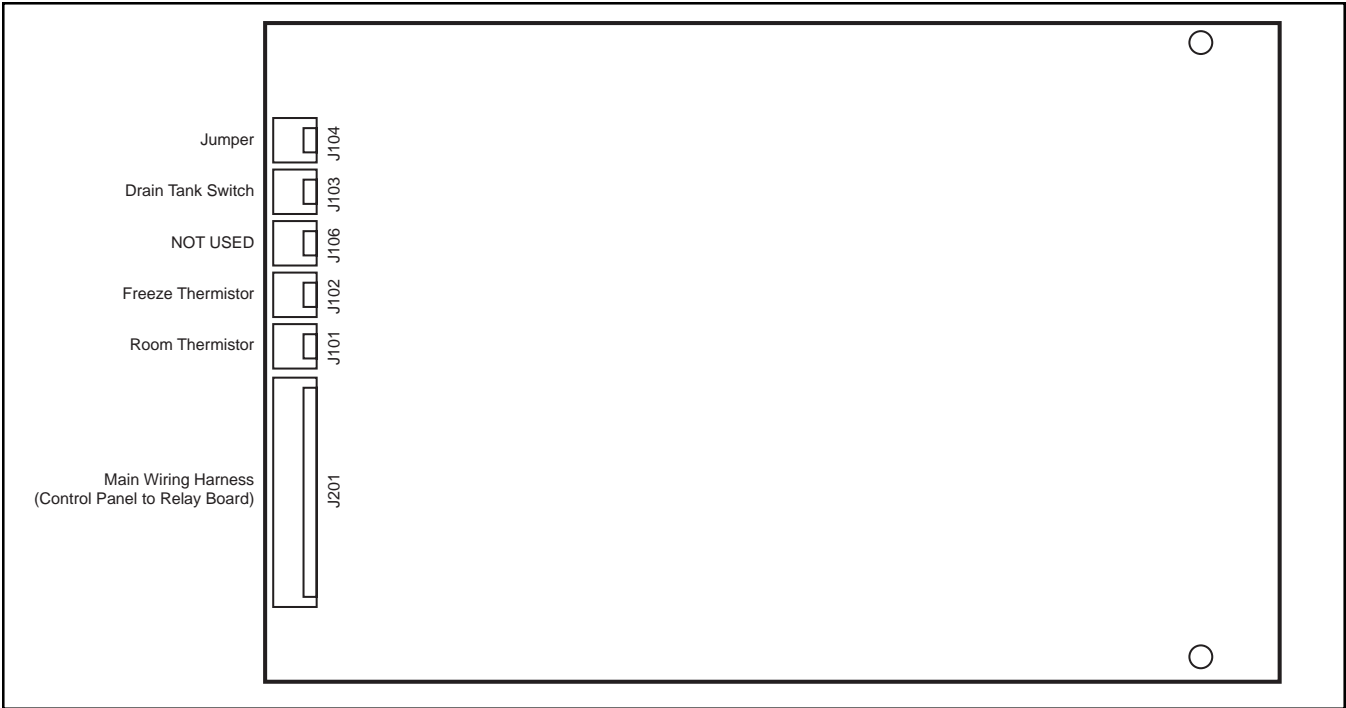


Connections to Control Board

10. Removal of Blower Assembly

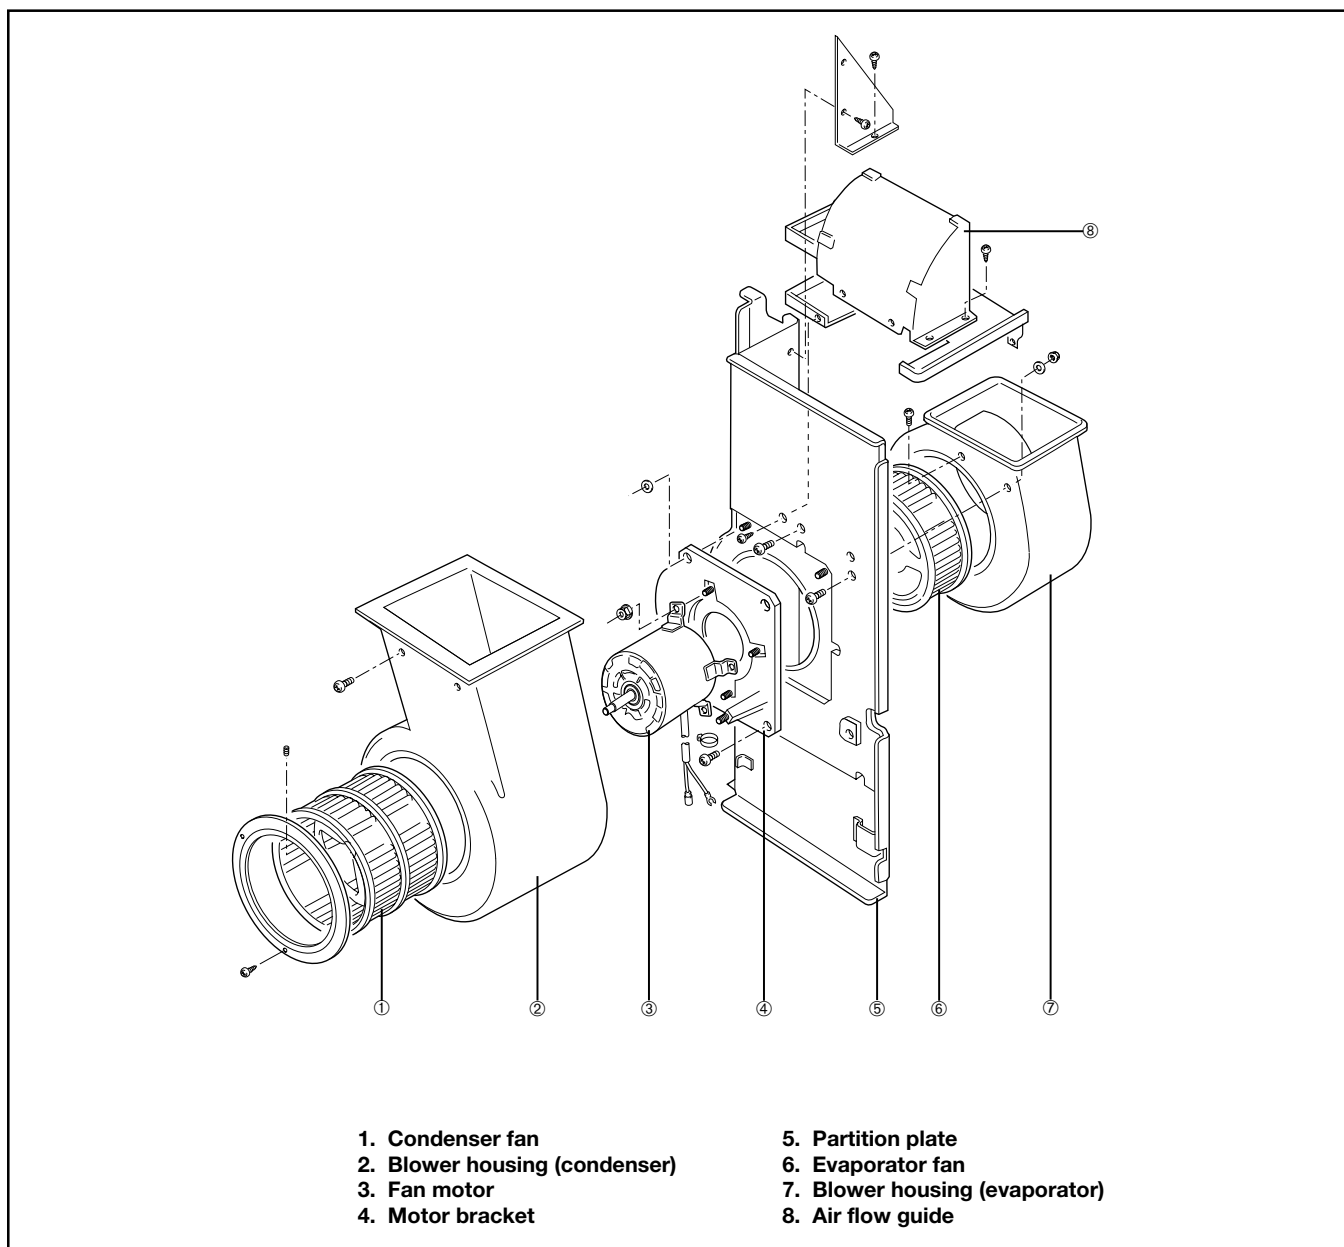


Disassembly of Blower

TROUBLESHOOTING AND REPAIR

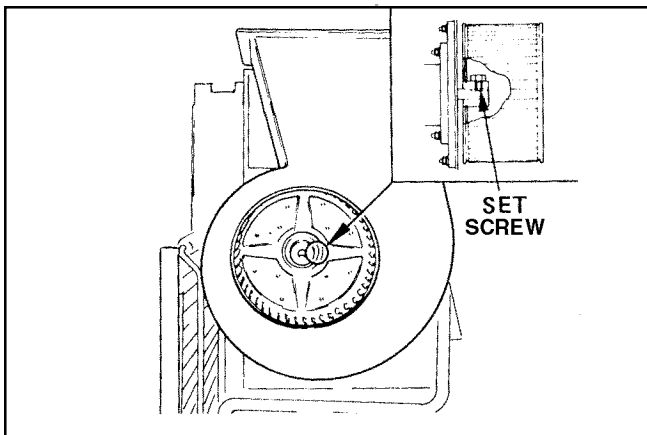

Removal of Centrifugal Fan


- A. Loosen the set screw using an allen wrench and then remove the centrifugal fan.

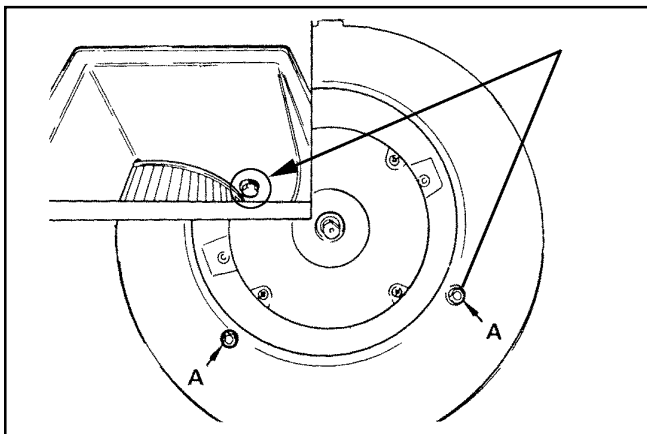

Removal of Blower Housing

- B. Remove the two (2) nuts on the inside of the housing in the locations shown.

A - NUT

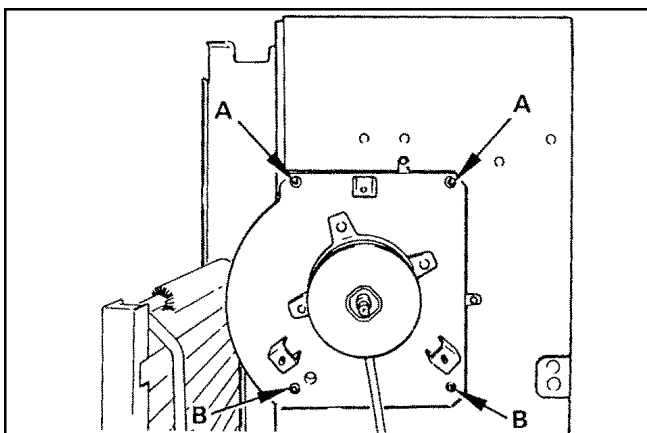

Removal of Fan Motor Assembly

- C. Remove two nuts and two screws as depicted.


Then remove the motor bracket together with the fan motor.

A - NUT

B - SCREW


TROUBLESHOOTING AND REPAIR

- D. Remove the centrifugal fan by loosening the set screw on the shaft. Remove the fan motor, by loosening “A” nuts.

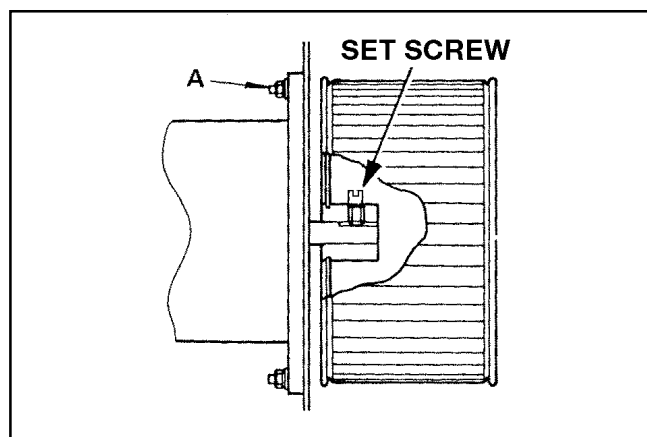


Removal of Fan Motor

- E. Remove (7) screws from Left Side Panel.

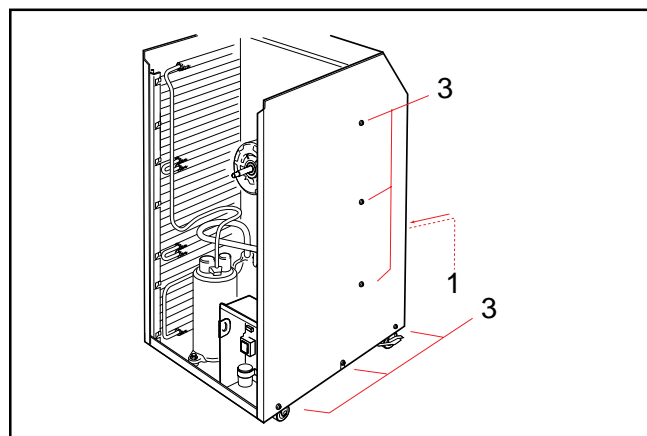


Removal of Left Side Panel Screws

- F. Remove (7) screws from Right Side Panel.

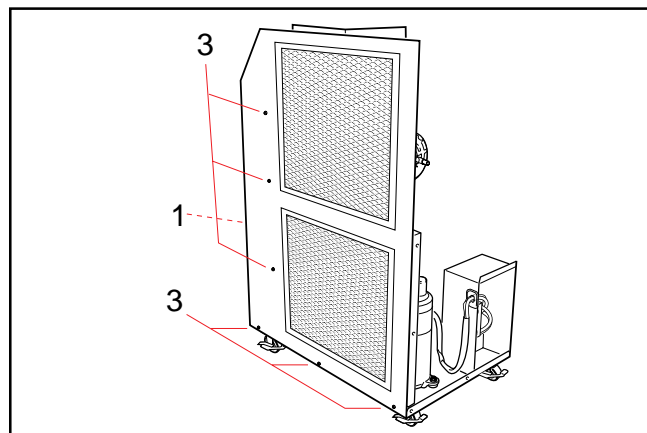


Removal of Right Side Panel Screws

TROUBLESHOOTING AND REPAIR

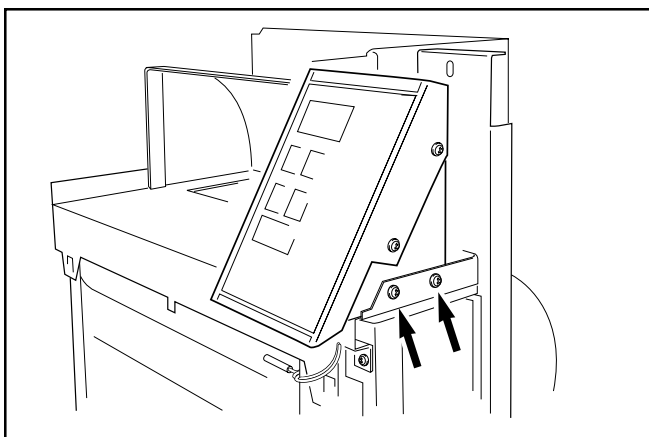


Removal of Right Stay Screws

- G. Remove (2) screws from Control Panel Assembly Right Stay.

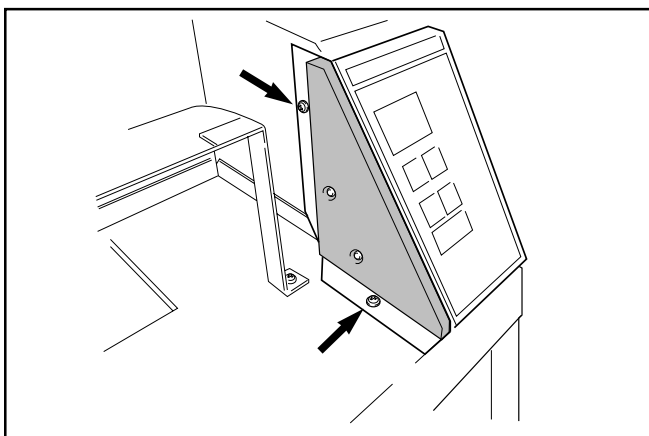

Removal of Left Stay Screws

- H. Remove (2) screws from Control Panel Assembly Left Stay.

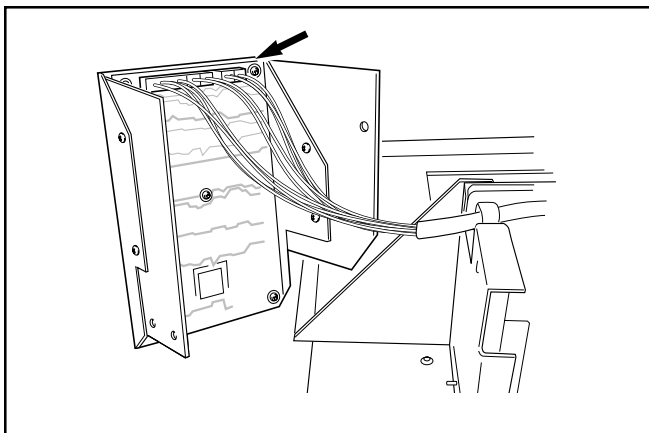


Removal of Control Panel Assembly

- I. Disconnect the following connectors from the control board:
- (1) Wire Harness, Relay Board to Control Board J201 (10-pin)
 - (2) Drain Tank Switch J103 (2-pin)
 - (3) Room Temperature Thermistor J101 (2-pin)
 - (4) Freeze Thermistor J102 (2-pin)

NOTE: Mark each of the 2-pin connectors with a different color marker to ensure the correct orientation when they are re-connected.

TROUBLESHOOTING AND REPAIR

- J. Remove the five (5) screws from the control board on the control panel assembly. Remove the control board.

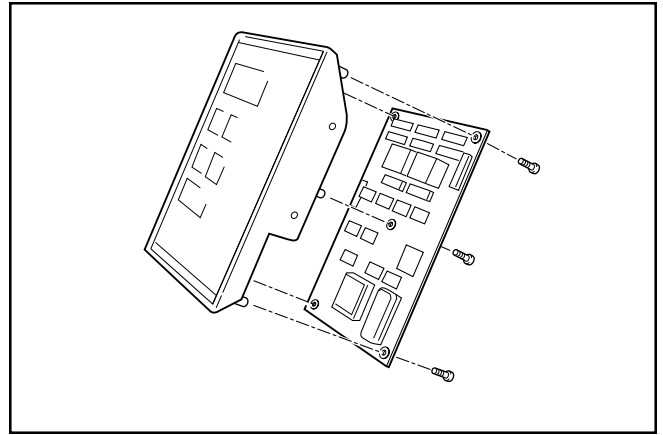


Removal of Control Board

11. Inspection of Capacitor (Fan Motor and Compressor)

Ohmmeter Method – Set the ohmmeter to the 100K Ω range. Place the two probes against the two terminals of the capacitor. At first, the ohmmeter should indicate 0 Ω , then the reading should gradually increase towards infinity (∞). This indicates that the capacitor is charging. If the reading indicates infinity right away (shorted) or the ohmmeter fails to move from 0 Ω (open), replace the capacitor.

12. Capacitance Tester Method


Using a capacitance tester and the chart on page 15, test the capacitor for the value indicated. If the value tested is not within 10% of indicated capacitance, replace the capacitor.

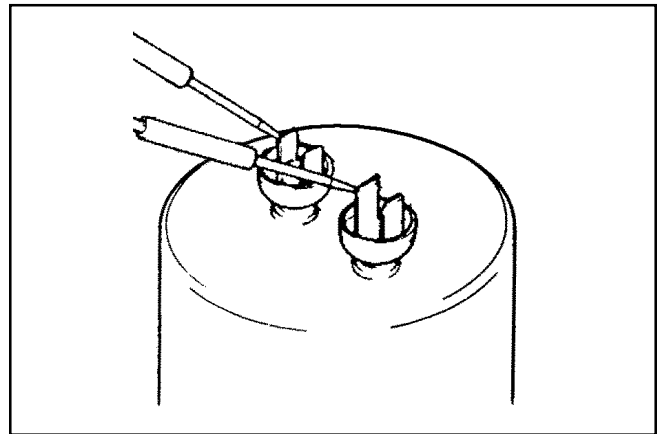

Inspection of Capacitor

⚠Warning: Properly discharge the capacitor(s) before testing and after testing has been completed. Failure to do so could cause damage to test equipment or the unit and/or result in personal injury (electrical shock) or death.


TROUBLESHOOTING AND REPAIR

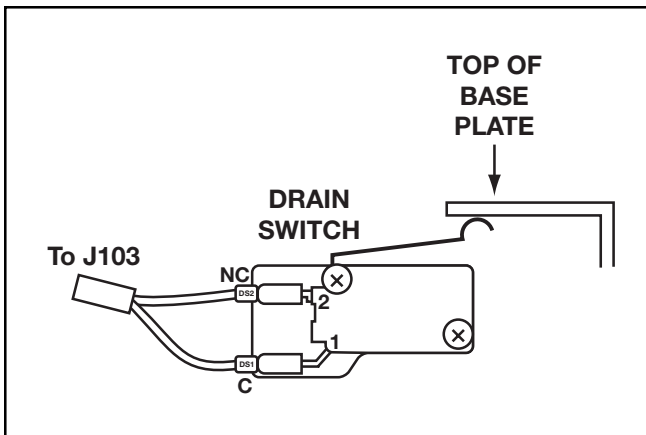

Inspection of Drain Switch

13. Inspection of Drain Switch

Check for continuity between terminals 1 and 2. Continuity should exist. With switch depressed, continuity should not exist between terminals 1 and 2. If continuity is not as specified above, replace the switch.

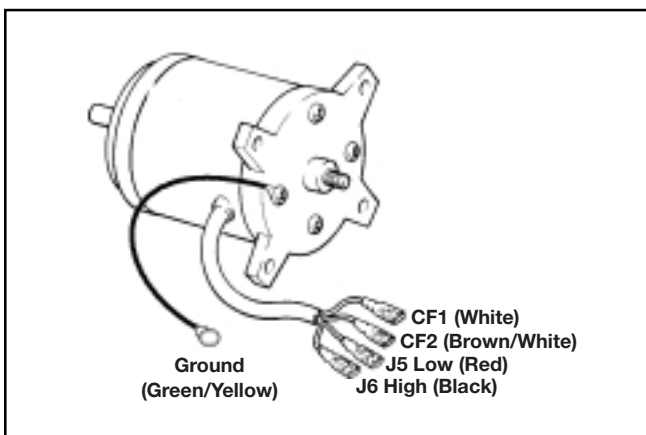

Inspection of Fan Motor

14. Inspection of Fan Motor

Measure resistance across the terminals of the fan motor.


Terminals (at 77°F (25°C))

J6 - CF1 Approx. 3.5Ω

J5 - CF1 Approx. 4.7Ω

CF1 - CF2 Approx. 30.4Ω

If the measured resistance is not equal to these standard values, replace the fan motor.

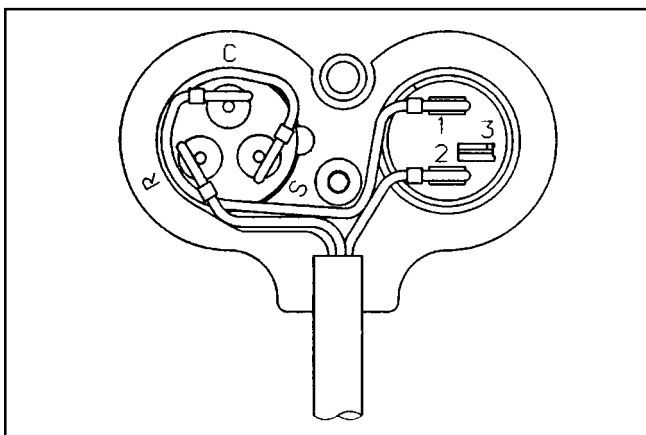

Inspection of Compressor Motor

15. Inspection of Compressor Motor

Measure resistance across the terminals of the compressor motor.

Terminals (at 77°F (25°C))

R - C Approx. 1.1Ω

C - S Approx. 2.7Ω

S - R Approx. 3.3Ω

If the measured resistance value is not equal to these standard values, replace the compressor. The compressor uses an external overload relay. For overload relay specification see chart on page 16.

16. Inspection of Wiring Connection

Refer to the Wiring Diagrams (pg. 40) and check for connection of each wire.

17. Inspection of Thermistor(s)

Using an Ohmmeter, check the resistance value across the 2-Pin connector. At normal temperature (77°F, 25°C) either thermistor (Room or Freeze) should measure approx. 10,000 or 10k ohms.

18. Inspection

In most cases, the probable cause for insufficient cooling is a clogged system, leakage or an incorrect amount of refrigerant. In such cases, inspect the system according to the following procedure.

A. Inspection of Clogged System

Check the component parts of the refrigerant system, including piping, that could be clogged with refrigerant. If clogged with refrigerant, only the clogged part is frosted partially. In such a case, change the part in question.

B. Inspection of Refrigerant Leak

Carefully check all connections, and each component for leaks whenever the refrigerant system is installed or repaired. Use an electronic gas leak tester to inspect the system.

C. Insufficient Refrigerant

In case the unit is judged to be deficient in cooling capacity, be sure to perform the inspections in A. and B. to confirm the cause of trouble. After that, charge the system with refrigerant to the specified amount.

19. Repair of Refrigerant System

In case there is a leak, obstruction, or trouble in the refrigerant system of the Spot Cooling System, replace or repair the part in question. After replacing any component all connections must be brazed.

A. Proper Brazing Techniques

It is desirable to use a slightly reducing flame. Oxyacetylene is commonly used since it is easy to judge and adjust the condition of the flame. Unlike gas welding, a secondary flame is used for brazing. It is necessary to preheat the base metal properly depending on the shape, size or thermal conductivity of the brazed fitting.


The most important point in flame brazing is to bring the whole brazed fitting to a proper brazing temperature. Care should be taken to not cause overflow of brazing filler metal, oxidization of brazing filler metal, or deterioration due to the overheating of flux.

• BRAZED FITTING AND ITS CLEARANCE

In general, the strength of brazing filler metal is lower than that of the base metal. So, the shape and clearance of the brazed fitting are quite important. As for the shape of the brazed fitting, it is necessary to *maximize its adhesive area*. The clearance of the brazed fitting must be minimized to facilitate brazing filler metal to flow into it by capillary action.


• CLEANING OF BRAZING FILLER METAL AND PIPE

When the refrigerant system has been opened up, exposure to heat may have caused brazing filler metal to stick to the inside and outside of the pipe. Brazing filler metal may also be compounded with oxygen in the air to form oxide film. Fats and oils may stick to the pipe from handling. All these factors will reduce effectiveness of brazing. It is necessary to eliminate excess brazing filler metal using sand paper and by cleaning thoroughly with a solvent such as Trichlene.

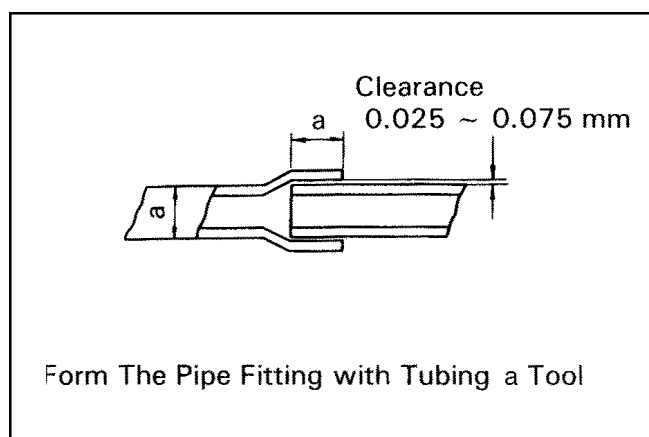

Brazed Fitting and Clearance

TROUBLESHOOTING AND REPAIR

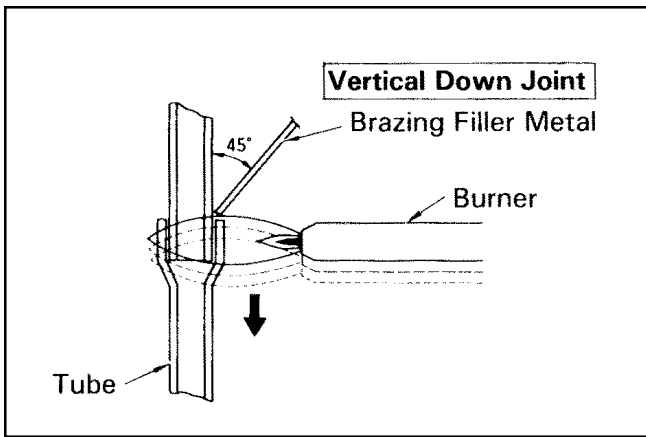


Vertical Down Joint

- USE OF DRY NITROGEN GAS

During brazing, the inside of the pipe undergoes an oxidative reaction due to the brazing flame. Introduce dry nitrogen gas (1 liters/min.; adjust with the flow regulator) through the pinch-off tube of the refrigerant cycle to prevent oxidation.

NOTE: Take care not to allow dirt, water, oil, etc. to enter into the pipe

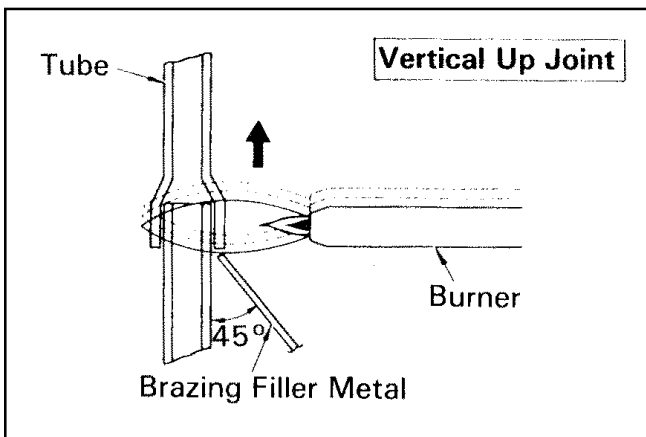

Vertical Up Joint

- VERTICAL JOINT

Heat the whole brazed fitting to a proper brazing temperature. Bring the brazing filler metal into contact with the fitting so that the brazing filler metal starts flowing by itself. Stop heating the fitting as soon as the brazing filler metal has flown into the clearance. Since the brazing filler metal flows easily into the portion heated to a proper temperature, it is essential to keep the whole fitting at a proper brazing temperature.

TROUBLESHOOTING AND REPAIR


B. Removal of Refrigeration Cycle Components

⚠CAUTION:

1. Before any refrigeration cycle component can be replaced, it is necessary to recover the refrigerant using standard recovery procedures and equipment.
2. To prevent oxidation, dry nitrogen should be conducted (flow rate 1 liters/min) through the pinch-off tube during any brazing operation.
3. During any component replacement involving brazing, shield nearby parts with a steel plate, asbestos, etc., to protect them from the flame.

- (1) Evaporator
- (2) Capillary tube
- (3) Condenser
- (4) Compressor

NOTE: Hold the compressor body, not the tube, when carrying the compressor.

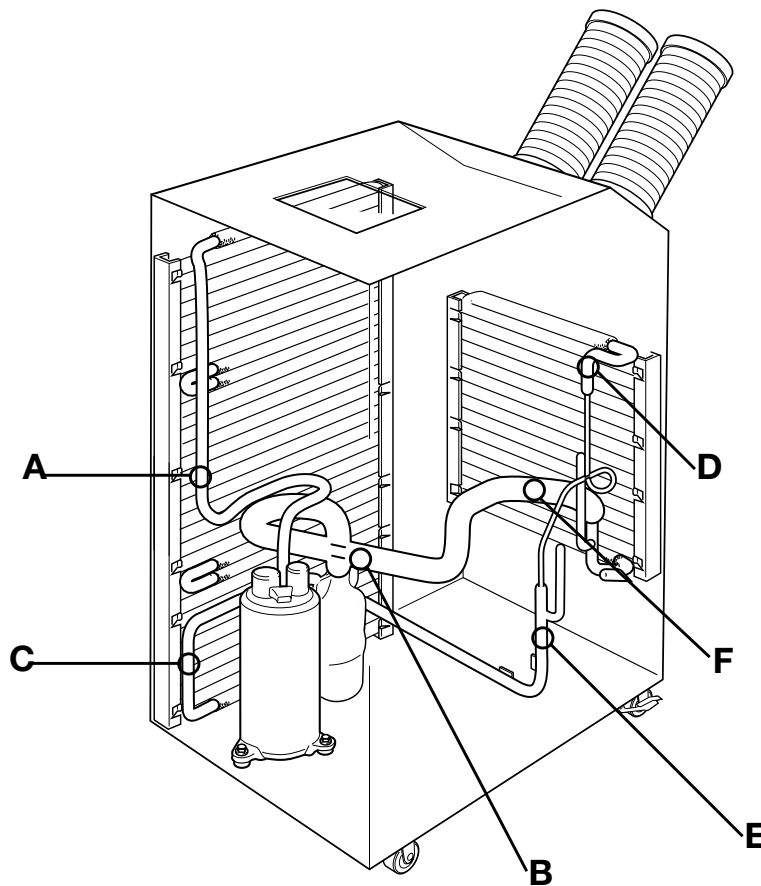

Removal of Refrigeration Cycle Components (Refer to 5-2-2.)

PART REPLACED	DISCONNECT AT:
Compressor	A & B
Condenser	A & C
Capillary tube	D & E
Evaporator	E & F

Refrigeration Cycle Components

TROUBLESHOOTING AND REPAIR

20. Charging the System with R-22 Refrigerant

Always ensure that the refrigerant system has been properly evacuated before charging with the specified amount of R-22.



⚠WARNING:

When handling refrigerant (R-22), the following precautions should always be observed:

- Always wear proper eye protection while handling refrigerant.
- Maintain the temperature of the refrigerant container below 40°C (104°F).
- Perform repairs in a properly ventilated area. (Never in an enclosed environment.)
- Do not expose refrigerant to an open flame.
- Never smoke while performing repairs, especially when handling refrigerant.
- Be careful the liquid refrigerant does not come in contact with the skin.

If liquid refrigerant strikes eye or skin:

- Do not rub the eye or the skin.
- Splash large quantities of cool water on the eye or the skin.
- Apply clean petroleum jelly to the skin.
- Go immediately to a physician or to a hospital for professional treatment.

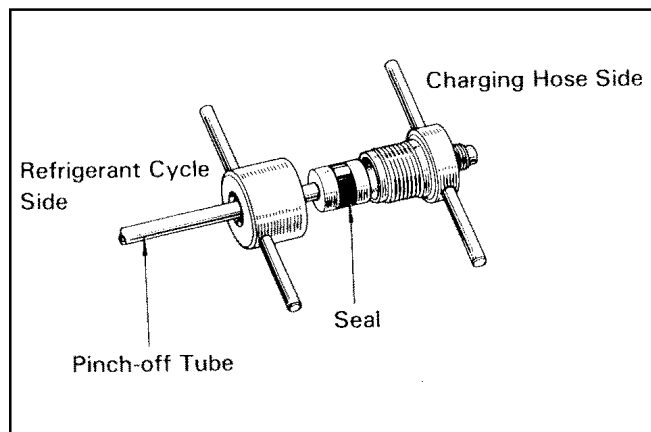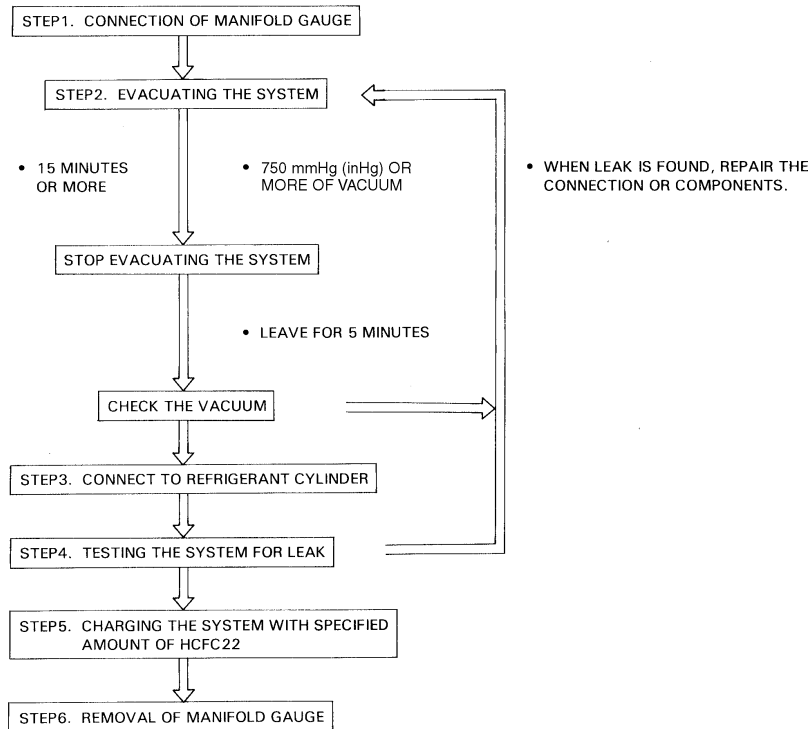

Mounting of Process Tube Fitting

A. Connection of Gauge Manifold


- (1) Properly remove the crushed end of the pinch-off tube at the high pressure side and the low pressure side of the refrigerant cycle with a pipe cutter.
- (2) Fit the process tube fitting to the pinch-off tube on both sides.

TROUBLESHOOTING AND REPAIR

- (3) Connect the charging hoses (red - high pressure side, blue - low pressure side) of the gauge manifold to the process tube fittings.

NOTE: Connect the hoses using care not to mistake the high pressure side for the low pressure side and vice versa.


- (4) Connect the charging hose (green) at the center of the gauge manifold to the vacuum pump.

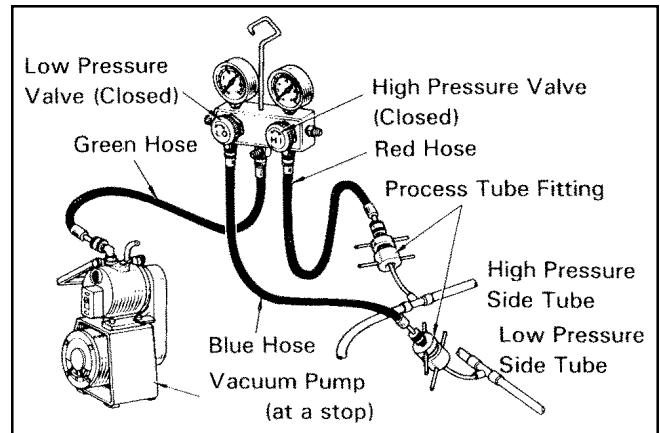

Connection of Gauge Manifold

B. Evacuation


- (1) Open the high pressure valve (HI) and the low pressure valve (LO) of the gauge manifold.
- (2) Turn on the vacuum pump to start evacuation. (Evacuate the system for approximately 15 minutes.)
- (3) When the low pressure gauge indicates 750mmHg (30in.Hg) or larger, turn off the vacuum pump and close the high and low pressure valves of the gauge manifold.

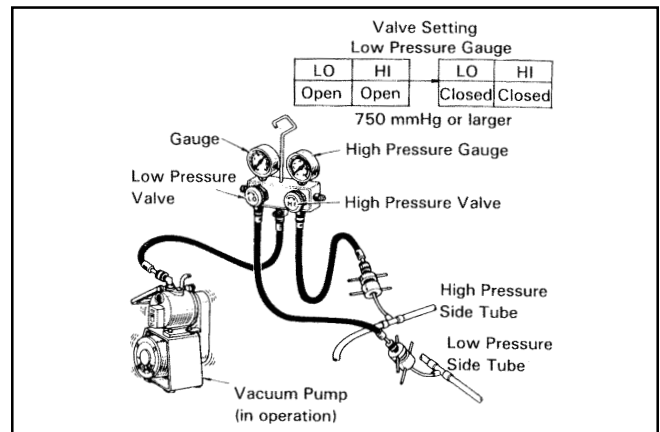

Evacuation


C. Checking Vacuum

- (1) Leave the high pressure valve and the low pressure valve of the gauge manifold closed for five minutes or more, and confirm that *the gauge pointer does not return to zero*.
- (2) If the gauge pointer returns gradually to zero there is a leak somewhere in the system (this could also include gauge manifold). Perform leak check according to procedure indicated in D. Once leak has been found and repaired evacuate the system once more, and confirm system holds vacuum.

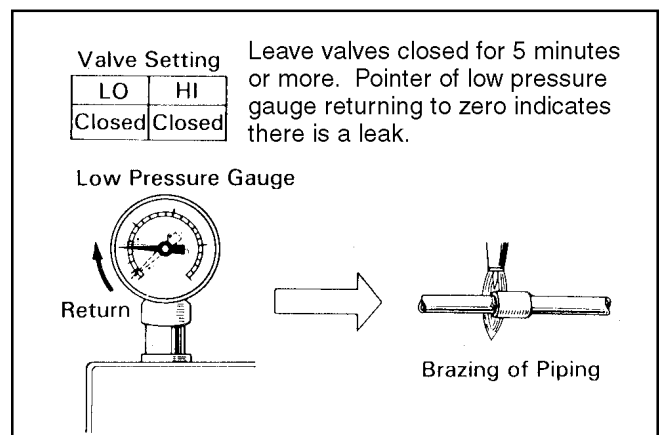

Checking Vacuum

TROUBLESHOOTING AND REPAIR

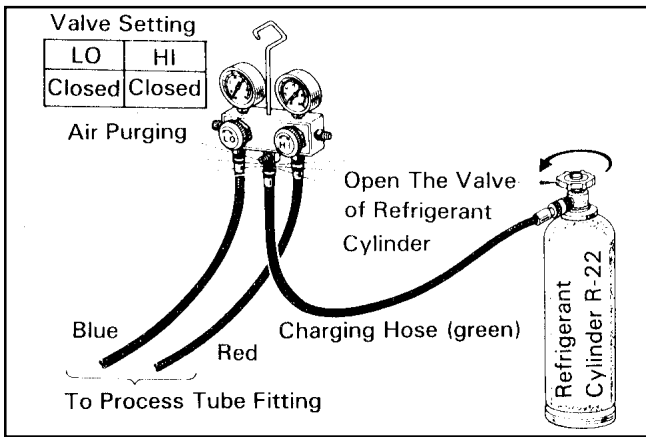


Evacuating Air Inside Charging Hose

D. Checking Gas Leak

- (1) Remove the charging hose (green) from the vacuum pump, and connect the hose to the refrigerant cylinder (R22).
- (2) Loosen the nut on the gauge manifold side of the charging hose (green).

- (3) Open the high pressure valve of the gauge manifold. Charge the system with refrigerant until the low pressure gauge indicates 57 PSIG. (4 kg/cm²G.) After charging is complete, close the high pressure valve.
- (4) Check carefully for gas leaks inside the refrigerant system using the gas leak tester.
- (5) Repair any leak.

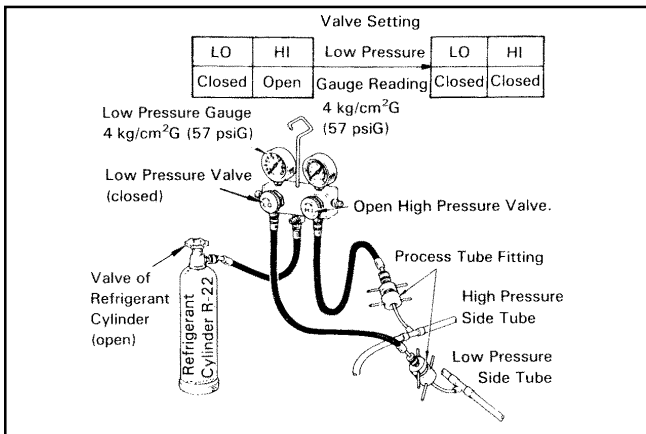

Charging with Refrigerant for Gas Leak Check

⚠WARNING: Do not attempt any repair on a charged system.

⚠WARNING: Before checking for gas leaks, fully confirm that there is nothing flammable in the area to cause an explosion or fire. Contact of refrigerant with an open fire generates toxic gas.


E. Evacuation (Repeat)

- (1) Close the valve of the refrigerant cylinder. Then remove the charging hose (green) from the refrigerant cylinder, and connect it to the refrigerant recovery machine.

NOTE: Keep the high pressure valve and the low pressure valve of the gauge manifold closed.

- (2) Using procedure B., evacuate the system until the low pressure gauge indicates 750mmHg (30in.HG) or greater. (For 15 minutes or more.)
- (3) After evacuation is complete, close the high and the low pressure valves of the gauge manifold.

⚠CAUTION: Be sure to evacuate the system twice or more using the repetitive vacuum method. Evacuate the system an additional time on rainy or humid days.

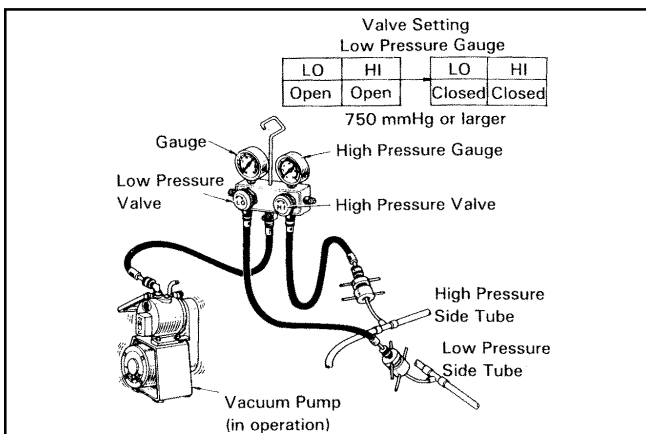

Evacuation (repeat)

21. Refrigerant Charging Work

A. Refrigerant Charging

- (1) Remove the charging hose (green) from the vacuum pump, and connect it to the refrigerant cylinder (R-22).
- (2) Loosen the nut on the gauge manifold side of the charging hose (green). Open the valve of the charging hose (green). Open the valve of the refrigerant cylinder.
- (3) Securely place the refrigerant cylinder on a scale with a weighing capacity of 70 lbs (30 kg) that is graduated by 0.2 oz (5 g).
- (4) Open the high pressure valve of the gauge manifold and the valve of the refrigerant cylinder. Charge the system with refrigerant to the specified amount.


**Standard Amount of Refrigerant:
1.50lbs (0.68kg)**

If the system cannot be charged with the specified amount of refrigerant under this condition, follow the steps below:


- (a) Close the high-pressure valve of manifold.
- (b) Operate the refrigerant system.
- (c) Slowly open the low-pressure valve while observing the scale reading.
- (d) When the scale reads the specified amount, immediately close the low-pressure valve.
- (e) Bring the system to a stop.

⚠CAUTION: The amount of refrigerant charged has a great effect on the cooling capacity of the unit. Charge to the specified amount, always observing the scale graduations while charging.

- (5) Close the high pressure valve of the gauge manifold and the valve of the refrigerant cylinder.

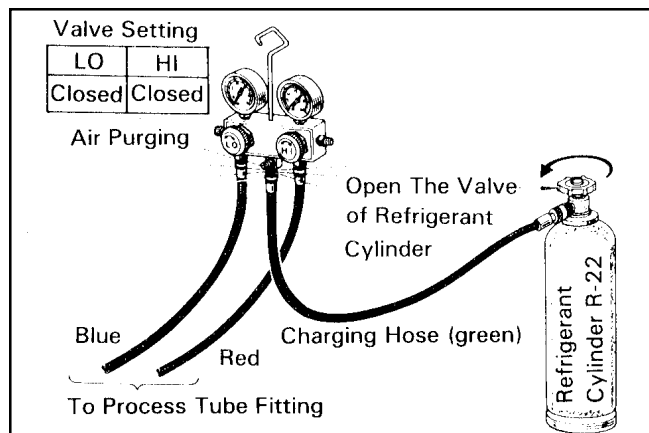


Evacuating Air Inside Charging Hose

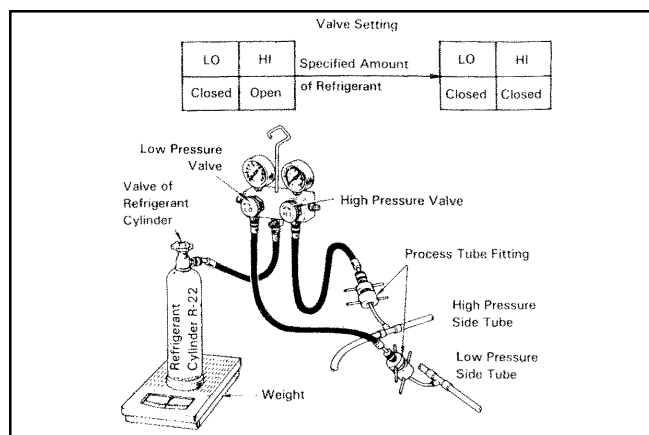

Charging with Refrigerant


TROUBLESHOOTING AND REPAIR

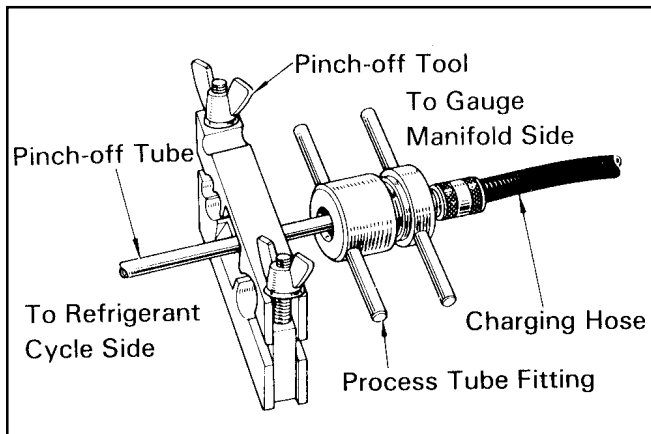

Removal of Gauge Manifold

B. Removal of Gauge Manifold

- (1) Crimp the pinch-off tube with a pinch-off tool.
- (2) Remove the gauge manifold and the process tube fitting. Crush the end of the pinch-off tube.
- (3) Braze the end of the pinch-off tube.
- (4) Ensure that a gas leak is not present at the pinched off portion and the brazed end.

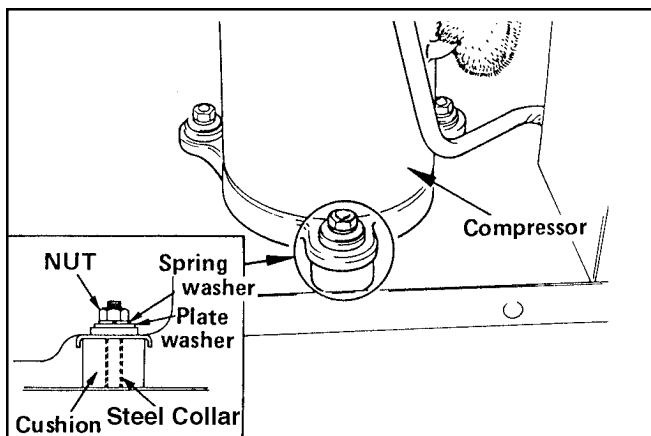


Compressor Mounting

Reassemble the unit in the reverse order of removal. Described below are the parts that require special care in reassembling the unit. Perform all wiring or rewiring as referenced in the wiring diagram.

22. Compressor Mounting

Mount the compressor on the frame, using cushions, steel collars, spring washers, plate washers and nuts.

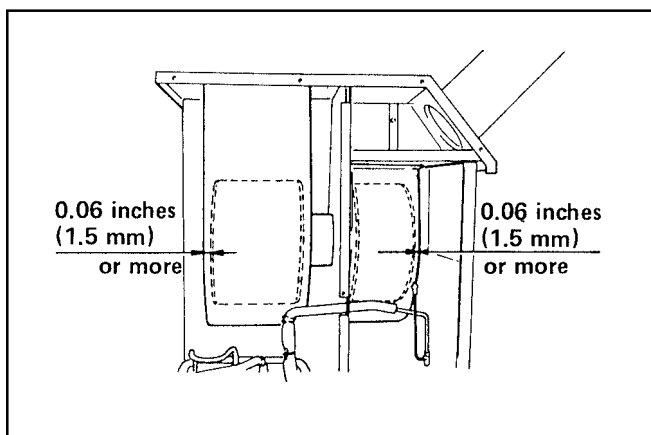

Blower Assembly Mounting

23. Blower Assembly

Install blower fans (for evaporator and condenser).

Tightening torque:

$10.84 \pm 2.17 \text{ lbf}\cdot\text{ft}$ ($150 \pm 30 \text{ kgf}\cdot\text{cm}$)

NOTE: After reassembling, the gap between blower fan and housing should be 0.06 inches (1.5 mm) or more.

24. Wiring Notice

Secure the wires using clamps so that they do not come into contact with the edges of the structure, etc. Secure the wires using clamps in the same position they were before removal.

25. Perform the inspection of cooling capacity and check for abnormal noise or abnormal vibration.

26. Schematic

