 




SO RIGHT AT HOME®


30" FREE STANDING ELECTRIC RANGES

With 10" Back Panel

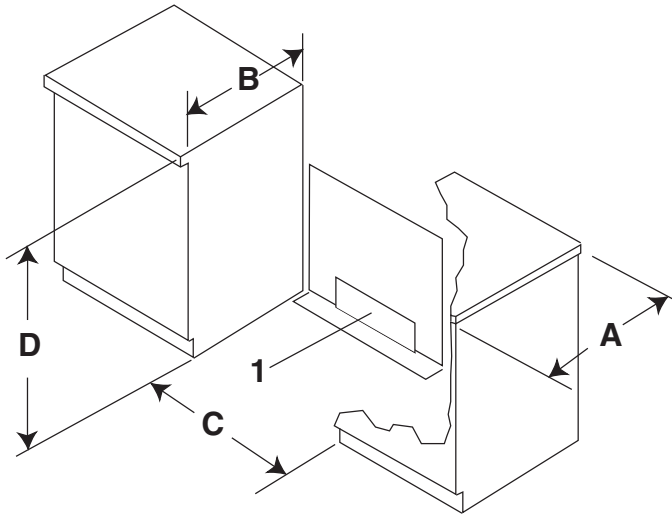

Dimensions

■	Inches	Centimeters
A	25	63.5
B	24	61.0
C	30	76.2
D	36	91.4
E ²	45 1/4	114.9
F	29 7/8	75.9
G ³	26 1/8	66.4

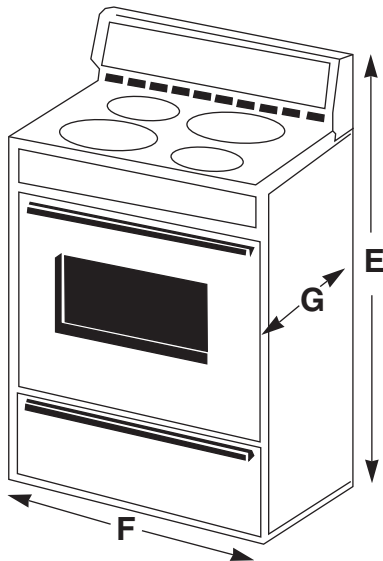 

Notes:

1. Electric Models: Provide for 120/208, 120/240 volt outlet per applicable cord in this area. Area is 16"W x 5 3/4"H, located 7" from side wall.
2. May vary depending upon leveling legs.
3. Not including handle. Dimension given is from wall to front of oven door.

Important: Because of continuing product improvements, Magic Chef reserves the right to change specifications without notice. Dimensional specifications are provided for planning purposes only. For complete details see installation instructions that accompany each product before selecting cabinetry, making cutouts or beginning installation.