

QUICK START GUIDE

DishDrawer™ dishwasher


NZ AU US CA GB IE

- Keep this document handy for easy reference.
- For detailed information on the features of your dishwasher, see your 'User guide'.

Before using your dishwasher, make sure you read the full 'User guide', with special attention to the 'Safety and warnings' section.


For contact information or if you require service, assistance or replacement parts, see the end of this document or your 'Service & warranty' booklet.

YOUR MODEL

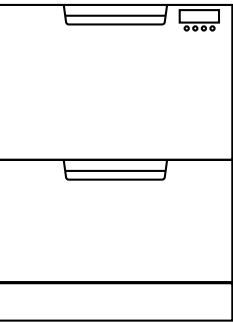

Double models
DD60DAW9
DD60DAX9
DD60DAHW9
DD60DAHB9
DD60DAHX9
DD24DAW9
DD24DAB9
DD24DAX9

Note: each drawer can run independently of the other drawer.

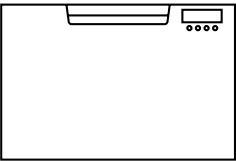

Single models
DD60SAX9
DD60SAHX9
DD24SAW9
DD24SAB9
DD24SAX9

OPERATING INSTRUCTIONS - STARTING A WASH

1

Discard scraps

Scrape large food particles off (e.g. bones, fruit stones) and remove any foreign objects (e.g. toothpicks, strings, paper).

2

Load dishes carefully

To help with wash performance, arrange dishes so they are evenly spaced and not nesting.

3

Check spray arm(s) are mounted correctly and can rotate fully around

Check the spray arm is mounted correctly by physically rotating it around with your hand.

Before a wash, ensure there are no items blocking the spray arm(s) from rotating.

Rotating Spray arm

4

Add detergent

Fill the detergent dispenser (A) with powdered detergent and close the dispenser door.

IMPORTANT!
Do not place liquid detergent or tablets in the detergent dispenser.

5

If using a tablet or gel pouch, place it in the cutlery basket (B) or at the bottom of the drawer.

6

Check rinse aid

If the indicator on its plug (C) glows bright red, refill the rinse aid dispenser (D) with liquid rinse aid. Make sure you then refit the rinse aid plug back into its original position, by rotating the plug back into an upright position.

7

Select wash

Power the dishwasher on 1 then select wash program >> .

8

Start wash or set Delay start



Ensure drawer is closed.

To start wash: Press ►► .

To set delay start: Press and hold ►► to enter delay start, then press and hold ►► again to increase the delay start time.

Fisher&Paykel

CONTROLS AND DISPLAY

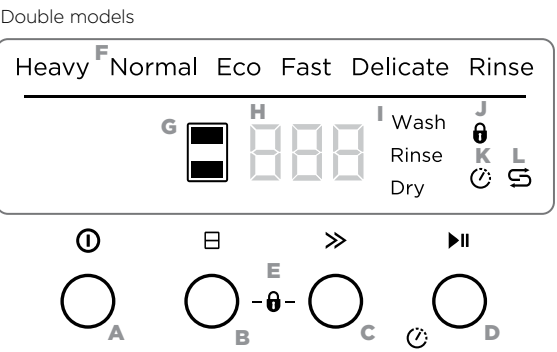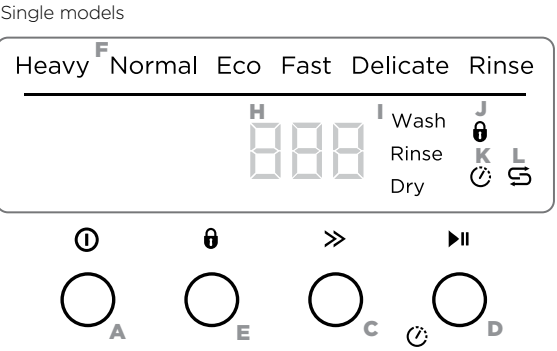


Controls Description

- A Off/On**
Press 1 to turn the dishdrawer on or off.
- B Drawer selector (Double models only)**
Press ▢ to scroll between drawers.
- C Wash program selector**
Press >> to scroll through wash program options.
- D Start / Delay Start**
Press ►► to start the wash.
To pause: Press ►► again. The wash stage indicator Wash and ■ (Double models) will flash.
- E Keylock**
Keylock disables all the buttons – helpful when cleaning the dishwasher.
- F To Delay start**
Press and hold ►► until 1h appears on the display, then release. You are now in Delay start mode.
- G** (Double models only)
If the drawer is opened after delay start has been set (for example if you need to load more dishes), delay start will be paused after the drawer is closed.
- H Display**
Time remaining (minutes)
Fault code numbers (see 'If there is a fault' in User guide).
- I Wash stage indicators**
(See 'During and after the wash cycle').
- J Keylock/Childlock indicator**
If lit: keylock or childlock is activated.
- K Delayed start indicator**
If lit: delayed start is set.
- L Salt indicator**
(Water softener models only)
If lit: salt reservoir is empty.

WASH PROGRAMS

Double models interface shown

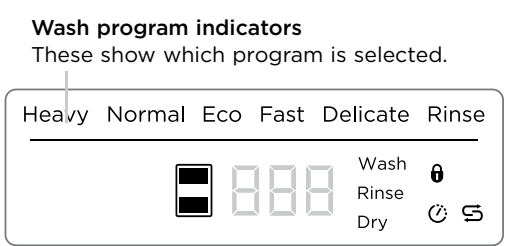

PROGRAM	DESCRIPTION
Heavy	Heavily soiled pots, pans and dishes.
Normal (default setting)	Dishes that are quite heavily soiled or food soils that have been left to dry overnight.
Normal Eco	Normally soiled dishes for optimum water and energy usage. The US/Canada Energy Guide is based on this cycle.
Fast	Lightly soiled dishes.
Delicate	Lightly soiled and heat sensitive crockery.
Rinse	Prevents odours and soils from drying on dishes.

continued >

DURING AND AFTER THE WASH


As the wash progresses, the display will count down the minutes remaining and show what stage the program is at. When the program has finished, the display will show  and the dishwasher will sound a tone. After 30 seconds the display will go out.

- You may notice the following noises at the end of the wash. These are all part of normal operation:
- Both drawers may be draining simultaneously.
 - The drying fan may continue to run after a wash program has finished for a set time or until the drawer is opened. The fan assists with drying and uses negligible amounts of energy.

For best drying results, we recommend unloading the dishes once they have cooled.


Wash
Rinse
Dry

DOS AND DON'TS OF LOADING

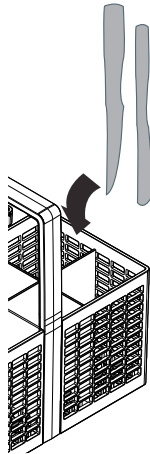


✓

Sharp or pointed items must be placed horizontally or with sharp edges/points facing down to avoid risk of injury.

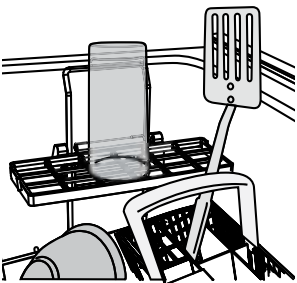


✗

Protruding items will stop the internal lid of the dishwasher from sealing properly, which could result in a service call.

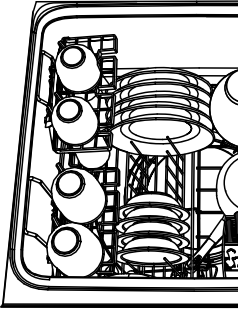


✓

A neatly arranged load with evenly spaced dishes helps wash performance.

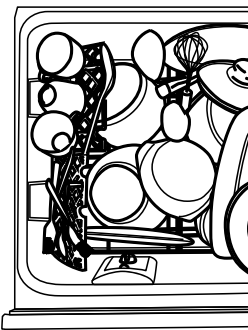


✗

Overcrowding reduces wash performance.

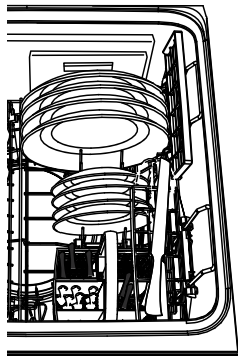


✓

Ensure there is enough space between plates. Mix spoons, knives and forks within the cutlery basket to prevent them from nesting.

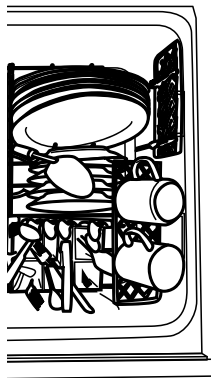


✗

If plates and cutlery are nesting, they are less likely to be cleaned well.

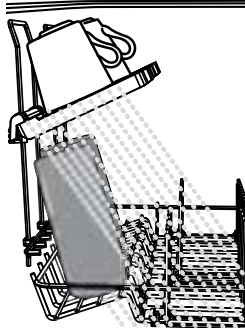

✓

Ensure that water reaches all items on the racks.

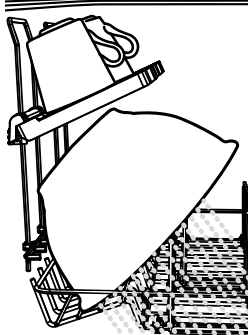

✗

Dishware is blocking water from reaching items on the racks.

PREFERENCE OPTIONS

You can change the setting of these options to suit your preferences or circumstances. We recommend selecting the most suitable settings before you start using your dishwasher.

OPTION	RINSE AID	WATER SOFTENER (SOME MODELS ONLY)	OPEN DRAWER AUTO POWER-ON	TURN TONES OFF	CLOSED DRAWER AUTOLOCK
What does it do?	Regulates the amount of rinse aid dispensed. Reduce this setting if there is excess foam after a wash. Increase this setting if dishes are wet or streaky after a wash.	Refer to the 'Water softener' section of the 'User guide' for details.	Your dishwasher is factory-set to automatically power on for 30 seconds whenever you open the drawer. You can turn this setting off.	This turns all tones off except for fault alerts.	When this setting is on, the drawer will automatically lock 30 seconds after it's closed. It can then be unlocked by pressing  (unless Keylock or Childlock is also activated). Useful in boats or motor homes.

How to change the setting of an option

-  CHECK
Check that there is no wash underway, press 
-  ENTER MENU & SCROLL TO OPTION
To enter the menu: Press and hold the  and  together for four seconds.
 - You are now in the Rinse aid option of the preference options menu.
 - If you want to change the Rinse aid setting, go to step 3 now.
 - If you want to change the setting of another option, you will need to scroll to that option first.

To scroll to the next option: press . To know which option you're in, watch the letters in the display (see table below). When you have scrolled to the end of the sequence, the menu will start again with Rinse aid.

OPTION	RINSE AID	WATER SOFTENER (SOME MODELS ONLY)	OPEN DRAWER AUTO POWER-ON	TONES AT END OF WASH	CLOSED DRAWER AUTOLOCK
Which option am I in?					
Possible settings	Off to Max (rA5)	Off to Max (Hd5)	On or Off	On or Off	On or Off
Example	setting is 1 	setting is 1 	On 	On 	On 
	setting is 4 	setting is 4 	Off 	Off 	Off 

-  CHANGE SETTING
Press  to change the setting within an option. For example, to change the Rinse aid setting from 4 (factory default) to 2, you need to press  3 times.
-  SAVE SETTING & QUIT MENU
Press . This will save the new setting and quit the preference options menu.

FOR MORE INFORMATION

- For detailed information on the features of your dishwasher



see your 'User guide'
- For warranty information



see your 'Service and warranty' booklet
- If you...
 - have any questions or comments
 - need a Fisher & Paykel authorized technician to service your product
 - need replacement parts or accessories
 - want to register your product



see your 'Service and warranty' booklet or contact us via our website:
www.fisherpaykel.com