 



⚠ WARNING

Before using the dishwasher, read carefully and follow the safety instructions in the Use and Care Manual.

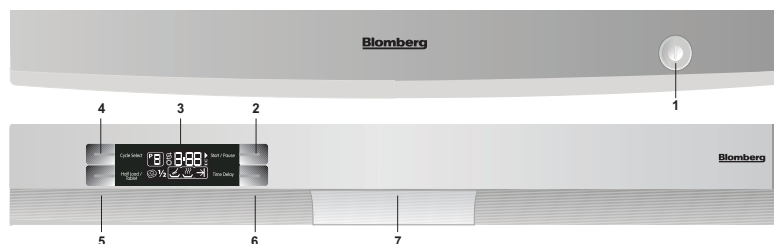

- 1 On/Off button
- 2 Start/Pause/Cancel button
- 3 Display
- 4 Program Selection button
- 5 Half Load/Combi Tablet button
- 6 Time Delay button
- 7 Door Handle

 - 8 Program Indicator
- 9 Salt level indicator led *
- 10 Rinse aid level indicator led
- 11 Remaining Time Indicator/Delay Time Indicator
- 12 Start/Pause/Cancel indicator led
- 13 Time Delay indicator led

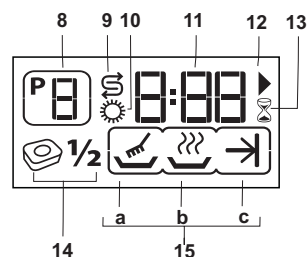

- 14 Half Load/Combi Tablet indicator led
- 15 Program Steps Follow-up Indicator
- a Washing Step Indicator “→”
- b Drying Step Indicator “☀”
- c End of Program Indicator “→”

(* Model depending)

HOW TO USE YOUR DISHWASHER:

1. Open the door and load the dishwasher.
2. Check that both upper and lower spray arms move freely.
3. Pour correct amount of detergent into the detergent dispenser and close the lid.
4. Push in the On/Off button 1 and check that the display lights come on.
5. Check the rinse aid level indicator led. 10 If necessary, refill rinse aid.
6. Check the salt level indicator led. 9 If necessary, refill salt. (model depending)
7. Use the Program Selection button 4 to choose your washing program.
 - When there are few dishes, additionally use the Half Load function.
 - Depending on the hardness level of the tap water, the Tablet Detergent function allows better drying and washing performance from the multi-purpose tablets.

8. Start the program with the Start/Pause/Cancel button 2.
9. Close the door and the program will start.
10. The End of Program indicator 15 c lights up when the program is over.
11. Press the On/Off button 1 and open the door after the program is completed. The indicator lights will go off.
12. Allow your dishes to cool for 15 minutes, with the door open.
13. Unload the dishes. Begin with the lower rack.

⚠ CAUTION


Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. Hot steam can cause burns and other serious injuries. When the door is closed, the program will continue.

PROGRAM TABLE

Program number			1	2	3	4 Reference*	5
Program name			Rinse & Hold	Quick Wash	China/Crystal	Regular Wash	Pots & Pans Plus
Wash Temperatures		(°F)	-	113	122	122	158
		(°C)		45	50	50	70
Rinse Temperatures		(°F)		131	149	142 - 145	167
		(°C)		55	65	61 - 63	75
Degree of dirtiness			-	Few	Few	Medium	High
Detergent in dispenser section	15 ml		-	+	-	-	-
	15-25 ml		-	-	+	+	+
	+ 5 ml		-	-	-	+	+
Recommended detergent amount	Hard water	ml	-	15-25	25	25-40	40
		tsp	-	3-5	5	5-8	8
	Medium water	ml	-	15	15-25	25	40
		tsp	-	3	3-5	5	8
	Soft water	ml	-	15	15	15-25	25-40
		tsp	-	3	3	3-5	5-8
Program process			Wash ▼ End	Main wash ▼ Rinse ▼ Final rinse ▼ End	Main wash ▼ Rinse ▼ Final rinse ▼ Dry ▼ End	Wash ▼ Main wash ▼ Rinse 1 ▼ Rinse 2 ▼ Final Rinse ▼ Dry ▼ End	Wash ▼ Main wash ▼ Rinse 1 ▼ Rinse 2 ▼ Final Rinse ▼ Dry ▼ End
Duration (minutes)			12	34	65	100 - 135	120
Water (gallons)			1,2	3,1	3,1	3,43 - 5,34	5,3
Water (liters)			4,4	11,8	11,8	13,0 - 20,2	20,2


The consumption values shown in the table were determined under standard conditions. For this reason, deviations are possible under practical conditions.

 * The energy-usage label is based on this program.

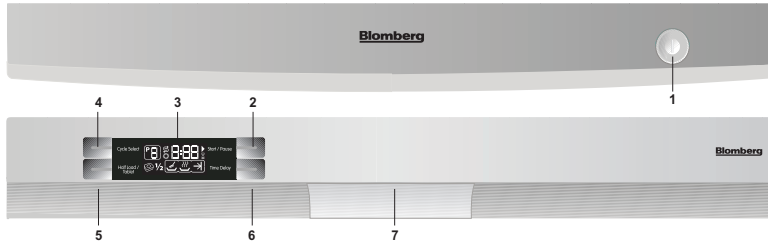

- 1 On/Off button
- 2 Start/Pause/Cancel button
- 3 Display
- 4 Program Selection button
- 5 Half Load/Combi Tablet button
- 6 Time Delay button
- 7 Door Handle

 - 8 Program Indicator
- 9 Salt level indicator led *
- 10 Rinse aid level indicator led
- 11 Remaining Time Indicator/Delay Time Indicator
- 12 Start/Pause/Cancel indicator led
- 13 Time Delay indicator led

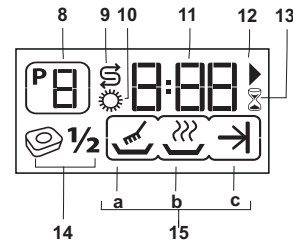

- 14 Half Load/Combi Tablet indicator led
 - 15 Program Steps Follow-up Indicator
 - a Washing Step Indicator "1/2"
 - b Drying Step Indicator "☀"
 - c End of Program Indicator "→"
- (* Model depending)

ON/OFF BUTTON

Turn the dishwasher on with the On/Off button. When turning on, the icon on the display module of the last used program will light up.

PROGRAM SELECTION BUTTON

Use the Program Selection button to select the desired program. The icon of the corresponding program will light up. Refer to "Table of Programme Data and Average Consumption Values" to select a programme suitable for your dishes. Select the desired programme with programme selection button.

PROGRAM STEPS FOLLOW-UP

You can follow up the step while current program is running from the Program Steps follow up indicator (15)

- a Washing Step Indicator 15 a
- b Drying Step Indicator 15 b
- c End of Program Indicator 15 c

The display shows the steps for washing 15 a and drying 15 b, respectively, while the selected program is running. Only the End of Program indicator 15 c lights up when the program is over. Remaining Time Indicator 3 displays "0:00".

HALF LOAD/TABLET DETERGENT BUTTON

Half Load/Tablet Detergent Button allows you to turn on and off the Half Load and Tablet Detergent functions of your machine.

START/PAUSE/CANCEL BUTTON

Use this button to start the selected program. When the button is pressed once, the light on the button will turn on. Stop the program with the Start/Pause/Cancel button.

REMAING TIME INDICATOR/DELAY TIME INDICATOR

You can follow the remaining program duration from the time indicator display.

TIME DELAY BUTTON

This option enables you to start the selected program with a delay of 0,5 to 9,5 hours.

1. Delay time is adjusted by pressing the Time Delay button (press several times).
2. After adjusting the delay time, press the Start/Pause/Cancel button.
3. Close the door. At the end of the delay set, the program starts automatically.

Notice :

During a wash program the Time Delay option does not function.

CANCELLATION OF A PROGRAM

To cancel a program while the dishwasher is running:

1. Open the door gently.
2. Press and hold Start/Pause/Cancel button for 3 seconds. The indicator light will start flashing.
3. Close the door.
4. The dishwasher will drain the water inside the machine for 1 minute. At the end of the cycle, the end of program indicator will light up. You can choose and start a new program.

WARNING

Depending on the stage of the program you have cancelled, there may be detergent residue or rinse aid inside the machine and on the dishes. Make sure the items in the dishwasher are not used before washing properly. Ingestion or inhalation of detergent or rinse aid may cause serious injury. Avoid contact with skin and eyes and keep children and infirm persons away from these materials.

 
 
PROGRAM CHANGE

1. Open the door.
2. Press Start/Pause/Cancel and select a new program.
3. Press Start/Pause/Cancel again, to start.

WARNING



Depending on the length of the terminated program detergent and rinse aid may still be in the dispensers. Ingestion or inhalation of detergent or rinse aid may cause serious injury. Avoid contact with skin and eyes, and keep children and infirm persons away from these materials.

10 RINSE AID LEVEL INDICATOR LED

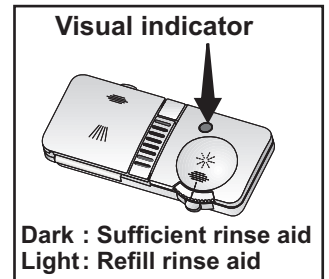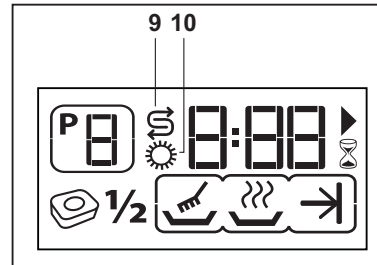

If this indicator light comes on, you need to refill rinse aid. You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser. When the color is light, open the dispenser and refill rinse aid.

  9 SALT LEVEL INDICATOR LED (MODEL DEPENDING)

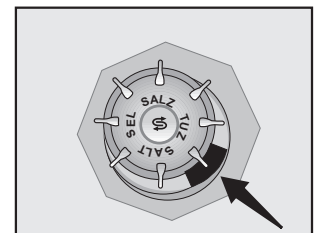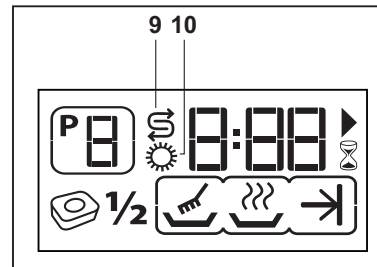

When this indicator light comes on, you must refill special salt. Only use special dishwasher salt in your machine to soften the water. The salt content can be read on the container for the salt. When the visual fill indicator is dark, there is enough salt in the container. When the color is light, open the container and add dishwasher salt.