

Installation Instructions

Wine Steward/Beverage Cooler

SAVE AND READ THESE INSTRUCTIONS

TESTED IN ACCORDANCE WITH THE LATEST EDITION OF ANSI/UL 858-2001 AND CAN/CSA-C22.2 NO. 64
STANDARD FOR HOUSEHOLD ELECTRIC COOKING AND LIQUID HEATING APPLIANCES.

CONVENTIONS USED IN THESE INSTRUCTIONS



WARNINGS:

Must be followed carefully to avoid personal injury or damage.



NOTES:

Contain helpful hints and tips to facilitate the installation.

IMPORTANT

1. Before beginning installation, please thoroughly read and become familiar with these instructions.
2. Installation and service must be completed by a qualified installer or service agency.
3. Installer: Please leave these Installation Instructions with the owner.
4. Owner: Please keep these instructions for local electrical inspector's use and for future reference.
5. Read the accompanying Use & Care Manual prior to operating this appliance.

TABLE OF CONTENTS

Verifying package contents	Page 2
Installation planning	Page 2
Overall dimensions	Pages 2
Cabinet preparation	Page 3
Electrical power supply requirements	Page 3
Staining wood drawer fronts	Page 4
Reverse door swing	Page 4
Applying Dacor Nameplate	Page 4
Installing Toekick	Page 4
Leveling	Page 5
Connecting to Electric Power	Page 5
Slide into Cutout	Page 5
Verifying proper operation	Page 5

IMPORTANT SAFETY INSTRUCTIONS



WARNINGS:

- 1. Read all instructions before using the appliance.**
- 2. This appliance must be grounded. Connect only to a properly grounded outlet. See “Grounding Instructions”.**
- 3. Install or locate this appliance only in accordance with these installation instructions.**
- 4. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance.**
- 5. As with any appliance, close supervision is necessary when used by children.**
- 6. Do not operate this appliance if it has a damaged electrical cord or plug, if it is not working properly or if it has been damaged or dropped.**
- 7. This appliance should be serviced only by qualified service personnel. Contact the nearest DACOR Authorized Servicer at (800) 772-7778, or at www.dacor.com for examination, repair or adjustment.**
- 8. Do not cover or block any openings on the appliance.**
- 9. Do not store or use this appliance outdoors, except as noted below. Do not use this product near water – for example, near a kitchen sink, in a wet basement or near a swimming pool, etc.**
- 10. Do not immerse the electrical cord or plug in water.**
- 11. Keep the electrical cord away from heated surfaces.**

Verifying the Package Contents

- Use and Care manual
- Dacor nameplate
- Hardware for changing door swing
- Left and right side hinge covers
- Top screw hole cover

Installation Planning

A qualified technician must complete the installation of this built-in appliance. Proper installation is your responsibility.

Carefully check the location where the appliance is to be installed. The appliance should be placed for convenient access. Make certain that electrical power can be provided in the selected location.

Plan the installation so that all minimum clearances are met or exceeded. Dimensions shown provide minimum clearances, unless otherwise noted. Be certain that proper clearance is provided for the appliance door when it is in the open position.

The specified minimum cabinet depth and width must be provided.

Cabinet cutout dimensions must be used as indicated. All contact surfaces between the appliance and the cabinet must be solid and level.


Make certain that you have everything necessary to ensure a proper installation before proceeding.



NOTE:

All dimensional tolerances are + 1/16", - 0" unless otherwise stated. (Metric dimensions are for reference only.)

Overall Dimensions (EWC, EBC)


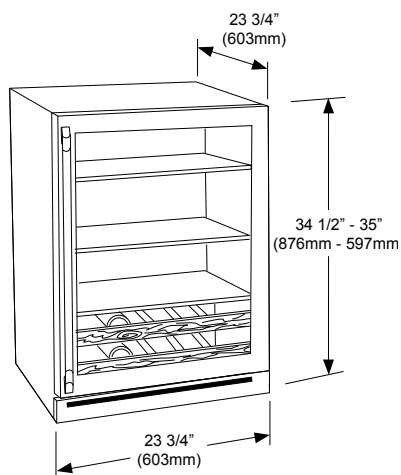


Product Clearances

The wine chiller, wine reserve and beverage center is factory set for a 110° door swing.

When installed in a corner:

- Allow 4" min. clearance on the hinge side for the 90° door swing and to allow racks to slide out.
- Allow 10" minimum clearance on the hinge side for a full 110° door swing.

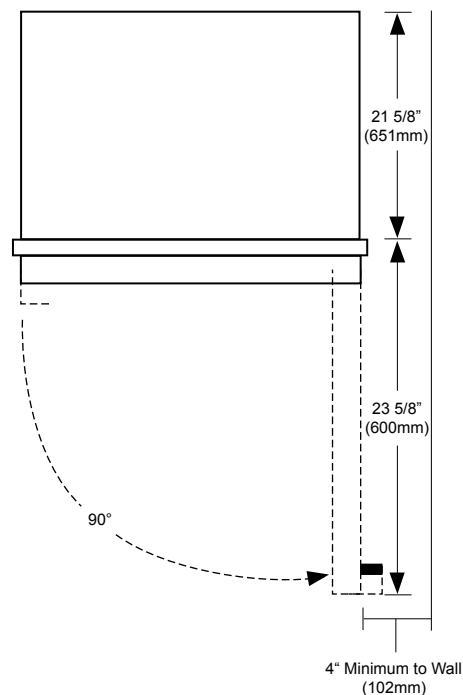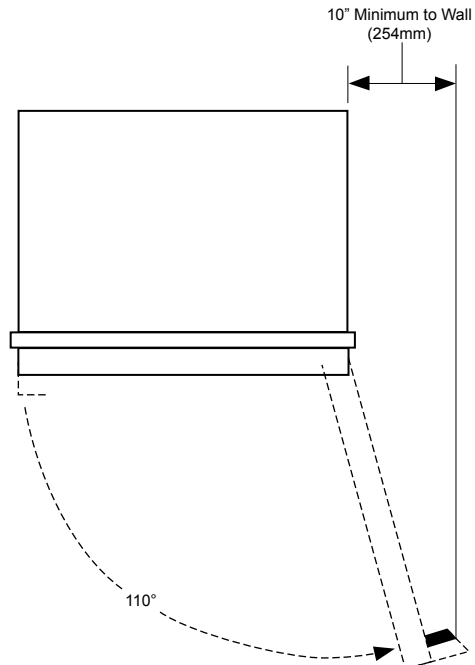


Choose the location:

- These products may be closed in on the top and three sides as long as the front is unobstructed for air circulation and proper access to the door.
- Do not install these products where the temperature will go below 55°F (13°C) or above 90°F (32°C).
- Do not install where it will be subject to direct sunlight, heat or moisture.

- The door swing is reversible on all models. If desired, change the door swing before installation.

Cabinet Preparation

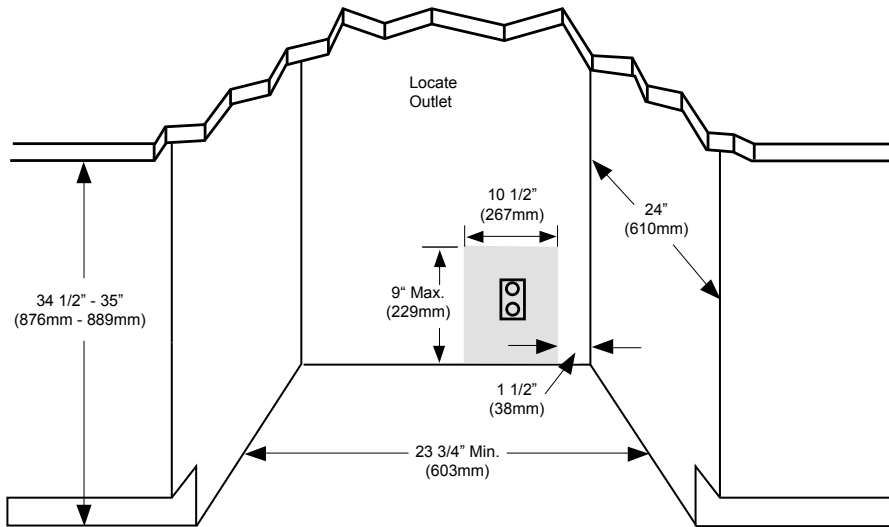

The cutout depth should be 24"


The cutout dimensions shown allow for a full door swing and access to the pull-out racks when installed as a built-in in standard 24" deep cabinets.

- The wine chiller, wine reserve and beverage center can be installed freestanding.
- If installing between frameless cabinets, a 1/2" wide filler strip or side panel may be needed on hinge side. The filler strip will act as a spacer between the case and adjacent cabinet door swing. The width of the opening must include the filler panels.



NOTE:

The front face of the chassis should be even with the adjacent cabinetry.

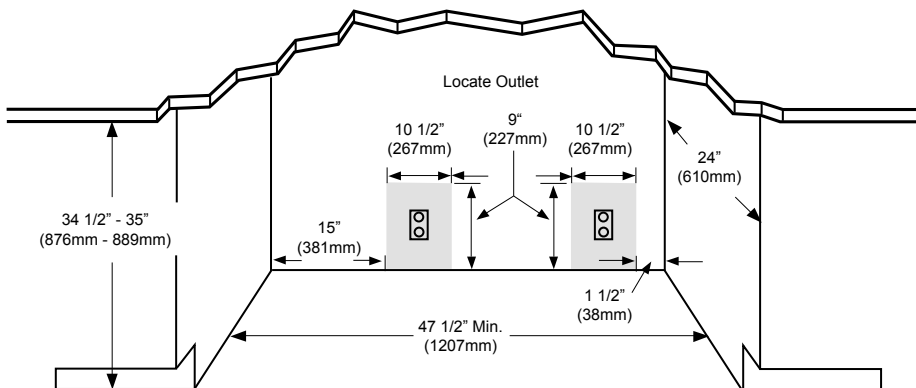

SIDE-BY-SIDE INSTALLATIONS

Increase storage capacity by installing two beverage centers or wine chillers together.

- A side-by-side installation requires at least a 47-1/2" wide opening. No trim kits required.
- Products must operate from separate, properly grounded receptacles.

STACKED INSTALLATIONS

Increase storage capacity by installing two beverage centers or wine chillers together.

- A stacked installation requires at least a 23 3/4" wide opening. No trim kits required.
- A cutout height of 34 1/2" - 35" is required.
- A minimum of 2" rail is required between units.
- A 3/4" or better support platform must be provided for the upper unit.
- Products must operate from separate, properly grounded, receptacles.

Electrical Power Supply Requirements



NOTES:

1. If the power supply requirements shown do not agree with those listed on the product data plate, provide a power source per the information found on the product data plate.
2. If the electrical service provided does not meet the product specification, or does not conform to the NEC or local standards, do not proceed with the installation. Call a licensed electrician to correct the electrical service before proceeding.
3. Be certain to locate the electrical receptacle in an accessible location, so that the appliance may be easily unplugged in the event that service becomes necessary.
4. Do not use an extension cord to connect the appliance to the electrical receptacle.
5. It is the owner's responsibility to ensure that electrical installation of this appliance is performed by a qualified electrician. The electrical installation must comply with the National Electric Code ANSI/NFPA 70-1990 (or to latest revision) and local codes and ordinances.
6. GFI (ground fault interrupter) is not recommended

Electrical Supply Requirements

120VAC, 60 Hz, 15A Dedicated Circuit
Appliance is supplied with a 48" (1219mm)
power cord with a three prong grounded
plug.

Total Connected Load .01kW (1.2A)

Staining Wood Drawer Fronts

The drawer fronts are unfinished maple wood. During use, oil from hands may accumulate and stain the wood.

- The drawer fronts may be stained and sealed to match adjacent cabinetry. The tinted glass will make the stained wood appear darker. A true color match can be seen only when the door is opened.
- Apply the stain and sealer according to the manufacturer's instructions. To avoid unpleasant odor, keep the door open to ventilate and allow the stain/sealer to dry completely before using

Reverse Door Swing



NOTE:

Skip this step if door swing suits the installation.

Parts Included:

- Top left case hinge
- Bottom left case hinge
- Left and right side decorative hinge cover
- Decorative hinge screw hole cover
- Torx® driver bit

Tools Required:

- Phillips screwdriver
- Electric drill

Remove the door:

- Flatten the shipping carton to use as a pad.
- Remove the 2 screws and the toekick. Set aside the screws and toekick for final installation.
- Use the supplied Torx® bit and electric drill to remove the 3 screws holding the top case hinge. Lift off the hinge. (Screws will be used to install the new hinge.)
- Lift the door off the bottom case hinge.
- Remove the bottom case hinge pin and bracket.


Rotate the door:

- The handle will be on the right side of the door; hinges will be installed on the left side of the case.
- Remove the door stop and cam riser on the original bottom right side of the door.
- Remove the fill plug on the top right side of the door.
- Turn the door over and reinstall the fill plug on the new left side.

Reinstall the door:


- Install the original door stop and cam riser onto the bottom left side of the door.
- Install the new supplied bottom case hinge pin and bracket onto bottom left side.
- Place the door onto the bottom case hinge.
- Install the supplied left-hand top case hinge with the 3 original screws.

- Select the hinge cover marked with an "L".
- Peel backing off the tape inside the decorative hinge cover.
- Press and snap the hinge cover into place.
- Snap the screw hole cover into place on the opposite side.

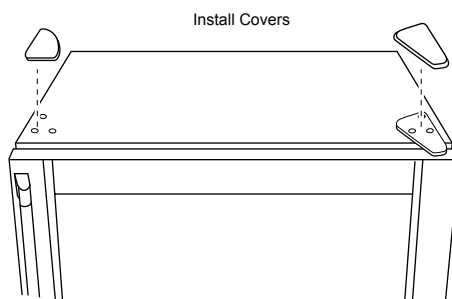

NOTE:


Check to be sure screws are tight and that the door is straight and does not sag. The door should swing freely.

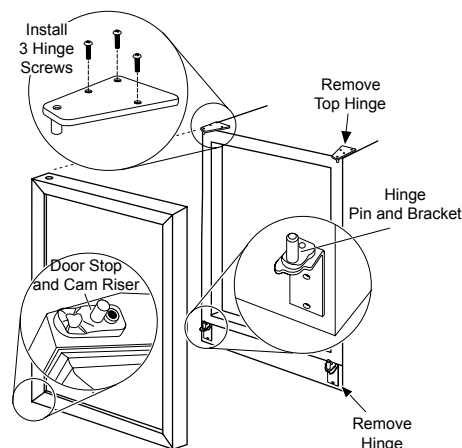

Install Toekick

The toekick has a cutout on the left and right sides. Remove the plug on the left side and reinstall on the right side.

- Install original screws and spacers. Install screws through the spacer standoff, toekick and into the base as shown.

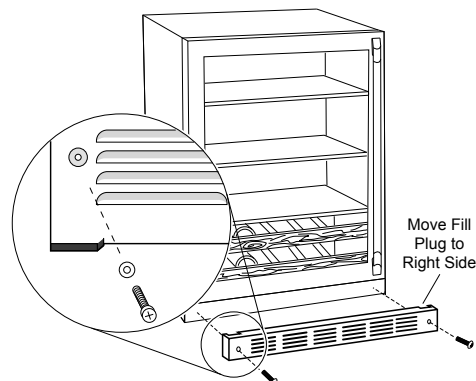


Applying Dacor Nameplate

Follow instructions on the back page for installation of the Dacor nameplate.

Leveling

- Use an adjustable wrench to turn the leveling legs and raise or lower the product.
- Adjust carefully; the product should be level and plumb with cabinetry, and should align with adjacent toe-kick height.

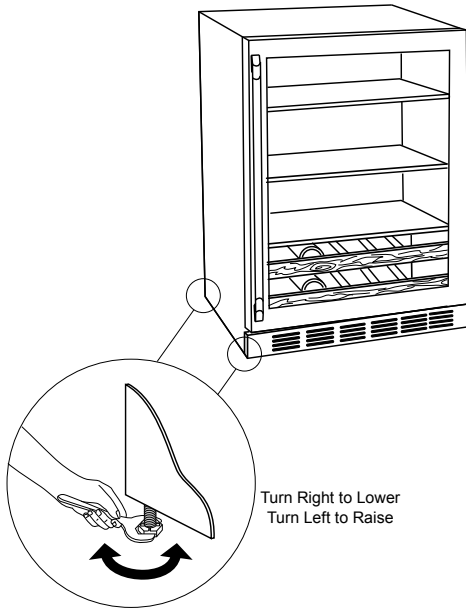

If you did not reverse the door swing:

- Select the hinge cover marked “R” or “L”, depending on door swing.
- Peel backing off the tape inside the decorative hinge cover. Press and snap into position.
- Snap the screw hole cover into place on the opposite side.

Connecting the Electrical Power




WARNINGS:

1. **Verify that the proper electrical power supply has been provided.**
2. **Verify that the electrical supply matches the ratings found on the appliance data plate before proceeding.**
3. **Be certain that power to the electrical receptacle has been disconnected, then plug the appliance into the electrical receptacle.**
4. **This appliance must be connected to a grounded, metallic, permanent wiring system. Alternatively, a grounding conductor should be connected to the grounding terminal or lead on the appliance. Failure to do so may result in an electrical shock hazard.**

5. **Do not use an extension cord with this appliance. Such use may result in fire, electrical shock, or other personal injury.**
6. **Do not install a fuse in the neutral or ground circuit. A fuse in the neutral or ground circuit may result in an electrical shock hazard.**

Grounding Instructions

The appliance is supplied with a four (4) foot long power cord terminated by a three-prong plug. The appliance power cord is intended to be plugged directly into a wall-mounted electrical receptacle. The correct voltage, frequency and amperage must be supplied to the electrical receptacle from a grounded, single phase circuit that is protected by a properly sized circuit breaker or time-delay fuse. The required voltage, frequency and amperage ratings are listed on the product data plate (located on the bottom of the chassis on the left side).

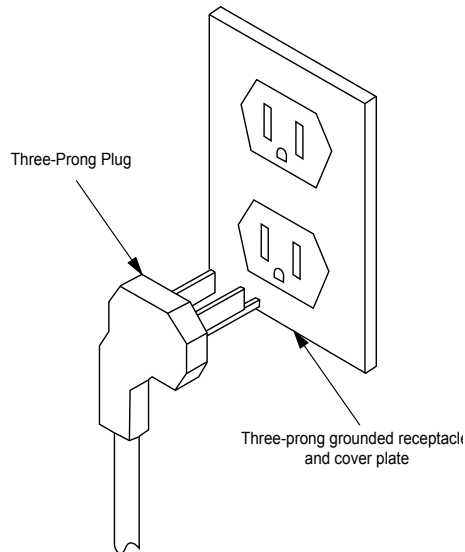

Slide Product Into the Cutout


- Carefully, slide the unit into the opening. Be careful not to entangle power cord.
- Make certain that the chassis is even with the adjacent cabinetry.
- Check again to be sure the unit is level.

Verifying the Operation

Connect power to the electrical receptacle. Operate the appliance as outlined in the Use & Care Manual, that accompanied this product.

NOTES:

TEMPLATE FOR NAMEPLATE LOCATION

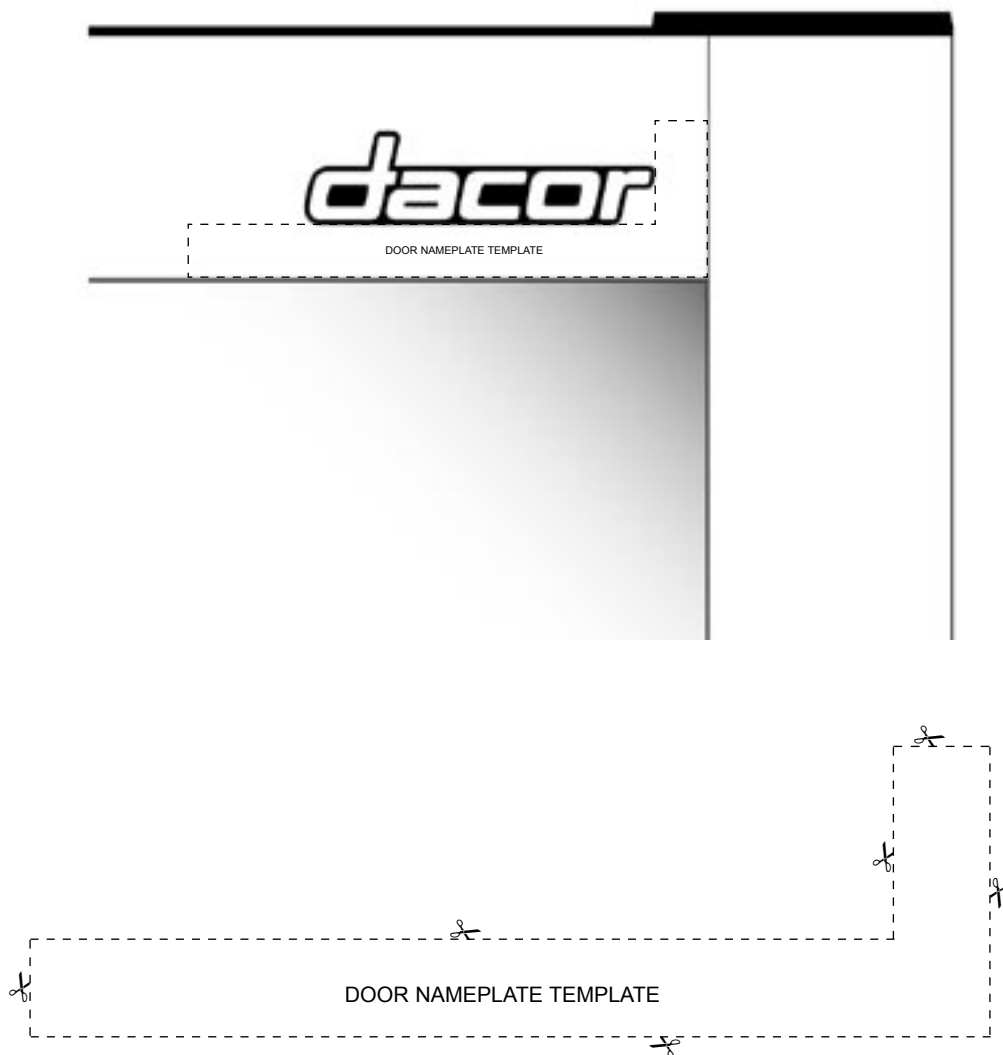

To position nameplate:

- Cut template along dotted line.
- Tape template on the stainless steel trim above the glass on the opposite side of the door handle. Align the bottom edge of the template with bottom of the trim and side of the template with the vertical seam on the trim (see illustration). If the door has been reversed, reverse the template for nameplate alignment.

- Remove backing from nameplate.
- Place nameplate onto the front side of the door, so that the bottom of the nameplate is level with the top of the template.

IMPORTANT: Nameplate must be placed on the opposite side of the door handle.

**Specifications contained within are subject to change without notice.
No liability is assumed by DACOR for changes in specifications.**