


Quick Start Guide Model WCAM 1812 Combination Washer & Dryer

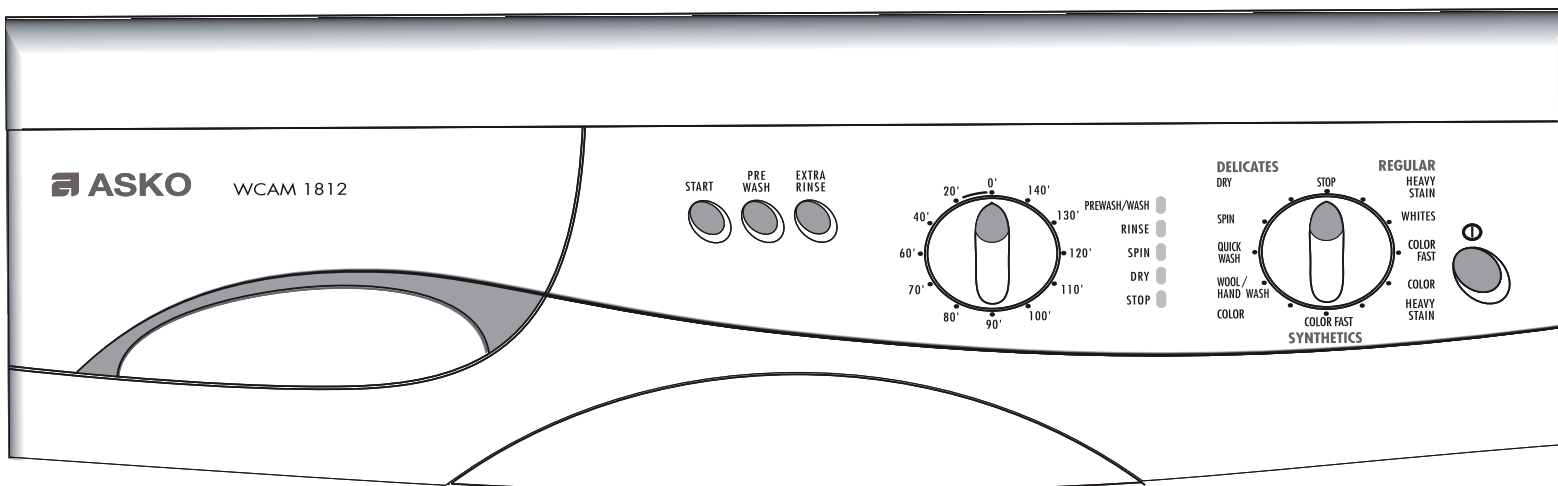

1 SEPARATE CLOTHES

- WHITE / COLORS
- LIGHTS / DARKS
- COTTON / PERMA PRESS
- DELICATE

READ FABRIC CARE LABELS (see page 10)

2 EMPTY ALL POCKETS

- FASTEN HOOKS AND ZIPPERS

3 LOADING YOUR MACHINE

- WASH AND DRY – HALF LOAD
- WASH ONLY – FULL LOAD
- DRY ONLY – HALF LOAD

4 POWER ON/SELECT WASH PROGRAMS

- PRESS ON/OFF BUTTON
- SELECT WASH PROGRAM FOR APPROPRIATE FABRIC
- SELECT PRE-WASH OR EXTRA RINSE OPTIONS IF DESIRED

5 SELECT DRYING TIME IN MINUTES

SET DRY TIME KNOB FROM 20 - 140 MINUTES DEPENDING ON FABRIC TYPE AND LOAD SIZE. REFER TO DRY TIME EXAMPLES ON REVERSE SIDE. (THE DRYING TIME IS DEPENDING ON TYPE OF GARMENT.)

6 ADD DETERGENT/FABRIC SOFTENER

- ONLY USE PREWASH FOR THE STAIN PROGRAM
- CLOSE DETERGENT COMPARTMENT BE SURE DOOR IS SECURELY CLOSED
- USE APPROPRIATE AMOUNTS OF *HE DETERGENT AND FABRIC SOFTENER IN DISPENSER SECTIONS NOTED BELOW.
- SECTION 1 = PRE-WASH, 2= MAIN WASH, 3 = FABRIC SOFTENER
- FULL LOAD = 2 TABLESPOONS EACH OF HE DETERGENT & FABRIC SOFTENER.
- HALF LOAD = 1 TABLESPOON EACH OF HE DETERGENT AND FABRIC SOFTENER.

* HE = HIGH EFFICIENT, LOW SUDSING DETERGENT

7 BE SURE DOOR IS SECURELY CLOSED

- CLOSE BY PRESSING FIRMLY; DO NOT SLAM.

8 PRESS START

9 FOR WASH ONLY PROGRAMS

- SELECT WASH PROGRAMS
- DRY TIME KNOB SET AT 0 MINUTES

10 FOR DRY ONLY PROGRAMS

- PROGRAM KNOB TO DRY
- SET DRY TIME KNOB TO 20 - 140 MINUTES DEPENDING ON FABRIC AND LOAD SIZE.

Refer to product use and care guide for additional information.

Customer Care Center (800) 898-1879 or
visit our web-site @www.askousa.com

Getting Started

WASH & DRY PROGRAMMING

PROGRAM	LOAD SIZE	MAIN WASH	RINSES	SPIN	DRY
REGULAR					
HEAVY STAIN	HALF	65 MIN	30 MIN	7 MIN	120 MIN
WHITES	HALF	51 MIN	27 MIN	11 MIN	100 MIN
COLOR FAST	HALF	51 MIN	37 MIN	11 MIN	100 MIN
COLOR	HALF	42 MIN	37 MIN	11 MIN	100 MIN
SYNTHETICS					
HEAVY STAIN	HALF	31 MIN	26 MIN	11 MIN	100 MIN
COLOR FAST	HALF	22 MIN	35 MIN	11 MIN	60 MIN
COLOR	HALF	20 MIN	45 MIN	11 MIN	60MIN
DELICATES					
WOOL/HAND WASH*	HALF	32 MIN	24 MIN	8 MIN	N/A
QUICK WASH	HALF	15 MIN	24 MIN	8 MIN	60 MIN

**When setting the dry time for the Wool/Hand-wash program the dryer will not go into dry automatically. For dry only loads follow the dry times noted above.*

LOAD EXAMPLES - 7.5 LBS. (HALF LOAD)

- Denim load 5 items**
1 Blouse
1 Dress
3 Pair Blue Jeans

2 HOURS DRY TIME

Dry Time can be set up to 140 minutes. The total time of dry will depend on the size and type of load being washed and dried.

Regular Program has a cool down of 20 minutes at the end of the dry cycle.

- Bath towels 5 towels 48" x 29" 2 HOURS DRY TIME**

Dry times will vary with load sizes, however these items are the heaviest items to dry and are a good barometer.

Synthetics program has a cool down of 10 minutes at the end of the dry cycle.

Wool/Hand wash has no dry capability. These garments should be either hung to dry or laid flat on a clean, smooth surface.

- Bedding 5 items**

- 1 King Fitted Sheet
- 2 King Pillow Cases
- 2 Perma Press shirts or blouses

2 HOURS DRY TIME

* Load sizes and dry times are approximate. Your results might vary based on fabric type and load size.

(For best results wash and dry the flat and fitted sheets separately to minimize tangling of the fabrics.)

**Customer Care Center (800) 898-1879 or
visit our web-site @www.askousa.com**