

USE + CARE MANUAL

Dishwasher

FD24DI

FORZA™

Congratulations on your recent Forza purchase! Before you begin using your new Forza product, please take a moment to review the Use + Care Manual. You will find the answers to all of your questions as well as some very important safety information. Your Forza product is ready and waiting to be used!

Table of Contents

- 03** Important Safety Instructions
- 04** Features of Your New Dishwasher
- 08** Operating Instructions
- 11** Preparing and Loading Dishes
- 17** Care & Cleaning
- 20** Troubleshooting
- 22** Error Codes
- 23** Forza Warranty U.S.A.

This Forza appliance is proudly made in Modena, Italy
by GlemGas S.p.A, a family owned company.
www.forzacucina.com

Important Safety Instruction



WARNING: For your safety, please follow the information in this manual to minimize the risk of fire, explosion, electric shock, and to help prevent property damage or personal injury.

Proper Installation

Please install your dishwasher properly. Follow the installation guide.

- Water supply inlet temperature should be between 120° F and 149° F.
- Dispose of the discarded appliance and packing material properly.
- The dishwasher must be properly grounded, or it can result in a risk of electric shock. PERMANENTLY CONNECTED and CORD-CONNECTED are both allowed.
- If there is any damage to the Dishwasher, please contact to your Dealer, do not to attempt to repair or replace any part by yourself.

Basic Precaution Before Use

The manual does not cover every possible condition and situation that may occur

- Read all instructions before using the dishwasher.
- Use the dishwasher only for intended function as described in this manual
- When loading items to be washed:
 - Load sharp items and knives so that they are not likely to damage the door seal and tub.
 - Load sharp items and knives with the handles up to reduce the risk of injury.
- Do not wash plastic items unless they are marked dishwasher safe. If not marked, check with manufacture for recommendation. Items that are not dishwasher safe may melt and create a potential fire hazard.
- If the dishwasher drains into a food disposer, make sure disposer is completely empty before running dishwasher.
- Do not tamper with controls.
- Do not operate your dishwasher unless all enclosure panels are in the proper place.
- Do not touch the heating element during or immediately after use, especially if the sanitize option has been selected.
- To reduce the risk of injury, do not allow children to play in or on a dishwasher.
- Do not let children abuse, sit, or stand on door or racks of the dishwasher.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. HYDROGN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using dishwasher, turn on all hot water faucets and let water flow from each for several minutes. This will release any accumulated hydrogen gas. Hydrogen gas is flammable. Do not smoke or use an open flame during this time.
- Do not store or use combustible materials, gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Use only detergents or rinse agents recommended for use in a dishwasher and keep them out of the reach of children.
- Keep young children and infants away from dishwasher when it is operating.
- Do not use the dishwasher if it has a damaged power line or plug, and do not plug the dishwasher into a damaged outlet. Failure to observe these instructions may result in electrical shock.
- Remove the door to the washing compartment when removing an old dishwasher from service or discarding it.

SAVE THESE INSTRUCTIONS

Features of Your New Dishwasher

Specifications

Capacity	16 place settings
Dimension	606 x 623 x 857 mm (W x D x H)
Power Supply	120 volts, 60Hz
Rated Power Usage	Wash motor 50 W Heater 840 W
Water Feed Pressure	20 - 120 psi (138 - 828kPa)




1 Top Cutlery Rack	6 Detergent Dispenser	11 Adjustable Upper Rack
2 Upper Spray Arm	7 Rinse Aid Dispenser	12 Middle Spray Arm
3 Heating Element	8 Top light	13 Silverware Basket
4 Low Spray Arm	9 Tub Gasket	14 Bottom Rack
5 Vortex wash arm (Located on the left side of tub)	10 Cup Shelf	

Features of Your New Dishwasher

Features


Filter System

Your dishwasher has a multiple Filter System. In the System there are four filter-meshes. It can separate soiled water and clean water in different chambers. The multiple filter system helps your dishwasher to get better performance with less water and less energy.

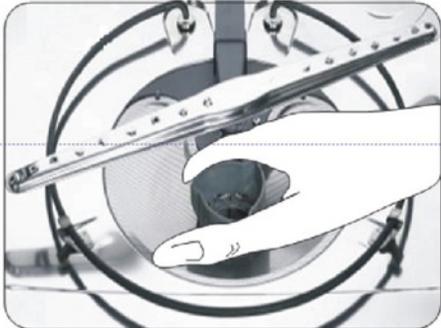



Smart Wash System

Your dishwasher has Smart Wash System. When a partial load of lightly soiled dishes is placed in the unit, a wash cycle similar to a short wash will automatically be performed. When a full load of heavily soiled dishes is placed in the unit, a heavy wash cycle will automatically be performed. It can determine the type of cycle required to clean the dishes and will clean more efficiently every time.

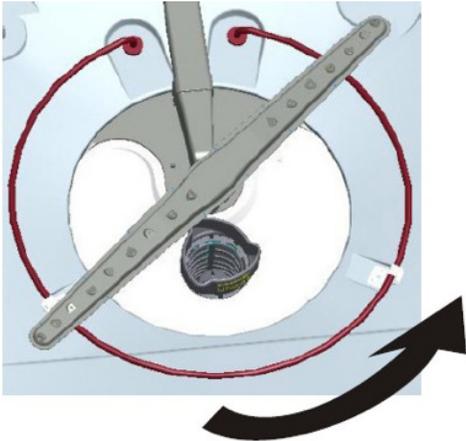

Adjustable Upper Rack

The Upper Rack can be raised or lowered to accommodate loading taller dishes in either rack. The Upper Rack clearance height (H1) goes from 8" to 10". The Bottom Rack clearance height (H2) is 11" to 13".

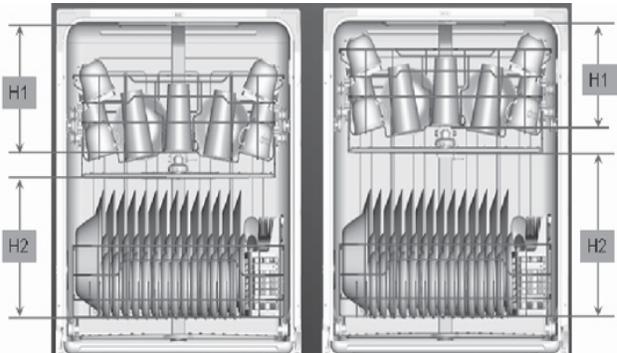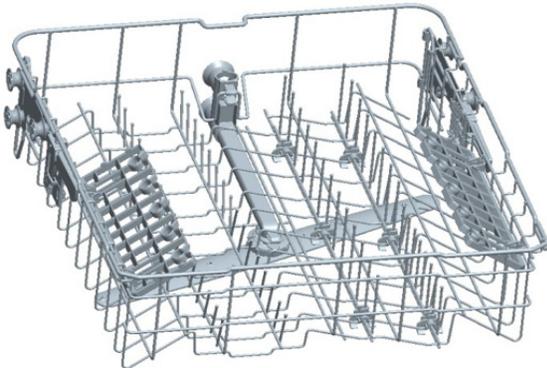

Features of Your New Dishwasher

How Your Dishwasher Cleans

Your dishwasher cleans by spraying a mixture of hot water and detergent through the spray arms against soiled surfaces.

The dishwasher fills with water covering the filter area. Water is then pumped through the multiple filter and spray arms. Separated soil particles go down the drain as the water is pumped out and replaced with clean water.

The number of water fills will vary with the cycle being used.

Getting Started

1. Load dishwasher (See Preparing and Loading Dishes).
2. Add detergent (See Filling the Detergent Dispenser).
3. Add rinse aid, if needed (See Filling Rinse Aid to Dispenser).
4. Select desired CYCLE (See Cycle Chart). The indicator light beside the pad will glow when selected.
5. Select desired FUNCTIONS, the indicator light that beside the pad will glow when selected.
6. To start, press Start/Cancel (See Start/Cancel) pad.
7. Close the door, then the machine will start to work.

NOTE

1. Your dishwasher has the top control panel. The door should be opened first if you want to operate the machine.
2. To start a cycle, the door must be closed within 4s after press Start/Cancel.


Wash Cycle Selections

Cycle times are approximate and will vary with options water is necessary to activate dishwasher detergent and melt fatty food soils.

An automatic sensor will check the incoming water temperature. If it's not hot, a timer will be delayed for automatic water heating in the main wash. Even when HI-TEMP WASH is selected, an even higher temperature will be guaranteed to handle heavier soil loads.

Features of Your New Dishwasher

Control Panel

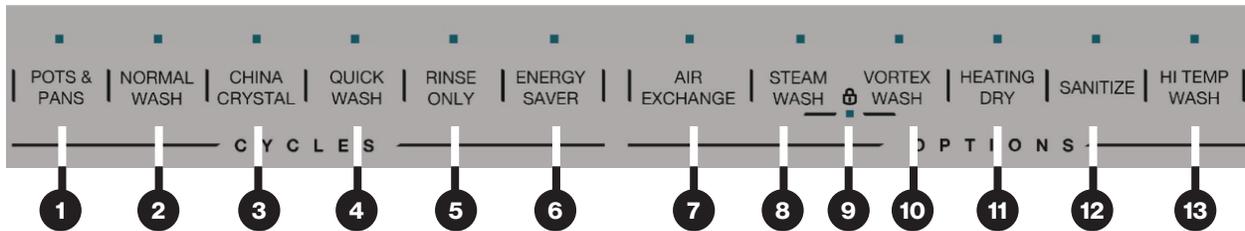

NOTE

This model is a built-in model. All the buttons can only be operated when the door panel is open.

Wash Cycle Selections

1 POTS & PANS

This cycle is for hard-to-clean, heavily soiled dishes, pots and dishes.

2 NORMAL WASH

This cycle is for regularly soiled dinner dishes or silverware.

3 CHINA CRYSTAL

This cycle is for lightly soiled china and crystal.

4 QUICK WASH

This cycle is for lightly soiled and pre-rinsed dishes and silverware.

5 RINSE ONLY

This cycle is for pre-rinsing dishes or glasses. This is only a rinse that keeps food from drying on your dishes and reduces odor buildup in your dishwasher until you are ready to wash a full load. Do not use detergent.

6 ENERGY SAVER

For light soiled or pre-rinsed dishes and silverware.

Functions

7 AIR EXCHANGE

The dishwasher will exchange the air every 6 hours to keep the air in the dishwasher fresh when you select the "Air exchange function."

8 STEAM WASH

For use with heavily soiled items, the STEAM WASH option adds 30 minutes to the cycle time. The option is available with the cycles of "POTS & PANS" and "Normal wash."

9 CHILD LOCK

You can lock all controls to prevent children from accidentally changing the dishwasher cycle or starting the dishwasher. Press the "Steam Wash" and "Vortex Wash" simultaneously to select or cancel the function. After the function is selected. The corresponding indicator light will turn on.

10 VORTEX WASH

Use this option when you want to wash pots and pans, durable serving bowls, and other large, very dirty, hard to clean dishes. To use Vortex Wash, place the dishes face down in the lower rack directly above the vortex wash arm in the back left corner.

11 HEATING DRY

When the "Heating Dry" function is selected, the heater will work during the drying process.

12 SANITIZE

To sanitize your dishes and glassware, select the Sanitize option. When the "Sanitize" function is selected, the temperature of water will be maintained at 158 °F (70 °C) max.

Certified residential dishwashers are not intended for licensed food establishments. The sanitize cycle is NSF certified. ⚠ WARNING: The sanitize option is available with "POTS & PANS" "NORMAL WASH" and "ENERGY SAVER" cycles.

13 HI TEMP WASH

When the "Hi Temp Wash" function is selected, the temperature of water will be maintained at 140 °F (60 °C) max.

Operating Dishwasher



14 DELAY

To delay the start of a selected cycle, open the door, press the Delay Start pad until the desired delay time shows in the LED display screen. It allows you to start your dishwasher for a 1 to 24 hour delay. Press the Start/Cancel pad once, after that, you should close the door within 4 seconds, and the delay will run.

If you open the door during the delay, you should press the Start/Cancel pad, then close the door within 4 seconds, and the delay will run again.

To cancel the Delay Start option and begin the cycle, before the delay period is over press the Start/Cancel pad for 3 seconds.

15 DISPLAY WINDOW

To display the remaining hours and minutes of the running cycle, delay hours and error codes etc.

16 START/CANCEL

Open the door, select the wash cycle you desire and the indicator light will turn on. Press the Start/Cancel button and close the door within 4 seconds. Then the selected program light will begin to blink and the cycle progress indicator in control panel will light on. The washing cycle is running.

If you close the door more than 4 seconds after pressing the Start/Cancel button, the cycle will pause and not run.

To cancel a running cycle, open the door and press the Start/Cancel button for 3 seconds. Then the dishwasher will drain the water for 60 seconds and the screen will display the time "60." After the drain you can select the desired cycle.

When you want to load more dishes or pause the dishwasher while it is already running, make sure to open the door slowly and carefully as there is a possibility of injury by hot steam from inside the dishwasher. You can add more dishes before the main wash starts. Open the door and check the detergent dispenser. If the detergent dispenser is still closed, you can add items. To achieve the most efficient wash, it's strongly recommended that all dishes be loaded before washing program begins.

17 RINSE AID INDICATOR LIGHT

Turns on when the dishwasher needs to add Rinse aid.

18 SANITIZED INDICATOR LIGHT

If a cycle with the sanitize function is finished, the sanitized indicator light turns on. If you open the door, it will turn off after 30 seconds.



19 CLEAN INDICATOR LIGHT

Turns on after a cycle finished. If you open the door, it will turn off after 30 seconds.

Operating Dishwasher

Cycle progress indicator

Located on the right side of the front of the dishwasher, these lights indicate how far along the current wash cycle is while the dishwasher is running.

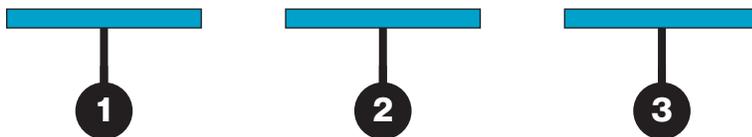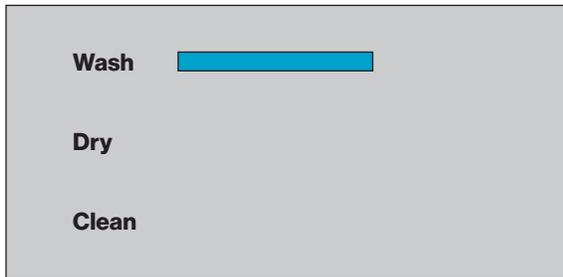

1 Wash	When the dishwasher is in a wash or rinse portion of a cycle, the Wash lights are illuminated.
2 Dry	When the dishwasher is in a drying portion of a cycle, the Wash and Dry lights are illuminated.
3 Clean	After the dishwasher has completed all portions of a cycle, all indicator lights are illuminated. If you open the door when the Cleaning lights are illuminated, all the indicator lights will turn off after 30seconds.

Operating Dishwasher

Satus Window

H:01-H:24

If the Delay Start option is selected, the number of delay start hours shows in the Status Window.

2:15-0:00

After the machine starts, the remaining time of the cycle selected will show in the Status Window.

Error Indication

In certain situations which are critical to the machines function and safe operation, the control shall shut down and indicate an error code (See Error Codes on page 21).

If Error codes are displayed, contact the dealer or servicer. They will be able to provide assistance in trouble shooting the problem and/or locate an authorized service technician if needed.

Cycle Chart

PROGRAM	DESCRIPTION OF CYCLE	WATER (L)	CYCLE TIME (MIN)
Pots & Pans	Pre Wash Wash (48°C) Rinse Rinse(58°C) Drying	22.8	140
Normal Wash	Pre Wash Auto (42-48°C) Rinse (50-58°C) Drying	10.8-23.0	105-135
China Wash	Pre Wash Pre Wash Wash (48°C) Rinse Rinse (58°C) Drying	19.3	120
Quick Wash	Pre Wash Wash (40°C) Rinse (50°C) Drying	15.5	60
Rinse Only	Rinse Only	8	20
Energy Saver	Pre Wash Pre Wash Wash (40°C) Rinse Rinse (50°C) Drying	19.3	105


NOTE

1. Your dishwasher has the top control panel. The door should be opened first if you want to operate the machine.
2. To start a cycle, the door must be closed within 4s after press Start/Cancel.


Preparing and Loading Dishes

Adjustable Upper Rack

The upper rack height can be easily adjusted to accommodate loading taller dishes in either rack. To accommodate taller dishes in the bottom rack, there are 2 positions available:

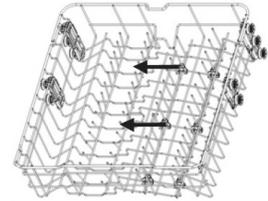

Upper Rack

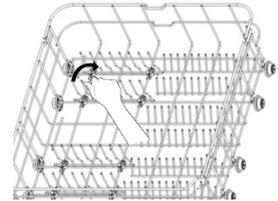

Lower Rack



WARNING: Height should be adjusted without dishes in the racks.

Dish Preparation

Scrape away large pieces of food, bones, pits, toothpicks, etc. The continuous filtered wash system will remove the remaining food particles. Burned-on foods should be loosened before loading. Empty liquids from glasses and cups.

Foods such as mustard, mayonnaise, vinegar, lemon juice and tomato based products may cause discoloration of stainless steel and plastics if they sit for a long period of time. Unless the dishwasher is to be operated at once, it is best to rinse off these food soils.

If the dishwasher drains into a food disposer, be sure disposer is completely empty before starting dishwasher.



Preparing and Loading Dishes

Loading Cutlery rack

Cutlery should be placed in the cutlery rack separately from each other in the appropriate positions, and do make sure the utensils do not nest together, this may cause bad performance.

For a top quality cleaning, place the silverware in the basket making sure that:

- They do not nest together.
- Silverware is placed with the male face up.
- Long utensils in the middle.

Loading the Upper Rack

The upper rack is designed for cups, glasses, small plates, bowls and plastic items marked safe, etc.

For best results, place the bowls, cups, glasses, and sauce pans with soiled surface facing down or toward the center.

Tilt slightly for better drainage.



WARNING: Make sure the loaded dishes do not interfere with the rotation of the middle spray arm, which is located at the bottom of the upper rack. (Check this by rotating the middle spray arm by hand.)

Loading the Bottom Rack

The bottom rack is designed to load plates, soup bowls, plates, saucers and cookware. The adjustable rack space will allow you to load maximum 13 inch items.



WARNING: Large items should be placed along the edge so they do not interfere with the middle spray arm rotation, and make sure they not prevent the detergent dispenser from opening.

Large items should be turned so that the inside faces downward, and make sure these items do not interfere with the lower spray arm rotation.

The fold-down tines in the bottom rack make it easy to load those extra large and hard-to-fit items. The tines may be left up for normal use or folded down for more flexible loading. Fold down for more space to load large pots or pans.

Preparing and Loading Dishes



Cutlery Rack 8 Place Settings



Upper Rack 8 Place Settings



Bottom Rack 8 Place Settings



Cutlery Rack 12 Place Settings



Upper Rack 12 Place Settings



Bottom Rack 12 Place Settings



Cutlery Rack 14 Place Settings



Upper Rack 14 Place Settings



Bottom Rack 14 Place Settings



Cutlery Rack 16 Place Settings



Upper Rack 16 Place Settings




Bottom Rack 16 Place Settings

Preparing and Loading Dishes

Loading the Silverware Basket

The silverware basket could be divided into three separate modules that can be used in both upper and lower racks.

- Spoons
- Knives
- Salad forks
- Forks
- Large spoons
- Large forks

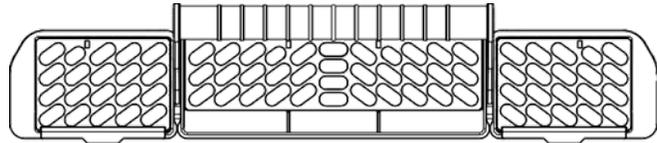

⚠ WARNING



DO NOT LET ANY ITEM EXTEND THROUGH BOTTOM

Be sure nothing protrudes through bottom of the basket or rack to block the lower spray arm.

Adding a Dish

To add or remove items after wash cycle starts:

1. Open door slightly and wait a few seconds until wash action stops before completely opening.
2. Add the item.
3. Press the Start/Pause pad, then close the door and latch firmly within 4 seconds. The cycle will automatically resume. If you close the door more than 4 seconds after pressed the Start/Cancel pad, the cycle will pause and not run.



CAUTION:

TO AVOID BURN INJURY: Slightly open door and wait until spray arms and wash action stop. Hot water may splash out of dishwasher. Failure to do so may result in injury.

Filling the Rinse Aid Dispenser

Rinse aid greatly improves drying and reduces water spots and filming. Without rinse aid your dishes and dishwasher interior will have excessive moisture. The Heated Dry option will not perform as well without rinse aid. The rinse aid dispenser, located next to the Detergent cup, automatically releases a measured amount of rinse aid during the last rinse.

If spotting and poor drying is a problem, increase the amount of rinse aid dispensed by rotating the dial to a higher number. The dial is located under the dispenser cap.

If the rinse aid is low, the Rinse Aid light is illuminated at the beginning and end of the cycle indicating that it is time to refill.


Preparing and Loading Dishes

Filling the Rinse Aid Dispenser




WARNING: Your dishwasher is designed to use a liquid rinse aid. The use of rinse aids greatly improves drying performance after the final rinse. Do not use a solid or bar-type rinse aid. Under normal conditions, the rinse aid will last approximately one month. Try to keep it full, but do not over fill.


1. Open the door, turn the dispenser cap to left and lift it out.

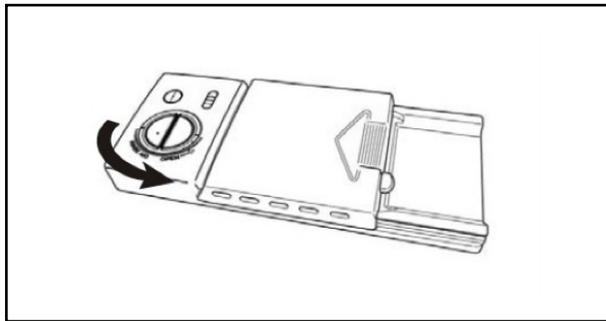


3. You can adjust the amount of the rinse aid released during the rinse operation. The greater number indicates the larger amount of rinse aid released.

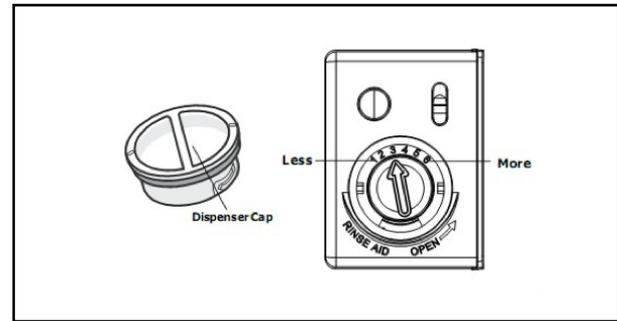

2. Add rinse agent until the indicator points to max.

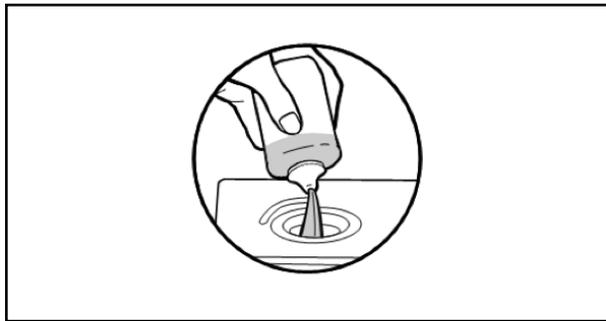


4. Replace the dispenser cap.

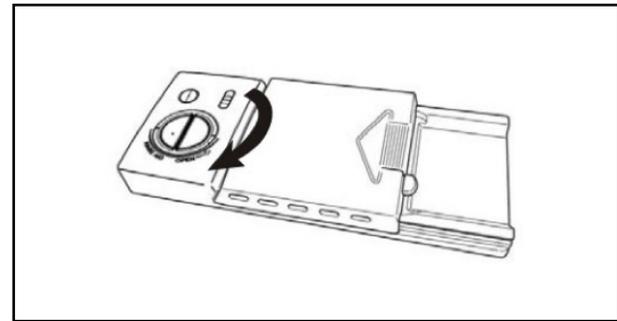


Filling the Detergent Dispenser

1. Push the dispenser cover latch downwards and open it.

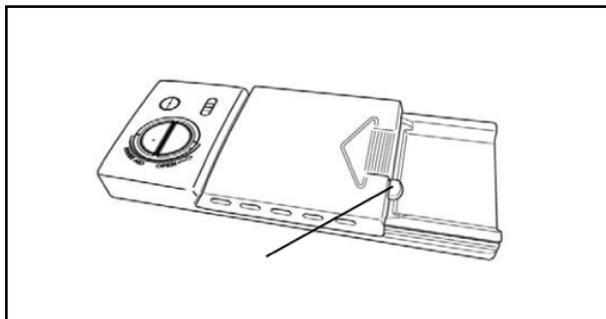


2. Add the detergent to the main wash compartment.

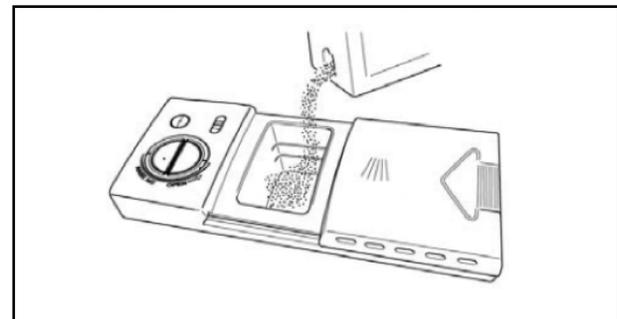

Preparing and Loading Dishes

Filling the Detergent Dispenser (Con't)

3. Close the dispenser cover.

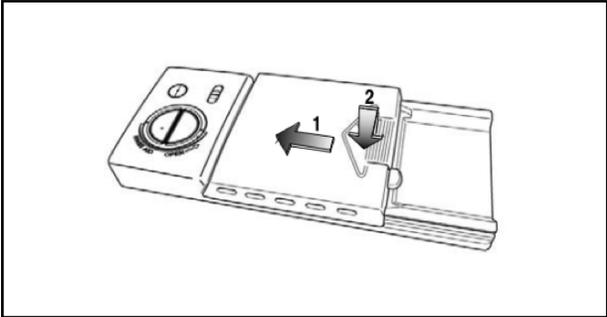

The amount of the detergent needed depends on the cycle and soil level of dishes. Refer to the table below and adjust the recommended amount as necessary for your load.

Cycle	Soft Water (0-3 Grains)	Medium Hard Water (4-8 Grains)	Hard Water (9-12 Grains)	Very Hard Water (Over 12 Grains)
Auto Wash, Pots & Wash, Normal Wash	2 Teaspoons (Main Wash Cup - 1/4 Full)	5 Teaspoons (Main Wash Cup - fill to line above "Regular")	8 Teaspoons (Main Wash Cup Completely Full)	Each
Quick Wash, China Crystal	2 Teaspoons (Main Wash Cup - 1/4 Full)	5 Teaspoons (Main Wash Cup - fill to line above "Regular")	8 Teaspoons (Main Wash Cup completely full)	Main
Rinse	No Detergent	No Detergent	No Detergent	No Detergent (Water Softener Recommended)

Care & Cleaning

Cleaning the Exterior Door and Panel

1. STAINLESS STEEL PANEL

Clean the stainless steel door and handle regularly to remove the debris with a soft cloth.

Do not use appliance wax, polish, bleach or products containing chlorine to clean the stainless steel door.

2. CONTROL PANEL

Clean the control panel with a lightly dampened cloth, and clean it gently.

Clean the Stainless Steel Inner Door and Tub

The tub is made of Stainless Steel. It will not rust or corrode if the dishwasher should be scratched or dented.



WARNING: Clean the spots on the steel inner door and tub with a damp non-abrasive cloth


Clean the Cylinder Filter

The Cylinder Filter is designed to collect big items such as broken glass, bones and pits. The Cylinder Filter needs to be cleaned to maximize wash performance.

Remove the bottom rack, rotate the cylinder filter as shown, lift it out, empty and clean it by holding it under running water and replace.







WARNING BURN HAZARD: Allow heating element to cool before cleaning the interior. Failure to do so can result in burns.

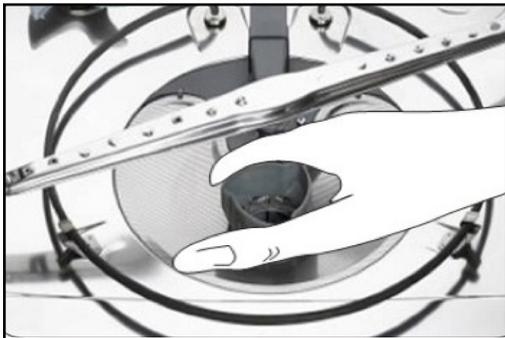

Care & Cleaning

Cleaning the Fine Filter


Take out the Cylinder Filter and remove the Fine Filter from the dishwasher tub bottom. To remove the Fine Filter you must first remove the bottom spray arm as shown below. Flush the Fine Filter by holding it under running water and replace.

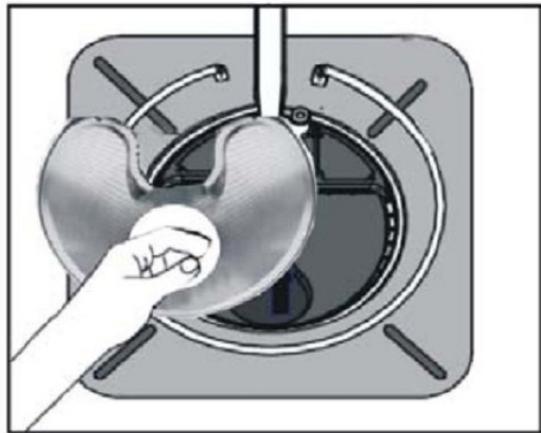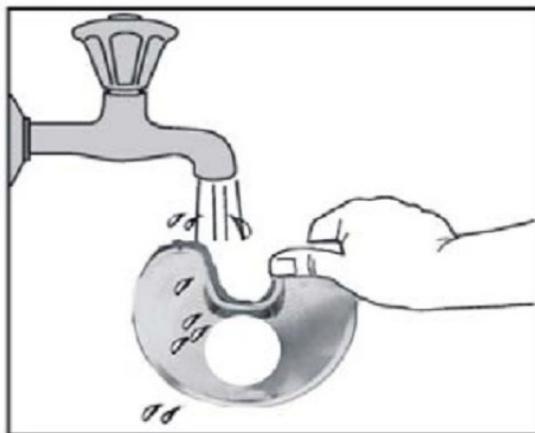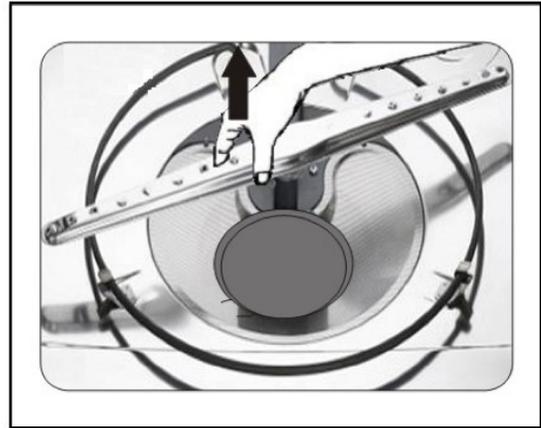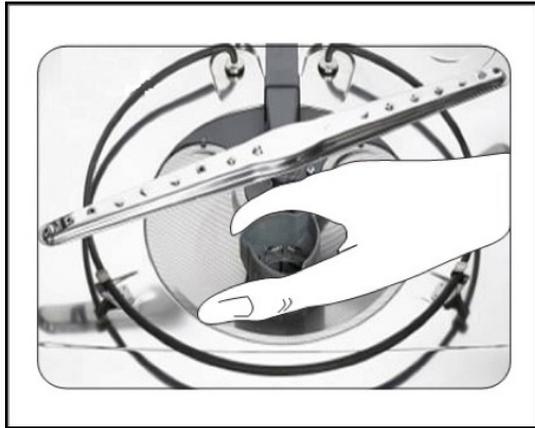

Care & Cleaning

Clean the Door Gasket

Clean the door gasket with a damp cloth to remove food particles regularly.

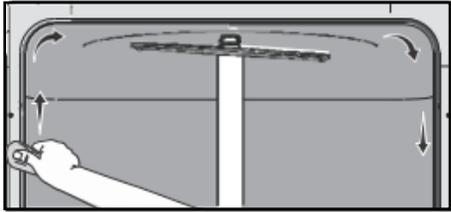


Air Gap

If there is an air gap installed with your dishwasher, make sure it is clean so the dishwasher will drain properly. An air gap is not part of your dishwasher. Before you clean the air gap, turn off the dishwasher first and lift off the cover. Remove the plastic cap and clean with a toothpick.

Inside

The inside of the dishwasher is self-cleaning with normal use. If needed, clean the tub gasket with a damp cloth and use a brush, similar to the ones shown on the right, to clean the opening in the end of the gasket.

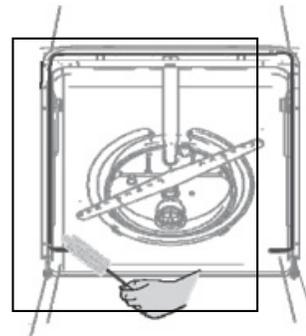

Protect Against Freezing

Your dishwasher should be protected from freezing properly if it was left in an unheated place. Have a qualified person do the following:

TO DISCONNECT SERVICE:

1. Turn off electrical power to the dishwasher at the supply source by moving fuses or tripping the circuit breaker.
2. Turn off the water supply.
3. Place a pan under the inlet valve. Disconnect water line from inlet valve and drain into pan.
4. Disconnect drain line from pump and drain water into pan.

TO RESTORE SERVICE:

1. Reconnect the water, drain and electrical power supply.
2. Turn on water and electrical power supply.
3. Fill both detergent cups and run dishwasher through a Heated-Washcycle.
4. Check connections to make sure they do not leak.

Troubleshooting

Before Calling for Service

PROBLEM	POSSIBLE CAUSE	SOLUTION
Dishwasher won't start	Door may not be closed properly	Confirm the door is shut all the way
	Power supply or power line is not connected	Check latch and connect the power supply
	Delay Start option has been selected	Refer to this manual to reset
	Child Lock activated(selected models)	Deactivate the child lock. Refer to child lock section in this manual
Rinse Aid light on	The rinse aid level is low	Add rinse aid
Dishwasher operates too long	The dishwasher is connected to cold water	Make sure the dishwasher is connected to the hot water supply
	The cycle time will vary due to the soil	When heavy soil is detected, the auto, normal, and pots & pan cycle will automatically increase the cycle time
	The sanitize option is selected	When sanitize option is selected, the cycle time will increase to meet the sanitized temperature request
Dishes are not clean enough	Water pressure is temporarily low	Use your dishwasher when the water pressure is normal
	The inlet water is low	Make sure the dishwasher is connected to the hot water supply. Try not to use your dishwasher when hot water is being used elsewhere in the house
	Dishes are loaded too close together/ improper use of detergent	Load the dishes again as the manual introduced. Add detergent depending on the water hardness and the cycle you chose. Use fresh detergent
	The selected cycle is not suitable for food soil condition	Choose another cycle for longer washing time
	Spray arms are blocking items	Make sure the spray arm rotates fully
Dishes are not dry enough	Detergent dispenser is empty	Fill rinse aid dispenser or increase the amount of rinseaid
	Improper loading of dishes	Load the dishes according to the manual instructions
	The cycle you chose did not included the drying	Choose the proper cycle with drying

Troubleshooting

Before Calling for Service (Con't)

PROBLEM	POSSIBLE CAUSE	SOLUTION
Spots and filming on dishes	Water hardness is too high	For extremely hard water install a water softener
	Improper loading of dishes	Load the dishes again as the manual indicates
	Old or damp powder rinse aid is used	Use fresh rinse aid
	Rinse dispenser empty	Add rinse aid to the dispenser
Etching	Using too much detergent	Use less detergent if you have soft water etching
	The inlet water temperature exceeds 150 °F	Lower the inlet water temperature
Detergent left in dispenser cup	Detergent may be too old	Use fresh detergent
	Spray arm is blocked	Load the dishes, making sure the spray arms are not blocked.
Detergent dispenser will not shut	Improper operation of the detergent cover	Add the detergent and rinse aid as indicated by the manual
Water remains in the dishwasher	Previous cycle has not finished or has been interrupted	Select the proper cycle as introduced by the manual
Dishwasher does not drain properly	Drain is clogged	Check if you have an air gap Make sure the disposer is empty if the dishwasher is connected to the disposer
	Drain hose is kinked	Make sure the drain hose is properly connected to the sink
Suds in the tub	Improper detergent is used	Make sure to use only the automatic dishwasher detergent
Dishwasher leaks	Excessive suds caused by using the improper detergent	Make sure to use only the automatic dishwasher detergent
	Dishwasher is not level	Leveling the dishwasher (see the installation manual)
Black or gray marks on dishes	Aluminum utensils have rubbed against dishes	Chose a higher cycle Make sure the inlet water is no less than 120 °F
Stained tub interior	Coffee and tea soil	Using a spot cleaner to remove the soil
	Tomato-based food stain	Rinse only cycle right after loading to decrease the staining
Noises	Detergent cup opening\Drain pump sound	This is normal
Dishwasher won't fill	A hard object has entered the wash module. When the object is ground up, the sound should stop.	If the noise persists after a complete cycle, call for service.

Error Codes

When some malfunctions come on, the appliance will display error codes to warn you:

CODES	MEANINGS	POSSIBLE CAUSES
E1	Longer inlet time	Faucets are not opened, water intake is restricted, or water pressure is too low
E4	Overflow	Elements of the dishwasher leaked
E8	Failure of orientation of distributary valve	Open circuit or break of distributary valve
E9	Keep touching a button more than 30 seconds	Water or something on the button



WARNING: Clean the spots on the steel inner door and tub with a damp non-abrasive cloth

Installation Instructions

READ THE INSTALLATION INSTRUCTIONS CLEARLY AND PAY ATTENTION TO THE FOLLOW LISTS:

1. The power-supply receptacle for the appliance shall be installed in a cabinet or on a wall adjacent to the undercounter space in which the appliance is to be installed.
2. There shall be an opening through the partition between the compartments specified in (a) that is large enough for the attachment plug to pass through. The longest dimension of the opening shall not be more than 38 mm (1.5 in).
3. The edges of the opening specified in (b) shall, if the partition is wood, be smooth and rounded, or if the partition is metal, be covered with an edge protector provided for this purpose by the manufacturer.
4. Care shall be exercised when the appliance is installed or removed to reduce the likelihood of damage to the power-supply cord.

NOTE

NOTE: A hose that attaches to a sink spray can burst if it is installed on the same water line as the dishwasher. If your sink has one, it is recommended that the hose be disconnected and the hole plugged.

FORZA WARRANTY U.S.A.

FREESTANDNG GAS RANGES – DISHWASHERS – RANGE HOODS

The warranties provided by Forza in this statement apply exclusively to Forza appliances and accessories sold as new products to the original owner by a Forza authorized distributor, retailer, dealer or service center and installed in the United States.

The warranties provided in this statement are not transferable and have validity from the date of original purchase.

Duration of warranty:

For twenty-four (24) months from the original date of purchase, the Forza warranty covers all parts and labor to repair or replace, under normal residential use, any part of the product proving to be defective in material or workmanship as a result of the original manufacturing process. Repair service must be performed by a Forza Authorized Service Center during normal working hours.

Responsibilities of the buyer:

When writing or calling about a service problem, please include the following information:

- Your name, address and telephone number;
- Appliance model and serial number;
- Name of your dealer;
- A clear description of the problem you are having;
- Proof of purchase (sales receipt).

Cosmetic warranty:

Forza will cover parts showing cosmetic defects (doors, handles, glass, product frames, racking and interior, exterior surfaces) in material and workmanship for a period of seven (7) days after the delivery of the unit. This coverage will include scratches, stains, surface imperfections on stainless steel, paint and porcelain, with the exclusion of slight differences in color due to materials and painting/enameling technologies. However, slight color variation may be noticed because of the inherent differences in painted parts and porcelain parts as well as differences in kitchen lighting, product locations, and other factors. Therefore, this warranty does not apply to color variation attributable to such factors.

WHAT IS NOT COVERED:

- 1) The product used in any commercial application.
- 2) Service trips to your home, during which no fault is found.
- 3) Repair service provided by any service agency that is not Forza authorized.
- 4) Damage or repair service to correct any service provided by an unauthorized agency.
- 5) Damage or repair service to correct the use, addition or substitution of any original part with an unauthorized part.
- 6) Installation not in accordance with local electrical codes or plumbing codes.
- 7) Defects or damage due to improper storage of the product.
- 8) Damages due to failure in following the manufacturer's recommended care, cleaning and maintenance instructions; in particular, damages to the oven and/or the cooktop if they have not been cared and cleaned according to these instructions.
- 9) Defects, damages or missing parts on products sold out of the original factory packaging or from displays.
- 10) Service calls or repairs to correct the installation of the product and/or related accessories, calibrations and normal adjustments after installation and setup, including burner adjustments.

- 11) Service calls to connect, convert or otherwise repair the electrical wiring and/or gas line to properly use the product.
- 12) Service calls to provide instructions on the use of a Forza product.
- 13) Repair or failure of the product if it is abused, misused, used improperly, used for other than the intended purpose or if used commercially/industrially.
- 14) Damage or repairs caused by the use of harsh chemicals or cleaning products improperly applied.
- 15) Replacement of wear and tear parts.
- 16) Replacement of house fuses or resetting of circuit breakers.
- 17) Damages to anything situated next to the product, including, but not limited to, ceiling, floor or cabinetry.
- 18) Defects and damages arising from accidents, alterations, misuse, abuse, improper installation, or installation that does not conform to instructions given by Forza.
- 19) Damages occurred during transit, handling and/or installation of the product.
- 20) Defects and damage arising from external forces beyond the control of Forza such as fire, flood, earthquakes and other acts of God.
- 21) Forza cannot guarantee the availability of service in areas more than 30 miles from an authorized retailer. In such cases where travel charges are levied, those will be borne by the consumer.
- 22) This warranty only covers service performed at the location of product installation and will not cover costs associated with repairing off-site unless expressly authorized by Forza nor does it cover the travel costs associated with providing service to remote locations.
- 23) Replacement filters for ventilation hood recirculating kits are not covered by the product warranty.
- 24) Products with original serial numbers that have been removed.
- 25) Replacement light bulbs are not covered by the product warranty.
- 26) Damages to people or property caused by the product or through its usage.

In the case that the product is will be installed in a remote area, where certified trained technicians are not reasonably available, the customer will be responsible for the transportation costs for the delivery of the product to the nearest authorized service center or for the travel costs of a certified trained technician.

Remote locations/area: are defined as being outside of a 30 miles from any service provider.

Forza reserves the right to revise this warranty at any time.

Forza does not assume any responsibility for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

FORZA WARRANTY U.S.A.

B-STOCK/ DISPLAY MODEL

FREESTANDING GAS RANGES – DISHWASHERS – RANGE HOODS

The warranties provided by Forza in this statement apply exclusively to Forza appliances and accessories sold to the original owner by a Forza authorized distributor, retailer, dealer or service center and installed in the United States.

The warranties provided in this statement are not transferable and have validity from the date of original purchase.

B-Stock (refurbished product, product returns, 'scratch and dent' products, old stock (defined as more than one year's difference between production date and date of sale to end user, discounted product etc.) and display models (trade shows, dealer, project or distributor showroom display models, etc.) are not considered 'new', in-the-box product and are thus not covered by FORZA standard warranty.

For any functional or cosmetic issue not disclosed by the seller realized at initial inspection / commission of the product: please contact the seller.

Duration of warranty:

FULL NINETY DAY TOTAL PRODUCT WARRANTY

For ninety days from the original date of purchase, the FORZA product warranty covers all parts and labor to repair or replace, under normal residential use, any part of the product proving to be defective in material or workmanship as a result of the original manufacturing process. There is no service or cosmetic warranty of any kind of B-Stock model.

Responsibilities of the buyer: When writing or calling about a service problem, please include the following information:

- Your name, address and telephone number;
- Appliance model and serial number;
- Name of your dealer;
- A clear description of the problem you are having;
- Proof of purchase (sales receipt).

WHAT IS NOT COVERED:

- 1) The product used in any commercial application.
- 2) Service trips to your home, during which no fault is found.
- 3) Repair service provided by any service agency that is not Forza authorized.
- 4) Damage or repair service to correct any service provided by an unauthorized agency.
- 5) Damage or repair service to correct the use, addition or substitution of any original part with an unauthorized part.
- 6) Installation not in accordance with local electrical codes or plumbing codes.
- 7) Defects or damage due to improper storage of the product.
- 8) Damages due to failure in following the manufacturer's recommended care, cleaning and maintenance instructions; in particular, damages to the oven and/or the cooktop if they have not been cared and cleaned according to these instructions.
- 9) Defects, damages or missing parts on products sold out of the original factory packaging or from displays.
- 10) Service calls or repairs to correct the installation of the product and/or related accessories, calibrations and normal adjustments after installation and setup, including burner adjustments.
- 11) Service calls to connect, convert or otherwise repair the electrical wiring and/or gas line to properly use the product.
- 12) Service calls to provide instructions on the use of a Forza product.

- 13) Repair or failure of the product if it is abused, misused, used improperly, used for other than the intended purpose or if used commercially/industrially.
- 14) Damage or repairs caused by the use of harsh chemicals or cleaning products improperly applied.
- 15) Replacement of wear and tear parts.
- 16) Replacement of house fuses or resetting of circuit breakers.
- 17) Damages to anything situated next to the product, including, but not limited to, ceiling, floor or cabinetry.
- 18) Defects and damages arising from accidents, alterations, misuse, abuse, improper installation, or installation that does not conform to instructions given by Forza.
- 19) Damages occurred during transit, handling and/or installation of the product.
- 20) Defects and damage arising from external forces beyond the control of Forza such as fire, flood, earthquakes and other acts of God.
- 21) Forza cannot guarantee the availability of service in areas more than 30 miles from an authorized retailer. In such cases where travel charges are levied, those will be borne by the consumer.
- 22) This warranty only covers service performed at the location of product installation and will not cover costs associated with repairing off-site unless expressly authorized by Forza nor does it cover the travel costs associated with providing service to remote locations.
- 23) Replacement filters for ventilation hood recirculating kits are not covered by the product warranty.
- 24) Products with original serial numbers that have been removed.
- 25) Replacement light bulbs are not covered by the product warranty.
- 26) Damages to people or property caused by the product or through its usage.

In the case that the product is will be installed in a remote area, where certified trained technicians are not reasonably available, the customer will be responsible for the transportation costs for the delivery of the product to the nearest authorized service center or for the travel costs of a certified trained technician.

Remote locations/area: are defined as being outside of a 30 miles from any service provider.

Forza reserves the right to revise this warranty at any time.

Forza does not assume any responsibility for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.