

NOTICE


INSTALLER – DO NOT REMOVE
Only to be removed by consumer

NOTICE

INSTALLER – DO NOT REMOVE
Only to be removed by consumer

This microwave oven is equipped with a Child Resistant Oven Door. The requirement of child-resistant oven door latches has been implemented by all manufacturers of microwave ovens to reduce the likelihood of young children handling hot food and beverage items and to further reduce the potential risk of injury. All persons should use caution when removing hot items from microwave ovens.

PLEASE READ INSTRUCTIONS CAREFULLY. MICROWAVE IS SHIPPED WITH THE DOOR LOCKED

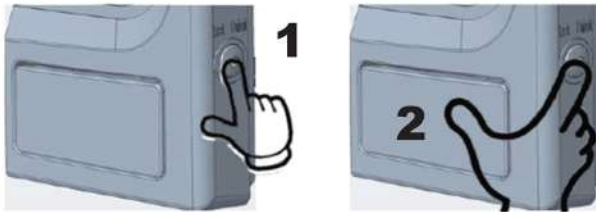

Child Resistant Oven Door Operation

Opening the Door

1. Press button (**lock button**) located on the right-hand side of the microwave
2. While holding down the lock button, simultaneously press the door latch release button (**front push button**) on microwave.

Note* You will need to complete these steps every time you want to open the door.



Deactivation of the Child-Resistant Microwave Door Latch

In some cases, it may be desirable to disable this feature. For example, households that do not have young children or households where users may have physical limitations that make it difficult to operate the child resistant door may want to disable the two-step latch. This feature can be disabled by following these steps.

1. Locate the lock button/screw on the side of the control panel.
2. Using a Phillips screwdriver, gently depress this button.
3. Rotate the screwdriver clockwise so that the "indicator dimple" is nearest to the "**Unlock**" position/label. Do not over-tighten.

Note: The position of the lock button has molded in indicator dimple. When this is closest to the molded "Lock" the child resistant door is enabled. After it has been rotated it will be closest to "Unlock", in this position the child resistant door is disabled.