


## Heritage® 30", 36" Dual Cooktop

PLANNING GUIDE

### **WARNING**


- Observe all governing codes and ordinances during planning/ installation.
- Contact the local building department for details. This cooktop must be installed as specified in its installation instructions.

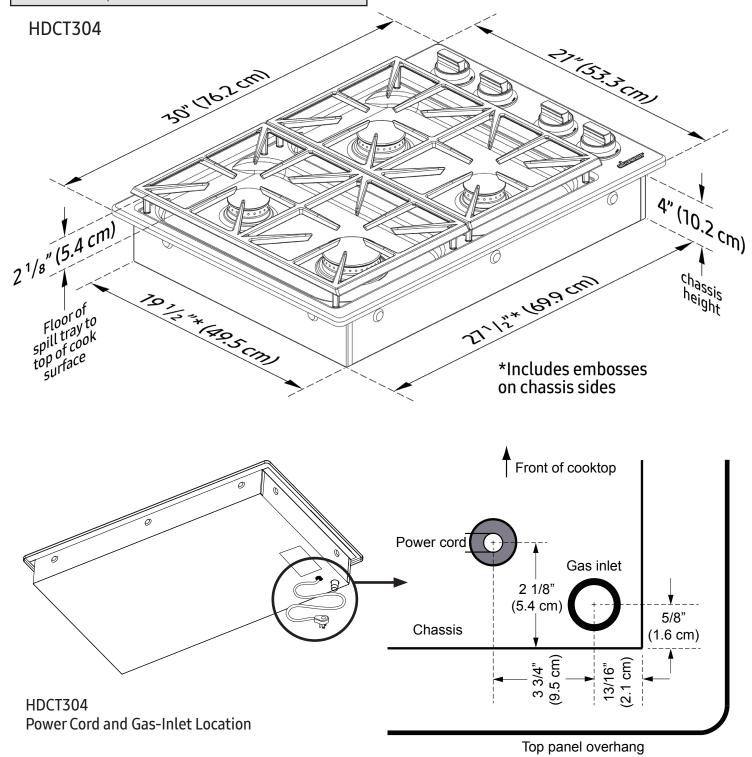



## Heritage® 30", 36" Dual Cooktop

### PLANNING GUIDE

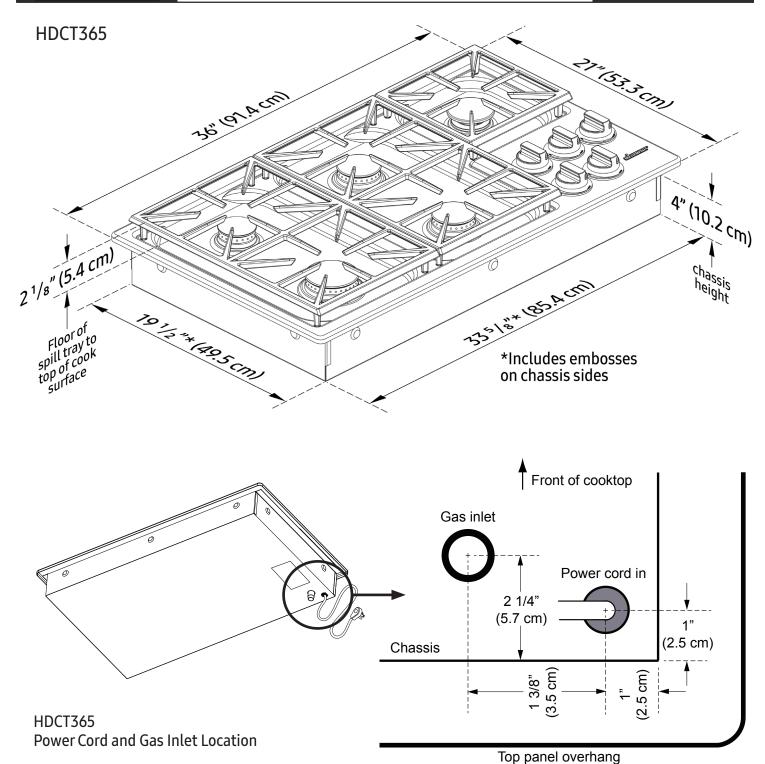



### Heritage® 30", 36" Dual Cooktop


### PLANNING GUIDE

#### **Electrical Requirements**

### **WARNING**

To prevent electric shock, the power supply must meet the given specifications. The owner shall ensure that the electrical service meets requirements and that the power outlet is properly installed by a licensed electrician.

 The cooktop has a 40-in.power cord with 3-prong grounding plug on the chassis' bottom right-rear corner.

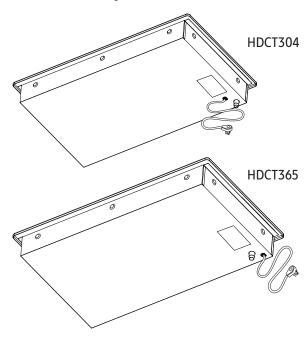

- The cooktop must be connected to a dedicated, grounded 3-prong electrical outlet installed by a licensed electrician.
- The electrical installation, including supply-wire size and grounding, must be done according to National Electric Code ANSI/NFPA 70\* and local codes and ordinances. A copy of this standard is available from:

National Fire Protection Association

- 1 Batterymarch Park
- Quincy, MA 02269-9101
- The correct voltage, frequency, and amperage must be supplied to the electrical outlet according to the data label (see previous graphic).
- See the Gas/Electrical Requirements table (this page).
- Choose an easily accessible electrical outlet so the cooktop can be unplugged for service/maintenance.

#### **Gas-Supply Requirements**

- Ensure the cooktop is correct for the gas (natural or liquid propane) provided. If using the cooktop above 4000 ft. (1219 m) elevation, ensure it is equipped for high-elevation operation.
- Units equipped for liquid propane have "LP" in the model number on the product data label (previous graphic).
- Units equipped for high-elevation use have an "H" at the end of the model number on the product data label.
- Install the cooktop according to local building codes; if none exist, install the appliance according to the National Fuel Gas Code ANSI Z223.1/NFPA 54.
- An external manual shut-off valve must be installed between the gas inlet and cooktop so gas to the appliance can be turned on/off.
- The cooktop comes with its own regulator, which must be installed in the gas line from the cooktop gas inlet to the gas shut-off valve. Use only the regulator provided.
- The cooktop has a <sup>3</sup>⁄<sub>4</sub>-in. regulator approved for connection to a <sup>1</sup>⁄<sub>2</sub>-in. house gas supply.
- The cooktop gas connection is on the chassis bottom in the right-rear corner (previous graphic).

#### **Gas and Electrical Requirements\***

Data Type*	HDCT304/NG, HDCT365/NG	HDCT304/LP, HDCT365/LP	
Gas type	Natural Gas	LP Gas	
Manifold pressure	5" water column	10" water column	
Min. gas-supply pressure**	6" water column	11" water column	
Max. gas-supply pressure	½ psi		
Total connected load	0.25 Amp. (0.03 kW)		
Circuit requirement	120 Vac, 60 Hz, 15 Amp		

\*This data is for reference only. If it does not agree with the product data label, use the data on the product data label; \*\*the gas-supply pressure for testing the regulator setting shall be at least 1" water column (249 Pa) above the specified manifold pressure.




### Heritage® 30", 36" Dual Cooktop

### PLANNING GUIDE

#### **Cabinet and Countertop Layout**

### **MARNING**

- To reduce risk of personal injury from reaching over a hot cooktop, avoid cabinet storage over the cooktop.
- Failure to meet or exceed the maximum and minimum dimensions/ clearances as instructed may cause a fire hazard.
- Follow the countertop manufacturer's instructions regarding all aspects of countertop installation.
- Carefully check the cooktop installation site. Situate the cooktop away from drafts and wet areas.
- Use the cooktop with a suitable vent hood or approved Dacor downdraft.

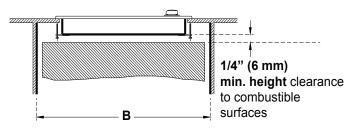


**Underneath Cabinet Dimensions** 

Model	(B) Minimum for clearance of hold-down brackets		
HDCT304	29 in (73.7 cm)		
HDCT365	35 1/4 in (89.5 cm)		

#### Installation must allow:

- At least ¼" (6 mm) clearance between the bottom of the cooktop chassis and all combustible surfaces, including the edges and corners of drawers under the cooktop.
- Clearance for hold-down brackets
- The gas supply piping, gas shut-off valve, and electrical outlet must not interfere with the installed cooktop.
- If installing an appliance below the cooktop, allow for routing of utilities behind it.
- Access to the gas shut-off valve and regulator without moving the cooktop.
- The 40" (101.6 cm) power cord to reach an electrical outlet, and outlet to be accessable without moving the cooktop.
- Access to the cooktop bottom for service/maintenance (Do not install fixed shelving below the cooktop).

Model	(A) Minimum	(A) Maximum	
HPCT304G	30" (76.2 cm)	36" (91.4 cm)	
HPCT365G 36" (91.4 cm)		42" (106.7 cm)	

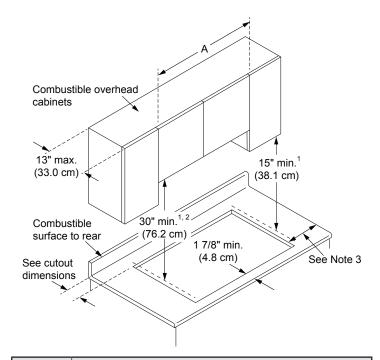

Callout	Description		
1	Measured from top of cooktop grate		
2	If installing with an overhead vent hood, also check hood specifications for minimum required clearances.		
3	Not applicable for cabinets more than a horizontal distance of 6" (15.2 cm) from edge of cooktop.		

### **Downdraft Compatibility**


If installing the cooktop with a downdraft, use only the approved Dacor model numbers MRV3015 or MRV3615. (See Pq. 5.)

Model	Approved Downdraft Models
HDCT304	MRV3015S
HDCT365	MRV3615S




### Heritage® 30", 36" Dual Cooktop

### PLANNING GUIDE

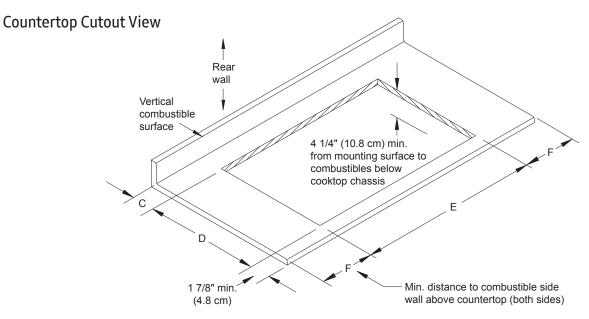

CUTOUT TYPE AND DIMENSIONS						
Installation Type	(C) Minimum	(D)	(E)	(F)		
HDCT304 (no downdraft)	2 %" (7.3 cm)	19 <sup>3</sup> ⁄4" (50.2 cm)	27.5/ // /70.1 \	7 ½" (19.1 cm)		
HDCT304 (with MRV3015S)	³/8" (1.0 cm)	22 ½" (57.2 cm)	27 5/8" (70.1 cm)			
HDCT365 (no downdraft)	2 %" (7.3 cm)	19 <sup>3</sup> ⁄4" (50.2 cm)	77.7/1/05.7	7" (17.8 cm)		
HDCT365 (with MRV3615S)	³/8" (1.0 cm)	22 ½" (57.2 cm)	33 <sup>3</sup> ⁄4" (85.7 cm)			

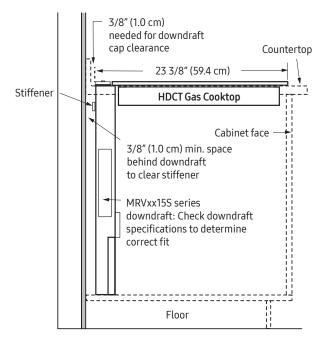

Cooktop with Downdraft: MRV Series