

FISHER & PAYKEL

DATA SHEET

Insert Range Hood, 30"

Model nos:

HP30IDCHX4

(refer page 2 for metrical measurements)

Product Dimensions

| | in |
|--|--------------------------|
| Ⓐ Overall height of range hood without ducting adapter | 12 7/16" |
| Ⓑ Overall height of range hood with ducting adapter | 15 7/16" |
| Ⓒ Overall width of range hood | 28 3/4" |
| Ⓓ Overall depth of range hood (excl. cabinetry front panel) | 11" |
| Ⓔ Diameter of ducting adaptor | 6" |
| Ⓕ Width of range hood chassis | 27 5/16" |
| Ⓖ Depth of range hood chassis | 10 3/16" |
| Ⓗ Thickness of flange | 1/16" |
| Ⓘ Distance from ducting outlet center to rear of chassis | 3 1/4" |
| Ⓚ Height adjustability of clip that secures cooker hood (cabinet base panel thickness) | min 9/16" max 1 9/16" |
| Ⓛ Distance from rear to center of light | 9 15/16" |
| Ⓜ Distance from back of chassis to hard wiring box | 8 5/16" |
| Ⓝ Distance from center of product to hard wiring box | 2 7/8" |

Cavity Dimensions Standard Installation

| | in |
|-----------------|----------|
| Width of cutout | 27 9/16" |
| Depth of cutout | 10 1/4" |

Minimum distance above cooktops

| | in |
|---|-----|
| Minimum height from top of cooktop to base of product | 24" |

Minimum height may be greater if required by your cooktop. Refer to cooktop installation guide for details.


Note: We recommend the cabinet has a door or service panel that can be easily opened to access the power connection.

INDICATES CUTOUT -----
 INDICATES PRODUCT DATUM -----
 INDICATES CABINETS CLEARANCES -----


DATE: 23.08.2023

90003054A


IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation guide for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

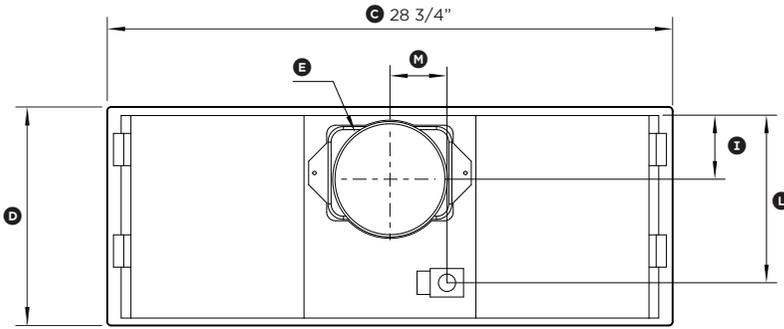

PLAN VIEW

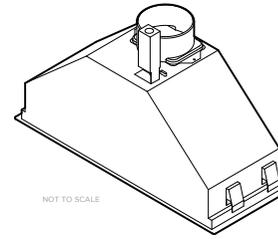


NOT TO SCALE

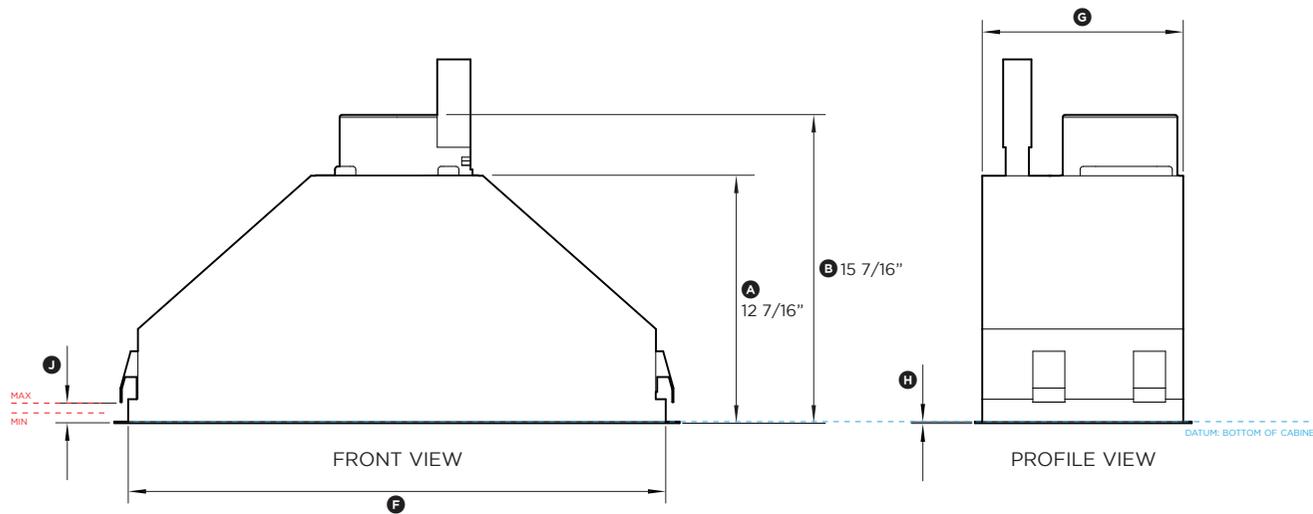

FRONT VIEW

PROFILE VIEW

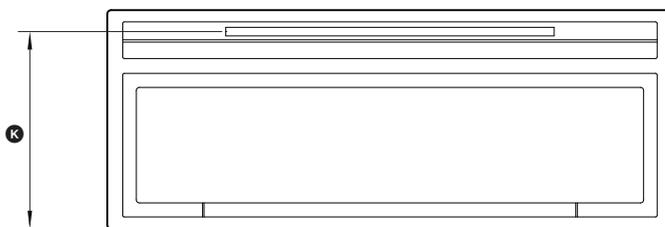

BOTTOM VIEW



FISHER & PAYKEL

DATA SHEET

Insert Range Hood, 30"

Model nos:

HP30IDCHX4

(refer page 1 for imperial measurements)

Product Dimensions

| | mm |
|--|------------------|
| Ⓐ Overall height of range hood without ducting adapter | 316 |
| Ⓑ Overall height of range hood with ducting adapter | 392 |
| Ⓒ Overall width of range hood | 730 |
| Ⓓ Overall depth of range hood (excl. cabinetry front panel) | 280 |
| Ⓔ Diameter of ducting adaptor | 150 |
| Ⓕ Width of range hood chassis | 694 |
| Ⓖ Depth of range hood chassis | 258 |
| Ⓗ Thickness of flange | 2 |
| Ⓘ Distance from ducting outlet center to rear of chassis | 82 |
| Ⓚ Height adjustability of clip that secures cooker hood (cabinet base panel thickness) | min 15 max 40 |
| Ⓛ Distance from rear to center of light | 253 |
| Ⓜ Distance from back of chassis to hard wiring box | 211 |
| Ⓝ Distance from center of product to hard wiring box | 73 |

Cavity Dimensions Standard Installation

| | mm |
|-----------------|-----|
| Width of cutout | 700 |
| Depth of cutout | 260 |

Minimum distance above cooktops

| | mm |
|---|-----|
| Minimum height from top of cooktop to base of product | 610 |

Minimum height may be greater if required by your cooktop. Refer to cooktop installation guide for details.


Note: We recommend the cabinet has a door or service panel that can be easily opened to access the power connection.

INDICATES CUTOUT -----
 INDICATES PRODUCT DATUM -----
 INDICATES CABINETS CLEARANCES -----


DATE: 23.08.2023

90003054A


IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (1/16"). Please read the installation guide for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

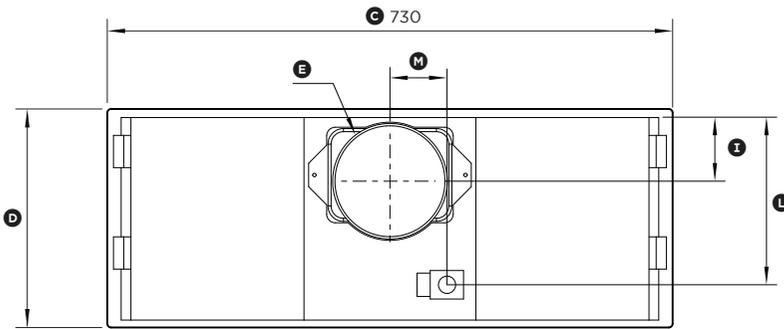

PLAN VIEW

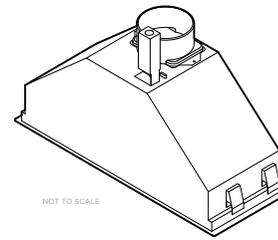


NOT TO SCALE

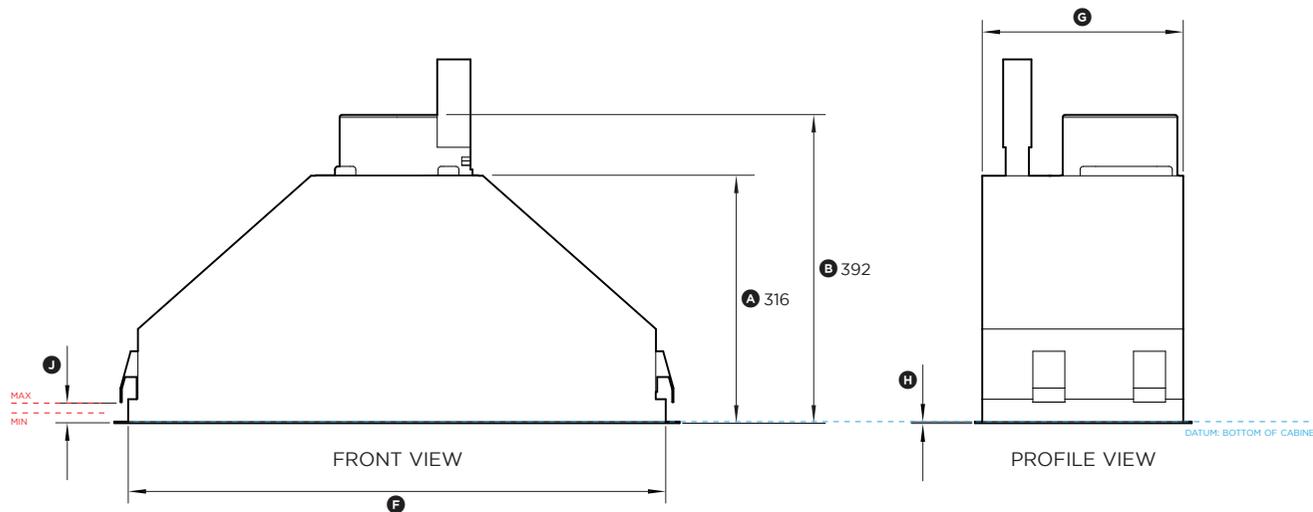

FRONT VIEW

PROFILE VIEW

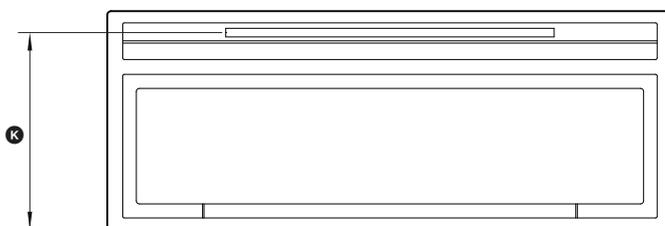

BOTTOM VIEW



Millimetres