

GOOGLE COMMAND GUIDE

Celerity™ High-Speed Oven

SWA3099MS

Pair with your Google Home App and enjoy hands-free cooking with Google.

Important: To use Google voice commands, your assistant must be set to Google Assistant rather than Gemini. You can update this setting in your Google Account settings.

When more than two ovens are connected to Google Home, please say your specific device name in your command to ensure the correct oven operates the request. Otherwise both ovens will follow the command.

Please check you oven is safe to start cooking before using commands. The oven door must be open and closed to ensure oven is not unintendedly operated remotely.

Menu Item	Command	Quantity Range
Microwave Time Cook	OK Google. Start microwaving in the oven. OK Google. Start microwaving in (Device Name). OK Google. Start to microwave in the oven. OK Google. Start to microwave in (Device Name).	1 minute at 100% power (1 preset option)
Convection Bake	OK Google. Start convection baking in the oven. OK Google. Start baking in the oven. OK Google. Start to convection bake in the oven. OK Google. Start to bake in the oven. OK Google. Start convection baking in (Device Name). OK Google. Start baking in (Device Name). OK Google. Start to convection bake in (Device Name). OK Google. Start to bake in (Device Name).	20 minutes at 350°F (1 preset option)
Convection Roast	OK Google. Start roasting in the oven. OK Google. Start to roast in the oven. OK Google. Start roasting in (Device Name). OK Google. Start to roast in (Device Name).	20 minutes at 425°F (1 preset option)

GOOGLE COMMAND GUIDE

Celerity™ High-Speed Oven

SWA3099MS

Menu Item	Command	Quantity Range
Grill	<p>OK Google. Start grilling in the oven.</p> <p>OK Google. Start to grill in the oven.</p> <p>OK Google. Start grilling in (Device Name).</p> <p>OK Google. Start to grill in (Device Name).</p>	20 minutes at 100% Power (1 preset option)
Air Fry	<p>OK Google. Start frying in the oven.</p> <p>OK Google. Start to fry in the oven.</p> <p>OK Google. Start frying in (Device Name).</p> <p>OK Google. Start to fry in (Device Name).</p>	20 minutes at 425°F (1 preset option)
Warm	<p>OK Google. Start warming in the oven.</p> <p>OK Google. Start to warm in the oven.</p> <p>OK Google. Start warming in (Device Name).</p> <p>OK Google. Start to warm in (Device Name).</p>	30 minutes at 150°F (1 preset option)
Defrost	<p>OK Google. Start defrosting in the oven.</p> <p>OK Google. Start to defrost in the oven.</p> <p>OK Google. Start defrosting in (Device Name).</p> <p>OK Google. Start to defrost in (Device Name).</p>	Microwave 10 minutes at 30% power (1 preset option)
Preheat	<p>OK Google. Preheat the oven to X degrees.</p> <p>OK Google. Preheat the oven.*</p> <p>OK Google. Preheat (Device Name) to X degrees.</p> <p>OK Google. Preheat (Device Name).*</p>	<p>X=90°F, 150°F or 5 degree increments between 275°F-450°F</p> <p>*If the user doesn't set temperature, defaults to 350°F</p>
Start	<p>OK Google. Start the oven.</p> <p>OK Google. Start (Device Name).</p>	20 minutes at 350°F (Convection Bake) (1 preset option)

GOOGLE COMMAND GUIDE

Celerity™ High-Speed Oven

SWA3099MS

Menu Item	Command	Quantity Range
<p>+ 30 Seconds</p> <p>Only during microwave manual cook modes.</p> <p>You can add 30 seconds during cooking or within 3 minutes after.</p>	<p>OK Google. Add 30 seconds to the oven.</p> <p>OK Google. Add 30 seconds to (Device Name).</p>	<p>Microwave 100% power (1 preset option)</p>
<p>+ 1 Minute</p> <p>Only during manual cook modes.</p> <p>You can add 1 minute during cooking or within 3 minutes after.</p>	<p>OK Google. Add 1 minute to the oven.</p> <p>OK Google. Add 1 minute to (Device Name).</p>	<p>The remaining time is extended while in the current cooking mode. (Except microwave)</p>
<p>Pause Time</p>	<p>OK Google. Pause the oven.</p> <p>OK Google. Pause (Device Name).</p>	-
<p>Resume Time</p>	<p>OK Google. Resume the oven.</p> <p>OK Google. Resume (Device Name).</p>	-
<p>Stop</p>	<p>OK Google. Stop the oven.</p> <p>OK Google. Stop (Device Name).</p>	-