




36" INDUCTION COOKTOP

MODELS:

JIC4736HS0 (Stainless)

JIC4736HB0 (Floating Glass Black)

COOKTOP PARTS

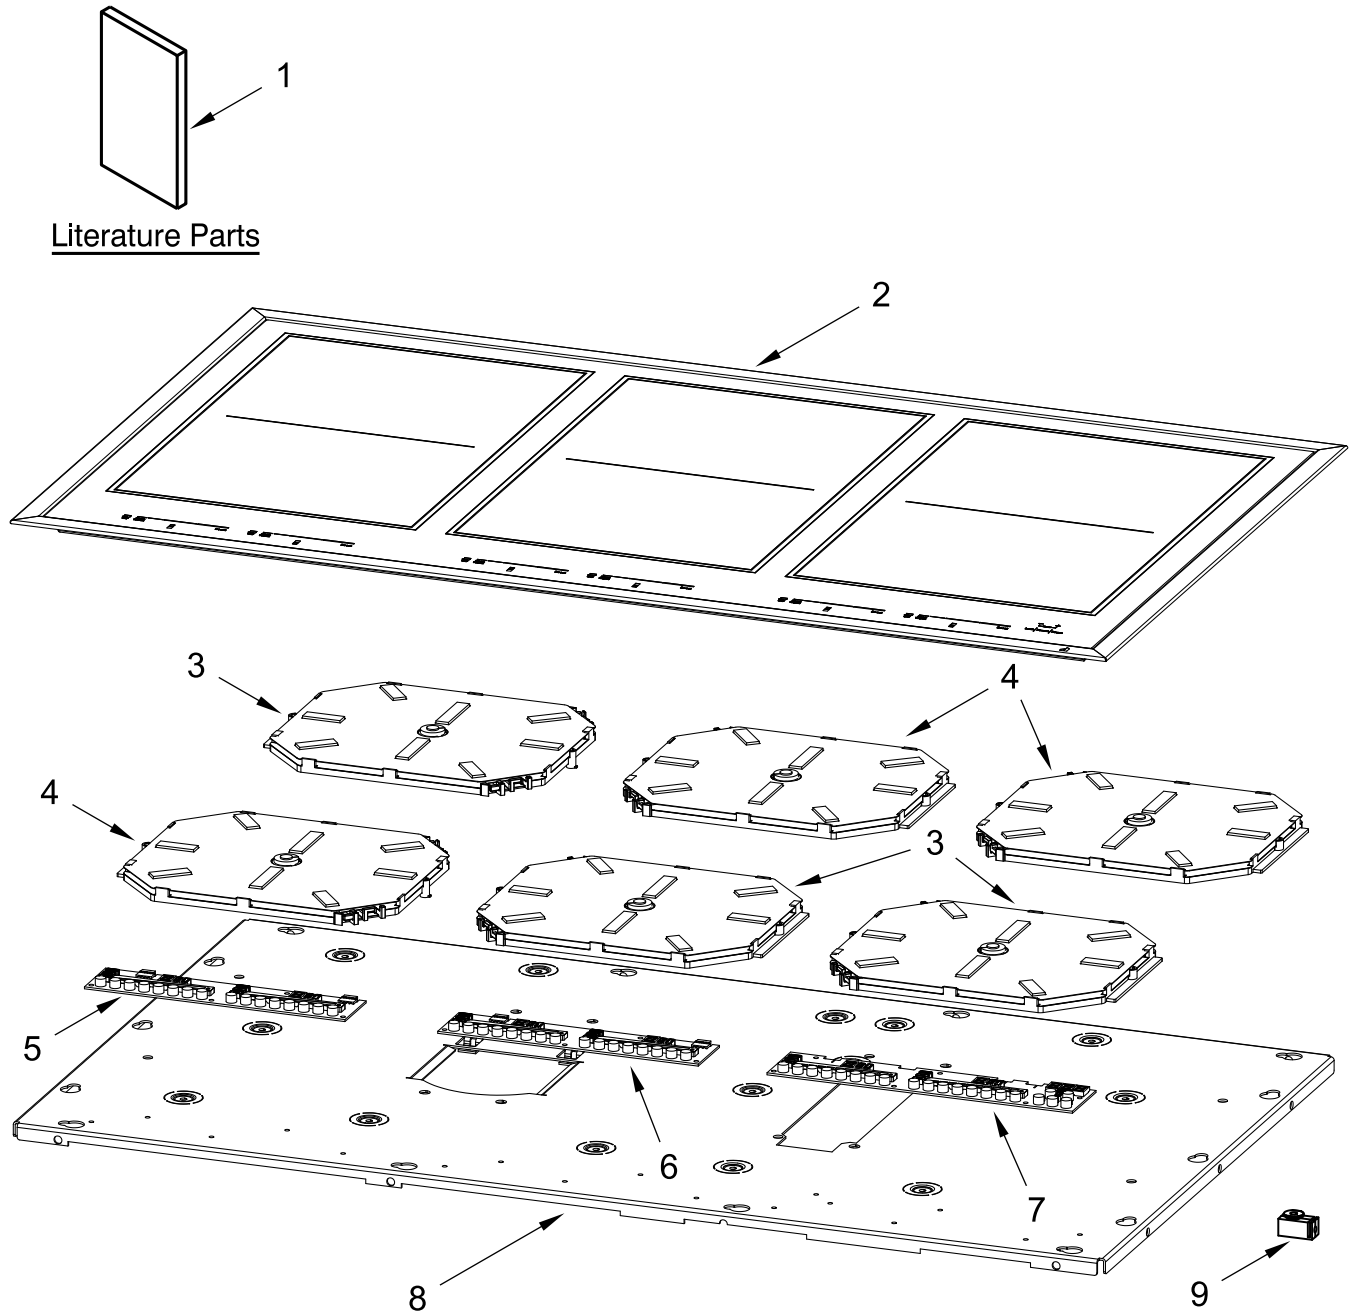


Literature Parts

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11195135	Element, Induction	6	W11332762	Control, Electronic (Center)
	W11251690	Installation Instructions			(Left Rear, Center Front, Right Front)	7	W11332714	Control, Electronic (Right)
	W11251689	Use and Care Guide	4	W11195131	Element, Induction	8	W11332764	Plate, Generator
2		Cooktop, Glass			(Left Front, Center Rear, Right rear)	9	W11195464	Isolator
	W11332756	Stainless (Includes Frame)	5	W11332763	Control, Electronic (Left)			
	W11332766	Floating Glass Black						

BURNER BOX AND ELECTRICAL PARTS

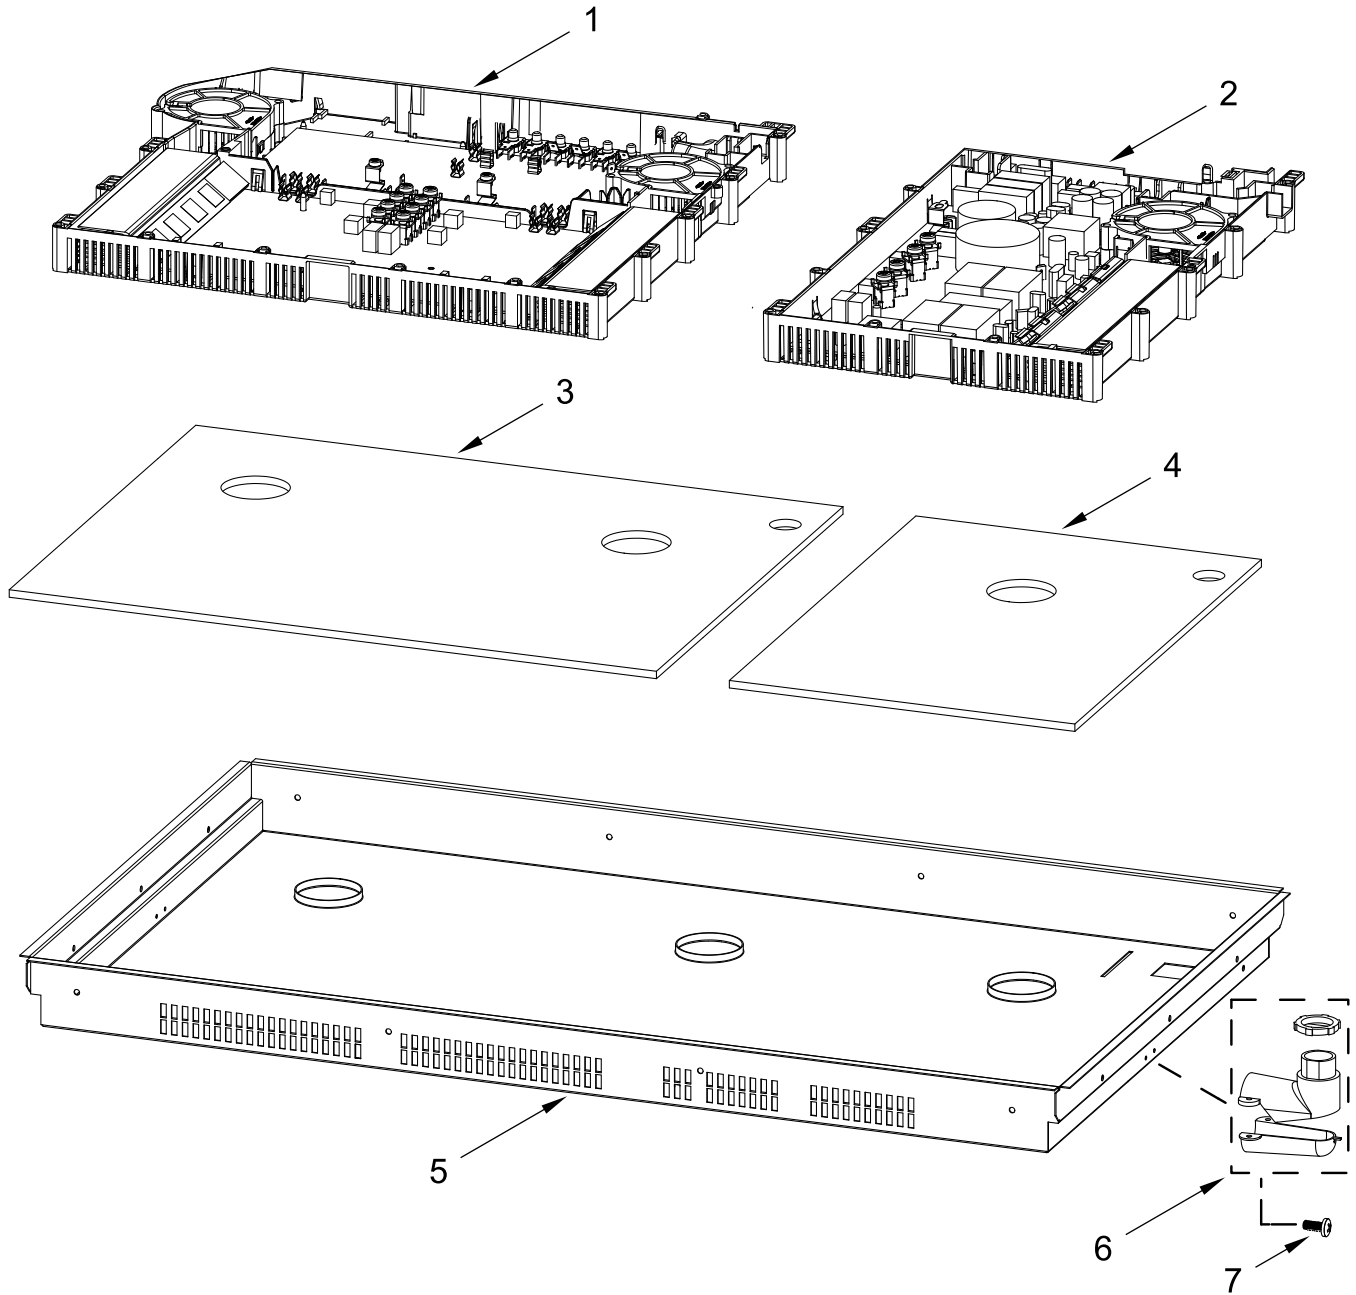

BURNER BOX AND ELECTRICAL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11332721	Board, Induction Power	7	W10625907	Screw
2	W11332765	Board, Induction Power (2 Zone)			MISCELLANEOUS PARTS
3	W11332694	Insulation, Induction		W11332771	Harness, Main
4	W11332758	Insulation, Induction (Extension)		W10355051	Cleaner, Cooktop
5	W11332759	Box, Burner (Stainless)		W10391473	Pad, Cooktop Cleaning
	W11332767	Box, Burner (Black)		WA906B	Scraper, Cooktop
6	W11093301	Connector, Conduit		W11035422	Griddle
				W11035423	Wok, Flat Bottom