




GAS RANGE
Includes Griddle

MODELS:

JGRP548HL05 (Stainless)


BURNER BOX AND GRIDDLE PARTS

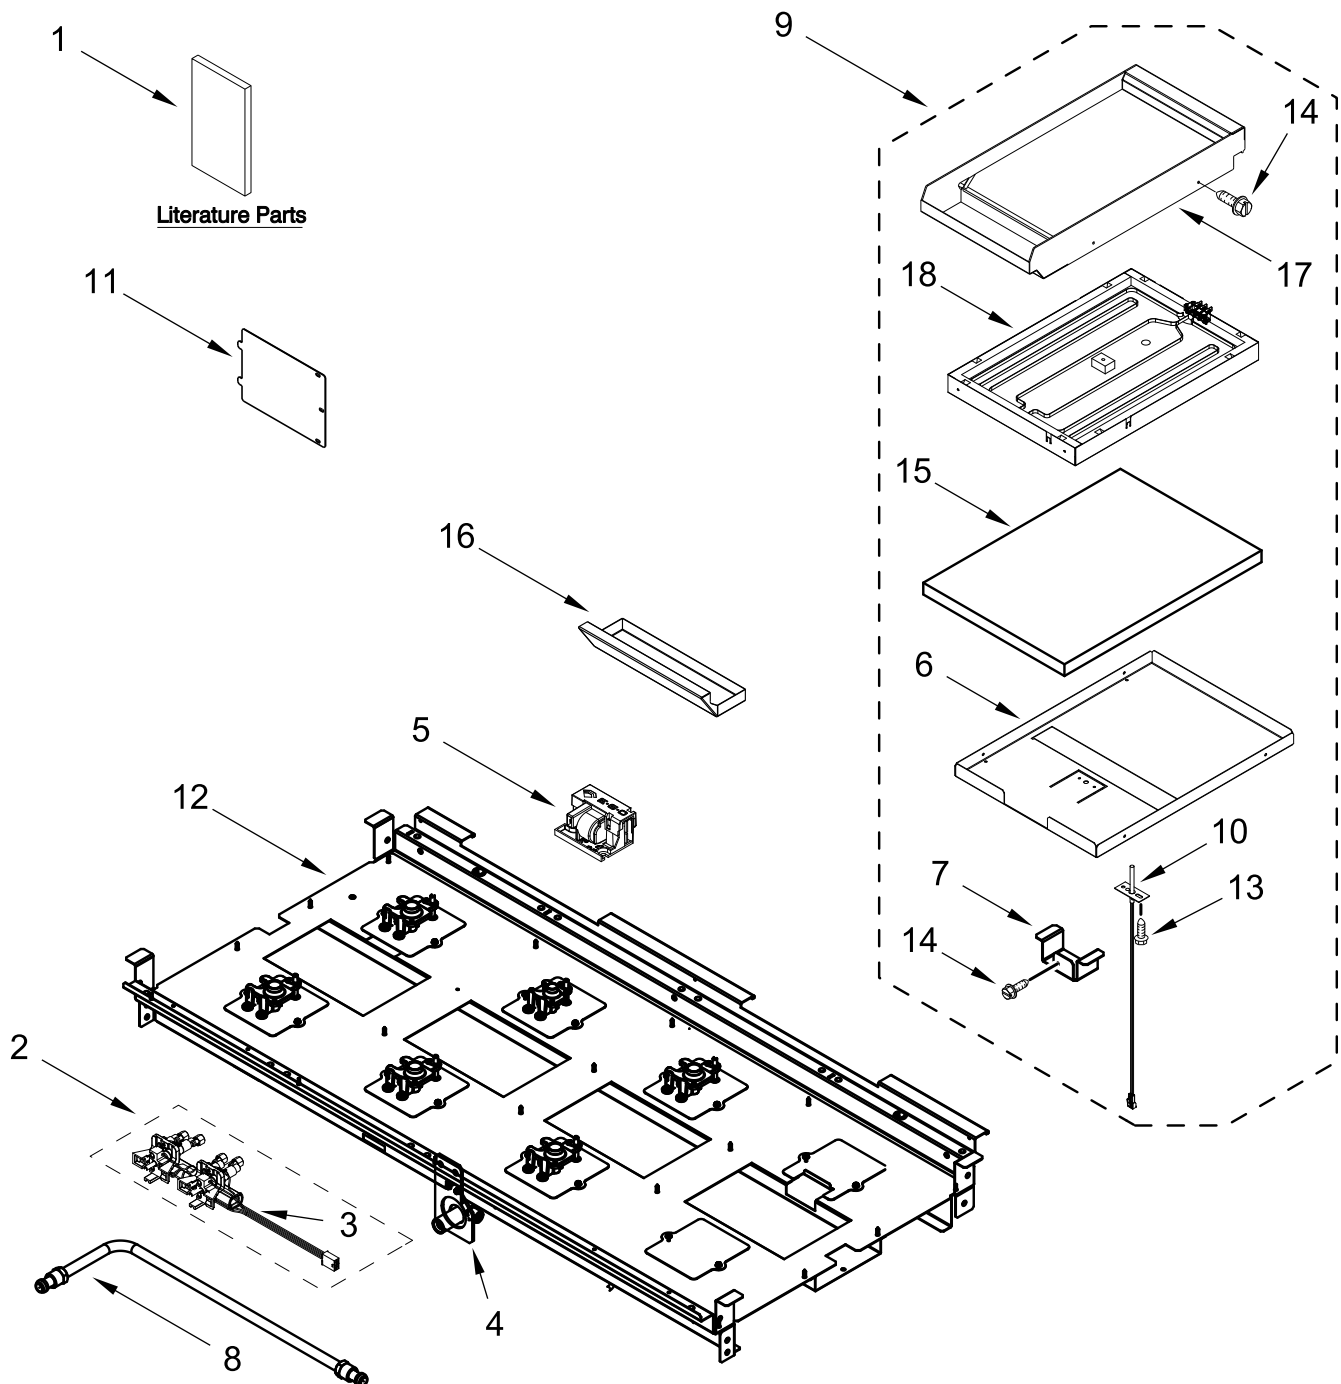

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106300	Switch, Harness	17	W11360151	Module, Griddle
	W11508896	Use and Care Guide	4	W11121194	Bracket, Manifold	18	W10891698	Element, Griddle
	W11508888	Installation Instructions	5	W11121317	Module, Spark			FOLLOWING PARTS NOT ILLUSTRATED
	W11177312	Guide, Quick Start	6	W11330430	Tray, Griddle Insulation		W11447992	Harness, Main (48")
	W11184746	Guide, Internet Connectivity	7	W11121384	Bracket, Griddle-RTD		W10903727	Harness, Griddle
	W11565477	Wiring Diagram (Oven)	8	W10892784	Tube, Manifold Supply (Left)		W11200329	Harness, Cooktop
	W11575704	Wiring Diagram (Cooktop)		W10892775	Tube, Manifold Supply (Left Center)		W10780278	Harness, Door Lock
	W11202275	Sheet, Tech		W10892789	Tube, Manifold Supply (Right Center)		W11200318	Harness, Communication
2	W11183722	Assembly, Valve Manifold (Left Front and Left Rear)	9	W11505236	Griddle Module Assembly		W11242785	Harness, WIFI
	W10893058	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	10	W10891584	Sensor, Griddle		313438	Clip, Harness
	W10893051	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	11	W10115843	Cover, Ignition		W10624584	Cord, Power
			12		Box, Burner (Not Serviced)		4450800	Screw, Grounding
			13	3196160	Screw		W11311196	Ignitor Wire, Wire-Electrode Bake
			14	W10162096	Screw		W11311197	Ignitor Wire, Wire-Electrode Broil
			15	W11121383	Insulation, Griddle		W10253333	Bracket, Anti-Tip
			16	W10276497	Tray, Griddle Drip		7101P485-60	Screw, Anti-Tip Kit
							W11422176	Kit, LP Conversion


COOKTOP, BURNER, AND GRIDDLE PARTS

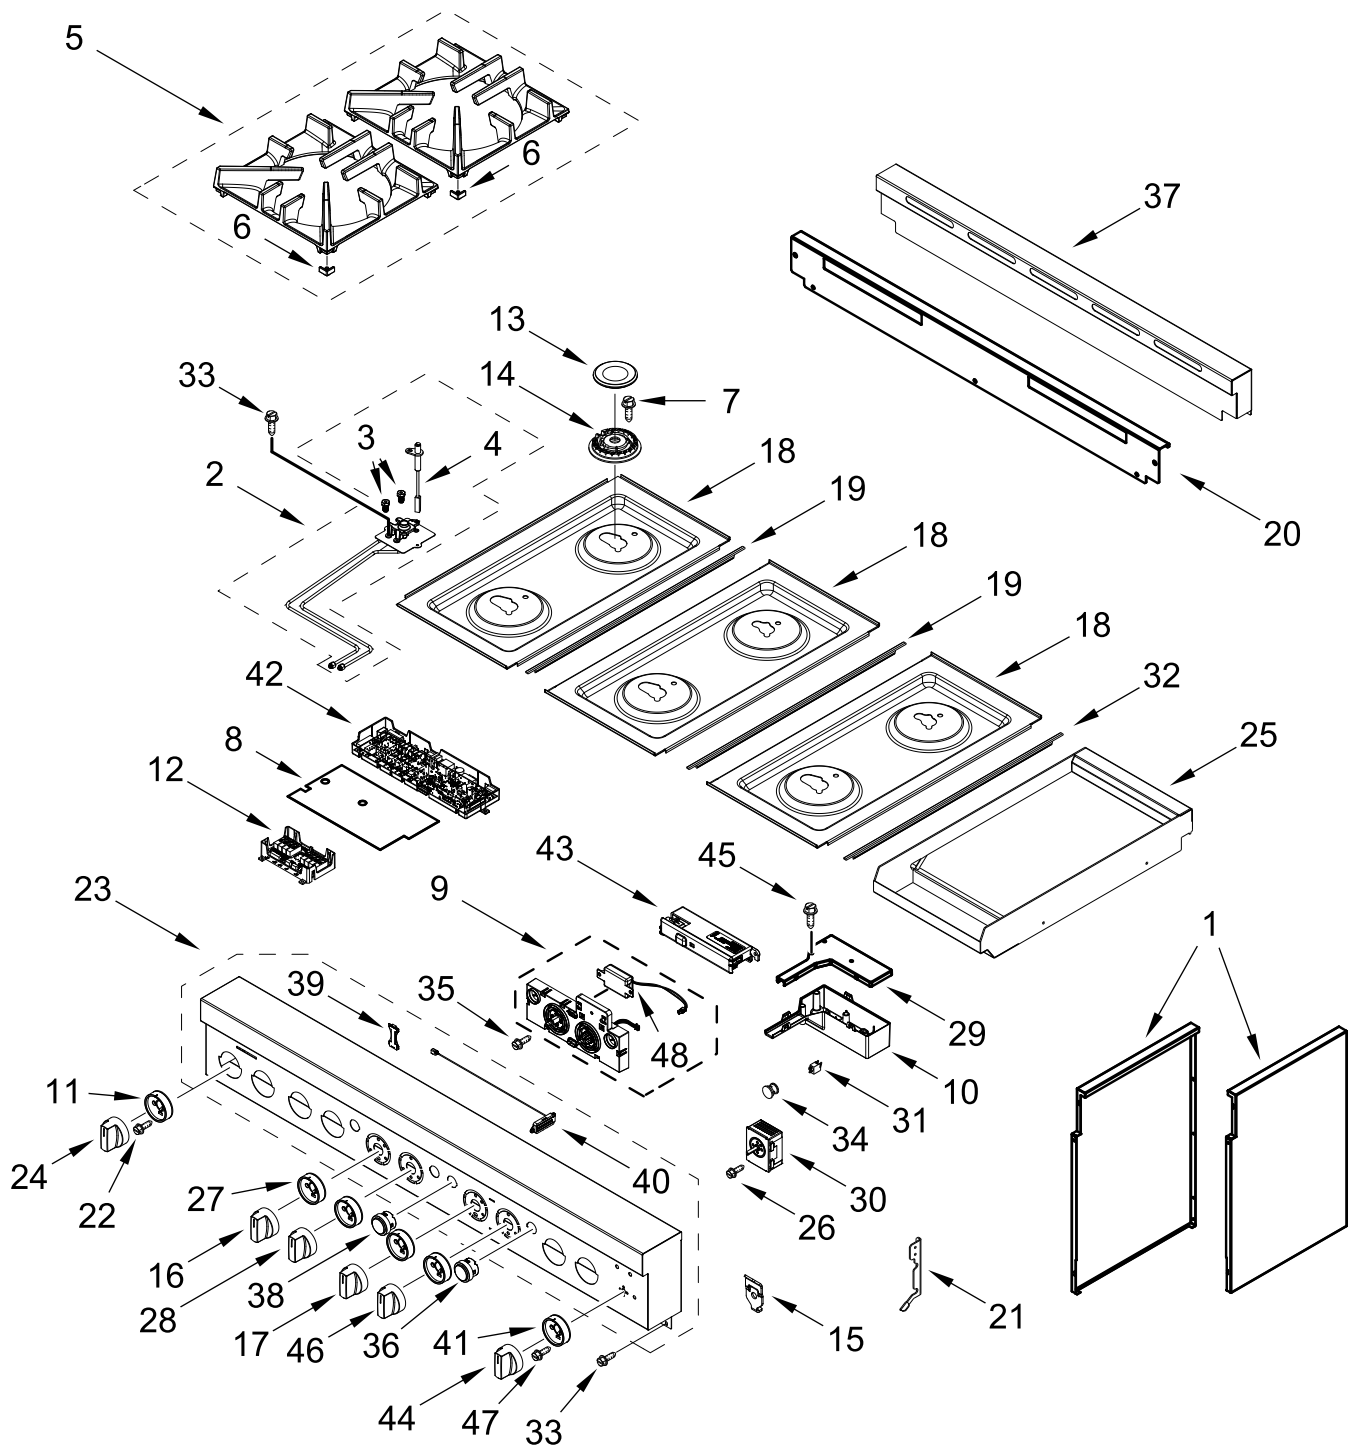

COOKTOP, BURNER, AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	5	W11291176	Assembly, Grate Black (Set of 2)	24	W11496088	Knob, Burner Stainless (For 6 Cooktop Burners)
	W11111428	Panel, Cabinet Side (Right)	6	W11042504	Bumper, Grate			
2	W10892807	Assembly, Orifice Holder (Left Front)	7	W11323260	Screw	25		Assembly, Griddle Module (Part Number Included on Burner Box Page)
	W10892495	Assembly, Orifice Holder (Left Rear)	8	W11281269	Barrier, Appliance Manager	26	3196537	Screw
	W11114338	Assembly, Orifice Holder (Left Center Front)	9	W11436326	Interface, User	27	W10914998	Bezel, Oven Stainless (For 4 Oven Knobs)
	W10892810	Assembly, Orifice Holder (Left Center Rear)	10	W11205795	Cover, WIFI Outer	28		Knob, Oven Temperature
	W10892505	Assembly, Orifice Holder (Right Center Front)	11	W11090283	Bezel Brass (For 6 Cooktop Burners)		W11496096	Stainless (For 18" Oven)
	W10892444	Assembly, Orifice Holder (Right Center Rear)	12	W10871065	Manager, Appliance (Expansion)	29	W11205794	Cover, WIFI Inner
3	W10892422	Orifice, Main (17.4K) (Left Front And Right Center Front)	13	W11121392	Cap, Burner Black (Set of 6)	30	W11033497	Control, Griddle
	W10892418	Orifice, Main (15.4K) (Left Rear, Left Center Front, Right Center Rear)	14	W10891987	Spreader, Flame (High) (All But Left Center Rear)	31	W10116114	Light, Indicator Housing
	W10892440	Orifice, Main (7.2K) (Left Center Rear)		W10892022	Spreader, Flame (Low) (Left Center Rear)	32	W10291193	Trim, L-Strip
	W10892435	Orifice, Simmer (2.6K) (All But Left Center Rear)	15	W11036559	Spring Clip, Range	33	7101P426-60	Screw
	W10892429	Orifice, Simmer (2.0K) (Left Center Rear)	16	W11496095	Knob, Oven Mode Stainless (For 18" Oven)	34	W10294500	Lens, Indicator Light
4	W11238757	Igniter (Left Front, Left Rear, Right Center Front)	17	W11496094	Knob, Oven Mode Stainless (For 30" Oven)	35	3400814	Screw
	W11238758	Igniter (Left Center Front, Right Center Rear)	18	W10803515	Panel, Cooktop Black (Left)	36	W11090650	Button Assembly, Oven Start
	W11238756	Igniter (Left Center Rear)		W10803519	Black (Left Center)	37	W11476244	Island Trim
				W10804364	Black (Right Center)	38	W11090651	Button Assembly, Oven Light
			19	W10271524	Trim, T-Strip Black	39	W10896369	Assembly, Light Pipe
			20	W10323252	Trim, Island Insert	40	W11130078	Antenna, WIFI
			21	W10130760	Bracket, Moving Console (Left)	41	W11104966	Bezel, Griddle
				W10130759	Bracket, Moving Console (Right)	42	W11543349	Manager, Powermax Appliance
			22	W11328357	Screw	43	W11110768	Assembly, WIFI Module
			23	W10878256	Panel, Control	44	W11496089	Knob, Griddle Stainless
						45	7101P624-60	Screw
						46		Knob, Oven Temperature
							W11496091	Stainless (For 30" Oven)
						47	7101P309-60	Screw
						48	W10568405	Assembly, Speaker


48" CHASSIS PARTS

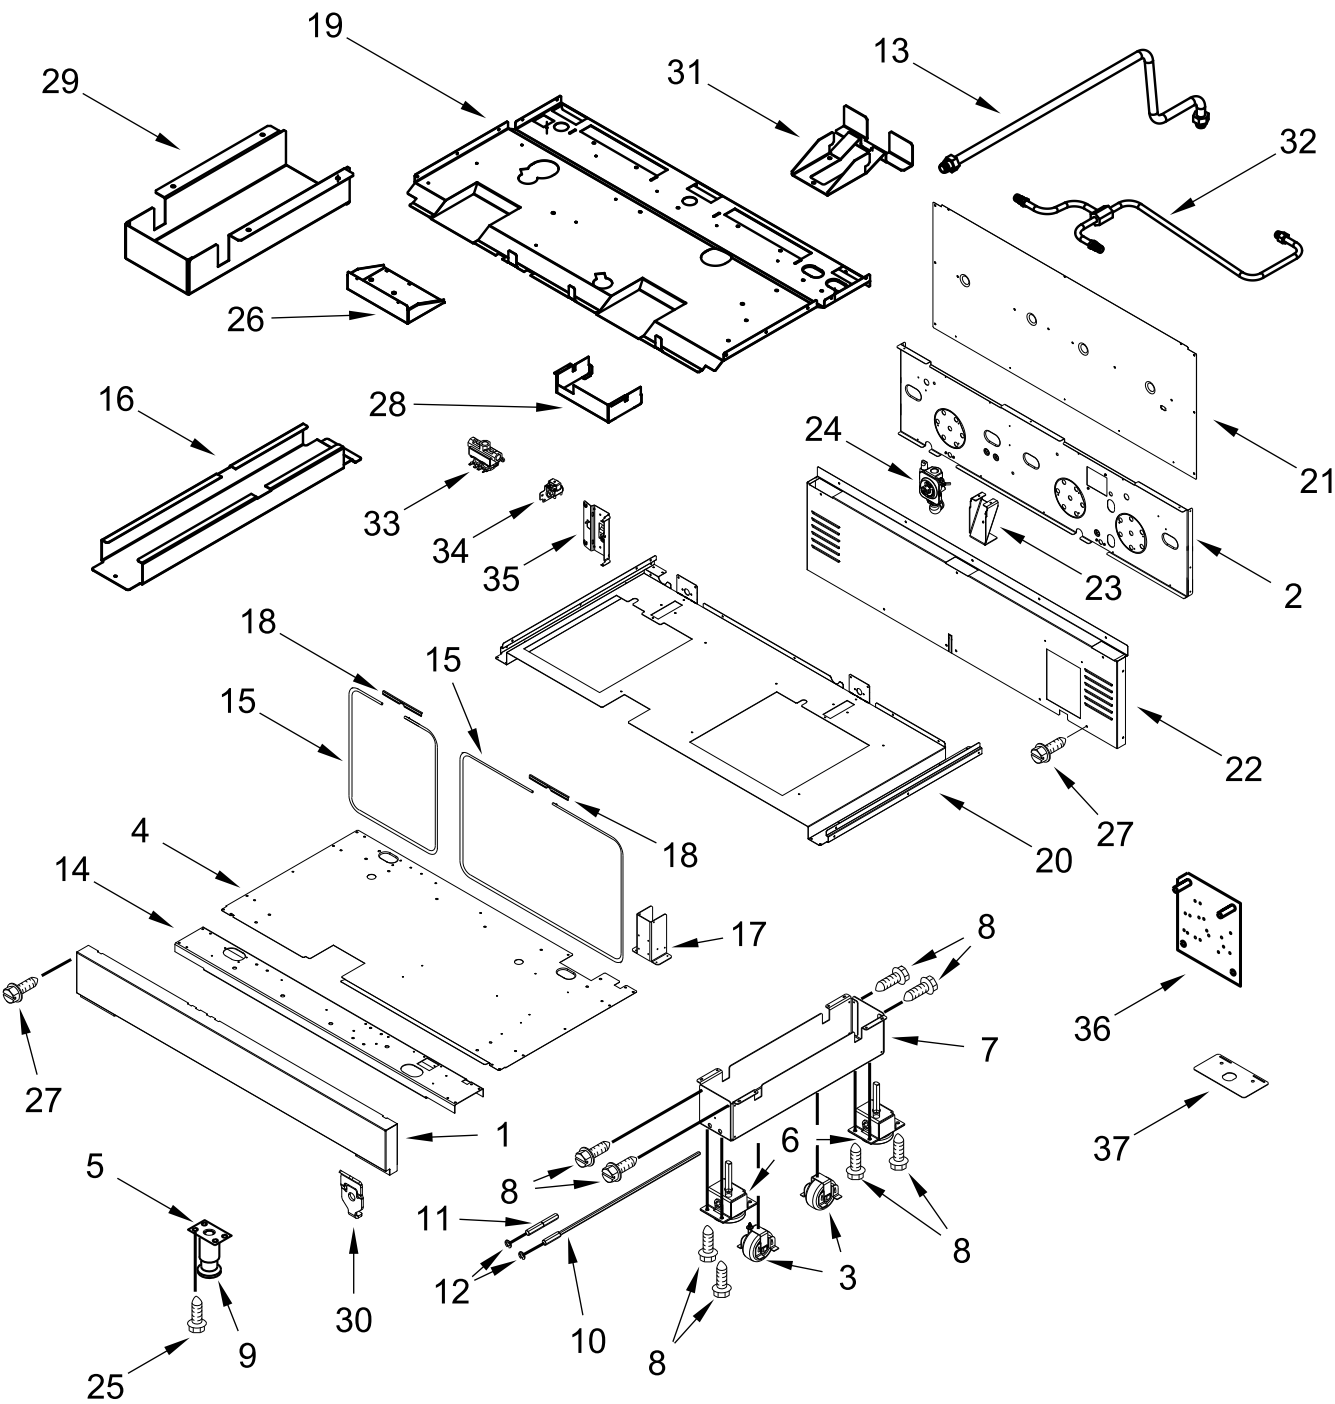

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11368831	Channel, Wire
2	W11324987	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9" Long)	31	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48")	19	W11324984	Top, Chassis	32	W11112366	Tube, Valve (Double)
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10145680	Valve, Dual
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W10311268	Valve, Single
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145362	Bracket-Board, DSI
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10511278	Module, Spark DSI
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W10115855	Holder, Strain Relief
10	W10115869	Shaft, Long	25	3400518	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	7101P426-60	Screw			
13	W11181648	Tube, Pressure Regulator	28	W11369237	Cabinet, Appliance Manager			
14	W11369238	Support, Channel						
15	W11115328	Gasket, Oven (30")						
	W11115326	Gasket, Oven (18")						


30" OVEN PARTS

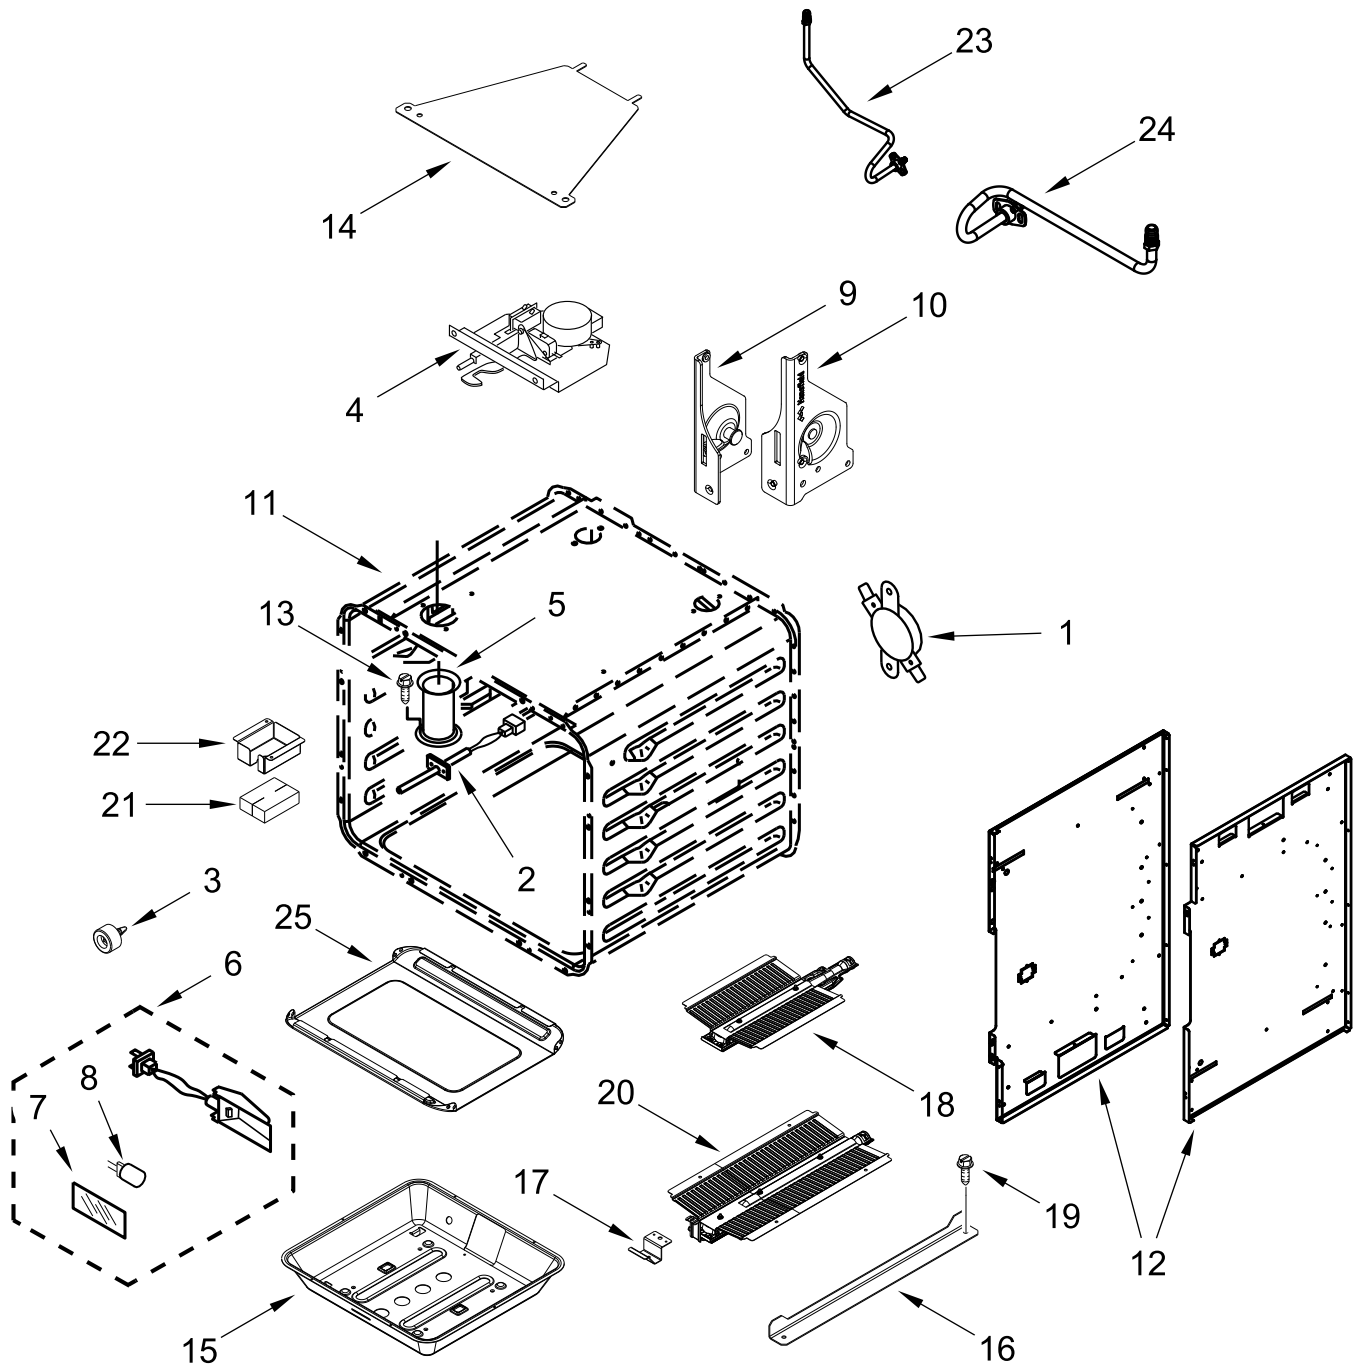

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10310985	Cover, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W11109238	Tube, Broil
3	W10351278	Bumper & Screw				24	W11106980	Tube, Bake
4	W10830016	Latch, Motorized	13	3196176	Screw	25	W10496809	Pan, Oven Bottom
5	W10145743	Tube, Vent	14	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
6	W11223932	Assembly, Oven Light	15	W10145744	Support, Bake Pan			
7	W10169756	Lens, Light	16	W10317437	Bracket, Broil Standoff	W10282810		Insulation, Wrap, 30"
8	W10169757	Bulb, Light	17	W10308040	Bracket, Bake Burner	W10299350		Insulation, Back, 30"
9	W11096294	Receiver, Hinge (Left)	18	W10878504	Burner, Bake	W10299354		Insulation, Bottom
10	W11096293	Receiver, Hinge (Right)	19	7101P434-60	Screw		3400968	Nut
11		Liner, Oven (Not Serviced)	20	W10311335	Burner, Broil			
			21	W10311009	Insulation, Broil Cover			


18" OVEN PARTS

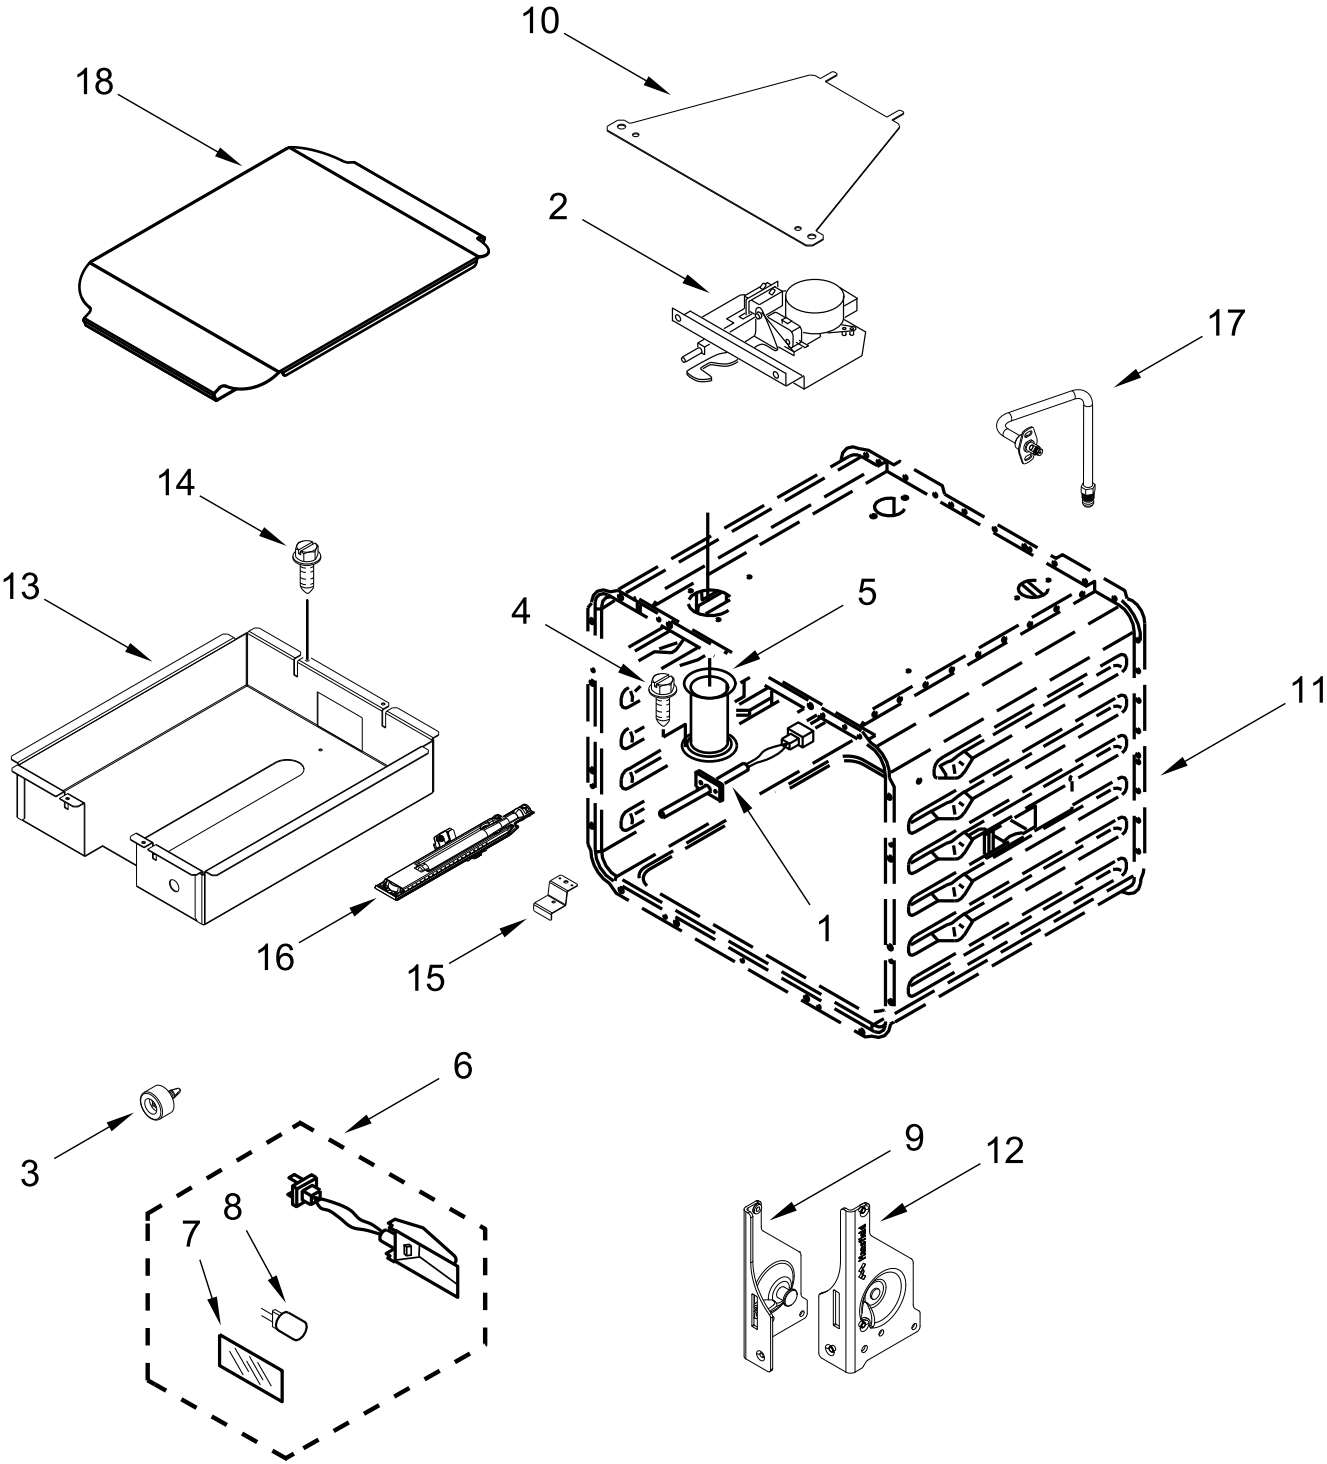

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	18	W11211936	Cover, Bake
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	13	W10145651	Support, Bake Pan			
4	3196176	Screw	14	12992902	Screw		W10282820	Insulation, Wrap, 18"
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner 18" Cavity		W10299353	Insulation, Back, 18"
6	W11223932	Assembly, Oven Light					W10299355	Insulation, Bottom
7	W10169756	Lens, Light	16	W10878505	Burner, Bake W/O Spreader		3400968	Nut
8	W10169757	Bulb, Light	17	W10145706	Tube, Bake			
9	W11096294	Receiver, Hinge (Left)						
10	W10160858	Cover, Latch						
11		Liner, Oven (Not Serviced)						


VENTING PARTS

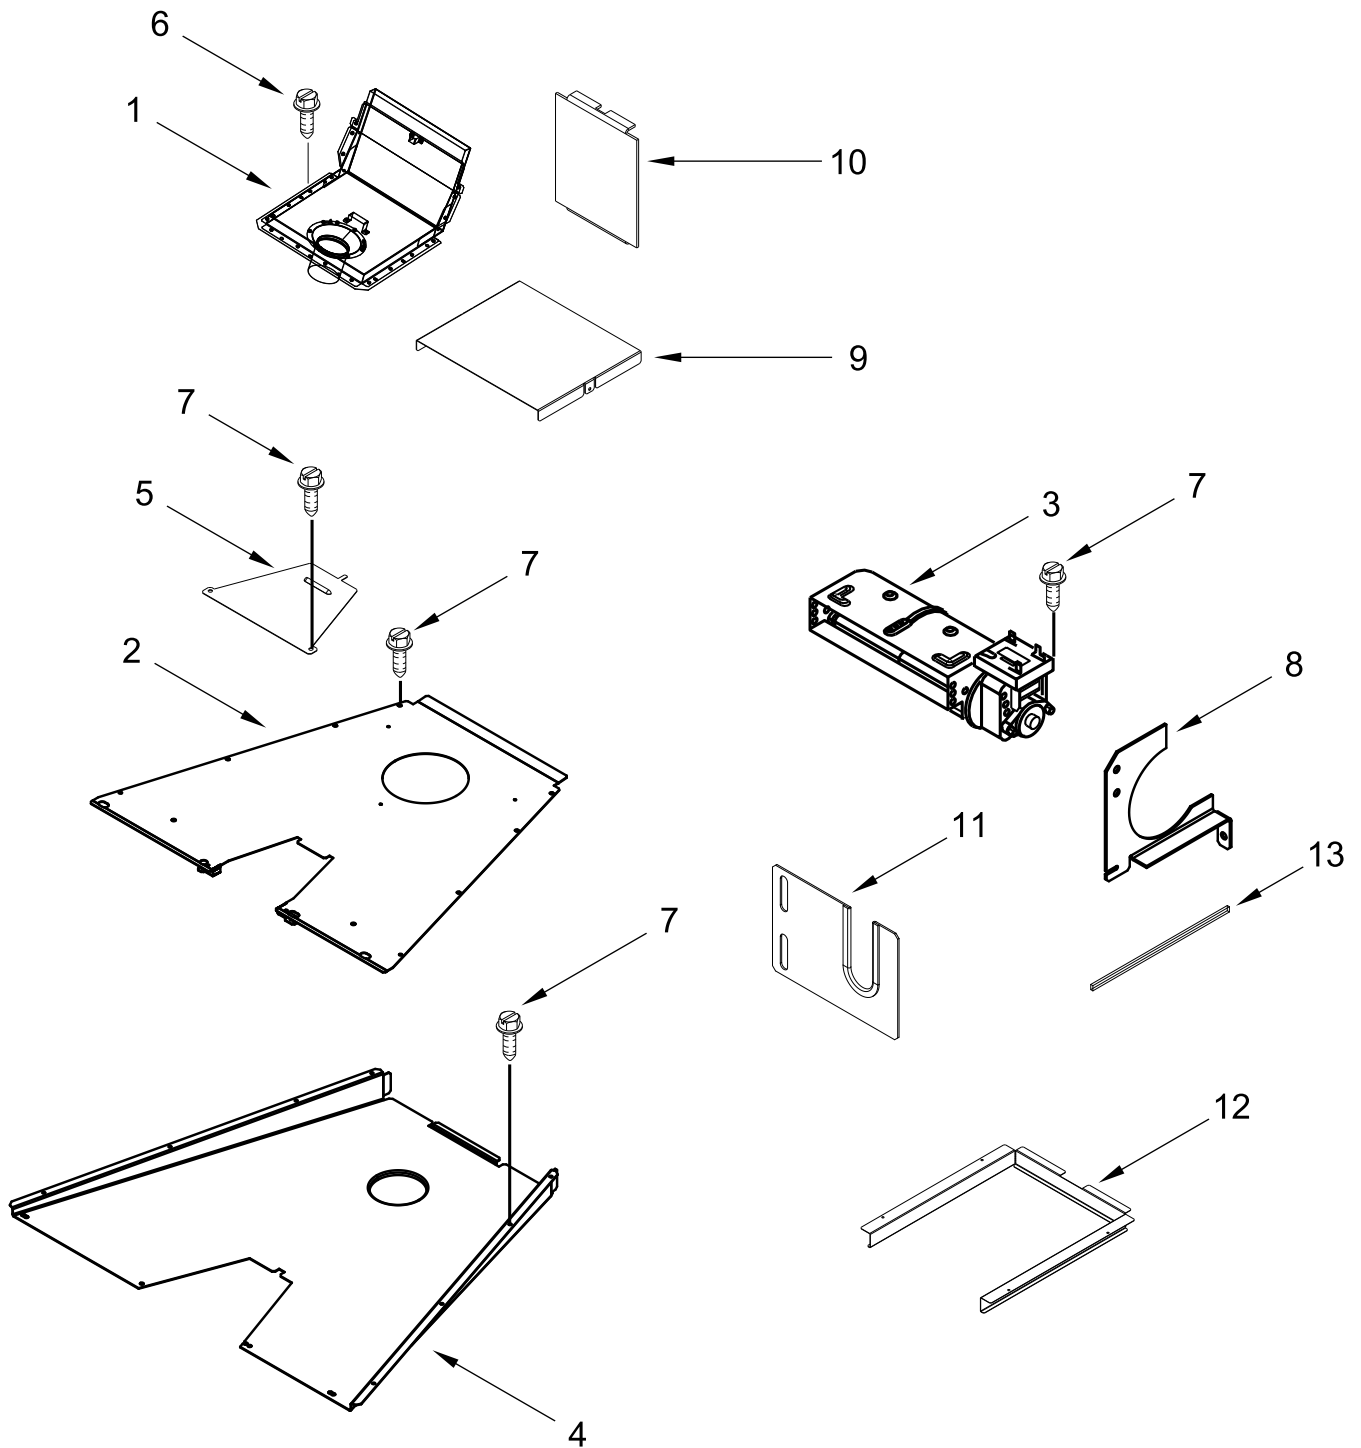

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	3	W11200129	Blower	8	W11047754	Bracket, Blower Mount
	W11476247	Vent, Chimney Box (18")	4	W11091676	Vent, Cooling Bottom (30")	9	W10246086	Retainer, Insulation
				W11113377	Vent, Cooling Bottom (18")	10	W10246087	Insulation, Chimney
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel
	W11113379	Vent, Cooling Top (18")	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30")
			7	7101P426-60	Screw		W10145364	Duct, Primary Air (18")
						13	W10919715	Gasket


30" OVEN DOOR PARTS

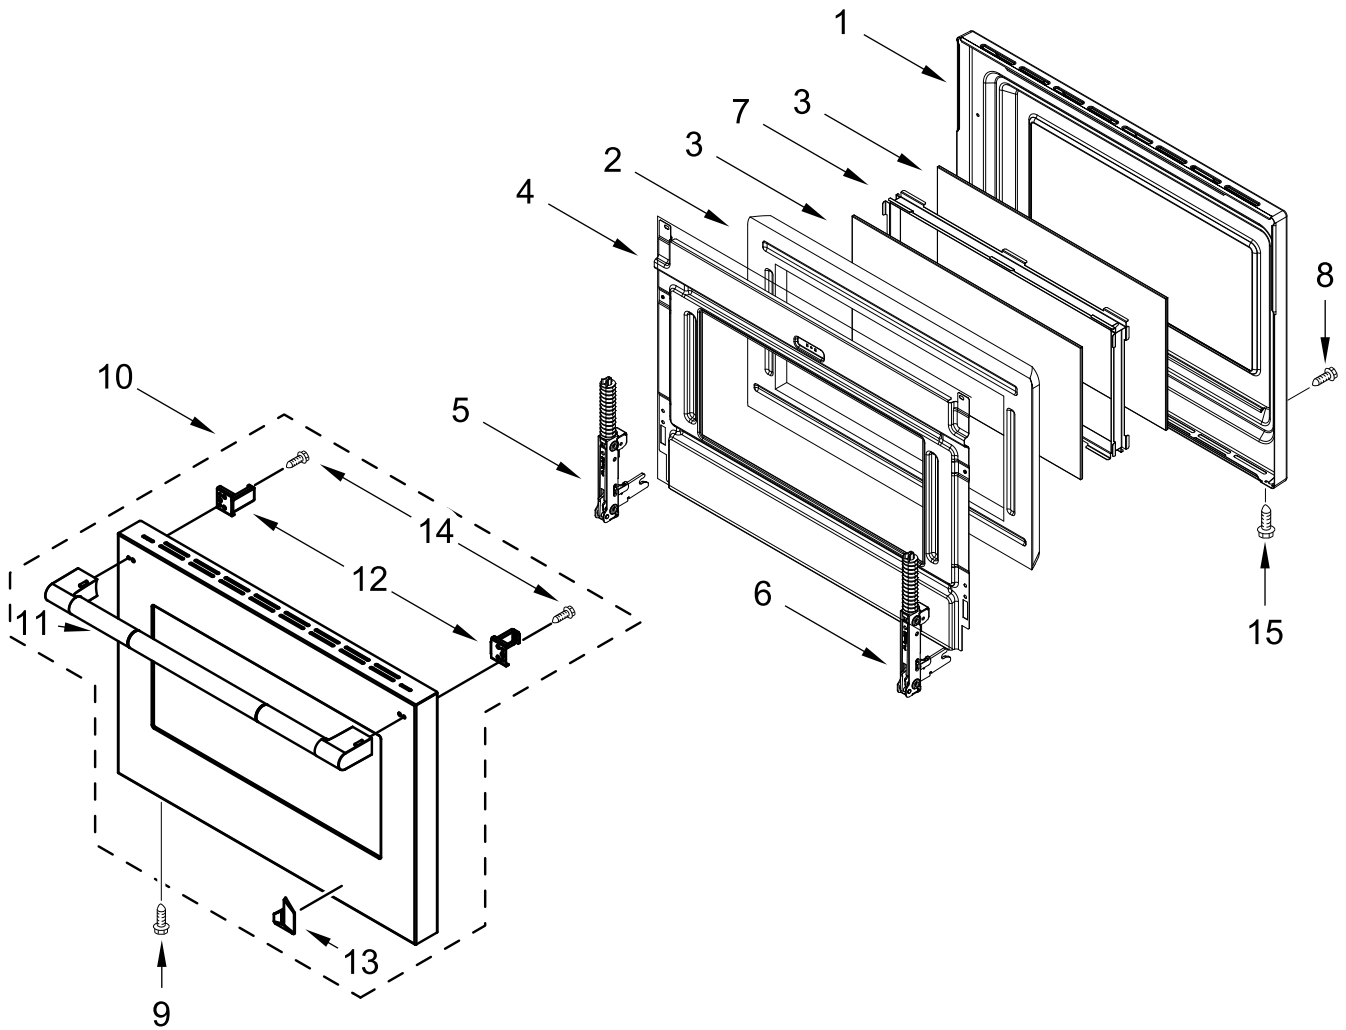

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13		Badge
3	W11184409	Glass, Inner	9	W10162096	Screw		W11238656	Stainless
4	W11194821	Retainer, Glass	10	W11199071	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
5	W11390105	Hinge, Door (Left)				15	W10607120	Screw
6	W11390124	Hinge, Dual (Right)	11	W11102826	Handle, Door			


18" OVEN DOOR PARTS

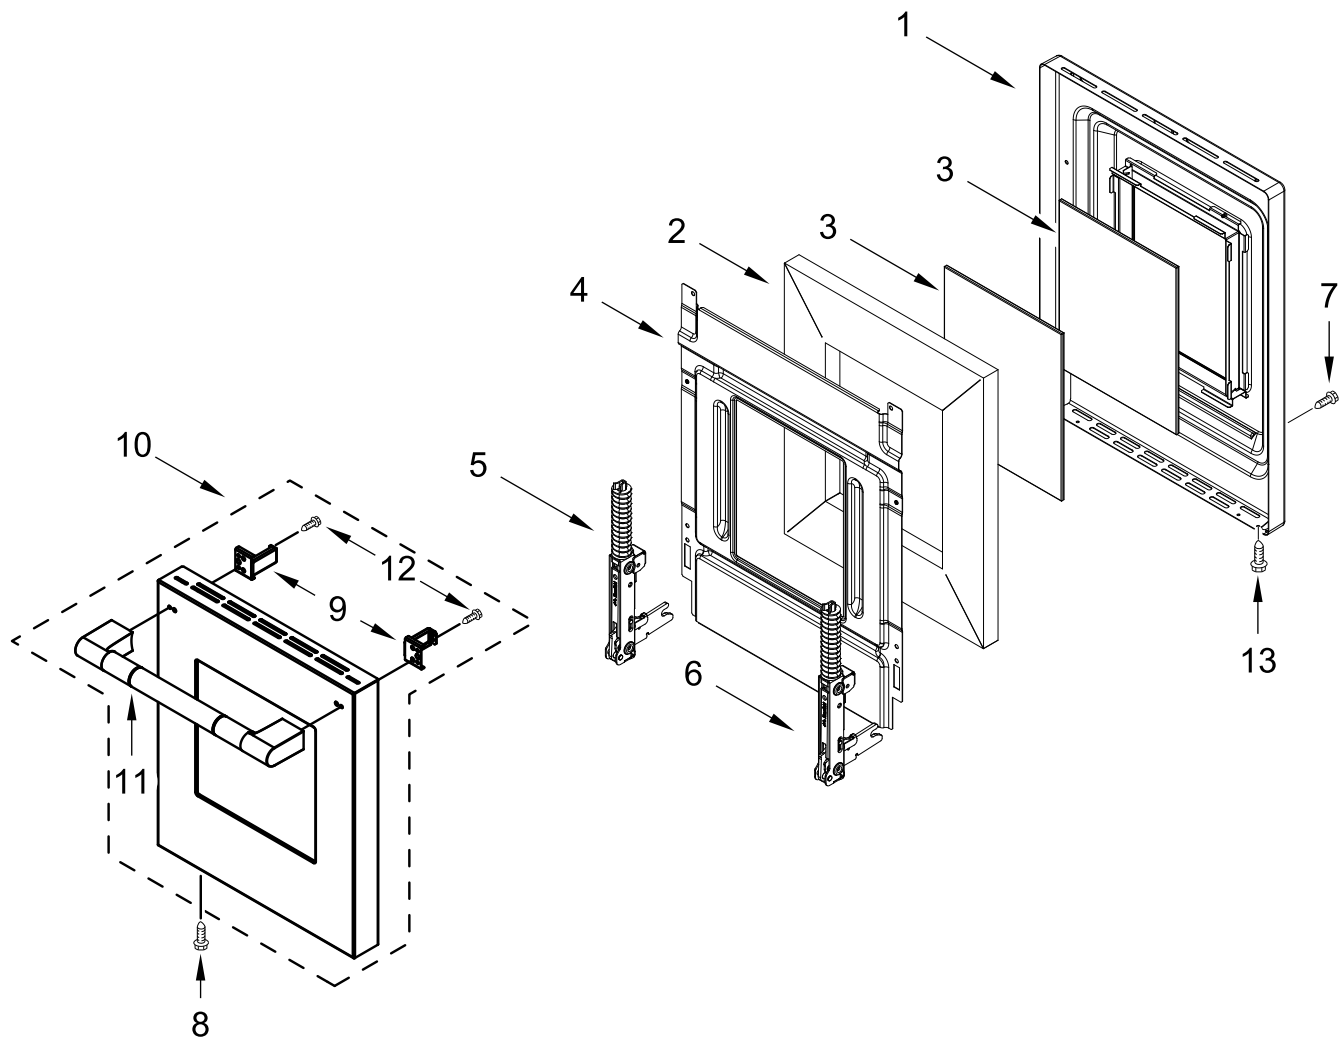

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	11	W11102824	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W10276043	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	13	W10607120	Screw
4	W11194818	Retainer, Glass	10	W10799306	Assembly, Outer Door Glass (Includes Handle)			
5	W11390106	Hinge, Door (Left)						
6	W11390125	Hinge, Door (Right)						


30" INTERNAL OVEN PARTS

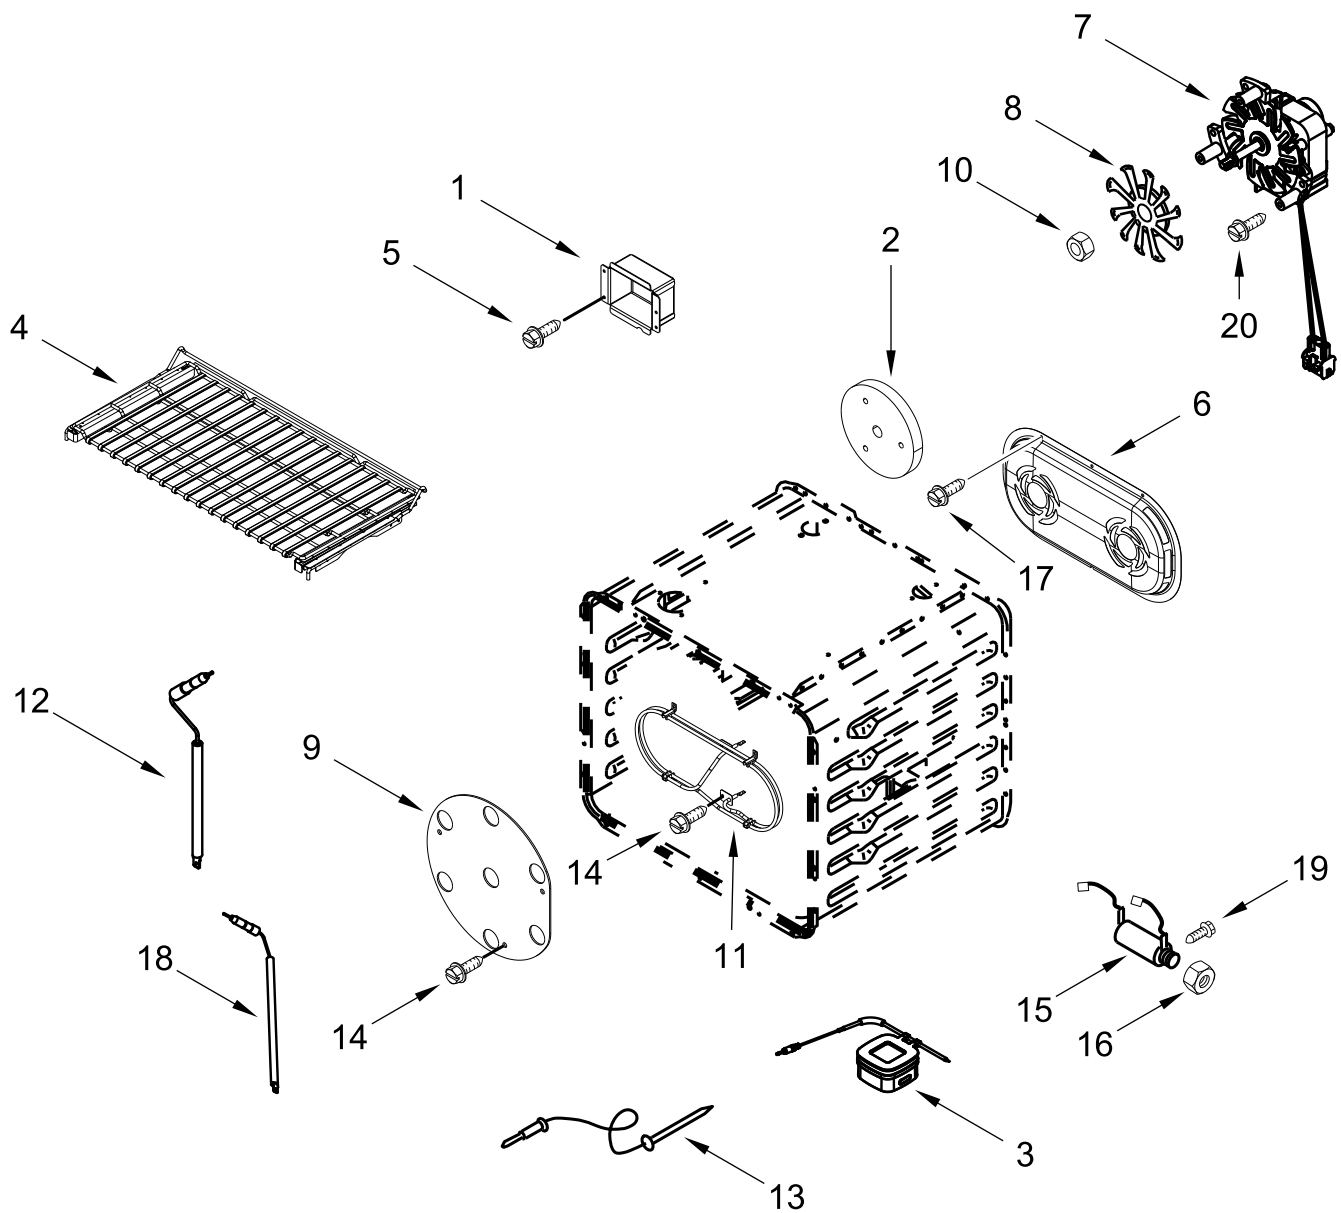

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491351	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

18" INTERNAL OVEN PARTS

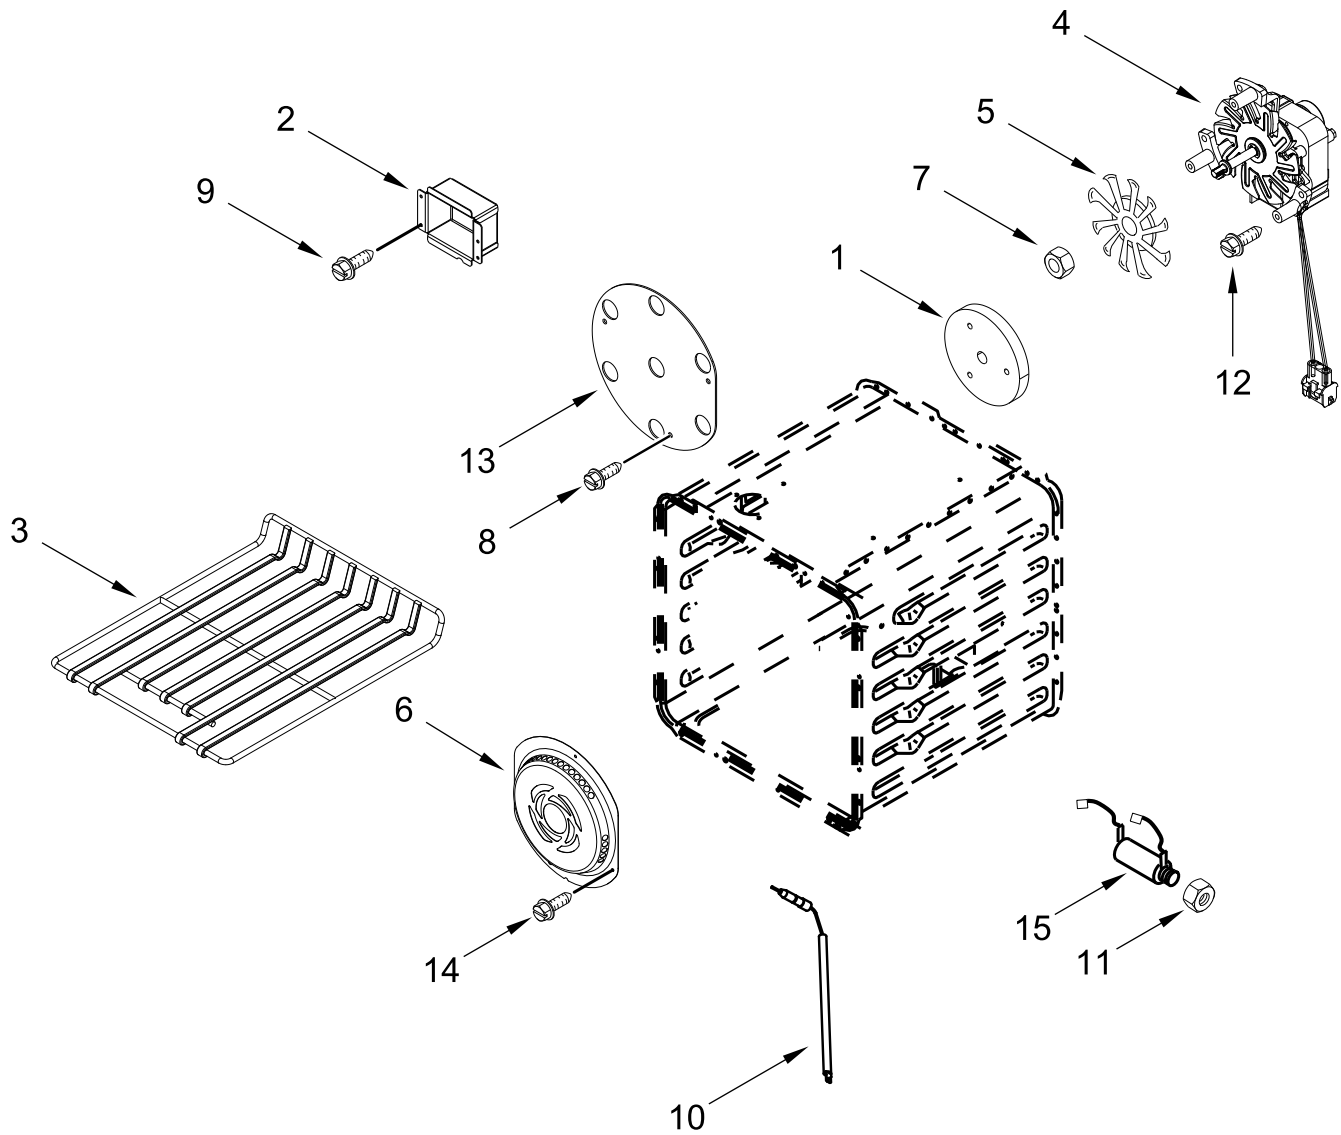

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	5	W11108376	Blade, Fan	10	W11205400	Electrode, Bake
2	W10308051	Box, Broil	6	W11368180	Cover, Fan	11	W11033111	Nut, Locking
3	W11111351	Rack, Oven (18")	7	W10631504	Nut, Acorn (LH)	12	W10720084	Screw
4	W10631506	Motor, Convection	8	4449154	Screw	13	W10261523	Plate, Fan
			9	7101P434-60	Screw	14	W10739592	Screw
						15	9755543	Jack, Meat Probe

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W11035424	Wok, Round Bottom
		Backsplash
	W10285449	48" With Shelf
		Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill