


**KitchenAid®**

**ELECTRIC COMBO WALL OVEN**

**MODELS:**

KOEC530PPS00 (Stainless)


# CONTROL PANEL PARTS

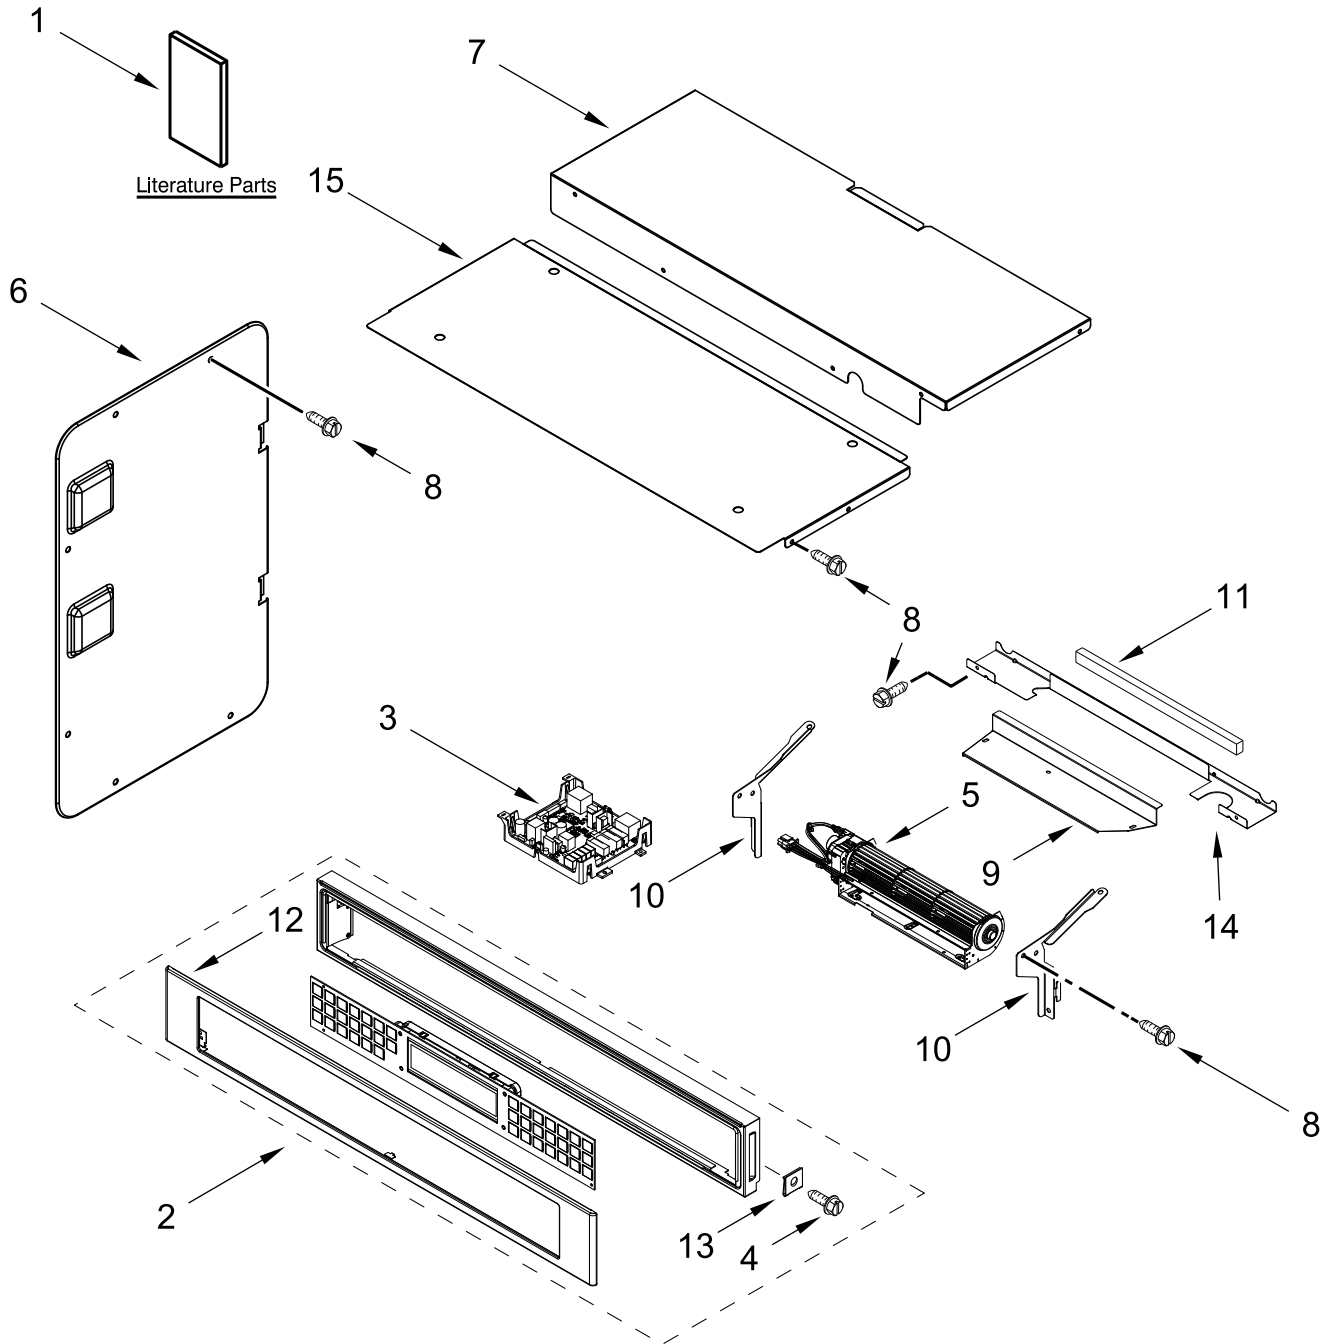

# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W10588732	Chassis, Cover Top Back 30 IN	15	W10318158	Chassis, Cover Top Front 30 IN
	W11655510	Owner's Manual						
	W11618058	Quick Start Guide	8	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11382178	Tech Manual	9	W10681157	Cover, Combo Blower			
	W11340885	Wiring Diagram	10	W10655463	Bracket, Blower (Left)		W11659368	Harness, Main
2		Assembly, Control Panel (Includes Overlay)		W10655462	Bracket, Blower (Right)		W11256627	Harness, Signal
	W11690517	Stainless	11	4451758	Block, Foam		W11264646	Harness, Door Latch
3	W11249218	Appliance Manager, Copernicus	12		Skin, Control Panel		W11229448	Harness, Communication
				W11689165	Stainless		3400015	Screw, Grounding
4	W11339492	Screw (Black)	13	4450118	Nut		W11226264	Strap, Ground
5	W11397930	Blower	14	W11166802	Divider, Chassis Back		4448664	Clamp, Conduit
6	W10655467	Chassis, Combo Side					313438	Clip, Harness
							W11394923	Bag, Hardware


# OVEN PARTS

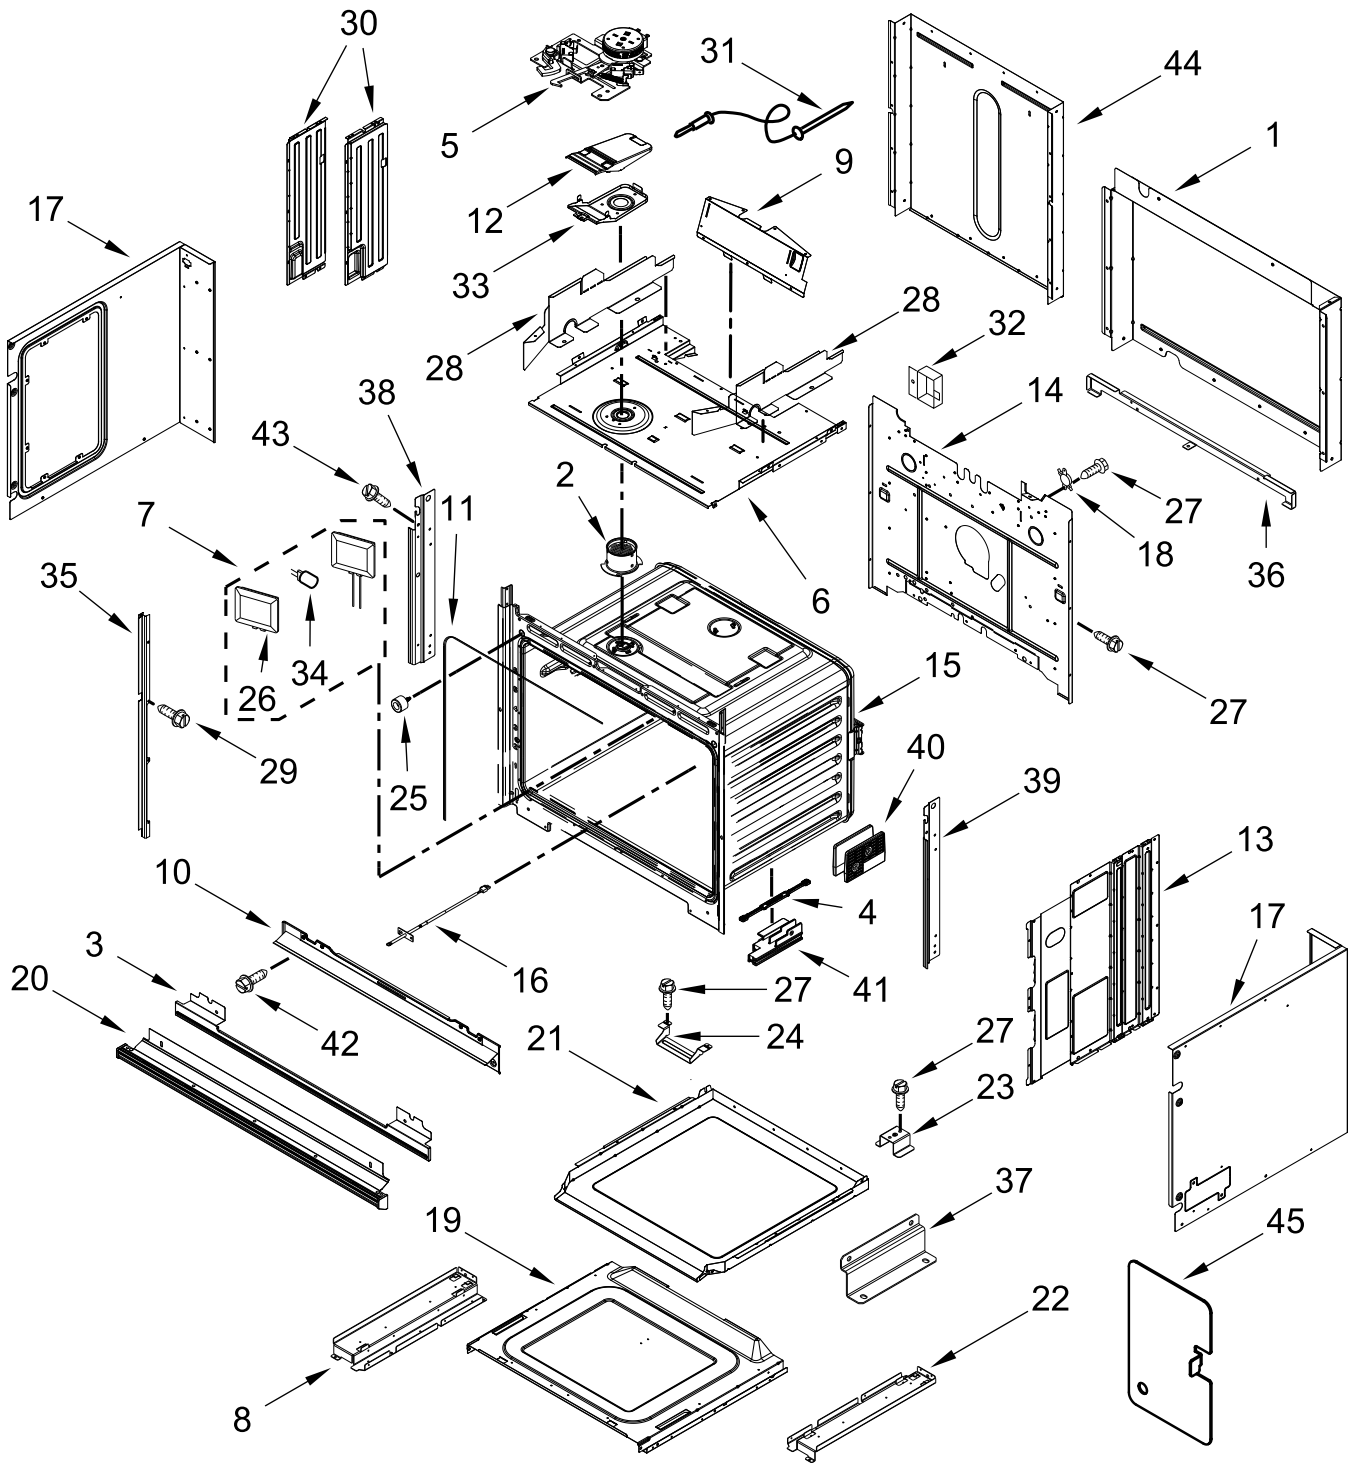

# OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11171004	Cover, Combo Chassis Back Duct	20		Assembly, Bottom Vent	36	W10283022	Support, Crossbar
2	W11085298	Tube, Vent		W11467754	Stainless	37	W10283024	Side, Bracket
3		Trim, Bottom Vent	21	W11244446	Duct, Bottom Chassis	38	W11627410	Siderail, Combo (Left)
	W11560859	Black	22	W10283021	Support, Base (Right)	39	W11627411	Siderail, Combo (Right)
4	W11558603	Spacer, Base	23	W11135135	Support, Air Channel	40	W11245118	Foot, Base
5	W11655005	Latch, Motorized	24	W11390667	Spacer, Chassis Bottom Duct	41	W11245114	Foot, Chassis (Left)
6	W11168071	Top, Chassis					W11245116	Foot, Chassis (Right)
7	W11205574	Assembly, Oven Light	25	W11166315	Bumper and Screw	42	W11249635	Screw
8	W10283020	Support, Base (Left)	26	W10472386	Lens, Light	43	7101P633-60	Screw (Black)
9	W10904163	Deflector, Blower	27	7101P426-60	Screw	44	W11134657	Duct, Lower Chassis Back
10	W11518347	Vent, Combo Center	28	W11186391	Deflector, Chassis (Left)	45	W11533682	Cover, WIFI
11	W11608108	Gasket		W11186398	Deflector, Chassis (Right)			FOLLOWING PARTS NOT ILLUSTRATED
12	W11256424	Cover, Vent Exhaust	29	W11404000	Screw		W11188284	Insulation, Wrap
13	W11165274	Side, Chassis	30	W11167419	Cover, Suction (Left)		W11234758	Insulation, Cavity
14	W11223327	Back, Chassis		W11186675	Cover, Suction (Right)			
15		Liner, Oven (Not Serviceable)	31	9755542	Probe, Temperature			
16	W11346074	Probe, Sensor	32	8285593	Cover, Connector			
17	W11171909	Side, Combo Chassis (Left)	33	W11256423	Base, Vent Exhaust			
	W11171919	Side, Combo Chassis (Right)	34	W10472384	Bulb, Light			
18	4449751	Thermostat (TOD)	35		Trim, Side			
19	W11135103	Base, Chassis		W11235457	Black (Left)			
				W11235458	Black (Right)			


# OVEN DOOR PARTS

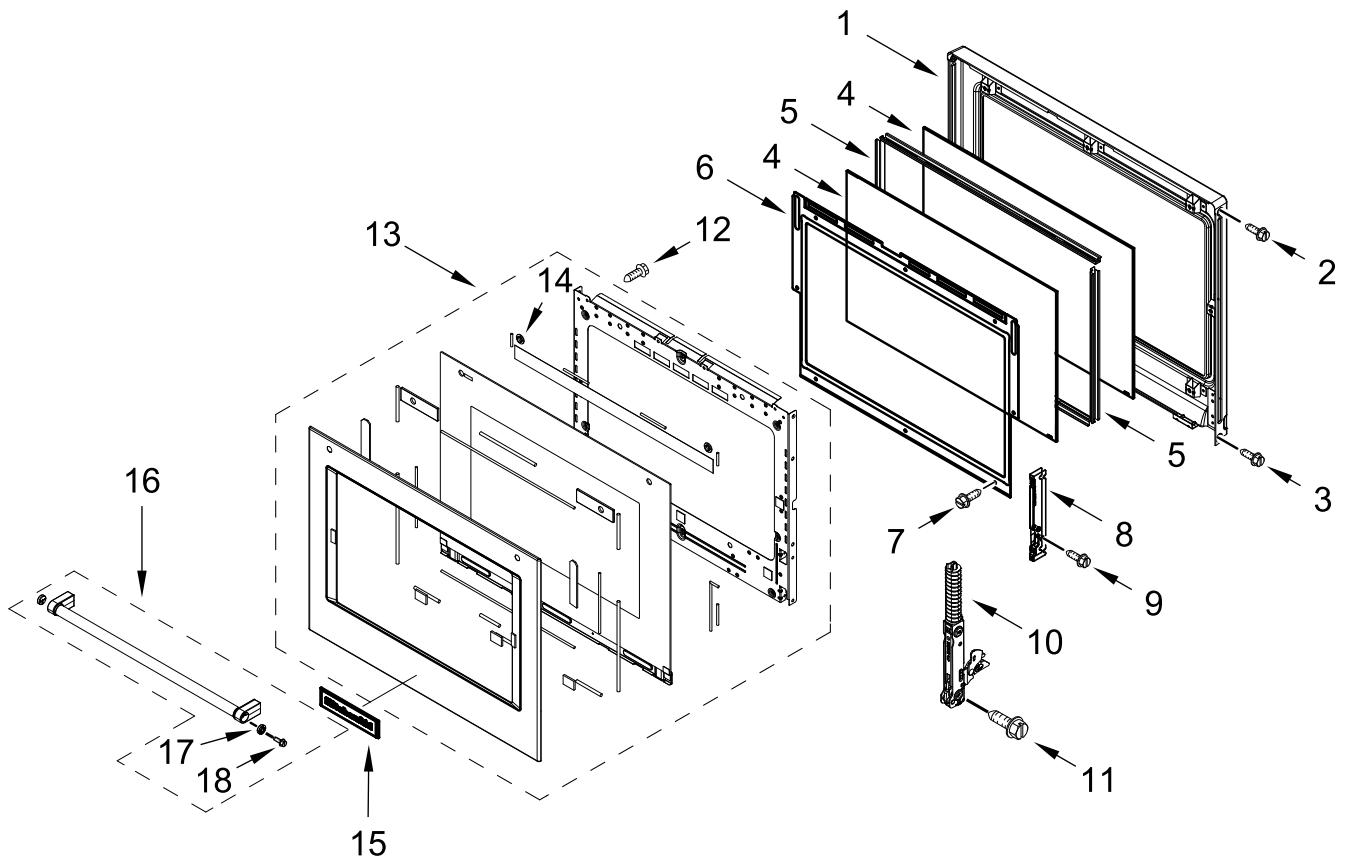

# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11239070	Receiver, Hinge (Left)	13		Door Assembly
2	7101P375-60	Screw		W11239072	Receiver, Hinge (Right)		W11689098	Stainless
3	W11290045	Screw	9	W10254050	Screw	14	W10319024	Washer, Door
4	W10618107	Glass, Inner	10	W11633413	Hinge, Door (Left)	15	W10518672	Badge
5	W11302730	Spacer, Air Divider		W11633414	Hinge, Door (Right)	16		Handle Assembly
6	W11174095	Retainer, Air Divider Glass	11	3196183	Screw		W11241572	Stainless
7	7101P426-60	Screw	12	W11317731	Screw (Black)	17	W10551026	Medallion, Handle
						18	W10656499	Screw

# INTERNAL OVEN PARTS

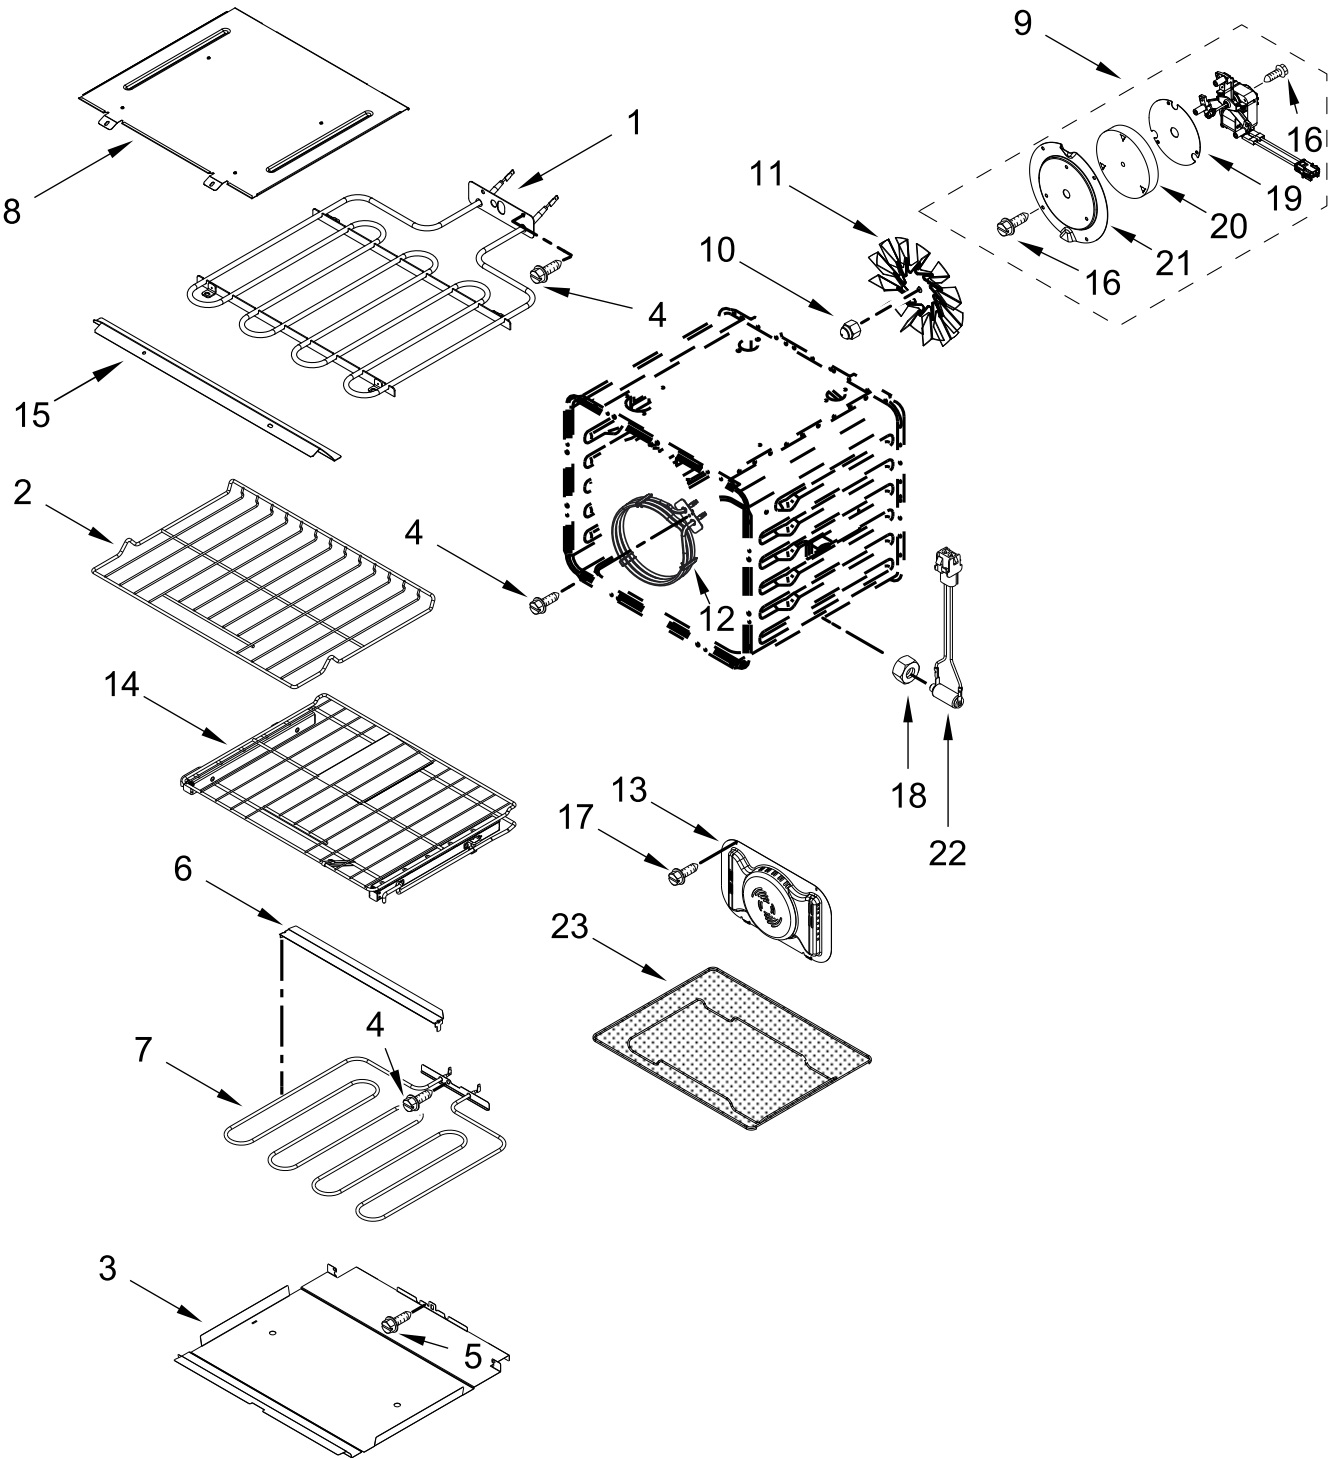




# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238159	Element, Broil	9	W11398058	Convect Motor Assembly	17	W10906658	Screw
2	W10554526	Rack, Oven				18	W11033111	Nut, Locking
3	W10318198	Tray, Hidden Bake	10	W11433702	Nut, Acorn (LH)	19	W11251715	Plate, Convect Motor
4	7101P434-60	Screw	11	W11425715	Blade, Fan	20	W11251716	Insulation, Convect Motor
5	7101P426-60	Screw	12	W10546519	Element, Convection	21	W11398057	Cover, Convect Plate
6	W10282957	Crossbar, Hidden Bake Tray	13	W10819989	Baffle, Bow Tie	22	W11252826	Jack, Meat Probe
7	W11292248	Element, Bake	14	W10554531	Rack, Sliding	23	W11661815	Basket, Airfry
8	W11235537	Reflector, Broil	15	W10588737	Shield, Broil Front			
			16	W10720084	Screw			


# CABINET AND STIRRER PARTS

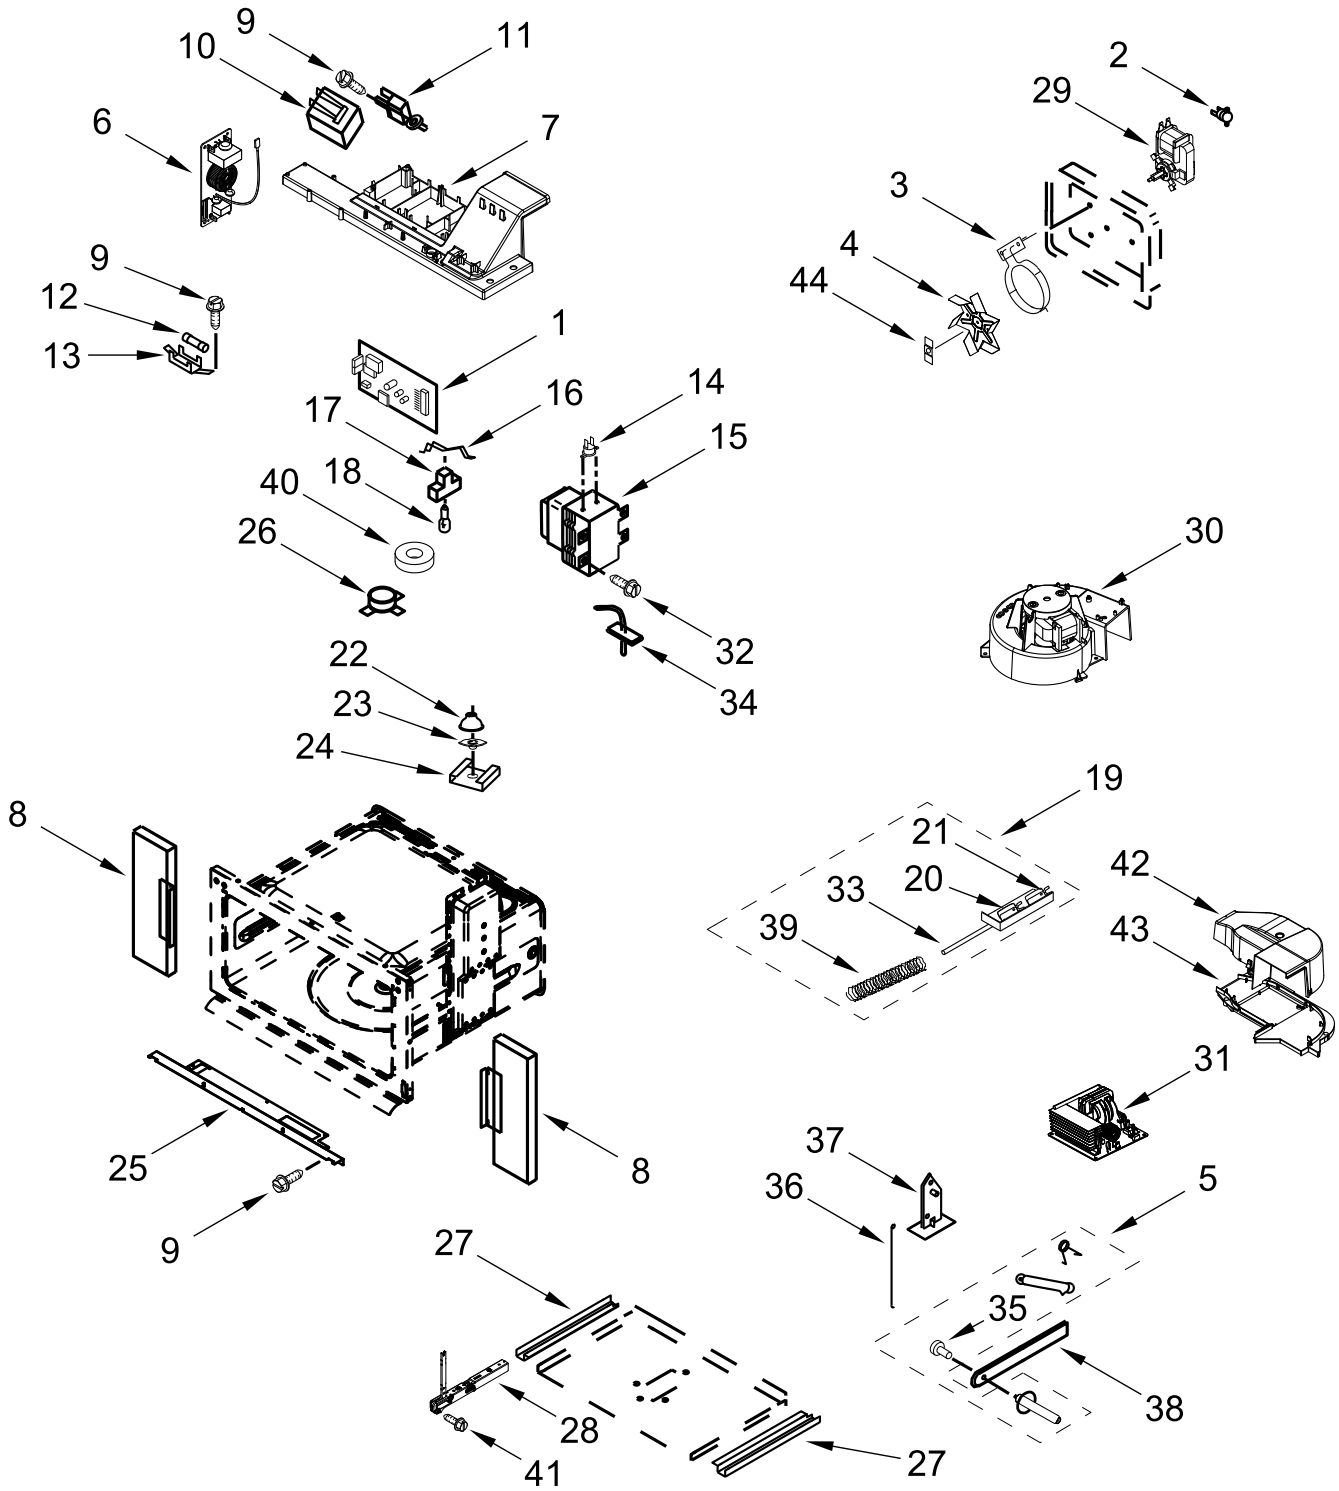

# CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11289998	Manager, Appliance	16	W10465869	Spring, Lamp	35	461967510191	Bushing
2	423107845441	Sensor, Convection	17	W10490593	Holder, Lamp	36	461967570351	Spring, Torsion
3	461967848711	Heater, Convection Element	18	W10795595	Lamp, Halogen	37	461967750494	Support
4	W11453899	Blade, Fan	19	W11555168	Harness, Interlock	38	W11213889	Arm, Sliding
5	W10128850	Assembly, Sliding Arm	20	461967848881	Switch	39	423107570871	Spring, Release Rod
6	W11505129	Filter, Noise	21	W10876593	Holder, Switch	40	W10769147	Sealing, Lamp
7	461967754821	Duct, Magnetron	22	423107022541	Reflector	41	461967825781	Screw (Shoulder)
8	461967017491	Trim, Side (Left)	23	423107720491	Lens, Lamp	42	W11591019	Housing, Upper Inverter
	461967017481	Trim, Side (Right)	24	W11440819	Clip, Spring	43	W11591018	Housing, Lower Inverter
9	461967825321	Screw	25	W11334716	Vent, Top Microwave	44	W10120233	Nut, Speed
10	461967848621	Transformer, Light (20V)	26	W10460457	Sensor, Humidity			MISCELLANEOUS PARTS
11	461967842541	Thermoactuator	27	461967008461	Support, Bottom		W11454022	Harness, Fan and Turntable
12	241908600053	Fuse	28	W11681075	Hinge, Door		W11539527	Jumper Harness, Communication
13	4375231	Block, Fuse	29	W11233698	Motor, Convection Fan		W11539494	Harness, Inverter
14	461967846741	Thermostat, Magnetron	30	W11131760	Cooling Fan Assembly			
15	W11504545	Magnetron	31	W11504539	Inverter			
			32	461967825971	Screw			
			33	461967750464	Rod, Push			
			34	241960100002	Sensor, Temperature			


# MICROWAVE DOOR PARTS

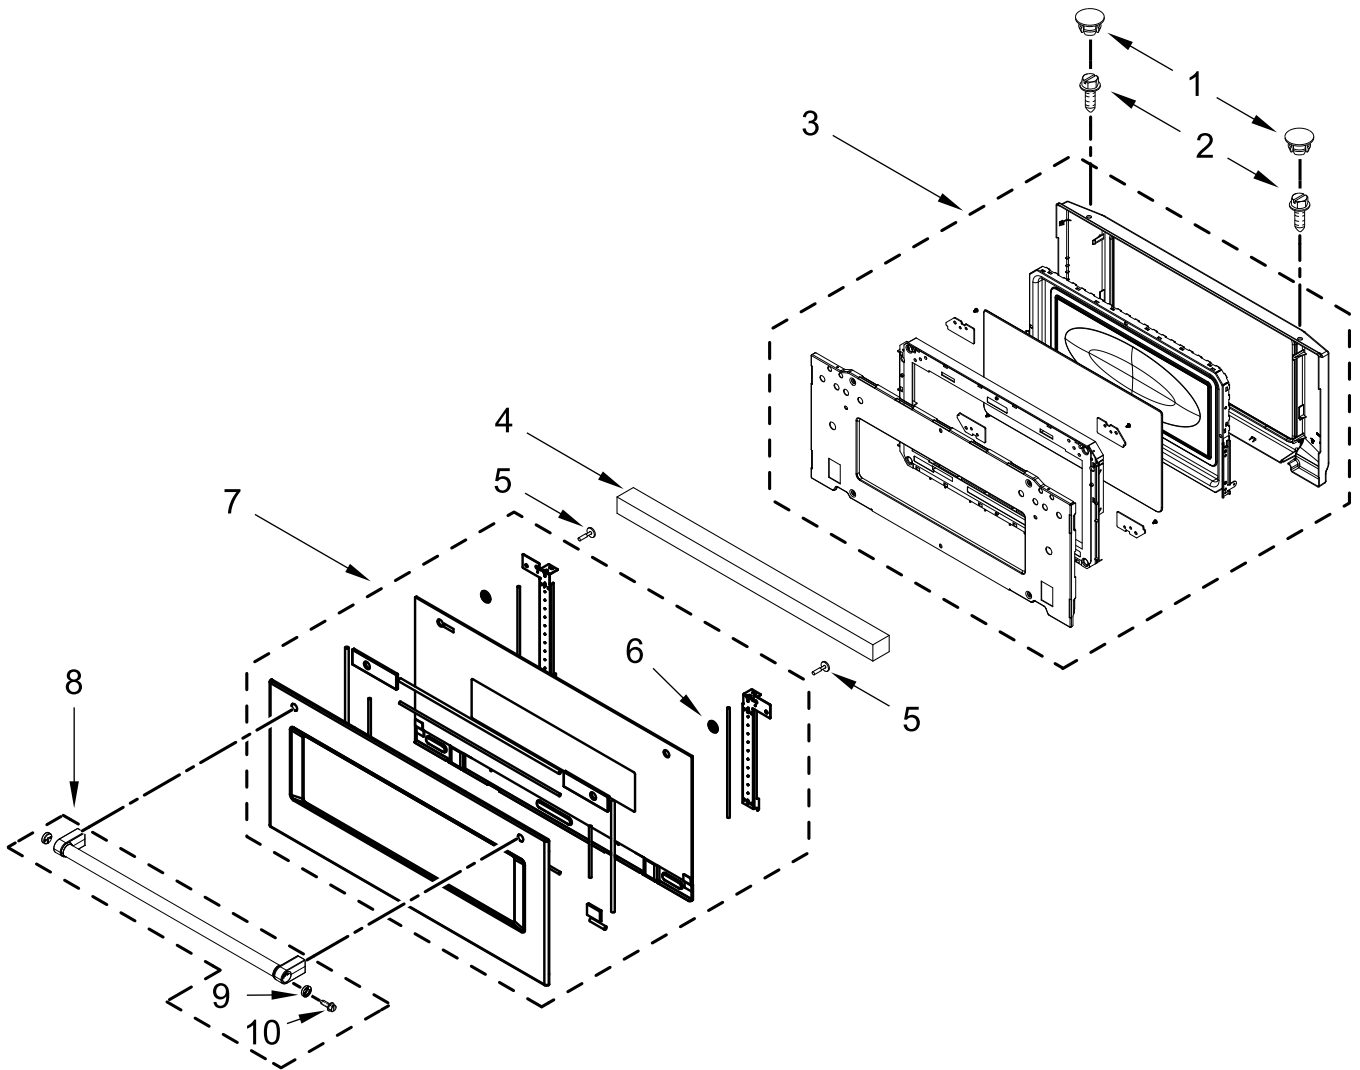

# MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5	W11317731	Screw (Black)	8		Handle Assembly
2	7101P338-60	Screw	6	W10319024	Washer, Door		W11241572	Stainless
3	W11639555	Inner Door Assembly	7		Door Assembly	9	W10551026	Medallion, Handle
4	W10359769	Foam, Door Handle		W11691817	Stainless	10	W10656499	Screw

# INTERNAL MICROWAVE PARTS

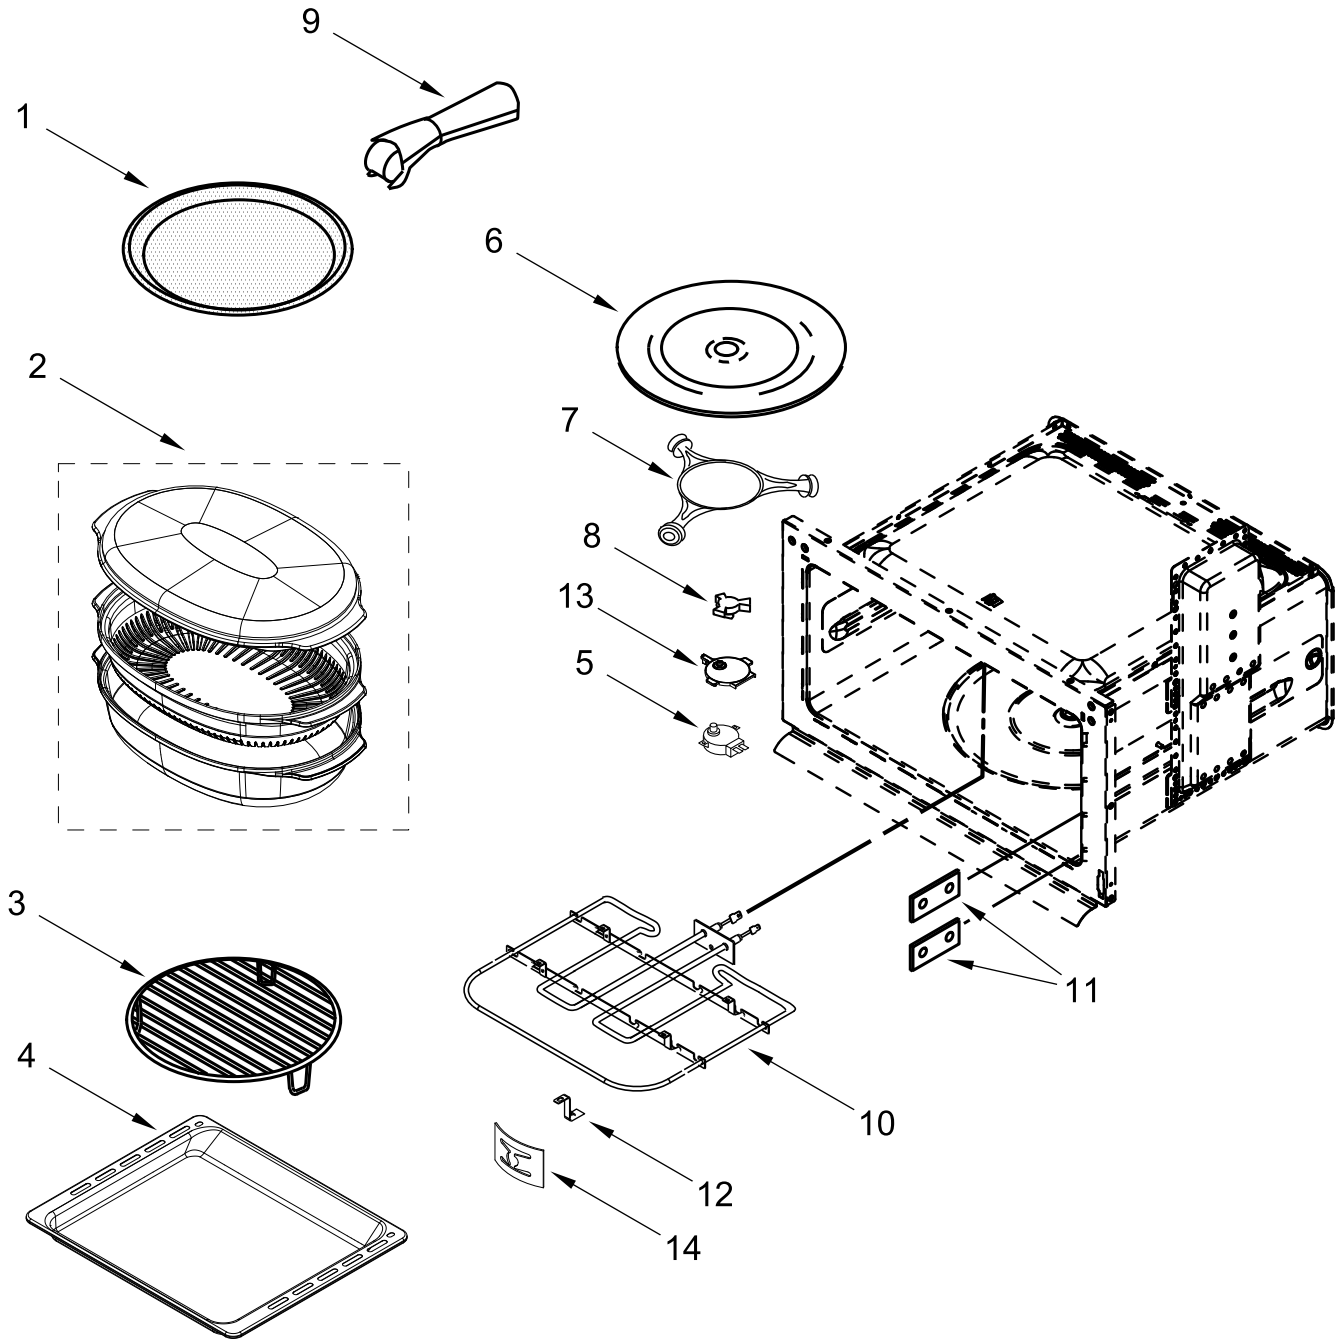

# INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461968977491	Plate, Crisp	7	W10367316	Ring, Turntable	13	461967753742	Adapter, Turntable Motor
2	W10796139	Steamer	8	W10545578	Drive, Turntable	14	252262898008	Support, Spring Lock Grill
3	W10748279	Rack, Low Convection	9	461968929542	Handle, Pan			
4	W10750839	Plate, Baking	10	W10387651	Element, Grill			
5	461967848971	Motor, Turntable	11	461967451001	Plate, Cover			
6	W11340343	Turntable	12	461967753871	Support, Element			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
		Trim, Tall Vent
W11570325		Black
		Deflector, Heat
W11594553		Black
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic