

 
CARBON FILTER

It is recommended to clean the carbon filter every 2-3 months, and to replace every 2 years. Filters may need to be cleaned more frequently depending on the cooking methods used and frequency of use.


Replacement filter cartridges are available from your Fisher & Paykel dealer, online or from a Fisher & Paykel service technician.

ITEM	REFERENCE NUMBER
Replacement Carbon Filter for KRECIRCDDFT	FILTCARDDFT


MAINTAINING THE CARBON FILTER

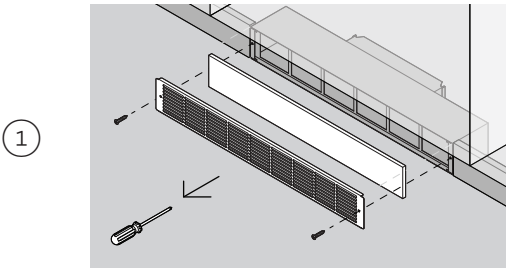

Remove the stainless grille by removing screws with crosshead screwdriver.
Remove the washable carbon filter.

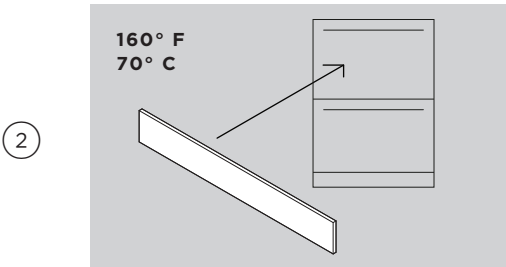

Wash the filter and let dry fully.
If using a dishwasher, ensure the max temperature doesn't exceed 160°F (70°C) and filter is washed on its own.

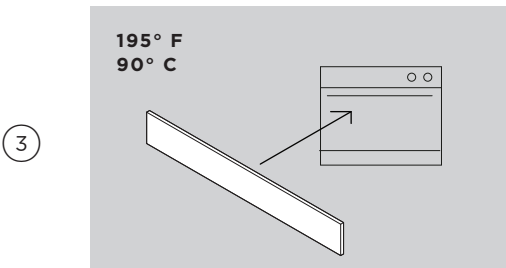

Reactivate the carbon filter. Place in oven for 60 min at 195°F (90°C).
Refit filter to recirculation kit and replace grille.