

KitchenAid®

 
 
 
**Blender
Cordless Hand Blender - battery included**

MODELS:





KHBRV71BM0 (Black Matte)

KHBRV71SE0 (Shaded Palm)

Cordless Hand Blender Parts

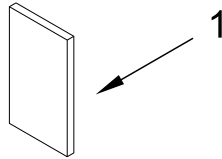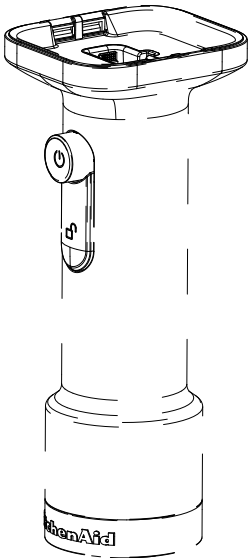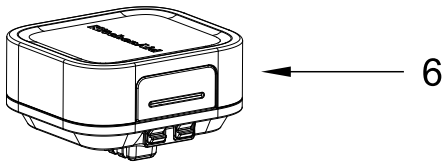

Literature Parts

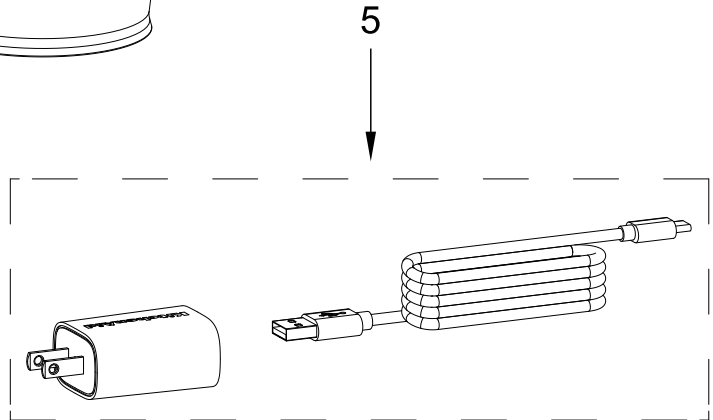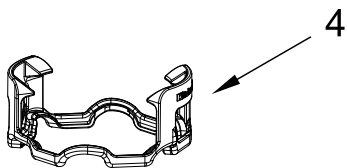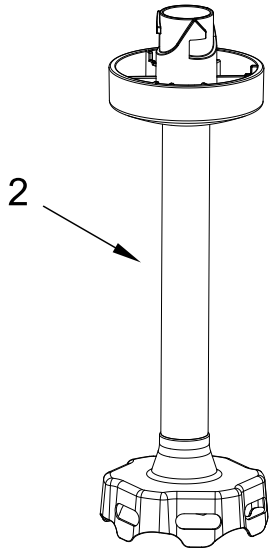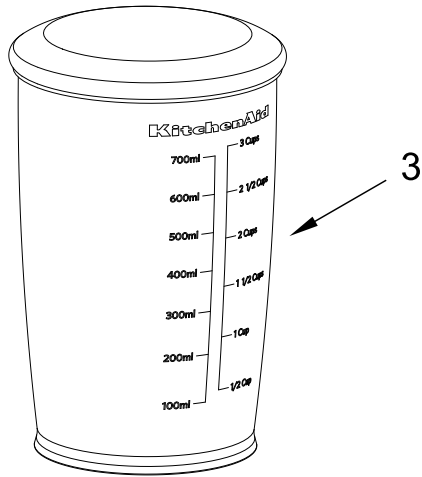    

Cordless Hand Blender Parts

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W11697805	Blender Arm	5	W11698092	Power Adaptor + USB Cable
	W11634663	Use & Care Guide	3	W11413683	Jar w/ Lid			
			4	W11413707	Pan Guard	6	W11698095	Battery