

LG SIDEKICK® CYCLE & FABRIC CARE GUIDE

Wash small loads that just can't wait while cleaning larger loads above. Choose from 7 cycles and warm and cold settings that you can control, either from the panel on the drawer lip or via the main washer's touch panel.



Each cycle is designed to deliver a thorough clean and proper fabric care.

WASH CYCLES	CYCLE DESCRIPTION
Normal	Mixed loads and cotton or linen fabrics
Intimates	Lingerie, sheer or easily damaged fabrics
Hand Wash	Shrinkable wool or hand-washable items
Active Wear*	Special or treated fabrics for sports or outerwear

WASH CYCLES	CYCLE DESCRIPTION
Rinse+Spin	Rinses and spins items only
Spin Only**	Drains and spins with no wash or rinse
Tub Clean	Designed to clean the inside of the washer


*Indicates a bonus cycle you can download using the ThinQ® app on your smartphone.

**To activate Spin Only, do not select a washing cycle and do not add detergent or softener. Select Rinse+Spin and press Rinse repeatedly until the display shows 0 and the Rinse icon is no longer illuminated on the panel. Then press the Start/Pause button.

Elevate your possibilities—and elevate your washer for easier loading and unloading—with the LG SideKick® 29" pedestal washer.

EASY-TO-USE CONTROLS

Seamlessly integrates with the main washer controls, or use the panel for a quick start.

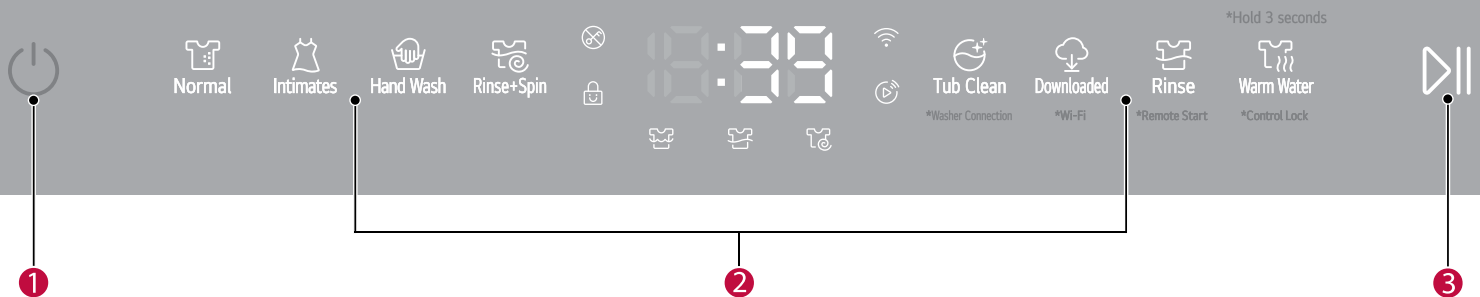

1

POWER IT ON
Touch Power to turn on your LG SIGNATURE SideKick.®

2

SELECT YOUR CYCLE
Choose just the right cycle for your small, custom-care laundry loads.

3

PRESS START
Touch and hold Start to begin the selected cycle.