

Model no:
OR30SDBMX1

| Dimensions | In |
|--|--------------------------|
| ④ Overall height of range (from floor to cooktop trim, excluding grates and backguard) | 35 21/32" - 36 11/32" |
| ⑧ Overall width of range | 29 7/8" |
| ③ Overall depth of range (excludes handle and dials) | 24 3/16" |
| ⑨ Depth from rear of chassis to front datum | 24 1/8" |
| ⑥ Depth of cooktop trim to front datum | 3/32" |
| ⑦ Depth of backguard | 1 15/16" |
| ⑩ Depth of spacers | 5/16" |
| ⑪ Height of backguard from countertop datum | 3" |
| ① Height from countertop datum to top of grates | 1 1/4" |
| ② Height from bottom of chassis to top of backguard | 37 31/32" |
| ④ Height from bottom of chassis to countertop datum | 34 31/32" |
| ① Height from bottom of chassis to bottom of control panel | 28 1/16" |
| ⑪ Height from bottom of chassis to top of oven door | 27 1/4" |
| ⑪ Height from bottom of chassis to top of storage drawer | 8 13/16" |
| ⑥ Height from bottom of chassis to door handle centerline | 25 1/4" |
| ⑦ Thickness of handle | 29/32" |
| ⑧ Width of handle | 27 15/16" |
| ⑥ Depth of handle to front datum | 1 5/8" |
| ⑤ Depth of open door to front datum | 16 5/16" |
| ⑦ Height of adjustable levelling feet | 11/16" - 1 3/8" |

| Minimum Clearances* | in |
|--------------------------|--------------------------|
| Overall width of cavity | min 29 7/8" |
| Overall depth of cavity | max 24 1/8" |
| Overall height of cavity | 35 21/32" - 36 11/32" |

* Refer to installation documents for additional cabinetry clearances.

INDICATES PRODUCT DATUM
INDICATES CLEARANCES

DATE: 03.08.2015

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. www.fisherpaykel.com

