

# GETTING *started*

## WITH YOUR 4-DOOR FRENCH DOOR REFRIGERATOR



### BEFORE YOU START



#### Set up your refrigerator

Remove tape and glue residue from surfaces before turning on the refrigerator. Choose a place near a grounded electrical outlet, allowing for clearances for ease of installation, proper circulation, and plumbing and electrical connections.



#### Before operating for the first time


After you remove all of the package materials, clean the inside of your refrigerator with soap and water before using it. See **CARE AND CLEANING** in your Use & Care Manual for other cleaning tips.


### YOU'RE IN CONTROL

 


#### Your controls

Use the +/- buttons to set the freezer and refrigerator temperatures. Allow 24 hours for temperatures to stabilize. We recommend setting your freezer at 0°F/-18°C and your refrigerator at 37°F/3°C.

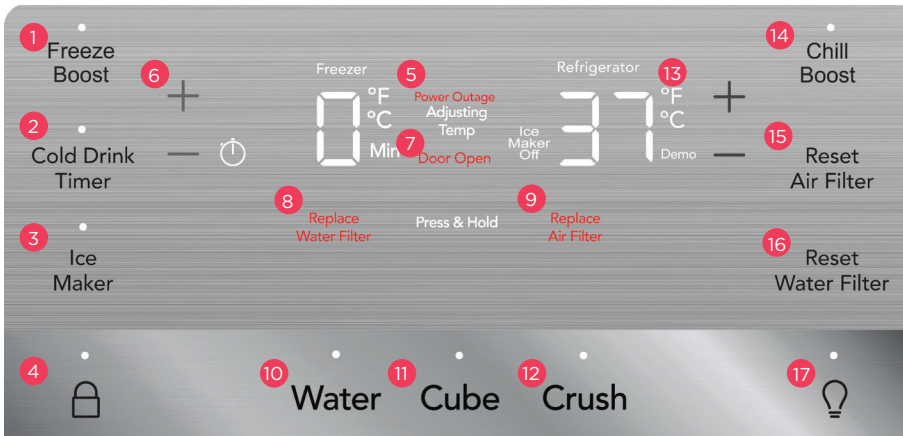

- 1 **Freeze Boost** activates a faster rate for freezing food in the freezer.
- 2 **Cold Drink Timer** quickly chills a drink inside the freezer compartment.
- 3 Press and hold **Ice Maker** for 3 seconds to turn the ice maker on/off.
- 4 Press and hold  for 3 seconds to enable/disable the appliance control display.
- 5 **Power Outage** illuminates and an alert sounds after a power outage ends until you reset it by pressing any button.
- 6 **Adjusting Temp** illuminates when you press + or - to change temperatures inside the refrigerator (34°F/1°C to 44°F/7°C) and freezer (-6°F/-21°C to 6°F/-15°C).
- 7 **Door Open** illuminates and alert sounds if the door is open 5+ minutes until you close the doors.

- 8 **Replace Water Filter** illuminates when it's time to change the filter, generally every 6 months.
- 9 **Replace Air Filter** illuminates when it's time to change the filter, generally every 6 months.
- 10 Press **Water** to dispense water.
- 11 Press **Cube** to dispense cubed ice.
- 12 Press **Crush** to dispense crushed ice.
- 13 **°F/°C** allows you to switch between Fahrenheit (°F) and Celsius (°C).
- 14 **Chill Boost** helps ensure your recently purchased fresh food will stay cool at a faster rate to preserve freshness.
- 15 Press and hold **Reset Air Filter**, after replacing the filter, to reset.
- 16 Press and hold **Reset Water Filter**, after replacing the filter, to reset.
- 17 Press  to turn the dispenser light On and Off.

### CUSTOMIZE

Your refrigerator's **CUSTOM-FLEX® TEMP DRAWER** has 5 different temperature settings, so you can customize the space for your needs.

Choose one of 4 settings for **REFRIGERATOR** mode, each with a different temperature level:

• Meat/Seafood: 28°F/-2°C	• Deli/Snacks: 37°F/3°C
• Cold Drinks: 32°F/0°C	• White Wine: 45°F/7°C

Or easily switch to the fifth setting for **Freezer** mode. The temperature will drop to match the setting on your bottom freezer.



Changing settings is easy. Just follow these simple instructions:

1. Press and hold the Unlock button on the drawer's control panel for 3 seconds.
2. Select a temperature setting. The **Adjusting Temp** indicator light will turn on and stay on until the drawer has reached the selected temperature setting — this can take a few hours.

## QUICK CARE



### A little love goes a long way

Keeping your refrigerator clean maintains its appearance and prevents odor build-up.



### Be gentle

Clean with warm water and mild soap. For stainless steel models only, use **Frigidaire ReadyClean™ Stainless Steel Cleaner**.



5304508691

## KEEP IT FRESH



Your new fridge comes with a **PureAir Ultra™ II Air Filter** to keep fresh air flowing.

Change your air filter every 6 months to ensure optimal fridge freshness.

**Tip:** Need help changing your air filter? Visit our Frigidaire website or YouTube channel for instructional videos and articles.



PAULTRA2™

## SAFE, GREAT TASTING WATER



Your **PureSource Ultra II™ Water Filter** is certified to reduce contaminants and keep great-tasting water flowing for you and your family.

- Your new **PureSource Ultra II™** water filter is located on the top right side of the fresh food compartment.
- Before dispensing water for the first time, be sure to prime the water supply system:
  1. Press and hold a drinking glass against the water dispenser paddle until water comes out (it may take up to 1½ minutes).
  2. Run water through dispenser for approximately 3 minutes or 1½ gallons, before use, and discard.

Change your water filter every 6 months to ensure safe, great tasting water.



EPTWFOU1™

## FAQs

### Is it normal for my refrigerator to make noises?

To familiarize yourself with the sounds your new high-efficiency refrigerator may introduce, see the **NORMAL OPERATING SOUNDS** section of your Use & Care Manual.

### Why does my refrigerator run most of the time? Is this normal?

Today's refrigerators are designed to be more energy efficient than previous models. This means they run longer cycles, or run continuously, to maintain an even temperature inside. Please note: starting a unit takes about 10 times as much energy as it does to keep it running.



For more information refer to **TROUBLESHOOTING** in the back of your Use & Care Manual.

## LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your **4-Door French Door Refrigerator** and discovering more benefits.

Look for the **Photoregister<sup>SM</sup>** icon on your registration card.



WE ARE  
*here*  
FOR YOU



Have a question?



Want help?



Need service?

owner support

frigidaire.com/1 (800) 374-4432

frigidaire.ca/1 (800) 265-8352

