




30" SLIDE IN GAS CONVECTION RANGE

MODELS:

WEGA25H0HZ0 (Stainless)

WEGA25H0HN0 (Sunset Bronze)


COOKTOP PARTS

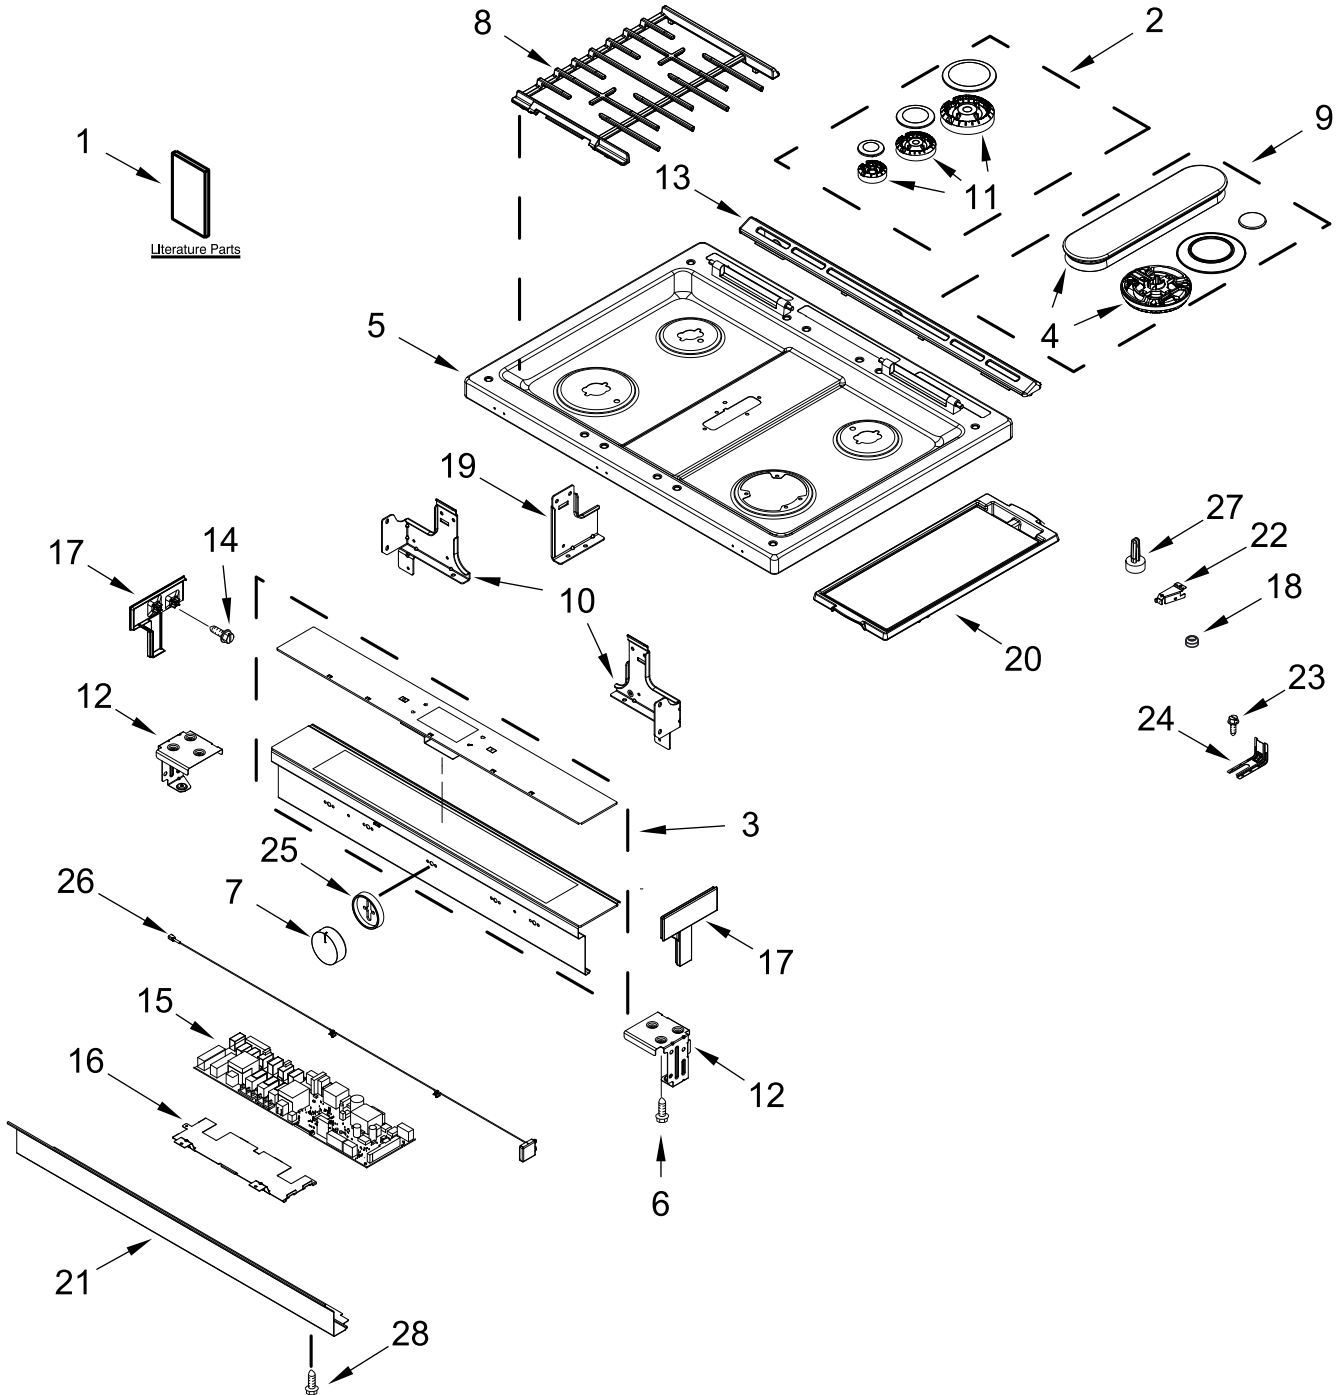

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	W10875937	Spreader, Flame Kit	19	W10867600	Bracket, Console (Center)
	W11085333	Instructions, Installation			(Right Front & Center)	20	W11043399	Griddle
	W11085353	Guide, Use & Care			(Includes Burner Caps)	21		Console, Lower Panel
	W11095707	Sheet, Tech	10	W10867593	Support, Cooktop (Left)		W10899346	Stainless
	W11096113	Wiring Diagram		W10867592	Support, Cooktop (Right)		W10899347	Sunset Bronze
	W11097305	Guide, Internet Connectivity				22	W10162253	Brace, Corner (Left)
	9762761	Tips, Safe Cooking (English)	11	W10732971	Spreader, Flame (Left Front)		W10162252	Brace, Corner (Right)
2	W10867890	Spreader, Flame Kit		W10732969	Spreader, Flame (Left Rear)	23	7101P485-60	Screw, Anti-Tip Kit
		(Left Front, Left Rear, Right Rear)		W10732968	Spreader, Flame (Right Rear)	24	W10606241	Bracket, Anti-Tip
		(Includes Burner Caps)	12	W10828159	Base, Console (Left)	25		Bezel
3		Console		W10828160	Base, Console (Right)		W11108451	Stainless
	W11049399	Stainless	13		Trim, Vent	26	W11097891	Antenna
	W10869382	Sunset Bronze		W10577781	Black	27	8016P022-60	Glide, Main Top
4	W10867781	Spreader, Flame (Right Front)	14	9780274	Screw	28	3196178	Screw
	W10863722	Spreader, Flame (Fish)	15	W10868154	Control, Electronic (Powermax)			FOLLOWING PARTS NOT ILLUSTRATED
		(Center)	16	W10908536	Bracket, Control	W10887379		Harness, Main
5		Cooktop	17		Endcap	W10754419		Harness, Bake/Broil
	W10864663	Black		W10854356	Stainless (Left)	313438		Clip, Harness
6	3196160	Screw		W10854357	Sunset Bronze (Left)	3196520		Clip, Wire
7		Knob		W10854360	Stainless (Right)	7111P017-60		Clamp, Wire
	W11108449	Stainless		W10854361	Sunset Bronze (Right)	W10580229		Wire, Ground
8		Kit, Grate	18	W10664705	Bumper			
	W11047499	Black						


CHASSIS PARTS

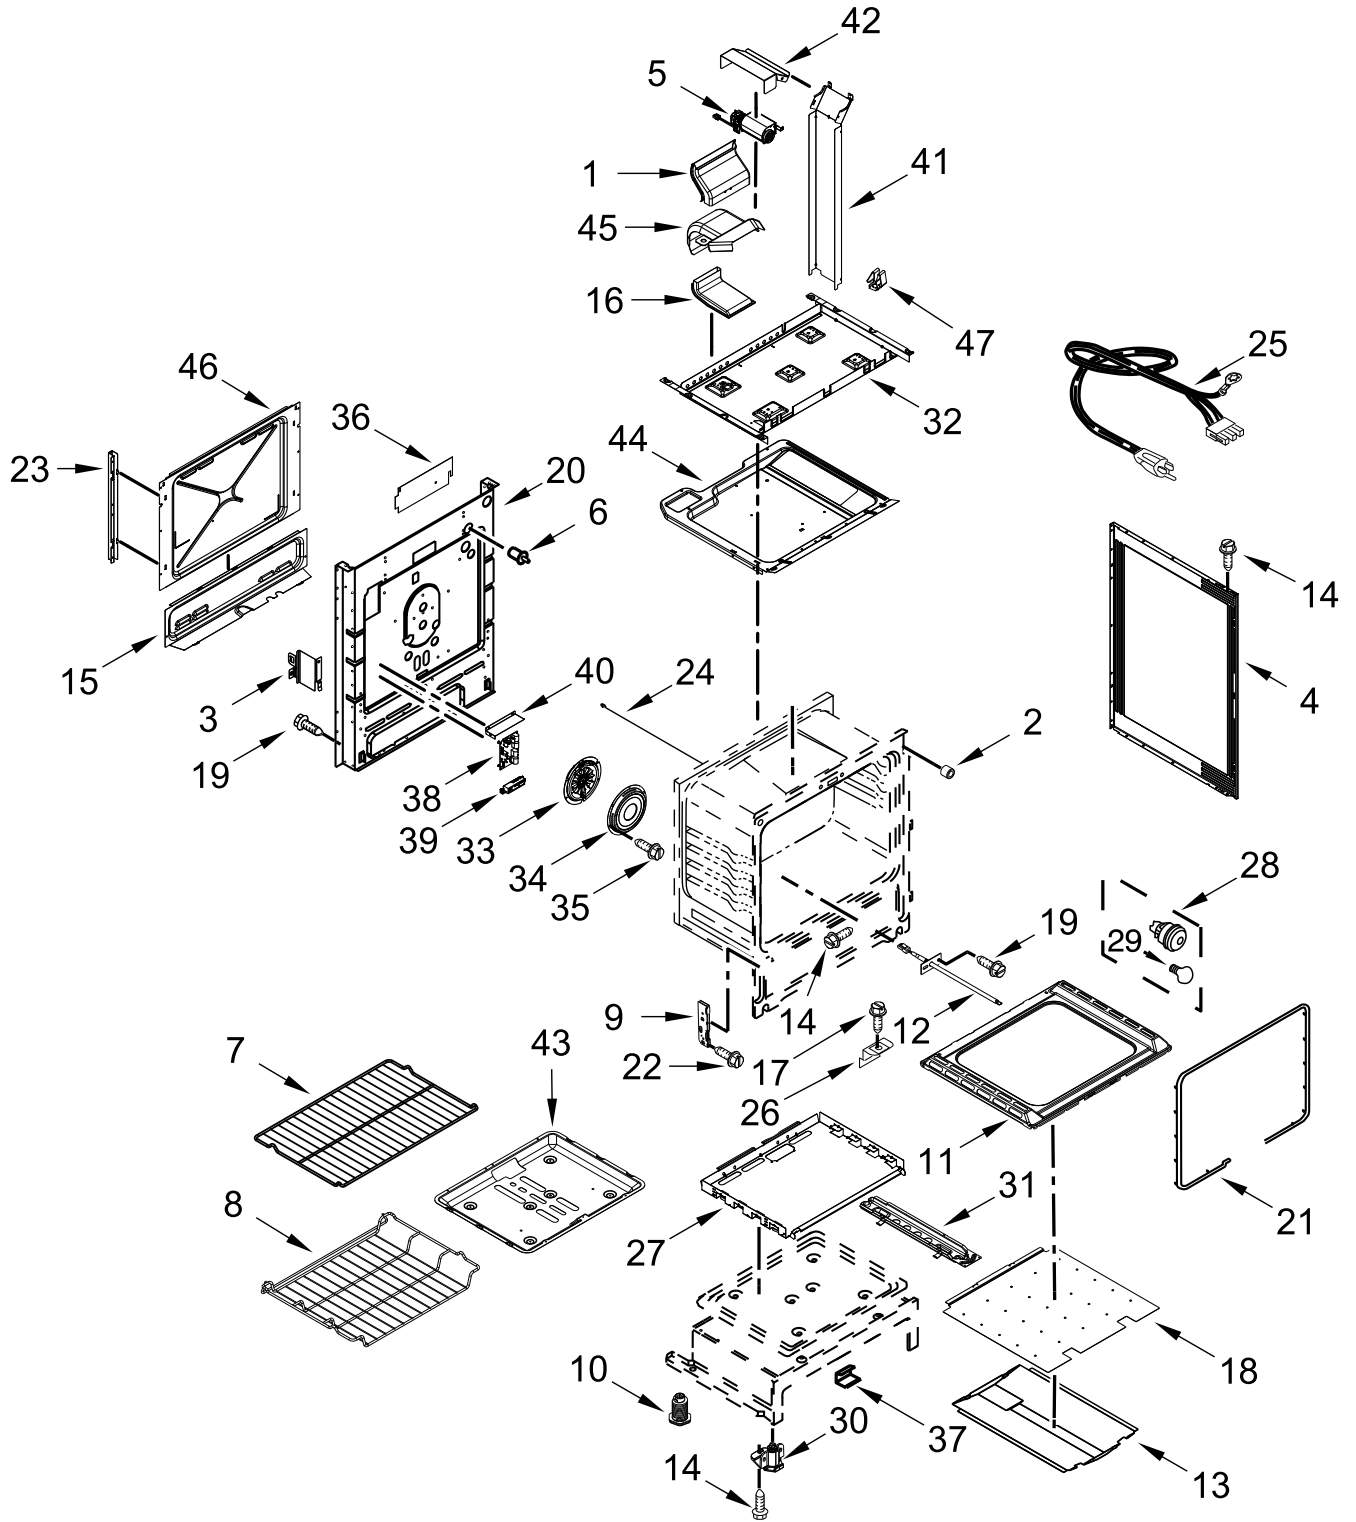

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10614920	Assembly, Flue	20		Back, Main (Not Serviced)	38	W10457998	Module, Spark (0+2)
2	9758701	Spacer, Door				39	W10475149	Module, Spark (5+0)
3	W10273002	Bracket, Oven Support	21	W10162385	Gasket, Door	40	W10655451	Guard, Splash
4		Panel, Side	22	W10031780	Screw	41	W10162254	Duct, Cooling
	W10162245	Black	23	W10162241	Channel, Rear	42	W10162255	Duct, Cover
5	W10877642	Assembly, Cooling Fan	24	W10273192	Rod, Door Switch	43	W10273204	Pan, Bake
6	W10627802	Switch, Door	25	W10889764	Cord, Power	44	W10289168	Box, Burner SI
7	W10531060	Rack, Oven	26	W10035900	Support, Oven Bottom	45	W10162257	Duct, Cooktop
8	W10289145	Rack, Oven (Gull-Wing)	27	W10541959	Shield, Bake	46	W10849261	Cover, Back
9	W10289077	Receiver, Hinge	28	W10454648	Assembly, Light	47	W10866583	Panel, Clip
10	W10058460	Foot, Leveling	29	311255	Bulb, Oven Light			FOLLOWING PARTS NOT ILLUSTRATED
11	W10211368	Bottom, Oven	30	W10341186	Assembly, Front Foot			
12	W10181986	Sensor, Oven	31	W10390008	Assembly, Base Rail (Left)		4820F015-59	Insulation, Strap
13	3601P356-45	Baffle, Bake Burner		W10390007	Assembly, Base Rail (Right)		W10289173	Insulation, Wrap
14	3196178	Screw	32	W10885904	Box, Burner Gas		W10162240	Insulation, Back
15	W10162249	Cover, Wire	33	W10874477	Assembly, Convection		W10867892	Kit, LP 5 Orifice Conversion
16	W10311326	Assembly, Flue (Upper)	34	W10346154	Cover, Convection		W10566535	Kit, LP Conversion (Bake/Broil)
17	W10362924	Screw	35	W10362924	Screw			
18	W10323077	Diffuser, Flame	36	W10813366	Shield, Wire			
19	3196178	Screw	37	W10137382	Clip, Panel			


MANIFOLD PARTS

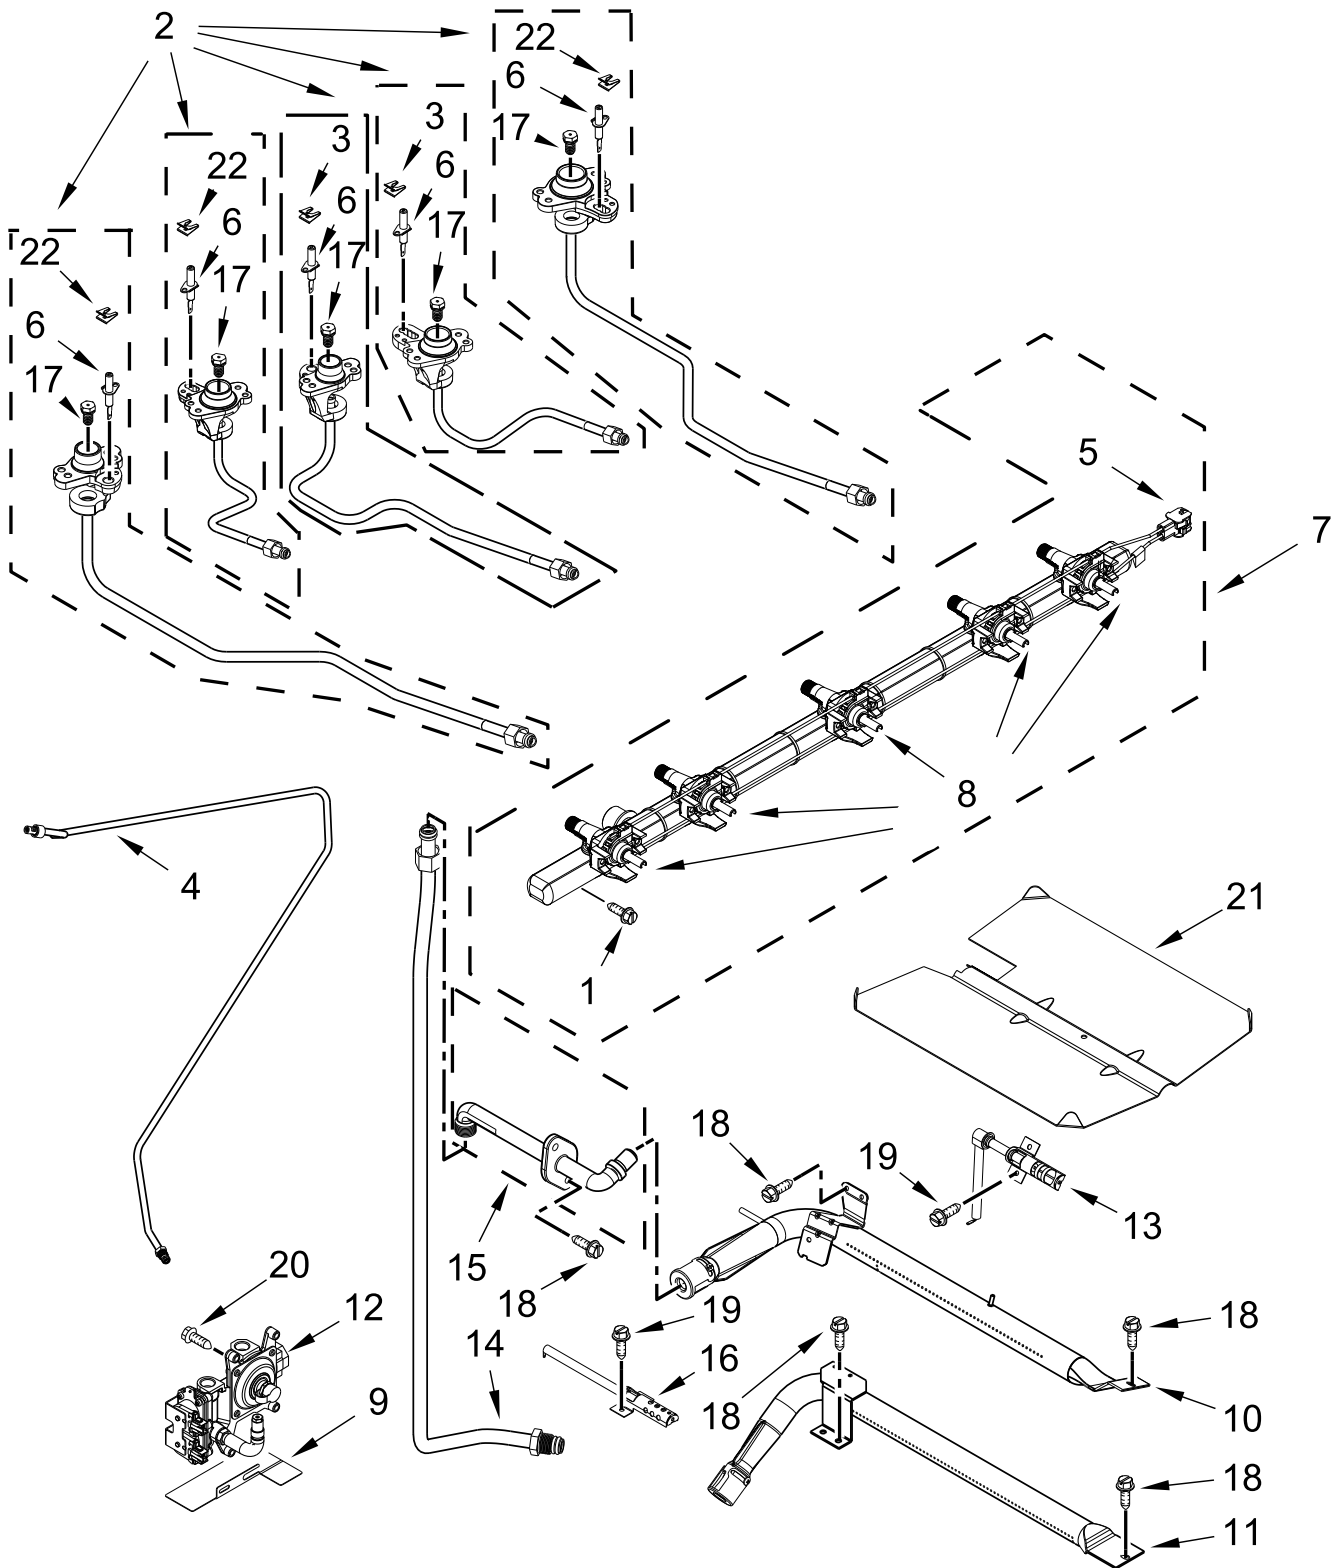

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10246216	Screw	6	W10669526	Electrode, Burner	12	W10554066	Valve, Regulator
2	W10867777	Assembly, Orifice (Left Front)			(Left Front and Right Rear)	13	W10324262	Igniter, Bake
	W10867779	Assembly, Orifice (Left Rear)		W10669524	Electrode, Burner (Left Rear)	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)
	W10867780	Assembly, Orifice (Right Front)		W11084034	Electrode, Burner (Right Front)	15	W10583216	Fitting, Broil Burner
	W10867778	Assembly, Orifice (Right Rear)		W11082199	Electrode, Burner (Center)	16	W10333842	Electrode, Broil
	W11047836	Assembly, Orifice (Center)	7	W10862591	Assembly, Manifold	17	W10907865	Orifice (Left Front)
3	W11084050	Clip, Electrode	8	W11033235	Valve, Gas (Right Rear and Center)		W10849719	Orifice (Left Rear)
4	W11107282	Tube, Supply					W10672111	Orifice (1.65MM) (Right Front)
5	W10885903	Harness, Spark Switch		W11033237	Valve, Gas (Left Rear)		W10849714	Orifice (Right Rear)
				W11033232	Valve, Gas (Left Front and Right Front)		W10674732	Orifice (10K) (Center)
			9	W10224921	Bracket, Aegis	18	3196178	Screw
			10	W10439242	Burner, Broiler	19	3196385	Screw
			11	W10680035	Burner, Bake	20	3400016	Screw
						21	3601P336-45	Baffle, Broil Burner
						22	W10827923	Spring, Electrode

DOOR PARTS

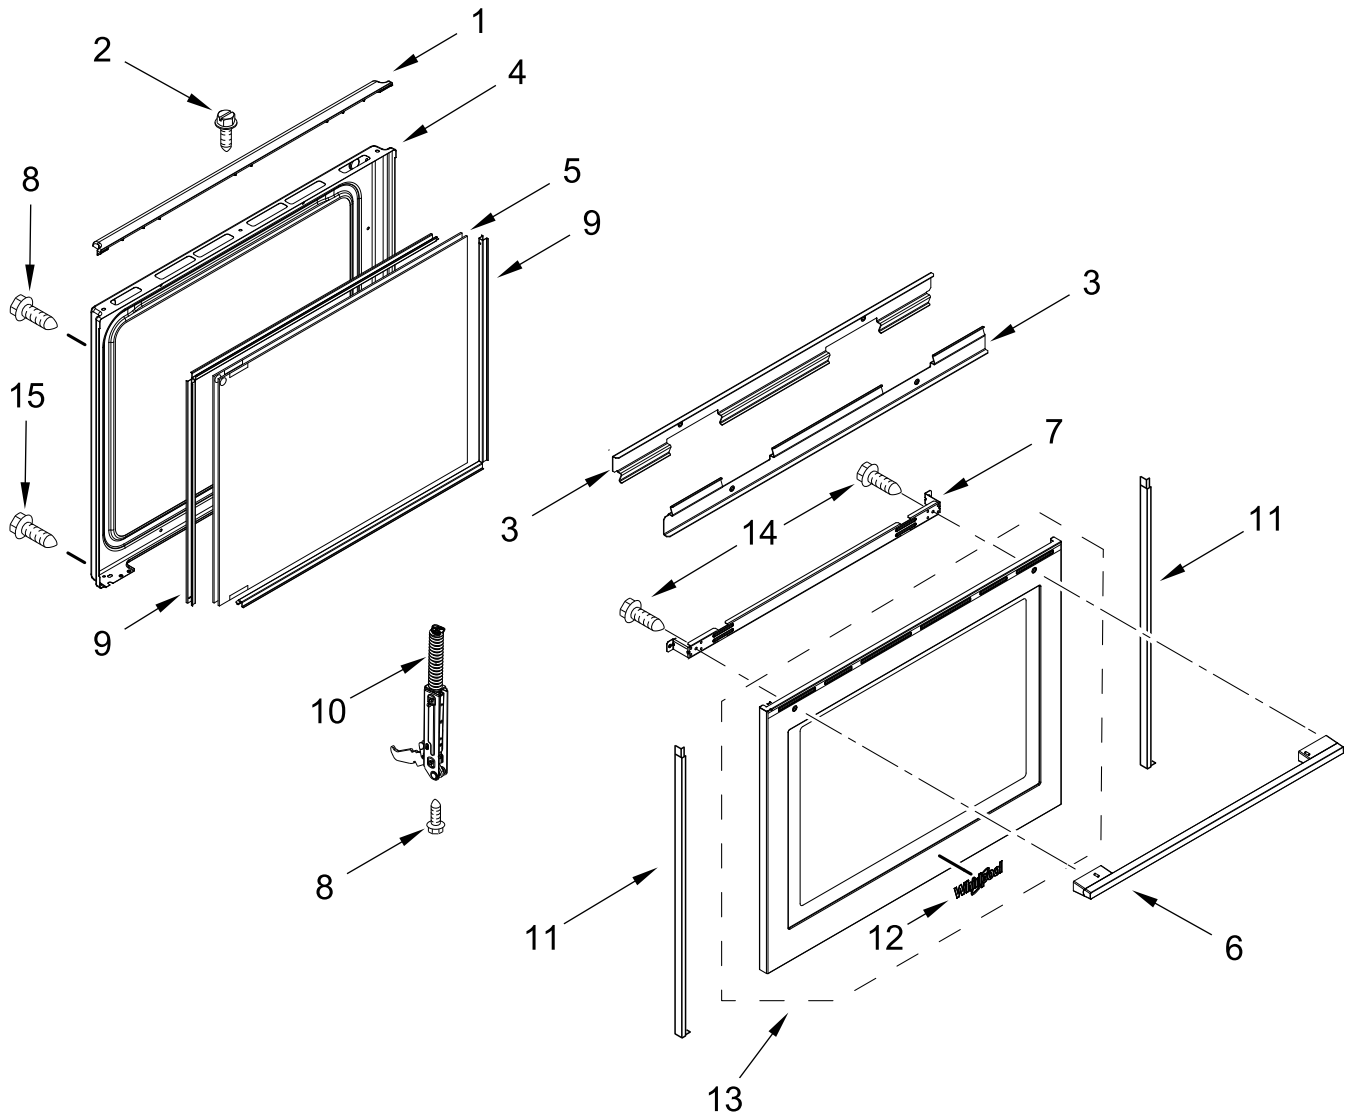


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10887939	Black
2	3196184	Screw
3	W10813140	Rail, Horizontal Support
4	W10826568	Liner, Door
5	W11088591	Glass, Inner
6		Handle, Door
	W10914779	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10541911	Bracket, Glass Upper Handle
8	W10031790	Screw
9	W10813142	Spacer, Glass
10	W11184046	Hinge, Door (Active)
11	W10813139	Rail, Vertical Support
12	W10884775	Nameplate

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13		Glass, Outer
	W10864214	Stainless
	W10859924	Sunset Bronze
14	8533988	Screw
15	W10031780	Screw

DRAWER PARTS

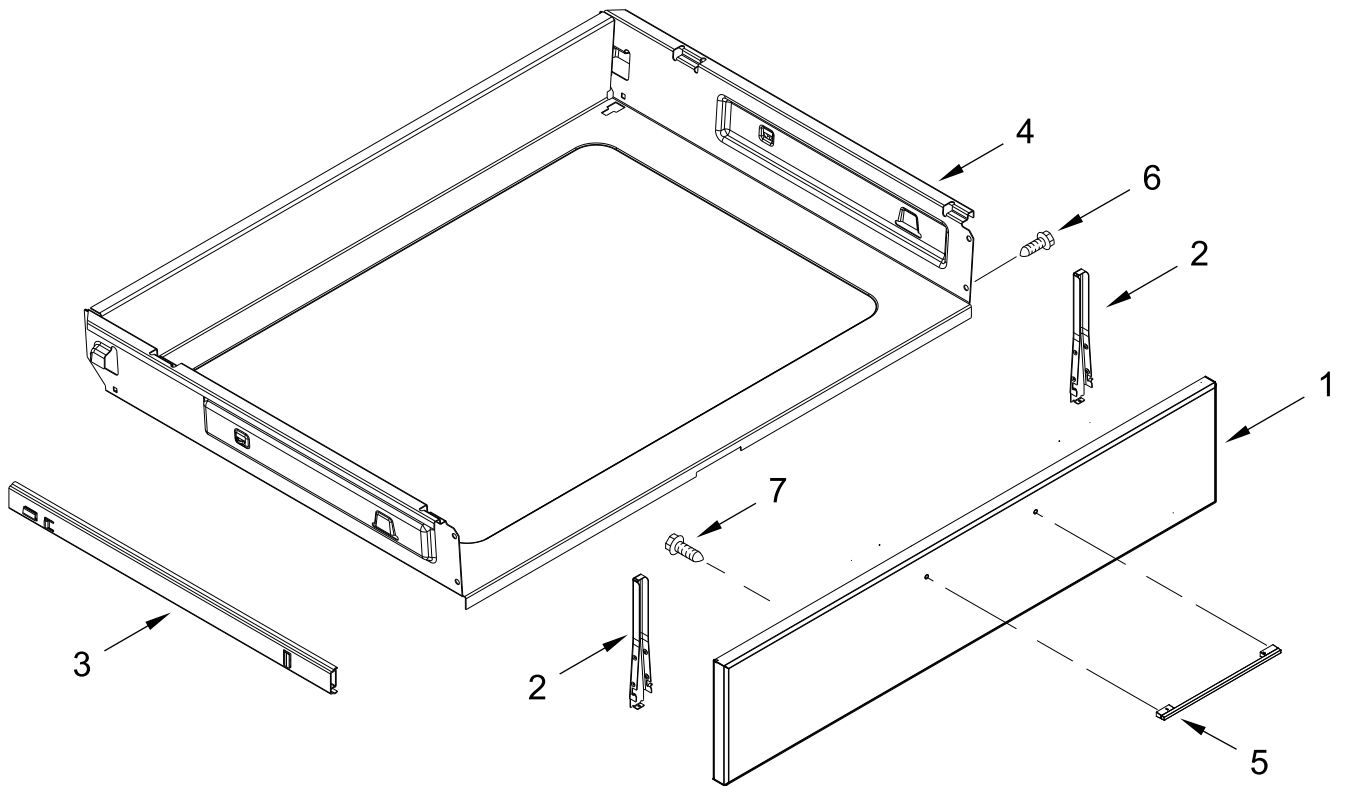

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10441804	Slide, Drawer (Left)	5		Handle, Drawer
	W11039972	Stainless		W10441805	Slide, Drawer (Right)		W11082254	Stainless
	W11039973	Sunset Bronze				6	3196169	Screw
2	W10318026	Bracket, Mounting	4	W10688022	Drawer, Storage	7	W10327235	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31463A	Protectant, Cooktop
	31605	Kit, Cooktop Care
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	W10355049	Wipes, Stainless Steel Cleaning
	W10355010	Cleaner, Kitchen & Appliance
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	WA906B	Scraper, Cooktop
	242905	Kit, Canning Unit
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10432545	Kit, Grill
	W10432544	Griddle
	W10432019	Alt Cleaning Kit Assembly, Trim (5/8")
	W10675026	Black
	W10675027	White
	W10675028	Stainless (1 1/8")
	W10731886	Black
	W10731885	White
	W10731887	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless