Mission 1 Bottom Freezer Sabbath Mode

✓ All Mission 1 bottom freezers have Sabbath mode

To activate Sabbath mode on dispenser models:

Press and hold the lock control and light buttons simultaneously for 5 seconds. (*To deactivate Sabbath mode repeat previous steps.*)

To activate Sabbath mode on non-dispenser models:

Press and hold the door alarm and ice maker buttons simultaneously for 5 seconds. (To deactivate Sabbath mode repeat previous steps.)

