

Sabbath Mode: Ranges & Wall Ovens

Model	To activate/deactivate Sabbath mode:
NE58K9430 NE58K(R)9560 NE58M(R)4320(1) NE58N6630 NE58N6650 NE58R9311 NE59J7850 NE59M6850 NX58K7850 NX58M6630 NX58M6650 NX58M6850 NX58M(N)9420 NX58R9311 NX58R9421 5000 Series Wall Ovens	Touch BAKE , enter the desired temperature and touch START/SET . Press BAKE + "1" (on number keypad) simultaneously for 3 seconds.
NE58K9850 NX58K9850 NY58J9850 6000 Series Wall Ovens	Touch BAKE , enter the desired temperature and touch START/SET . Press BAKE + TOUCH TO WAKE-UP/SLEEP simultaneously for 3 seconds.
NE58F9500 NE58F9710 NX58H9500	Touch BAKE/CHEF BAKE , enter the desired temperature and touch OVEN START/SET . Press BAKE/CHEF BAKE + TOUCH TO WAKE-UP simultaneously for 3 seconds.
NX58H5600 NX58R4311	Touch BAKE , enter the desired temperature and touch START . Press CLOCK + TIMER ON/OFF simultaneously for 3 seconds.
7000 Series Wall Ovens	Turn mode knob to BAKE mode, enter the desired temperature and cook time and tap START . Touch SETTINGS then tap SABBATH .
NE59M4310	Touch BAKE , select the desired temperature and touch START/SET . Press BAKE + ^ simultaneously for 3 seconds.