



GE APPLIANCES

CERTIFIED PRODUCT

SHABBOS KEEPER USE & CARE GUIDE

For use with approved GE Appliances Oven products.

Oven

SHABBOS KEEPER

100% Shabbos Certified Through 2050




GE APPLIANCES

CERTIFIED PRODUCT


Refer to this quick start guide while setting up and using the Shabbos Keeper. Make sure to install the Shabbos Keeper at least 24 hours prior to the Sabbath. The Shabbos Keeper needs to be plugged into the oven at all times to ensure seamless operation. Be careful not to damage the Shabbos Keeper when moving or sliding the oven. Make sure to follow the included installation instructions carefully before setting up your Shabbos Keeper with this guide.

SETUP INSTRUCTIONS

1. To ensure proper operation, the correct set-up information needs to be entered into the Shabbos Keeper before use. Use the up, down, left, right, and center buttons to navigate through the menus and make your selections at least 24 hours before the Sabbath.

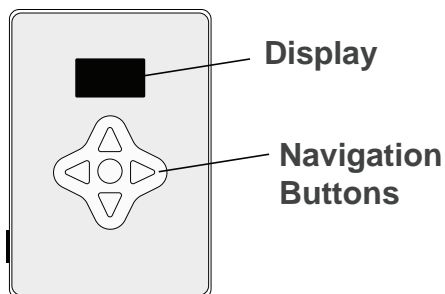

2. The first time your Shabbos Keeper is plugged in, it will communicate with the oven and check for enhanced Sabbath compatibility. Only compatible ovens can be used with the Shabbos Keeper. Ovens that are not compatible will show an error after a few minutes.

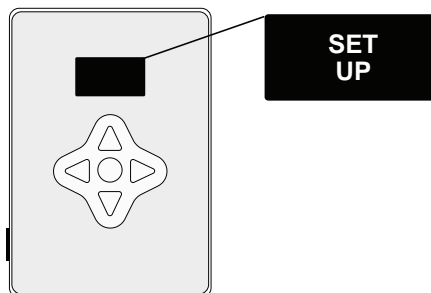

Oven

SHABBOS KEEPER


100% Shabbos Certified Through 2050



GE APPLIANCES

CERTIFIED PRODUCT

3. You will be prompted to enter the date, time, and location of the Shabbos Keeper. Use the left, right, up, and down keys to change the values and use the center button to confirm your selection.

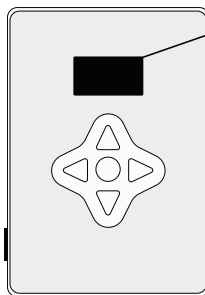


ENTER DATE
01/12/2020

ENTER TIME
12:45:00 PM

NY
MANHATTAN

4. If your city or location is not listed, you can enter the coordinates of your location into the Shabbos Keeper along with your associated time zone.

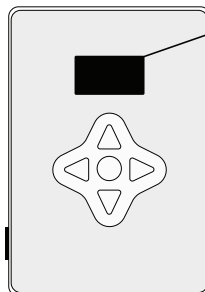


CITY NOT
LISTED

LATITUDE
00.000

LONGITUDE
00.000

TIME ZONE
EST

5. Setup is now complete. Make sure to keep your Shabbos Keeper in a proper storage location as described in the installation instructions. To adjust the time, date, or location parameters again, hold down the left and right arrow keys for 5 seconds to reset the device.

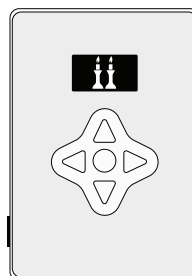

Oven

SHABBOS KEEPER

100% Shabbos Certified Through 2050



GE APPLIANCES


CERTIFIED PRODUCT

SHABBOS MODE OPERATION

Once your Shabbos Keeper is plugged in and set up, you are ready to begin using your oven during Shabbos.


1. Four hours before each Sabbath, the oven display will prompt for the user to accept Shabbos mode. To accept, press the **START** button on your oven.
2. Pressing **START** will set the oven to activate Sabbath mode at sunset. Pressing **START + 9** will set the oven to activate Sabbath mode at 90 minutes before sunset to accommodate early Sabbath. *(Please note that even when starting Sabbath mode at sunset the Shabbos Keeper will always display two candles 90 minutes prior to sunset).*

Front Control Models

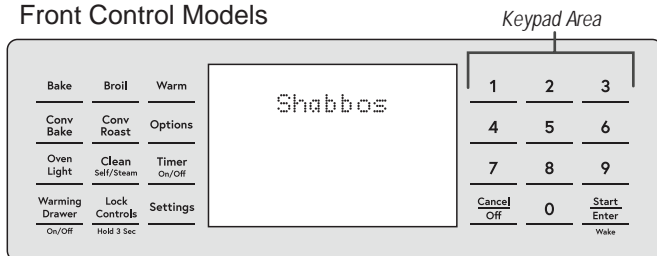

Keypad Number	Warming Hours
1	4
2	8
3	12
4	16
5	20
6	24
7	36
8	48

Rear Control Models

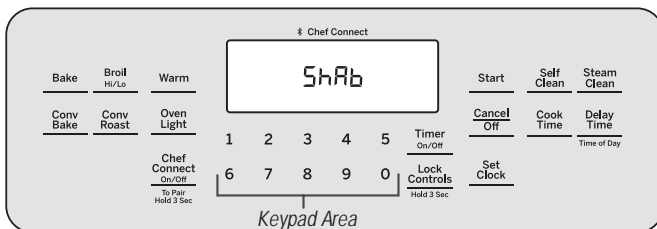

continued...

Oven

SHABBOS KEEPER

100% Shabbos Certified Through 2050



GE APPLIANCES

CERTIFIED PRODUCT

3. After accepting the Sabbath prompt you may continue to use normal cooking modes (like bake, roast, etc.) up until Sabbath start (either sunset or 90 minutes early). At Sabbath start, your appliance will automatically enter Sabbath mode.

4. Upon Sabbath mode start, the oven by default will go into a 24 hour warming mode. If you would like to change how many hours your oven warms during Sabbath, you can select the keypad number that corresponds to the amount of warming hours from the table on the prior page. Modifications to the Sabbath cycle must be made after accepting Sabbath mode and prior to Sabbath mode start. When choosing your selection you will hear an audible beep that confirms your selection has been accepted.

5. Pressing the **9** key within the 90 minutes before sunset will start Sabbath mode immediately.

SHABBOS MODE NOTES:

- If the user does not press the **START** button to accept the Shabbos mode prompt, the Oven will enter the Shabbos mode without any cooking at sunset.
- While the oven is observing the Shabbos mode, opening and closing the door will have no impact on the appliance and all buttons on the control will be disabled except for the **CANCEL** button.
- Pressing the **CANCEL** button after accepting Shabbos mode will terminate all current and future heating operations until Shabbos mode has ended.

Oven

SHABBOS KEEPER

100% Shabbos Certified Through 2050



GE APPLIANCES

CERTIFIED PRODUCT

HOLIDAY MODE OPERATION

Holiday mode is a separate mode from Shabbos mode for use on Yom Tov and other holidays. If a holiday coincides with the Sabbath, Shabbos mode takes priority.

1. Four hours before Yom Tov, the Shabbos Keeper will show a prompt on the oven display asking the user to accept Holiday mode. To accept, press the **START** button.
2. Once accepted, at sunset your oven will automatically cycle between baking and warming cycles as described by the holiday schedule below:

Day 1:

Bake 350F: From sunset until 4 hours later.

Warm : From 4 hours after sunset to 8am.

Bake 350F: From 8am to 12pm.

Warm : From 12pm to Sunset.

Day 2:

Bake 350F: From sunset until 4 hours later.

Warm : From 4 hours after sunset to 8am.

Bake 350F: From 8am to 12pm.

Warm : From 12pm to Sunset plus 90 minutes.

3. By default, your oven will automatically go into the schedule listed above at sunset. If you would like to end the above schedule earlier, you can use the keypad to select Holiday modifications just like in Shabbos Mode:

Keypad Number	Total Time
1	4
2	8
3	12
4	16
5	20
6	24
7	36
8	48

Example

Four hours before sunset on Yom Tov, you decide that you only need to cook and keep warm for eight hours after sunset instead of the two-day default. Once you accept Holiday mode, you press the number 2 key on the number pad which corresponds to an 8 hour total heating time. This means that the oven will bake at 350F from sunset until four hours later and then keep warm for an additional four hours before turning off all heating features.

Oven

SHABBOS KEEPER

100% Shabbos Certified Through 2050



GE APPLIANCES

CERTIFIED PRODUCT

HOLIDAY MODE NOTES:

- If the user does not press the **START** button to accept the Holiday mode prompt, the Oven will enter the Holiday mode without any cooking at sunset.
- While the oven is observing the Holiday mode, opening and closing the door will have no impact on the appliance and all buttons on the control will be disabled except for the **CANCEL** button.
- Pressing the **CANCEL** button after accepting Holiday mode will terminate all current and future heating operations until Holiday mode has ended.
- If you would like to enter Holiday mode 90 minutes before sunset, you may press the **9** key on the number pad at any time up until 90 minutes before sunset. This will begin the holiday schedule 90 minutes early.
- If you would like to skip 350F baking cycles and only keep warm for the duration of the Holiday mode, you may press the **0** key on the number pad at any time up until 90 minutes before sunset. This will skip the bake cycles in the holiday schedule.