



Shabbos Mode for GE Ovens 2025

Instructions:

1. Find your model number, which should begin with the following letters and be manufactured after 2018.
2. Determine which category your oven belongs to based on the description in the blue section.
3. Confirm whether a Shabbos Keeper is needed or if the regular Shabbos mode can be used, as approved by the CRC/OU.

Please note that the Shabbos Keeper and built-in Shabbos Mode operate differently, regardless of whether your oven has a certification. The Shabbos Keeper offers enhanced features and automation designed specifically for optimal Shabbos use. You can view the full manual on our website to see what it has to offer.

If you have any technical or halachic questions, feel free to email us at support@zmantechnologies.com or call us at 855-381-0977. We're happy to assist you!

Models listed below are <u>not compatible</u> with the Shabbos Keeper. It can only be used in built-in Shabbos or Yom Tov mode with a certification. Look for a logo or certification on the model and serial number tag to confirm approval. Without this certification, the model cannot be used.	Models listed below have a built-in Shabbos mode approved by CRC/ OU. These models do not require a logo on the model tag for certification. Additionally, you have the option to connect a <i>Shabbos Keeper</i> for added convenience.	Models listed below do not have any certification for built-in modes. To be approved by CRC/OU, these models must be connected to a Shabbos Keeper. *Note: These models may require a one-time software update to ensure compatibility with the Shabbos Keeper.	A Shabbos Keeper needs to be connected to this model in order to be approved by CRC/ OU. For the Double wall oven models, it's important to note that the Shabbos Keeper is exclusively linked to the upper oven and does not have control over the lower oven. *Note: These models may require a one-time software update.
--	---	--	--

RGBS400 - Gas Range Slide In	GGF400 - Gas Range Free Standing	C2S900P Dual Fuel Slide In	JTS5000 - Single Wall Oven 30"
XGBS400 - Gas Range Slide In	XGF500 - Gas Range Free Standing	C2Y366 - Dual Fuel Slide In	JKS5000 -Single Wall Oven 27"
JGBS60 - Gas Range Slide In	GRF400 - Electric Range Free Standing	C2Y486 - Dual Fuel Slide In	JTD5000 - Double Wall Oven 30"
JGBS61 - Gas Range Slide In	XRF500 - Electric Range Free Standing	CE5700 - Electric Range Slide In	JKD5000 - Double Wall Oven 27"
JGBS66 - Gas Range Slide In	GGF500 - Gas Range Free Standing	CGB500 - Gas Range Freestanding	Coming Soon: JTS3000 30"
JGB635 - Gas Range Freestanding	GG5500 - Gas Range Slide In	CGS700 - Gas Range Slide In	Coming Soon: JTD3000 30"
JGB645 - Gas Range Freestanding	GRF500 - Electric Range Free Standing	CGY366 - Gas Range Slide In	Coming Soon: JKS3000 27"
JGSS61 - Gas Range Freestanding	GRS500 - Electric Range Slide In	CHS900 - Induction Slide In	Coming Soon: JKD3000 27"
JGSS66 - Gas Range Freestanding	GGF600 -Gas Range Free Standing	CHS90X - Induction Slide In	
JBS60 - Electric Range Free Standing	GGS60L - Gas Range Slide In	JB735 - Electric Range Free Standing	
JB625 - Electric Range Free Standing	GG5600 - Gas Range Slide In	JGB660 - Electric Range Free Standing	
JB645 - Electric Range Free Standing	GRF600 - Electric Range Free Standing	JGB735 - Electric Range Free Standing	
	GRS60L - Electric Range Slide In	JGS760 - Gas Range Slide In	
	GRS600 - Electric Range Slide In	JS760 - Electric Range Slide In	
		P2S930 - Dual Fuel Slide In	
		PB935 - Electric Range Free Standing	
		PGB935 -Gas Range Free Standing	
		PGS930 -Gas Range Slide In	
		PHS930 - Induction Slide In	
		PSS93 - Electric Slide In	
		ZDP304 - Dual Fuel Slide In	
		ZDP366 - Dual Fuel Slide In	
		ZDP486 - Dual Fuel Slide In	
		ZGP304 - Gas Range Slide In	
		ZGP364 - Gas Range Slide In	
		ZGP366 - Gas Range Slide In	
		ZGP486 - Gas Range Slide In	



Shabbos Keeper Refrigerator Guide 2025

Overview: The Shabbos Keeper (Version 4) is designed for selected model GE refrigerators, primarily those manufactured after 2018, ensuring full Shabbos compliance. The Shabbos Keeper disables critical functions that cannot be manually controlled or are not managed by a standard built-in Shabbos mode. Please refer to the Ice Maker Usage Guidelines below to see the icemaker status for your model.

Model Compatibility:

Standard Models: Any model listed below is compatible with the Shabbos Keeper and typically does not require special updates. If you encounter any technical issues, please contact us for assistance.

Models with an Asterisk (*): All Top Freezer models listed below with an asterisk (*) are OU-approved if manufactured after 2023. These models are not compatible with the Shabbos Keeper. You can find the OU logo inside the model tag. For these models, you must manually set the Shabbos mode.

Upgrading Existing Refrigerators: If you own a refrigerator and are considering adding the Shabbos Keeper, please contact us. We will verify whether your appliance can be updated to ensure compatibility.

Key Features:

100% Shabbos Compliant: The only solution for GE refrigerators that ensures full compliance for Shabbos by deactivating essential functions such as the compressor, fan, lights, and sensors, allowing them to operate solely on a time-based cycle to maintain correct temperatures, using an Enhanced Shabbos Mode. (EHM). It's certified, endorsed, and encouraged by leading halachic authorities.

Shabbos Mode Activation: The Shabbos Keeper automatically enters Shabbos mode 90 minutes prior to every Shabbos and Yom Tov for a hassle-free Shabbos experience.

Ice Maker Usage Guidelines:

Automatically Disabled with Shabbos Keeper: If your refrigerator falls under this category, you do not need to take any action before Shabbos. The Shabbos Keeper automatically disables the icemaker, so no manual intervention is needed.

Recommend to Manually Disable Icemaker: For these models, the Shabbos Keeper does not deactivate the icemaker. Therefore, you must manually turn off the icemaker before Shabbos even if you do not intend to use the ice on shabbos. If left on, actions such as opening and closing the freezer door/drawer can activate the icemaker's sensors causing it to produce ice. To prevent this, manually disable the icemaker to avoid unintentional activation during Shabbos.

Recommend to Manually Disable Icemaker When Planning to Take Ice: For these models, the Shabbos Keeper does not connect to or deactivate the icemaker. If you plan to manually retrieve ice during Shabbos, ensure the icemaker is turned off beforehand to prevent it from producing more ice. If you are not using the icemaker, it does not need to be deactivated before Shabbos, as it will only activate the sensors and ice production if ice is removed.

Contact Us: If you have any halachic or technical questions or experience issues, feel free to reach out to us.

Email: Support@ZmanTechnologies.com **WhatsApp:** 347-433-6078 **Phone:** 855-381-0977.



MODEL NUMBER	FRIDGE STYLE	WIDTH	ICE MAKER USAGE GUIDELINES
GDE21DGK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GDE21DMK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GDE21DSK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GDE21DYR	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GDE21EGK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GDE21EMK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GDE21ESK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GDE21EYK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GDE25EGK	2-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GDE25ESK	2-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GDE25EYK	2-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
PDE21KGK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PDE21KMK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PDE21KSK	2-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
CFE28TP2	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CFE28TP3	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CFE28TP4	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CFE28TSH	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CFE28UEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CFE28UP2	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper



CFE28UP3	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CFE28USH	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CWE23SP2	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CWE23SP3	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CWE23SP4	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CWE23SSH	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CYE22TP2	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CYE22TP3	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CYE22TP4	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CYE22TSH	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CYE22UEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CYE22UP2	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CYE22UP3	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CYE22USH	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
DFE28JBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
DFE28JEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
DFE28JMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
DFE28JSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFD28GBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFD28GEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFD28GML	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFD28GSL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper



GFD28GYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE26GGK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE26GMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE26GSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE28GBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE28GEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE28GGK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE28GMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE28GSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE28GYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE28HMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE28HSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFE28HYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFS26GMN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GFS26GSN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GNE29GGK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GNE29GMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GNE29GSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GNE29GYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GWE23GEN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GWE23GMN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GWE23GYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper



GYE22GEN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GYE22GMN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GYE22GYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GYE22HBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GYE22HMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GYE22HSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GYE22HYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GYS22GMN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
GYS22GSN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFD28KBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFD28KSL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFD28KYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28KBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28KEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28KMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28KSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28KYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28PBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28PEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28PMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28PSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PFE28PYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper



PWE23KEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PWE23KMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PWE23KSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PWE23KYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PWE23SWN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYD22KBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYD22KEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYD22KSL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYD22KYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22KBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22KEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22KMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22KSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22KYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22PBL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22PEL	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22PMK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22PSK	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PYE22PYN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
ZWE23ESH	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
ZWE23ESN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
ZWE23NST	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper



ZWE23PSH	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
ZWE23PSN	3-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CNE25SSK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
CWE19SP2	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
CWE19SP3	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
CWE19SP4	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GNE21DGK	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GNE21DSK	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GNE21DYR	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GNE21FMK	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GNE21FSK	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GNE21FYK	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
GNE25DGK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GNE25DSK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GNE25DYR	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GNE25JGK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GNE25JMK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GNE25JSK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GNE25JYK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GNE27ESM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker
GNE27EYM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker
GNE27JGM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker



GNE27JMM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker
GNE27JSM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker
GNE27JYM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker
GWE19JGL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GWE19JML	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GWE19JSL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GWE19JYL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
GWE22JYM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker
NNE21DSM	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PNE21KGK	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PNE21KMK	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PNE21KSK	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PNE21NGL	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PNE21NML	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PNE21NSL	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PNE21NYR	3-door Bottom Freezer	30"	Recommend to Manually Disable Icemaker
PNE25JGK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
PNE25JMK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
PNE25JSK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
PNE25NGL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
PNE25NML	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
PNE25NSL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker



PNE25NYR	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker
QNE27JBM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker
QNE27JSM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker
QNE27JYM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker
CFE24SSK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
CFE26KP2	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
DFE24JYR	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE24JBL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE24JGK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE24JMK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE24JSK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE24JYK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE26JBM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE26JEM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE26JGM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE26JMM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice



GFE26JSM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GFE26JYM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GYE18JBL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GYE18JEM	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GYE18JML	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GYE18JSL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GYE18JYL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GYE21JYM	3-door Bottom Freezer	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PFE24HBM	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PFE24HGL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PFE24HML	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PFE24HSL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PFE24HYR	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PFE24JGK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice



PFE24JMK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PFE24JSK	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PYE18HBL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PYE18HEM	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PYE18HML	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PYE18HSL	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PYE18HYR	3-door Bottom Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PAE28BYT	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CGE29DM5	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CGE29DP2	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CGE29DP3	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CGE29DP4	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CJE23DM5	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CJE23DP2	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CJE23DP3	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CJE23DP4	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CVE28DMS	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CVE28DP2	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CVE28DP3	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper



CVE28DP4	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CXE22DM5	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CXE22DP2	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CXE22DP3	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CXE22DP4	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PGD29BYT	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PGE29BYT	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PJD23BYW	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PJE23BYW	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PVD28BYN	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PXD22BYP	4-door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CSB42WP2N	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
CSB42WP2R	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
CSB42YP2N	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
CSB42YP2R	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
CSB48WP2N	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
CSB48WP2R	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
CSB48YP2N	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
CSB48YP2R	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
PSB42YSN	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
PSB42YSR	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
PSB48YSN	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper



PSB48YSR	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
ZIS420NN	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
ZIS420NP	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
ZIS480NN	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
ZIS480NP	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
ZISB360DN	Built-in Side-by-Side	36"	Automatically disabled with Shabbos Keeper
ZISB360DP	Built-in Side-by-Side	36"	Automatically disabled with Shabbos Keeper
ZISB420DN	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
ZISB420DP	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
ZISB480DN	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
ZISB480DP	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
ZISP420DN	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
ZISP480DN	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
ZISS360DN	Built-in Side-by-Side	36"	Automatically disabled with Shabbos Keeper
ZISS360DP	Built-in Side-by-Side	36"	Automatically disabled with Shabbos Keeper
ZISS420DN	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
ZISS420DP	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
ZISS420NN	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
ZISS420NP	Built-in Side-by-Side	42"	Automatically disabled with Shabbos Keeper
ZISS480DN	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
ZISS480DP	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
ZISS480NN	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper



ZISS480NP	Built-in Side-by-Side	48"	Automatically disabled with Shabbos Keeper
ZIF181NBR	Columns	18"	Automatically disabled with Shabbos Keeper
ZIF181NPN	Columns	18"	Automatically disabled with Shabbos Keeper
ZIF181NPP	Columns	18"	Automatically disabled with Shabbos Keeper
ZIF241NBR	Columns	24"	Automatically disabled with Shabbos Keeper
ZIF241NPN	Columns	24"	Automatically disabled with Shabbos Keeper
ZIF241NPP	Columns	24"	Automatically disabled with Shabbos Keeper
ZIF301NBR	Columns	30"	Automatically disabled with Shabbos Keeper
ZIF301NPN	Columns	30"	Automatically disabled with Shabbos Keeper
ZIF301NPP	Columns	30"	Automatically disabled with Shabbos Keeper
ZIF361NBR	Columns	36"	Automatically disabled with Shabbos Keeper
ZIF361NPR	Columns	36"	Automatically disabled with Shabbos Keeper
ZIR241NBR	Columns	24"	Automatically disabled with Shabbos Keeper
ZIR241NPN	Columns	24"	Automatically disabled with Shabbos Keeper
ZIR241NPP	Columns	24"	Automatically disabled with Shabbos Keeper
ZIR301NBR	Columns	30"	Automatically disabled with Shabbos Keeper
ZIR301NPN	Columns	30"	Automatically disabled with Shabbos Keeper
ZIR301NPP	Columns	30"	Automatically disabled with Shabbos Keeper
ZIR361NBR	Columns	36"	Automatically disabled with Shabbos Keeper
ZIR361NPR	Columns	36"	Automatically disabled with Shabbos Keeper
CIC36LP2V	Integrated Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CIC36RP2V	Integrated Bottom Freezer	36"	Automatically disabled with Shabbos Keeper



CIP36NP2V	Integrated Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
ZIC363IPV	Integrated Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
ZIC363NBV	Integrated Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
ZIP364IPV	Integrated Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
ZIP364NBV	Integrated Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CAE28DM5	Quad Door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CQE28DM5	Quad Door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CHE23DMW	Quad Door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PHD23BYW	Quad Door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
PAD28BYT	Quad Door Bottom Freezer	36"	Automatically disabled with Shabbos Keeper
CZS22MP2	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSE23GGP	Side-by-Side	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSE23GSP	Side-by-Side	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSE23GYP	Side-by-Side	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSE25GGP	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSE25GSP	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSE25GYP	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS23GGP	Side-by-Side	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice



GSS23GMP	Side-by-Side	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS23GYP	Side-by-Side	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS25GGP	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS25GMP	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS25GYP	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS25IBN	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS25IEN	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS25IGN	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS25IMN	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GSS25IYN	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GZS22IEN	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GZS22IMN	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GZS22IYN	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PSE25KYH	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice



PSS28KYH	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
PZS22MYK	Side-by-Side	36"	Recommend to Manually Disable Icemaker when Planning to Take Ice
Models below marked with an asterisk (*): All Top Freezer models manufactured after 2023 are OU-approved. However, these models are not compatible with the Shabbos Keeper . The OU logo can be found inside the model tag			
GIE17GSN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GIE18DTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GIE18GCN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GIE18GSN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GIE18GTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GIE19JSN*	Top Freezer	30"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GIE22JMN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GIE22JSN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GIE22JTN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GPE17CTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE16DTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice



GTE16GTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE17DTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE17GSN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE17GTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE18DCN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE18DTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE18GMN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE18GSN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE18GTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE19DTN*	Top Freezer	30"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE19JSN*	Top Freezer	30"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE19JTN*	Top Freezer	30"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE22JMN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTE22JSN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice



GTE22JTN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS16DTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS17DTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS17GSN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS17GTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS18DTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS18GSN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS18GTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS18HGN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS18HMN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS18HSN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS18HYN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS19KGN*	Top Freezer	30"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS19KMN*	Top Freezer	30"	Recommend to Manually Disable Icemaker when Planning to Take Ice



GTS19KSN*	Top Freezer	30"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS19KYN*	Top Freezer	30"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS22KGN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS22KMN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS22KSN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
GTS22KYN*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice
HPE16BTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
HPS16BTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
HPS18BGN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
HPS18BTN*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
XRE18GGA*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
XRS16BGA*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
XRS18GGA*	Top Freezer	28"	Recommend to Manually Disable Icemaker when Planning to Take Ice
XRS22KGA*	Top Freezer	33"	Recommend to Manually Disable Icemaker when Planning to Take Ice