



Designer Series Undercounter Ice Maker

Use and Care Guide



CLEANING, MAINTENANCE,
AND MORE



Contents

3 Designer Series Undercounter Ice Maker

4 Important Note

5 Safety Precautions

6 Designer Series Undercounter Ice Maker Features

7 Touch Controls

9 Operation

10 Care Recommendations

13 Troubleshooting

14 Sub-Zero Warranty

16 Fabricadora de hielo bajo mostrador de la Serie de Diseño

18 Precauciones de seguridad

19 Máquina de hielo empotrable de la serie Designer

20 Controles táctiles

22 Funcionamiento

23 Recomendaciones para el cuidado

27 Solución de problemas

29 Garantía de Sub-Zero

32 Machine à glaçons sous le comptoir série Concepteur

34 Précautions de sécurité

35 Caractéristiques de la machine à glaçons sous le comptoir série Concepteur

36 Commandes tactiles

38 Fonctionnement

39 Conseils d’entretien

43 Dépannage

45 Garantie Sub-Zero

Important Note

Features and specifications are subject to change at any time without notice. Visit subzero-wolf.com/specs for the most up-to-date information.

To ensure this product is installed and operated as safely and efficiently as possible, take note of the following types of highlighted information throughout this guide:

IMPORTANT NOTE: Highlights information that is especially important.

 **CAUTION**

Indicates a situation where minor injury or product damage may occur if instructions are not followed.

 **WARNING**

States a hazard that may cause serious injury or death if precautions are not followed.

IMPORTANT NOTE: Throughout this guide, dimensions in parentheses are millimeters unless otherwise specified.

IMPORTANT NOTE: Save these instructions for the local electrical inspector.


Designer Series Undercounter Ice Maker Features

Designer Series Undercounter Ice Maker Features

1	Product Rating Plate
2	Touchscreen
3	Ice Bin
4	Cleaning Drawer
5	Ice Scoop

MaxQuiet™

MaxQuiet™ technology ensures near-silent operation.

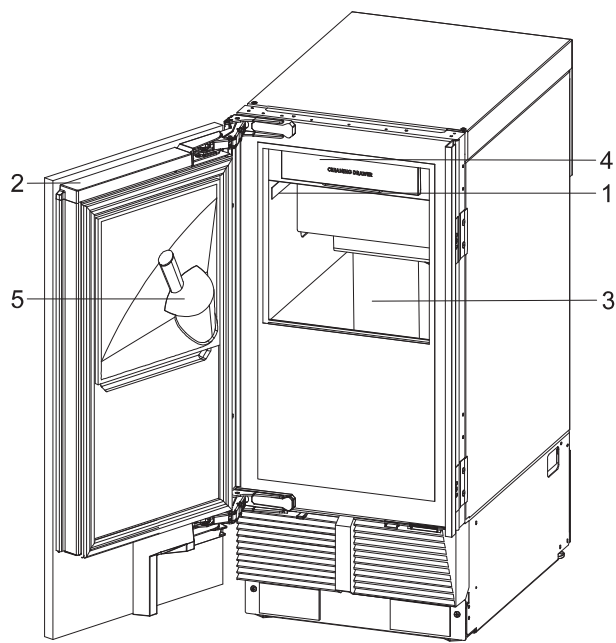

Initial Startup

Touch and hold  on the touchscreen. Touch  to begin ice production.



Settings

To access the Settings menu, touch  on the touchscreen.

ICON	DESCRIPTION
	Select the soft on light duration and adjust the status light. Status light is only visible during the cleaning process. Refer to "Clean" on page 10.
	Turn the door alarm on or off and set duration.
	Adjust the door alarm volume and tone.
	Start a clean cycle and set reminder duration.
	View water filter percent remaining (only appears when the filter is installed).
	Turn connect on or off.
	Rotate the touchscreen configuration.
	Turn the unit on or off.
	Turn Sabbath on or off.
	Select language.
	Start the winterization process.
	Adjust cube weight.
	View troubleshooting and service information.
	View system information.

