





Welcome

Thank you for purchasing a Speed Queen® appliance. We value you as a customer. At Speed Queen, leading performance is our daily reality. We seek to deliver an outstanding experience in every aspect of laundry. Your machine was built to last 25 years in your home and Speed Queen support has been built to provide you with the best service in the industry.

Installation

Parts included:









Two (2) filter

Two (2) plain rubber washers

Four (4) rubber feet

Beaded strap

- 1. Remove shipping brace and shipping plug.
- 2. Wipe out inside of washtub.
- **3.** Connect fill hoses water pressure = 20-120 psi [138-827 kPa].
 - Two required, sold separately
 - Flush water supply lines
 - · Use two filter screen washers with screen facing faucet
 - Use two rubber washers in end of hose connecting to the machine
- **4.** Connect drain hose to drain receptacle 36 in. [91 cm] recommended height.
 - · Use beaded strap to secure drain hose to drain receptacle

- 5. Position and level washer adjust front two legs. Tilt washer forward and back to set rear legs.
 - Place four rubber feet on leveling legs
- **6.** Connect washer to electrical power on individual branch circuit. Refer to serial plate for electrical ratings.
- **7.** Run washer through one complete cycle to make sure it is operating properly.
- 8. Check for leaks.



Cycle Information

The Normal Eco Cycle

The Normal Eco Cycle is designed for providing an eco-friendly solution for washing everyday cottons and linens. You will notice that this cycle uses less water and less hot water than other cycles. These functions are unique to the Normal Eco Cycle. All other cycles and options have no temperature restriction and use a full tub rinse.

Fabric softener should not be used with the Normal Eco cycle unless the Extra Rinse option is also selected

The Favorites Cycle

The Favorites keypad allows the user to save nine different cycles, selections and options for later use.

- 1. Press the Favorites keypad. The control will display the settings for the first Favorites cycle. The display will switch between F1 and the cycle time for the selected cycle.
- 2. Press the keypads for the desired settings.
- 3. Press the Favorites keypad to save the settings.
- 4. The next Favorites cycle, F2, will be displayed. Access saved Favorites cycles by pressing Favorites keypad and then the up and down arrow keypads.

Auto Fill

Auto Fill will provide the most efficient use of water and also enhance wash performance by optimizing the water level for each particular load size and type.

Electronic Control Washers – Special Cycles Reference

When you select the Special Cycles keypad, pressing the up and down arrow keypads will allow you to choose from eight different cycles. The display will show P and a number relating to the cycle.



P1

Eco Heavy Duty

This cycle uses a spray rinse to reduce water consumption. It also uses less hot water. It has a longer wash time than the Normal Eco cycle. If using fabric softener in this cycle, select the Extra Rinse option.

P2

Eco Delicate

This cycle uses a spray rinse to reduce water consumption. It also uses less hot water. It has a shorter wash time and a gentler wash action than the Normal Eco cycle. If using fabric softener in this cycle, select the Extra Rinse option.

P3

Waterproof

Wash waterproof items such as rain coats and bed liners with this cycle. It includes a gentle agitation, very low spin, and lower water levels. For best washing results, add another item such as a cotton sheet on top of the waterproof items to make sure they get fully submersed in the water and that no air is trapped under the waterproof items.

P4

Super Soiled

Use for very heavily soiled items. It includes a 15-minute soak at the beginning of the cycle, a longer wash time than Heavy Duty and Extra Rinse.

P5

Whites

This cycle is designed to keep white laundry white. It utilizes a longer wash time. Use for items such as sheets and towels.

P6

Wool

Wash wool items using this cycle. It includes cold water, a 30-minute soak, a very short gentle agitation, a one-minute spin, a cold rinse, and an extended spin time.

P7

Athletic

This cycle includes a cold wash and a shorter, gentle agitation.

P8

Denim

This cycle is similar to the Heavy Duty cycle but with cold wash and a longer spin time.

Operating

1. Prepare laundry



3. Load laundry



- **5.** Set cycle
- 7. Set load size (Auto fill recommended)
- **9.** Press start/pause


2. Add laundry supplies



4. Close lid



- **6.** Set temperature
- **8.** Set soil level

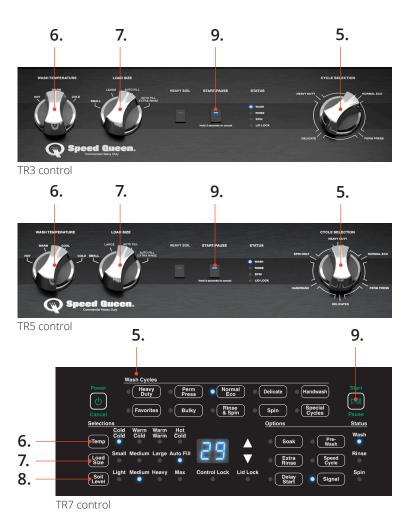

Register

1. Register your product at www.speedqueen.com to take full advantage of the limited warranty.



3, 5 & 7 Year Warranties, depending on your model. Covers all parts and in-home labor.

Note: This unit includes a limited warranty. Refer to Speedgueendoc.net to download the full warranty bond.

Download full documentation and view installation and operating videos for an immersive experience at Speedqueendoc.net or scan the QR code below.





3. If you wish to receive printed documents at no cost, please complete the order form and return by mail to the address on the form, or email your request to technical communications@alliancels.com.

Documentation

Please send me a printed Installation Manual, User's Guide, and Warranty Bond. I understand this card does not register my product. I must go to www.speedqueen.com to register.

Model No.

Serial No.

Name

Address

State

City

Phone No.

Zip Code

Email Address

Allow 1-2 weeks for delivery.

BUSINES **EPLY** MAIL



UNITED STATES MAILED IN THE NECESSARY IF NO POSTAGE



FIRST CLASS MAIL

PERMIT NO. 489

RIPON, WI

Part No. 205053 January 2020 © Published by permission of the copyright owner - DO NOT COPY or TRANSMIT Speed Queen by Alliance Laundry Systems