Wrinkle-free _____

Delicates

Smoothing____

Woolens/Silks

Dress Shirts

Fragrance flacon



It is **essential** to read the operating instruc

Operation



The sensor buttons 2, 4, 6 and 7 react to fingertip contact. Selection is possible as long as the respective sensor button is illuminated.

 If a sensor button is brightly lit, this means: currently selected

🔗 🚷 🕡 Perfect Dry

- If a sensor button is dimly lit, this means: selection possible
- Sensor buttons for the drying levels

Energy saving tips

After a drying level program is selected with the program selector, the proposed drying level lights up.

To avoid unnecessarily long drying times

- Make sure your laundry is spun at the

maximum spin speed before drying.

and high consumption of energy:

Indicator lights 🖒 🚳 💽

drying result.

quently Asked Questions".

PerfectDrv: The Perfect Dry system measures the residual moisture present in the laun-

dry in programs with selectable dry-

ing levels and provides a more precise

This message will flash until the program duration has been determined and then

.. will light up again when the selected drving level is reached and remain on until the end of the pro-

... remains off with the following programs: Woolens/Silks, Time Dry.

For drying temperature-sensitive textiles with the O symbol.

Time display

Gentle sensor button

The remaining program duration will be

displayed in hours and minutes. < <>> > sensor buttons

- later start time for the program (Delay Start) can be selected.
- The < or > sensor buttons are used for selecting the duration of the delay start period or the duration of the

Time Dry program. Start/Stop sensor button

Touching the Start/Stop sensor button starts the selected program or cancels a program that has already been started. The sensor button flashes slowly as soon as it is possible for a program to be started and then lights up constantly

after the program has started. 8 Optical interface

Make sure the room temperature is not

If there are other heat producing appliances in the room in which the tumble

dryer is located, make sure the room

is well-ventilated and switch the other

appliances off, if possible.

For service technicians. 9 Program selector

For selecting program and for switching off. The tumble dryer is switched on when you select a program and switched off by turning the program selector to the \bigcirc position.

too high.



!\ When closing the door, make sure that laundry does not get trapped in the door opening. do not open durina drvina

Shut the door with a gentle

Notes on correct laundry care


Remove foreign objects like detergent dispensing devices from the laundry. They can melt and damage the dryer and the laundry.

- Sort the laundry according to the type of fiber and weave, size, garment care label symbol, and the drying level required.
- Untangle the laundry.


Drying

- Check seams and stitching to ensure that padding and linings are intact.
- Fasten duvet covers and pillow cases to prevent small items from being rolled up inside them.
- Fasten hooks and eves.
- Tie together textile belts and apron ties.
- Sew in or remove underwiring from bras

3. Loading the tumble dryer

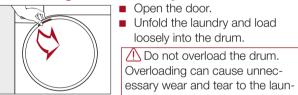

loosely into the drum. Do not overload the drum. Overloading can cause unnec-

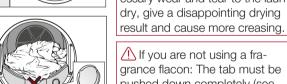

1 If you are not using a fragrance flacon: The tab must be pushed down completely (see



Control panel Access panel for the heat exchanger and plinth filter

> 5 Cold air intake grille - do not obstruct with a laundry basket or other objects

Condensed water container

- empty after every drying program

Selecting a program and starting it

Selecting a program

Turn the program selector.

 A drying level may light up and durations will appear on the time display

Programs with drying levels

- Normal, Wrinkle-free, Delicates, Dress Shirts, Express, Denims, Bed Linens, Smoothing



drying level you want. It will then light up brightly. *Dry* program. Any drying level can be selected for the Normal, Express and Bed Linens programs. A more limited range is available when using the other programs.

Time-controlled and other programs - Woolens/Silks, Proofing

The drying result is preset by the dryer and cannot be

- Time Dry



Touch the > sensor button repeatedly until the required program duration appears on the time display. You can set the duration in ten-minute increments from 0:20 minutes to 2:00 h.

■ You can change the time with the < sensor button.</p>

the care label, e.g., acrylic garments) are dried at a lower temperature and Start/Stop sensor button goes out: the program duration is longer. - Energy savings: 10 minutes after the end

■ Touch the *Gentle* sensor button. It will then light up brightly. button will begin to flash and the display will go out. Selecting Delay Start (if necessary)

minutes after the end of the Anticrease phase (with programs without an anti-

Delay Start cannot be used with the Time after the end of the program)...



Selecting Gentle (if necessary)

Delicate fabrics (with the 🖸 symbol on

You can delay the start of a program

from 0:30 minutes up to 24 h.

■ Touch the < or > sensor button repeatedly until the required delayed st time appears on the time display.

Starting a program

■ Touch the flashing Start/Stop sensor button. The Start/Stop sensor button will light up.

Energy savings: After 10 minutes, the indicators dim and the Start/Stop sensor button starts

■ Touch the Start/Stop sensor button to switch the indicators on again (this do not have any effect on a running


4. Removing the laundry at the end of the program

End of program: 0:00 lights up and the

of the program, the Start/Stop sensor

crease phase, it will switch off 15 minutes

process has finished..

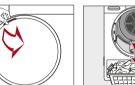

removed from the drum. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

The drum lighting switches off automatically (energy saving).

■ Close the drum door. program).

Emptying the condensed water

The 🖒 indicator light will light up if the maximum level of the condensed water container is reached.

it in a horizontal position when carrying it.

Empty the

container.

■ Replace the con-

the front and towards the back.

- The dryer will switch off automatically 15

Only open the door when the drying



Open the door.

■ Remove the laundry

Check that all items have been

The inside of the drum lights up so that you don't forget any items of laundry when you empty it.

■ Turn the program selector to ①.

■ Clean the lint filters.

■ Empty the condensed water container.

You cannot change to another program once a program has started (this prevents unintentional alterations).

Empty the condensed water container If you try to change a program, -0- will light after every drying program. up until the original program is reset.

before vou can select a new one. To turn the ≜ indicator light off: Open and Cancelling the current program

 
close the door while the dryer is switched ■ Touch the *Start/Stop* sensor button. The items will be cooled down. depending on the temperature reached ∃ Remove the condensed water and how long they have been dried for. 0:00 will light up if you press the Start/

> cooling-down phase. ■ Turn the program selector to the posi-

Stop sensor button again during the

Changing the program





condensed water Touch the Start/Stop sensor button.

Close the door.

■ Touch the *Start/Stop* sensor button.

Program duration

play to be adjusted.

grance flacon" in the operating instruc-

Inserting a fragrance flacon

Tip: Using a fragrance flacon will add a


Before using a fragrance flacon,

INSTRUCTIONS - Using a fragrance

flacon (optional accessory)" and "Fra-

please read "IMPORTANT SAFETY

pleasant fragrance to your laundry.

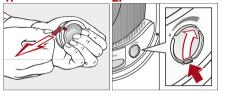

Hold the condensed water container at Touch the Start/Stop sensor button.

Adding or removing laundry

Risk of burns when touching hot


laundry of the dryer drum.

Pull open the door.

Add or remove items.

one another.

Markers 1 and 2 must line up with

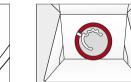

con (reverse points 3 and 4) and store it in its original

Never lav the fragrance flacon down

The further you open the flacon, the more

Turn the outer

☐ Turn the outer

ring clockwise.

To avoid the fragrance escaping need-

intense the fragrance.

Before drying



If you want to dry laundry occasionally without adding fragrance: Remove the fragrance flacon and store it in its original packaging until you want to use it

again. See the following section. Before cleaning the lint filters

Remove the fragrance fla-



packaging.



Load according to the optimum

amount of laundry recommended for

that the energy consumption for the amount of laundry is at its most eco-

Clean the lint filters after every drying

the program being used. This will mean

densed water container in the drver.

Do not drink condensed water. The program starts.

Altering the program sequence can cause the program duration shown in the time dis ■ Turn the outer ring clockwise a little.

on any surface as the fragrance will spill

The & indicator light

comes on after a pro-

gram has been can-

celled and a signal

the program.

Frequently asked questions

Program guide

Rotary iron	×	×	 always activated 	always activated	Ī	×	×	×	 always activated 	1	×	×
Hand iron	×	×	×		ı	×	×	×	×	I	×	I
Normal	×	×	×		ı	×	×	×	×	×	×	I
Extra	×	I	ı		ı	ı	×	I	ı	I	×	I
Laundry type	T-Shirts, underwear, baby clothes, workwear, jackets, covers, aprons, overalls, hand towels, bath towels, bathrobes, bed linen For T-shirts, underwear, baby clothes: do not use Extra dry (laundry can shrink)	Workwear, overalls, pullovers, dresses, pants, table linen, leggings	Dress shirts, blouses, lingerie, appliquéd garments	Cotton pants, jackets, shirts	Pullovers, cardigans, socks, leggings	Shirts, blouses	Resilient garments (such as those suitable for the Normal program)	Pants, jackets, skirts, shirts	Outdoor clothing	Microfiber fabrics, skiwear, outdoor wear, fine, close weave cotton garments (poplin), tablecloths Prohibited: Proofing agent containing paraffin	Bed linen	Thick jackets, pillows, sleeping bags, blankets
Load (weight of dry laundry)	Full load (17.6 lb)	Half load (8.8 lb)	Small load (5.7 lb)	Very small load (2.2 lb)	Small load (4.4 lb)	Small load (4.4 lb)	Half load (8.8 lb)	kleine Bela- dung (6.6 lb)	Small load (5.5 lb)	Full load (17.6 lb)	Half load (8.8 lb)	Full load (17.6 lb)
Program	Normal	Wrinkle-free	Delicates	Smoothing	Woolens/Silks	Dress Shirts	Express	Denims	Outdoor	Proofing	Bed Linens	Time Dry


Cleaning and care

Lint filters

Removing visible lint

Clean both lint filters in the door opening after every drying cycle.

Remove the fragrance flacon (if fitted).

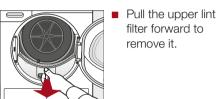

filter forward to



Use your fingers or a vacuum cleaner to remove the lint from the surface of the filter.



Push the upper lint filter back into posi tion until it clicks.

Close the door.

Cleaning the lint filters and air flow openings thoroughly

If the drying duration has become longer or the surface of the filters is visibly compacted with lint, you should carry out the following cleaning procedure.

■ Pull the upper lint filter forward to remove




Hold the dial and pull the lint filter

cleaner to

remove anv

visible lint from

forward to remove it.

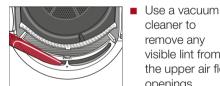

running water.

the upper air flow openings. ■ Squeeze the water out of the plinth filter ■ Flush the lint filters through with warm

Shake out the lint filters thoroughly and then dry them carefully.

Ensure the filters are dry before replacing them.

■ Refit all of the lint filters and close the

 
Plinth filter

Only clean the plinth filter whenever the 🚳 indicator light comes on.

To turn the message off: Open and close the door while the dryer is switched on.




■ Press the round, indented area on the heat exchanger access panel to open it. The access panel will spring open.






A guide pin in the dryer will come out which prevents the access panel from closing without the plinth filter.

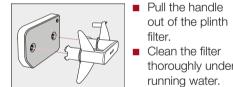

thoroughly under running water.

thoroughly. The plinth filter must not be replaced

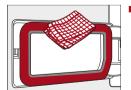



Use a damp cloth to remove any

Checking the heat exchanger unit

Danger of injury! Do not touch the

 ☐ Carefully vacuum

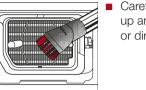

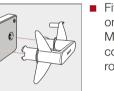

on the handle. Make sure it is the correct way round.

First insert the handle with the plinth filter attached over the two guide pins.

The word Miele on the handle must be the correct way up.

■ Close the heat exchanger access panel.

cooling fins with your hands. You could cut

up any visible fluff or dirt.





LIJ....[]J.... __ flashes/lights up

after the tumble dryer program cannot be

is switched on and a selected. Only the Start/Stop

Problem/Fault message | Possible cause and solution The condensed water container is full or there is a kink in the drain hose.

> ■ Empty out the condensed water container. Check the drain hose.

To switch off the message:

Open and close the door while the dryer is switched on. The indicator light The condensed water container is full or there is a kink in the

comes on at the end of drain hose. Empty the condensed water container.

Check the drain hose.

To switch off the message:

Open and close the door while the dryer is switched on.

The program selector has been moved. ■ Select the original program. The time left will appear on the

tus" in the Operating Instructions.

display again. **Bars flash on the dis-**The program has finished but the laundry has not yet cooled

■ Either remove the laundry and spread it out to cool down

or leave it in the tumble dryer to cool down during the cooling phase. Access via a code has been activated.

■ See "Programmable functions", "P07 Code" in the Operating Instructions.

This is not a fault, but a normal function. **sensor button is flash-** Touch a sensor button to switch on the indicators. See "Programmable functions", "P11 Display switch-off staThe dryer switches off automatically to save energy. **switched off at the end** This is not a fault, but a normal function. of the program. **The laundry is not suffi-** The load consisted of different types of fabric.

Finish drying using the Time Dry program. ■ Select a more suitable program next time.

Useful tip: You can alter the drying levels for some programs. See "Programmable functions", sections "P01 Drying levels Normal" and "P02 Drying levels Wrinkle-free" in the Operating Instructions..

Items made of synthetic Synthetic fibers tend to attract static charge. **fibers are charged with** Static charge can be reduced by adding a fabric softener to

static electricity after the final rinse in the washing program.

Lint is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any lint to form. Lint is collected by the **lint** and plinth filter and can be

removed easily. See "Cleaning and care".

You can hear operating This is not a fault. The compressor (heat pump) is operating noises (buzzing/humor you have selected the SoftSteam program.

No action required. These noises are quite normal and can be heard when the compressor or the condensed water

pump is operating.

Quick Start Guide Heat-pump dryer



Miele

These short instructions are not a substitute for the operating instructions supplied with the appliance! It is essential to familiarize yourself with the dryer before using it for the first

Take note of the operating instructions, as well as the "IMPORTANT SAFETY INSTRUCTIONS".

M.-Nr. 10 974 070 en - US