

The Ilve Majestic Range comes with the legs detached.

To avoid damaging the range when setting up the legs, we suggest the following directions:

- Unpack the range

- Remove the grates from the cooktop




- Remove all the burners from the top



- Remove the oven door(s)



- Remove the drawer

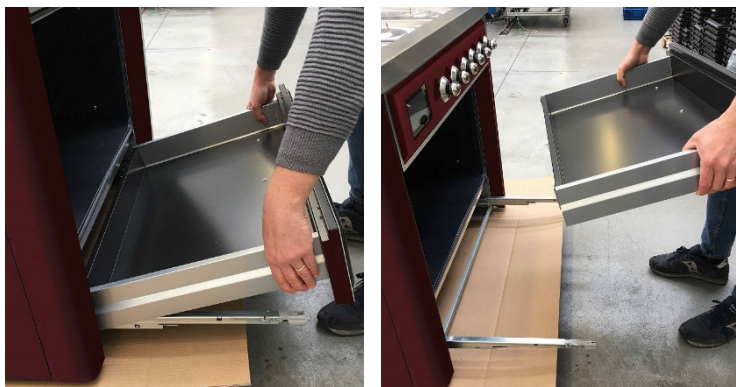

- Remove all the accessories inside the oven



Now that you have remove the dettachable parts and lessened the weight of the range, lift the range off the packaging and set it on the floor



Overturn the range onto its back side (please make sure that you put protection on the floor so as to protect your floor and avoid scratching or damaging your range)

Install the feet



Set it back upright



Reattach the oven door and place all the accessories back in place