
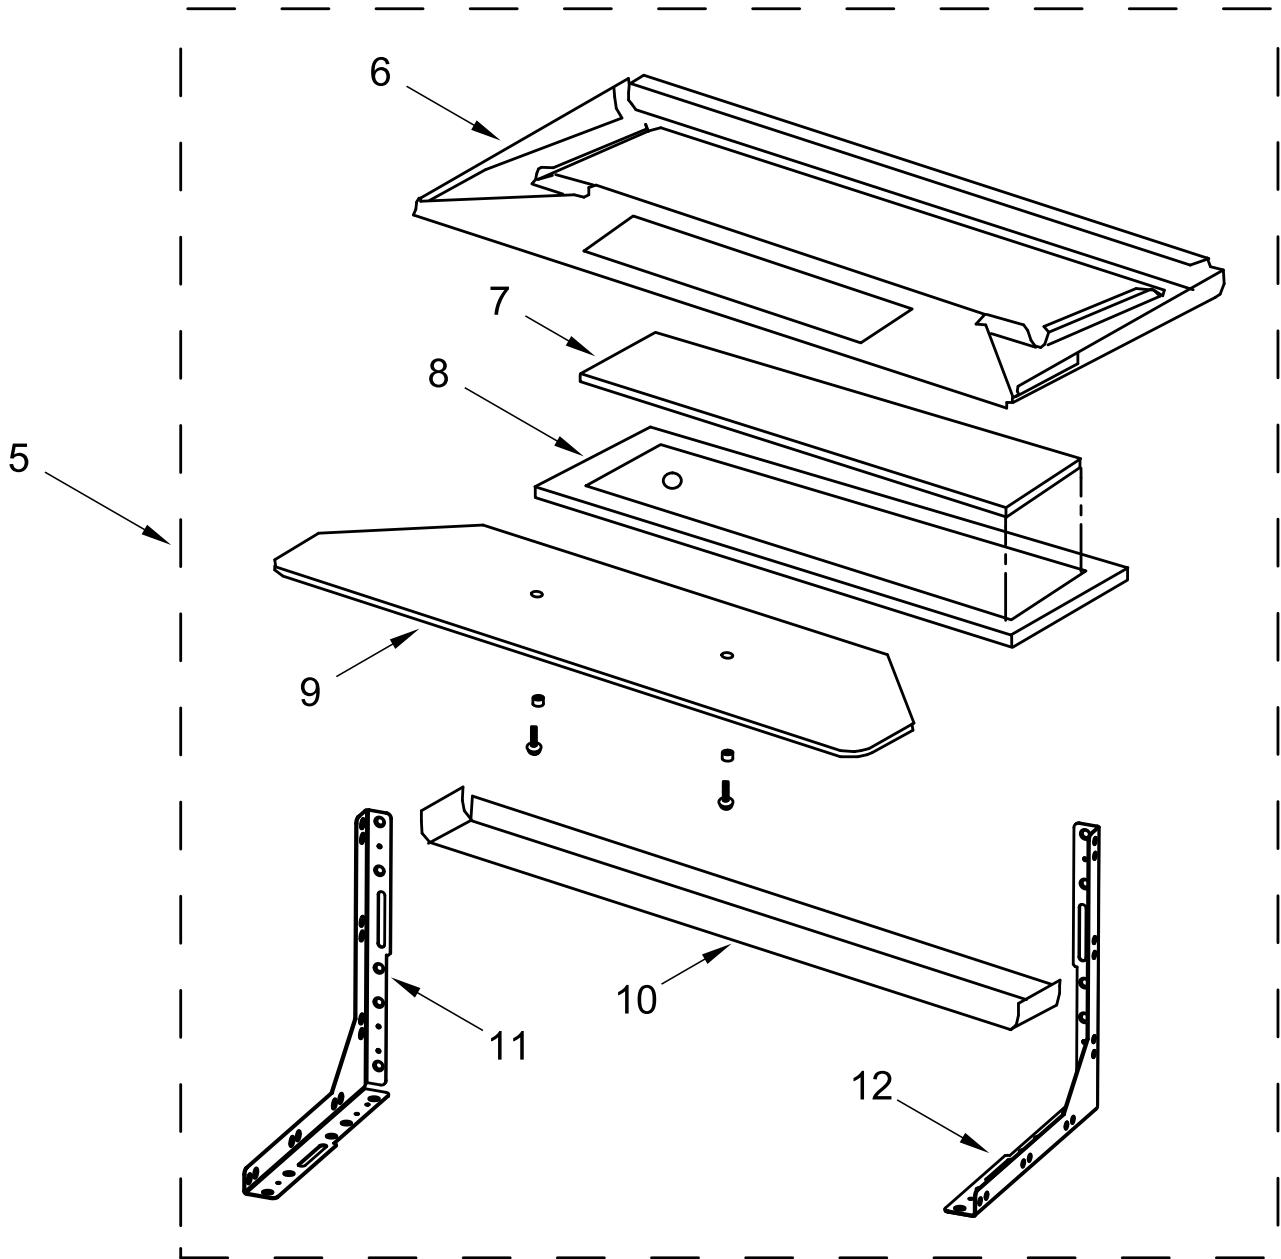
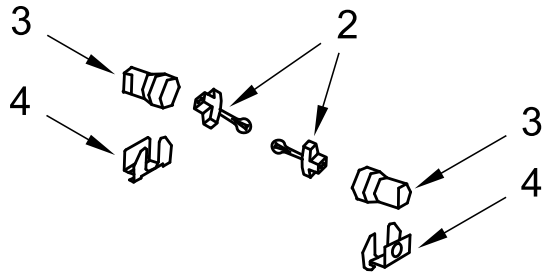


## **24" MICROWAVE HOOD COMBINATION**

### **MODELS:**

UMH50008HS0 (Stainless)


# BOTTOM PLATE PARTS

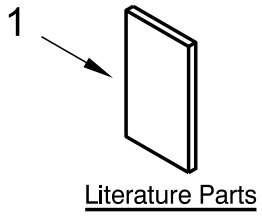

# BOTTOM PLATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10627450	Socket, Bulb	11	W10627631	L-Bracket, Left
	W11174207	Installation Instructions	4	W10627451	Bracket, Lamp Socket	12	W10627632	L-Bracket, Right
	W11174206	Use and Care Guide	5	W10627352	Assembly, Bottom Plate with L-Brackets			
	W11175651	Cooking Guide Label	6	W10627404	Frame, Lower Assembly			
	W11174208	Stainless Panel Installation Instructions	7	W10610033	Kit, Charcoal Filter			
2	W10618217	Bulb, Cooktop Halogen G9 25 Watt 120 Volt	8	W10618216	Filter, Grease			
			9	W10618218	Visor, Glass			
			10	W10627630	Trim, Rear			


# TOP VENTING PARTS

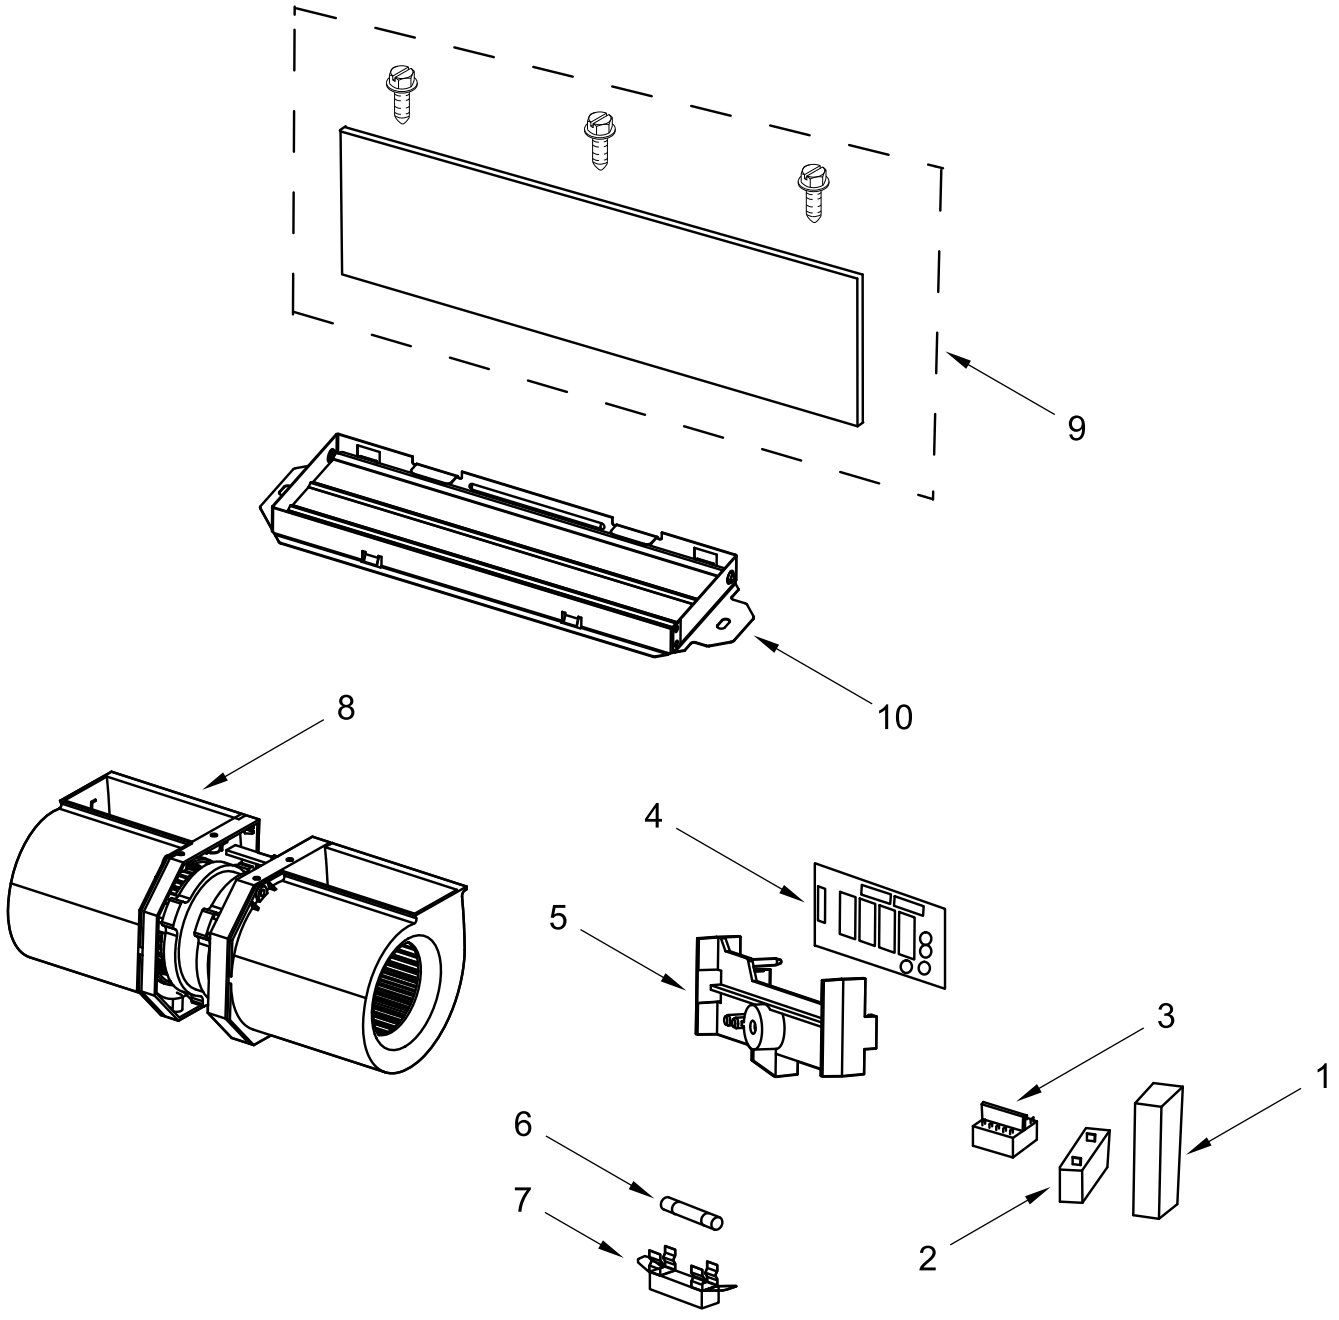

# TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10627456	Resistor, Power 30 Ohm 40 Watt	4	W10627457	Board, Control Hood Fan and Light	8	W10627453	Assembly, Ventilation Fan
2	W10627454	Capacitor, Hood Fan Motor	5	W10130909	Bracket, Support	9	W10615478	Kit, Stainless Steel Panel with Screws
3	W10627458	Block, Terminal	6	4375321	Fuse	10	W10627629	Damper
			7	8205670	Holder, Fuse			

# OVEN INTERIOR PARTS

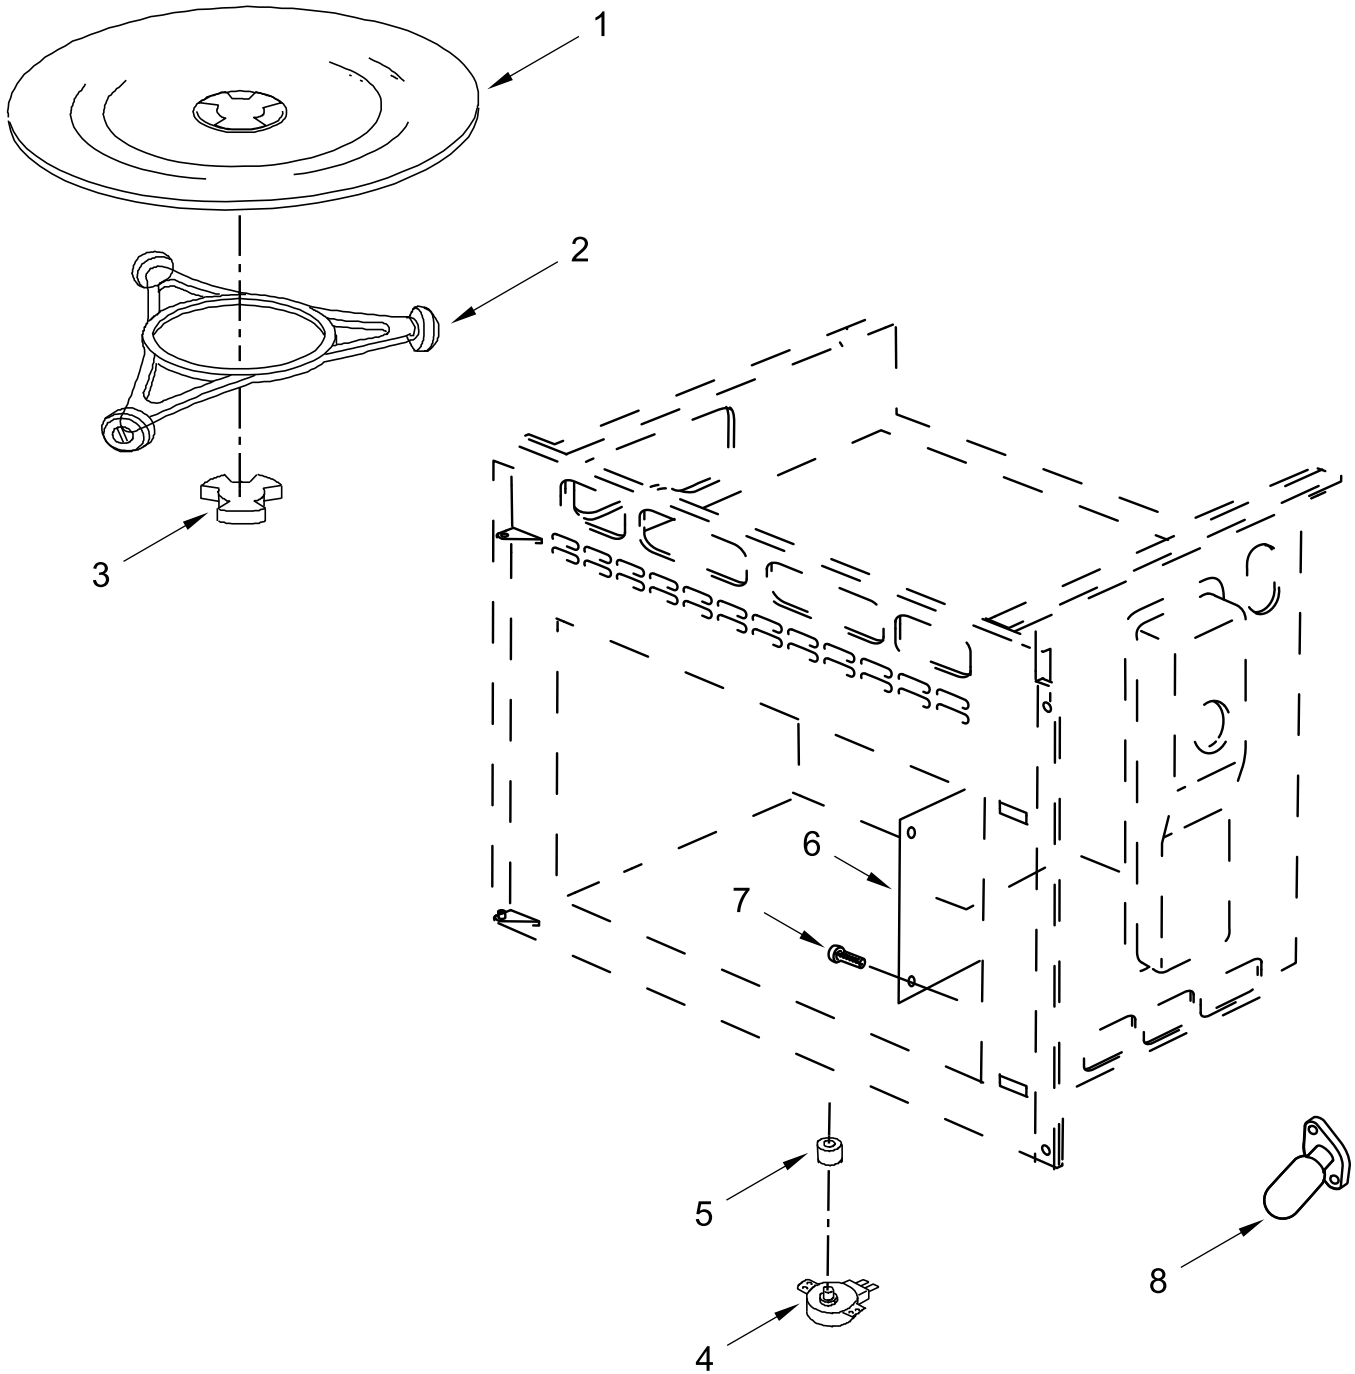

# OVEN INTERIOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10618210	Turntable, Glass	5	4375252	Gasket, Turntable Motor Shaft	7	W10628172	Pin, Mica Plate
2	W10618211	Support, Turntable with Rollers	6	W10628171	Plate, Mica Inlet Cover	8	W10627388	Bulb, Cavity CC3A 25 WATT
3	W10618212	Turntable, Hub						
4	W10627452	Motor, Turntable						