

Installation + User Guide

5 & 7 Series Accessory Knob Kits

SSKKVGR53036 | SSKKVGR54860 | SSKKVDR53036 | SSKKVDR54860
BCKKVGR53036 | BCKKVGR54860 | BCKKVDR53036 | BCKKVDR54860
SSKKVIR53036 | SSKKVDOF
BCKKVIR53036 | BCKKVIR548 | BCKKVDOF
SSKKVGR736 | SSKKVGR748 | SSKKVDR736 | SSKKVDR748
BCKKVGR736 | BCKKVGR748 | BCKKVDR736 | BCKKVDR748

Range/Range Top accessory knob kits

| Models | Stainless steel knob kit | Black chrome knob kit |
|--------------------------------------|---------------------------------|------------------------------|
| 5 SERIES GAS RANGES/RANGETOPS 30/36" | SSKKVGR53036 | BCKKVGR53036 |
| 5 SERIES GAS RANGES/RANGETOPS 48/60" | SSKKVGR54860 | BCKKVGR54860 |
| 5 SERIES DUAL FUEL RANGES 30/36" | SSKKVDR53036 | BCKKVDR53036 |
| 5 SERIES DUAL FUEL RANGES 48/60" | SSKKVDR54860 | BCKKVDR54860 |
| 5 SERIES INDUCTION/ELECTRIC 30/36" | SSKKVIR53036 | BCKKVIR53036 |
| 5 SERIES INDUCTION/ELECTRIC 48" | | BCKKVIR548 |
| 5 SERIES WALL OVENS | SSKKVDOF | BCKKVDOF |
| 7 SERIES GAS RANGES/RANGETOPS 36" | SSKKVGR736 | BCKKVGR736 |
| 7 SERIES GAS RANGES/RANGETOPS 48" | SSKKVGR748 | BCKKVGR748 |
| 7 SERIES DUAL FUEL RANGES 36" | SSKKVDR736 | BCKKVDR736 |
| 7 SERIES DUAL FUEL RANGES 48 | SSKKVDR748 | BCKKVDR748 |

 
Parts included in kits

| Part Number | Nomenclature | Quantity | Part Number | Nomenclature | Quantity |
|---------------------|---|----------|--------------------------|---|----------|
| SST KITS | | | BLACK CHROME KITS | | |
| SSKKVGR53036 | | | BCKKVGR53036 | | |
| 035881-000 | TOP BURNER KNOB | 6 | 063759-2809 | TOP BURNER KNOB | 6 |
| 035891-000 | OVEN THERMOSTAT KNOB | 1 | 059004-2071 | OVEN THERMOSTAT KNOB | 1 |
| 035883-000 | GRIDDLE KNOB | 1 | 059005-2079 | GRIDDLE KNOB | 1 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |
| SSKKVGR54860 | | | BCKKVGR54860 | | |
| 035881-000 | TOP BURNER KNOB | 8 | 063759-2809 | TOP BURNER KNOB | 8 |
| 035891-000 | OVEN THERMOSTAT KNOB | 2 | 059004-2071 | OVEN THERMOSTAT KNOB | 2 |
| 035883-000 | GRIDDLE KNOB/18" OVEN THERMOSTAT KNOB | 2 | 059005-2079 | GRIDDLE KNOB/18" OVEN THERMOSTAT KNOB | 2 |
| 035885-000 | GRILL KNOB | 1 | 059006-2080 | GRILL KNOB | 1 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |
| SSKKVDR53036 | | | BCKKVDR53036 | | |
| 035881-000 | TOP BURNER KNOB | 6 | 063759-2809 | TOP BURNER KNOB | 6 |
| 035893-000 | OVEN THERMOSTAT KNOB | 1 | 061029-000 | OVEN THERMOSTAT KNOB | 1 |
| 035895-000 | OVEN SELECTOR KNOB | 2 | 061038-000 | OVEN SELECTOR KNOB | 1 |
| 035883-000 | GRIDDLE KNOB | 1 | 059005-2079 | GRIDDLE KNOB | 1 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |
| SSKKVDR54860 | | | BCKKVDR54860 | | |
| 035881-000 | TOP BURNER KNOB | 8 | 063759-2809 | TOP BURNER KNOB | 8 |
| 035893-000 | OVEN THERMOSTAT KNOB | 2 | 061029-000 | OVEN THERMOSTAT KNOB | 2 |
| 035898-000 | 18" OVEN SELECTOR KNOB | 1 | 061039-000 | 18" OVEN SELECTOR KNOB | 1 |
| 035895-000 | OVEN SELECTOR KNOB | 2 | 061038-000 | OVEN SELECTOR KNOB | 2 |
| 035883-000 | GRIDDLE/18" OVEN THERMOSTAT KNOB | 2 | 059005-2079 | GRIDDLE/18" OVEN THERMOSTAT KNOB | 1 |
| 035885-000 | GRILL KNOB | 1 | 059006-2080 | GRILL KNOB | 1 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |
| SSKKVIR53036 | | | BCKKVIR53036 | | |
| 035904-000 | INDUCTION BURNER KNOB | 6 | 077232-2935 | INDUCTION BURNER KNOB | 6 |
| 035893-000 | OVEN THERMOSTAT KNOB | 1 | 061029-000 | OVEN THERMOSTAT KNOB | 1 |
| 035895-000 | OVEN SELECTOR KNOB | 1 | 061038-000 | OVEN SELECTOR KNOB | 1 |
| 035897-000 | ELECTRIC BURNER KNOB | 3 | 063245-2063 | ELECTRIC BURNER KNOB | 2 |
| 035904-000 | ELECTRIC BURNER KNOB | 3 | 063246-2062 | ELECTRIC BURNER KNOB | 2 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |


| Part Number | Nomenclature | Quantity | Part Number | Nomenclature | Quantity |
|-------------------|---|----------|-------------------|---|----------|
| SSKKVGR736 | | | BCKKVIR548 | | |
| 042558-000 | TOP BURNER KNOB | 6 | 077232-2935 | INDUCTION BURNER KNOB | 6 |
| 042557-000 | OVEN THERMOSTAT KNOB | 1 | 061029-000 | OVEN THERMOSTAT KNOB | 2 |
| 045725-000 | GRIDDLE KNOB | 1 | 061038-000 | OVEN SELECTOR KNOB | 1 |
| | | | 061039-000 | 18" OVEN SELECTOR KNOB | 1 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |
| SSKKVGR748 | | | BCKKVGR736 | | |
| 042558-000 | TOP BURNER KNOB | 8 | 061041-000 | TOP BURNER KNOB | 6 |
| 042557-000 | OVEN THERMOSTAT KNOB | 1 | 067118-2544 | OVEN THERMOSTAT KNOB | 1 |
| 042563-000 | 18' OVEN THERMOSTAT KNOB | 1 | 067119-2617 | GRIDDLE / 18" OVEN THERMOSTAT KNOB | 1 |
| 045725-000 | GRIDDLE KNOB | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | | | |
| SSKKVDR736 | | | BCKKVDR736 | | |
| 042558-000 | TOP BURNER KNOB | 6 | 061041-000 | TOP BURNER KNOB | 6 |
| 042560-000 | OVEN THERMOSTAT KNOB | 1 | 061043-000 | OVEN THERMOSTAT KNOB | 1 |
| 042561-000 | OVEN SELECTOR KNOB | 1 | 061044-000 | OVEN SELECTOR KNOB | 1 |
| 045725-000 | GRIDDLE KNOB | 1 | 067119-2617 | GRIDDLE KNOB | 1 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |
| SSKKVDR748 | | | BCKKVDR748 | | |
| 042558-000 | TOP BURNER KNOB | 8 | 061041-000 | TOP BURNER KNOB | 8 |
| 044587-000 | OVEN THERMOSTAT KNOB | 2 | 061029-000 | OVEN THERMOSTAT KNOB | 2 |
| 044588-000 | OVEN SELECTOR KNOB | 1 | 061038-000 | OVEN SELECTOR KNOB | 2 |
| 042771-000 | 18" OVEN SELECTOR | 1 | 061039-000 | 18" OVEN SELECTOR | 1 |
| 045725-000 | GRIDDLE KNOB | 1 | 067119-2617 | GRIDDLE KNOB | 1 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |
| SSKKVDOF | | | BCKKVDOF | | |
| 036330-000 | WO OVEN KNOB | 4 | 064101-2095 | WO OVEN KNOB | 4 |
| 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 | 065005-000 | 5 & 7 SERIES KNOB KIT INSTALLATION GUIDE | 1 |

Removing Knobs / Installing Knobs

1. Begin by removing the knobs from the kit. Sort the knobs according to knob type based on their graphics – i.e. surface burner knobs, oven control knobs, grid-
dle, grill, if applicable.

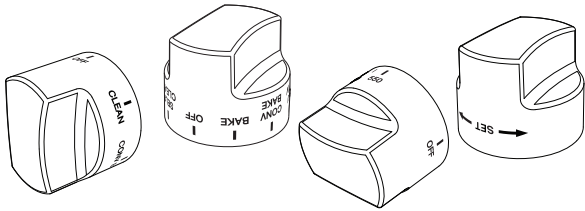


 2. Before removing the current knobs, line up the new knobs from the kit across the top of the landing ledge of range or rangetop. Match the graphics of the new knobs with the graphics of the current knobs. In most cases, all knobs will not be used. This will help eliminate confusion and will help to assure the knobs are replaced correctly.

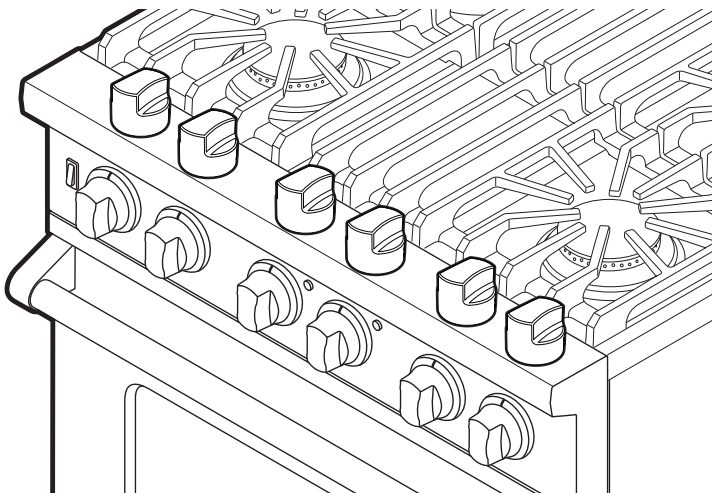


MAKE SURE KNOBS POINT TO THE “OFF” POSITION BEFORE REMOVING.

 3. **Important** - When removing the knobs from the product, grip the knob securely and pull straight back. It is important to pull the knob straight back so as not to break or bend the valve stem.

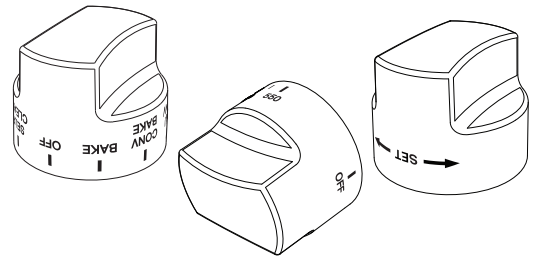

 4. **Important** - In almost all installation cases there should be extra knobs after all knobs have been changed out on the product. It is recommended to keep these extra knobs in the event that one is needed at a later date.

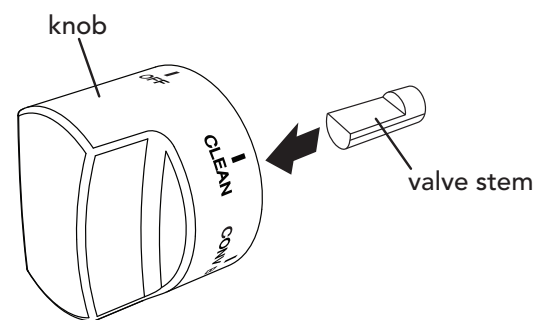

Intentionally Left Blank

Intentionally Left Blank

Viking Range, LLC
111 Front Street
Greenwood, Mississippi 38930
(662) 455-1200

For product information, call 1-888-845-4641
or visit our web site at vikingrange.com in the US