

*Please be aware that there are restrictions in the use of ovens and stoves on the Sabbath and Holidays. If you are unfamiliar with the laws of keeping food warm on the Sabbath or cooking on the Holidays, please call your Rabbi. Please note that when the Holiday and Sabbath coincide, the Sabbath laws prevail. Before first use of a new oven be sure to wash the racks and interior of the oven thoroughly with warm water and soap to remove any coating oil.*

**This model may be used on the Jewish Sabbath or the Jewish Holidays (Yom Tov) in accordance with the instructions below:**

**OVENS:**

1. The oven temperature may not be initiated, adjusted or turned off on the Sabbath.
2. On the Sabbath, in lieu of a "blech", the oven controls should be covered. (Be careful not to cover vent openings.)
3. All food should be placed in the oven before the Sabbath begins, since none may be placed in the oven during the Sabbath.
4. On the Sabbath, the oven door may only be opened once, all the food removed, and then closed. On the Holidays, the oven door may be opened/closed at any time as often as desired.
5. During Holidays, on select models, (but not all models), the temperature may be adjusted (but not initiated or turned off) at any time. This is possible because there is a delay between the request and implementation. Please check the owner's manual for details and instructions.
6. Some models may have a timed bake feature in the Sabbath mode. If this feature is available, it can only be initiated before the Sabbath/Holiday. Once timed bake goes off, the oven cannot be used again for that Sabbath/Holiday.
7. After recovery from a power failure, this oven will stay off. It will remain in the Sabbath mode, however, there will be no cooking capability.