

Front Load Washer Quick Start Guide

OPERATING INSTRUCTIONS

WARNING



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

NOTES:

- Not all features and cycles are on all models, and control panel appearance may vary.
- If your model has a touch interface, the control panel features a sensitive surface that responds to a light touch of your finger. To ensure your selections are registered, touch the control panel with your fingertip, not your fingernail. When selecting a setting or option, simply touch its name.
- If your model has physical buttons, make sure to press the button firmly.
- At cycle completion, your setting and option choices will be remembered for the next cycle. However, if power to the washer is lost, the settings and options will go back to the factory defaults.

Button Descriptions

1. POWER BUTTON

Touch to power up the washer.

2. HOME BUTTON

Touch this button and the LCD screen will show the home screen, where you can select your cycle, settings, and options.

3. FAVORITES BUTTON

Stores and accesses your favorite cycles and a history of your recently run cycles.

4. LCD SCREEN

Use this screen to select cycle, settings, options, etc.

Temperature

The recommended wash temperature is preset for each cycle. Some preset temperatures can be changed. You may select a different wash temperature based on the level of soil and type of fabric being washed. For best results, use the warmest wash water safe for your fabric, following the garment label instructions. All wash temperatures feature a cold rinse.

Spin Speed

The recommended spin speed is preset for each cycle. Some preset speeds can be changed. Faster spin speeds mean shorter dry times, but may increase wrinkling in your load. Slower spin speeds reduce wrinkling, but will leave your load more damp.

Soil Level

The recommended soil level is preset for each cycle. The Soil Level option allows you to select a Light, Normal, or Heavy soil level setting. Some preset soil levels can be changed. For heavily soiled and sturdy fabrics, select the Heavy soil level setting. For lightly soiled and delicate fabrics, select the Light soil level setting. Lower soil level settings will help reduce tangling and wrinkling.

Extra Rinse

The Extra Rinse option provides an additional rinse to the selected cycle.

Pre-Soak

The Pre-Soak option can be set for 30 minutes, 1 hour, or 8 hours.

FanFresh®

The FanFresh® option will periodically tumble the load after the end of the cycle for up to 12 hours. Touch FanFresh to activate this option. FanFresh® may be ended at any time by touching the "X" on the touch screen to the right of the estimated time remaining.


Steam Clean

The Steam Clean option adds additional soak and wash time to many cycles to help remove tough stains, as well as a steam boost for added cleaning power. An integrated heater helps to maintain optimal wash temperatures. See the online "Cycle Guide" for cycles that allow the Steam Clean option.

Step 1. Add HE Detergent

NOTE: See the "Adding Laundry Products" section in your Owner's Manual for more information on adding HE detergent, fabric softener, and/or bleach.

Step 2. Load Clothes

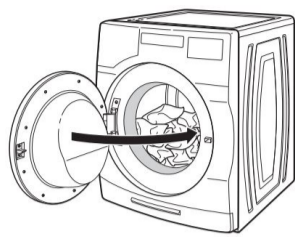

Add load loosely. Items need to move freely for best cleaning.

Step 3. Turn Power On



Step 4. Close Door; then Select Cycle and Settings



Step 5. Press Start/Pause



Cycle Guide – Normal Cycle

Settings and options shown in **bold** are default settings for that wash cycle. For best fabric care, choose the cycle, options, and settings that best fit the load being washed. Always read and follow fabric care labels and laundry product instructions. Avoid tightly packing the washer. The washer will not rinse well or spin correctly if tightly packed. Not all settings are available with each cycle, and some options cannot be used together. Not all options are available on all models.

Items to Wash:	Cycle:	Temperature:	Description:
Cottons, linens, and mixed-garment loads	Normal	Hot Very Warm Warm Cool Cold	This cycle runs on a Warm temperature and Extra Fast spin speed for a Normal soil level.

Online Ordering Information

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

For information on any of the following items, a full cycle guide, detailed product dimensions, or for complete instructions for use and installation, please visit <https://www.whirlpool.com/owners>, or in Canada <https://www.whirlpool.ca/owners>. This may save you the cost of a service call.



[Register Product](#)



[Add Service Plan](#)



[Schedule Service](#)



[Parts](#)



[How To's & FAQ](#)



[Filters](#)



[Manuals & Downloads](#)



[Accessories](#)


However, if you need to contact us, use the information listed below for the appropriate region.

United States:
1-800-253-1301

Whirlpool Brand Home Appliances
Customer eXperience Center
553 Benson Road
Benton Harbor, MI 49022-2692

Canada:
1-800-807-6777

Whirlpool Brand Home Appliances
Customer eXperience Centre
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7

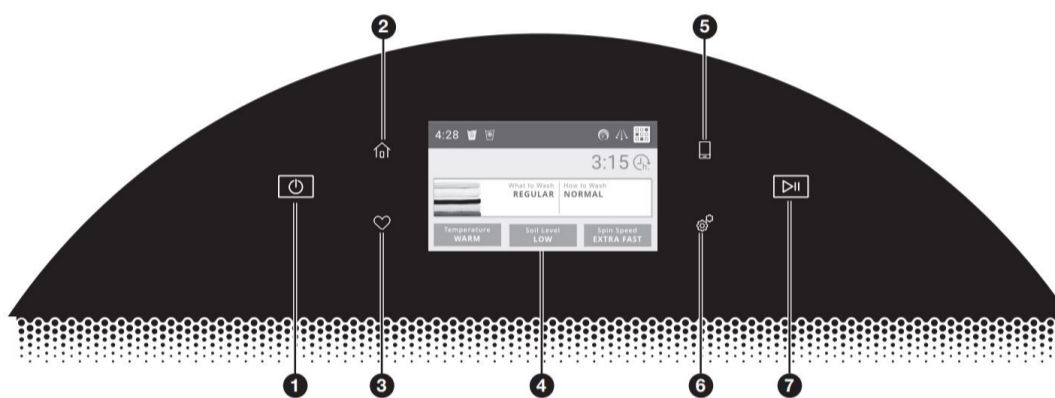

Designed to use only HE High Efficiency detergents.

Add Garment

If you need to open the door to add one or two missed garments, you may do so when "Add Garments" appears on the display. The time allowed to add a garment will vary based on cycle selection and load size. Touch Add Garments once; the door will unlock once the washer movement has stopped. This may take several seconds. Then close the door and touch and hold Start again to restart the cycle.

Delay Start

Touch the clock icon on the far right portion of the touch screen. The "Select a start time" screen will show on the display. Scroll horizontally to select a preferred start time for your wash cycle. The times will display in 15-minute increments up to 8 hours. Touch Okay to set the start time. The display will return to the home screen and the clock icon will turn brown.

5. REMOTE ENABLE BUTTON

Download the Whirlpool® app and follow the instructions to connect your washer to your home WiFi network. You may also visit www.whirlpool.com/connect. In Canada, visit www.whirlpool.ca/connect.

6. TOOLS BUTTON

Touch this button to access the tools screen.

Load & Go™ Dispenser 1

Touch to activate Load & Go™ Dispenser 1 and to choose the detergent concentration.

Load & Go™ Dispenser 2

Touch to activate Load & Go™ Dispenser 2. Then choose content and concentration.

Control Lock

Touch this icon to lock the controls. Swipe up to unlock.

Mute

Touch this icon to mute or unmute sounds.

Utility Cycles

Touch this icon to access the following utility cycles: Drain & Spin and the Clean Washer with affresh® cycle. Touch the utility cycle you wish to use and follow the screen prompts.

NOTE: To get a Rinse & Spin cycle, select Drain & Spin and the Extra Rinse option.

Preferences

Touch to access Times and Dates, Sound Volume, Display Settings, and Regional. Follow the screen prompts.

WiFi

Touch to access Connect to Network. Follow the screen prompts.

Info

Touch to access Service & Support, Store Demo Mode, Restore Factory, WiFi Terms and Conditions, and Software Terms and Conditions. Follow the screen prompts.

NOTE: All changes to settings will remain in effect until settings are changed again.

7. START/PAUSE

Touch and hold for 3 seconds to start, or touch to pause a cycle. After pausing a cycle, press and hold for 3 seconds again to resume a cycle. When you start a cycle, the door will lock, the washer will sense the load size, the estimated time remaining will be displayed, and the wash cycle will begin. As the wash cycle begins, you will notice the "Add Garment" prompt on the machine.

