




27" BUILT-IN ELECTRIC COMBINATION MICROWAVE WALL OVEN

MODELS:

WOC54EC7HB01 (Black)
WOC54EC7HW01 (White)
WOC54EC7HS01 (Stainless)


CONTROL PANEL PARTS

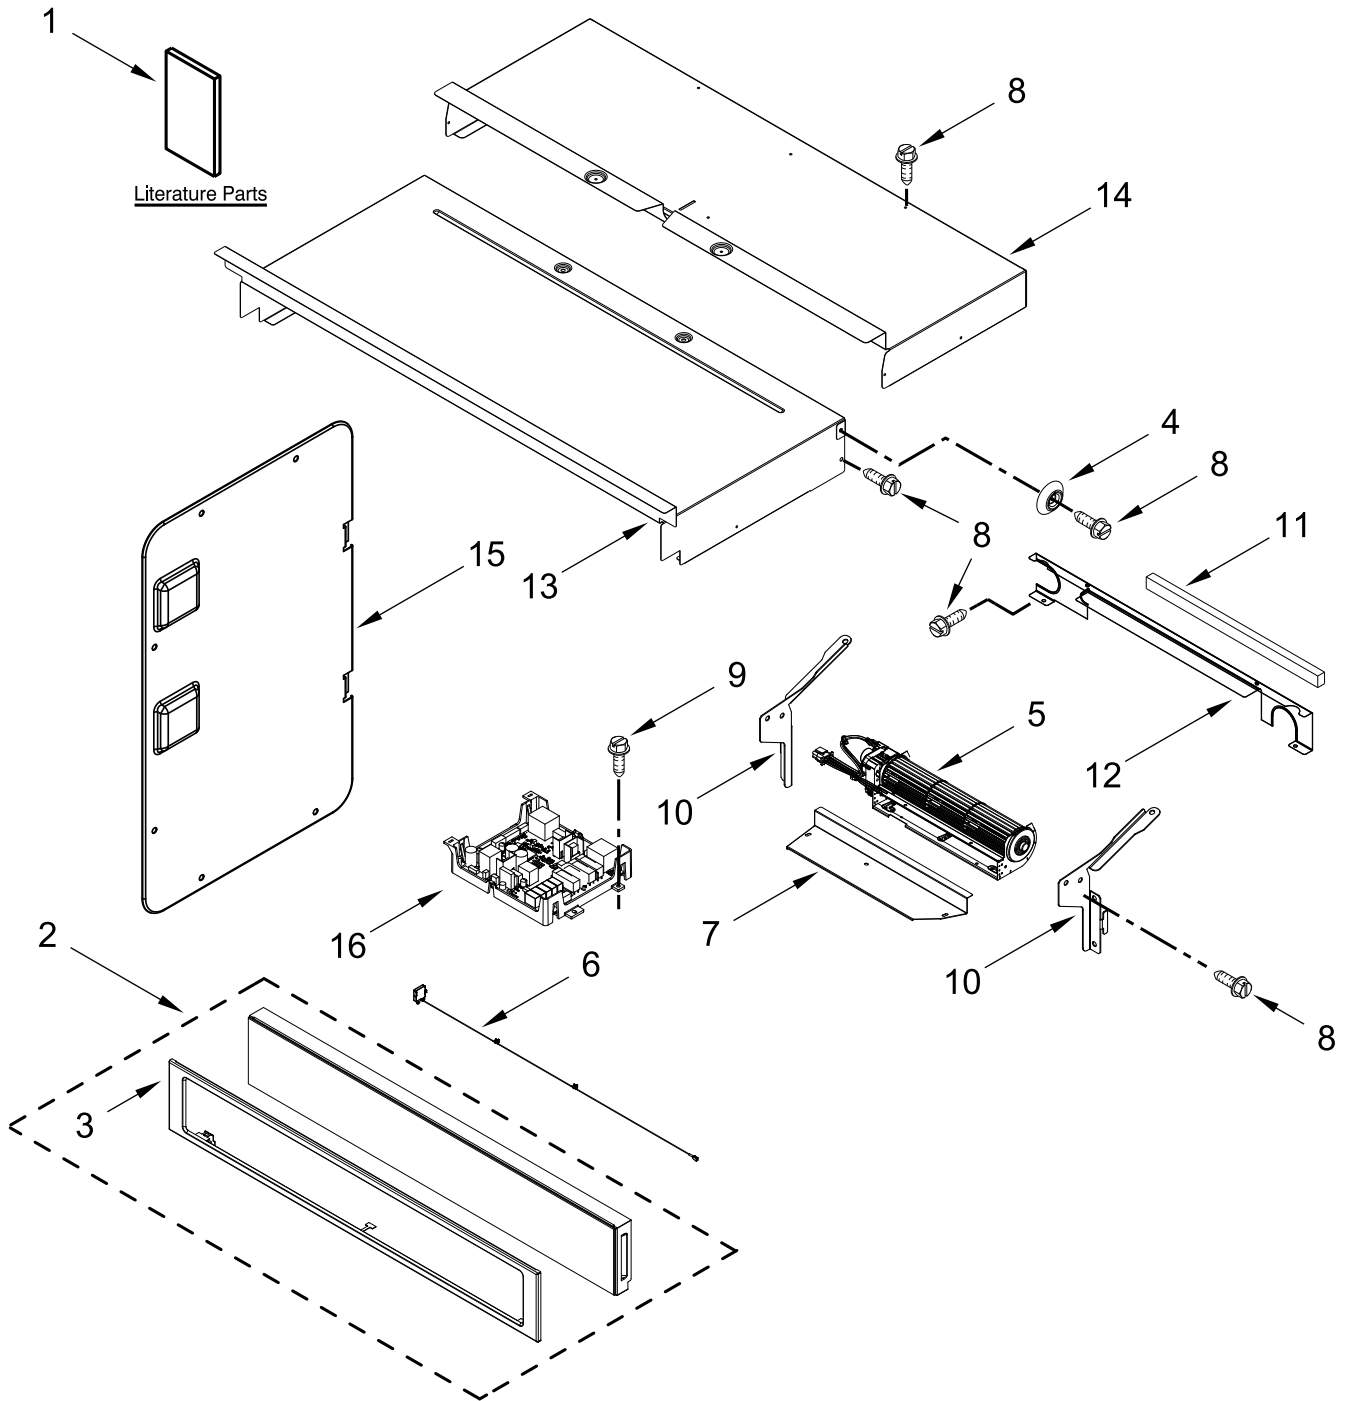

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W11234541	Antenna	16	W11040197	Manager, Appliance (With Power Supply)
	W11129957	Instructions, Installation	7	W10681157	Cover, Combo Blower			
	W11220320	Guide, Use & Care (Oven)	8	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11108508	Guide, Use & Care (Microwave Oven)	9	7101P434-60	Screw			
	W11129946	Sheet, Tech	10	W10655463	Bracket, Blower (Left)		W11225366	Harness, Main
	W11097305	Guide, Internet Connectivity		W10655462	Bracket, Blower (Right)		W11225367	Harness, Signal
			11	4451758	Block, Foam		W10874059	Harness, Fan & Turntable
2		Assembly, Control Panel (Includes Overlay)	12	W10618126	Chassis, Back Divider		W10874060	Harness, Inverter
	W11105015	Black	13	W10318159	Chassis, Cover Top Front 27"		W10709980	Harness, Solo GM
	W11105012	White					W11233529	Harness, Communication
	W11105014	Stainless	14	W11037652	Chassis, Cover Top Back 27" WIFI		W11132989	Harness, Door Latch
3		Skin, Control Panel	15	W10655467	Chassis, Combo Side		W10889134	Harness, Cable Tree Assembly
	W11026968	Black					W11233569	Harness, Ground Console Combo
	W11026967	White					313438	Clip, Harness
	W10899876	Stainless					4450800	Screw, Grounding
4	W10618105	Spacer, Lateral					4448664	Clamp, Conduit
5	W11200129	Blower					W10431303	Bag, Hardware


OVEN PARTS

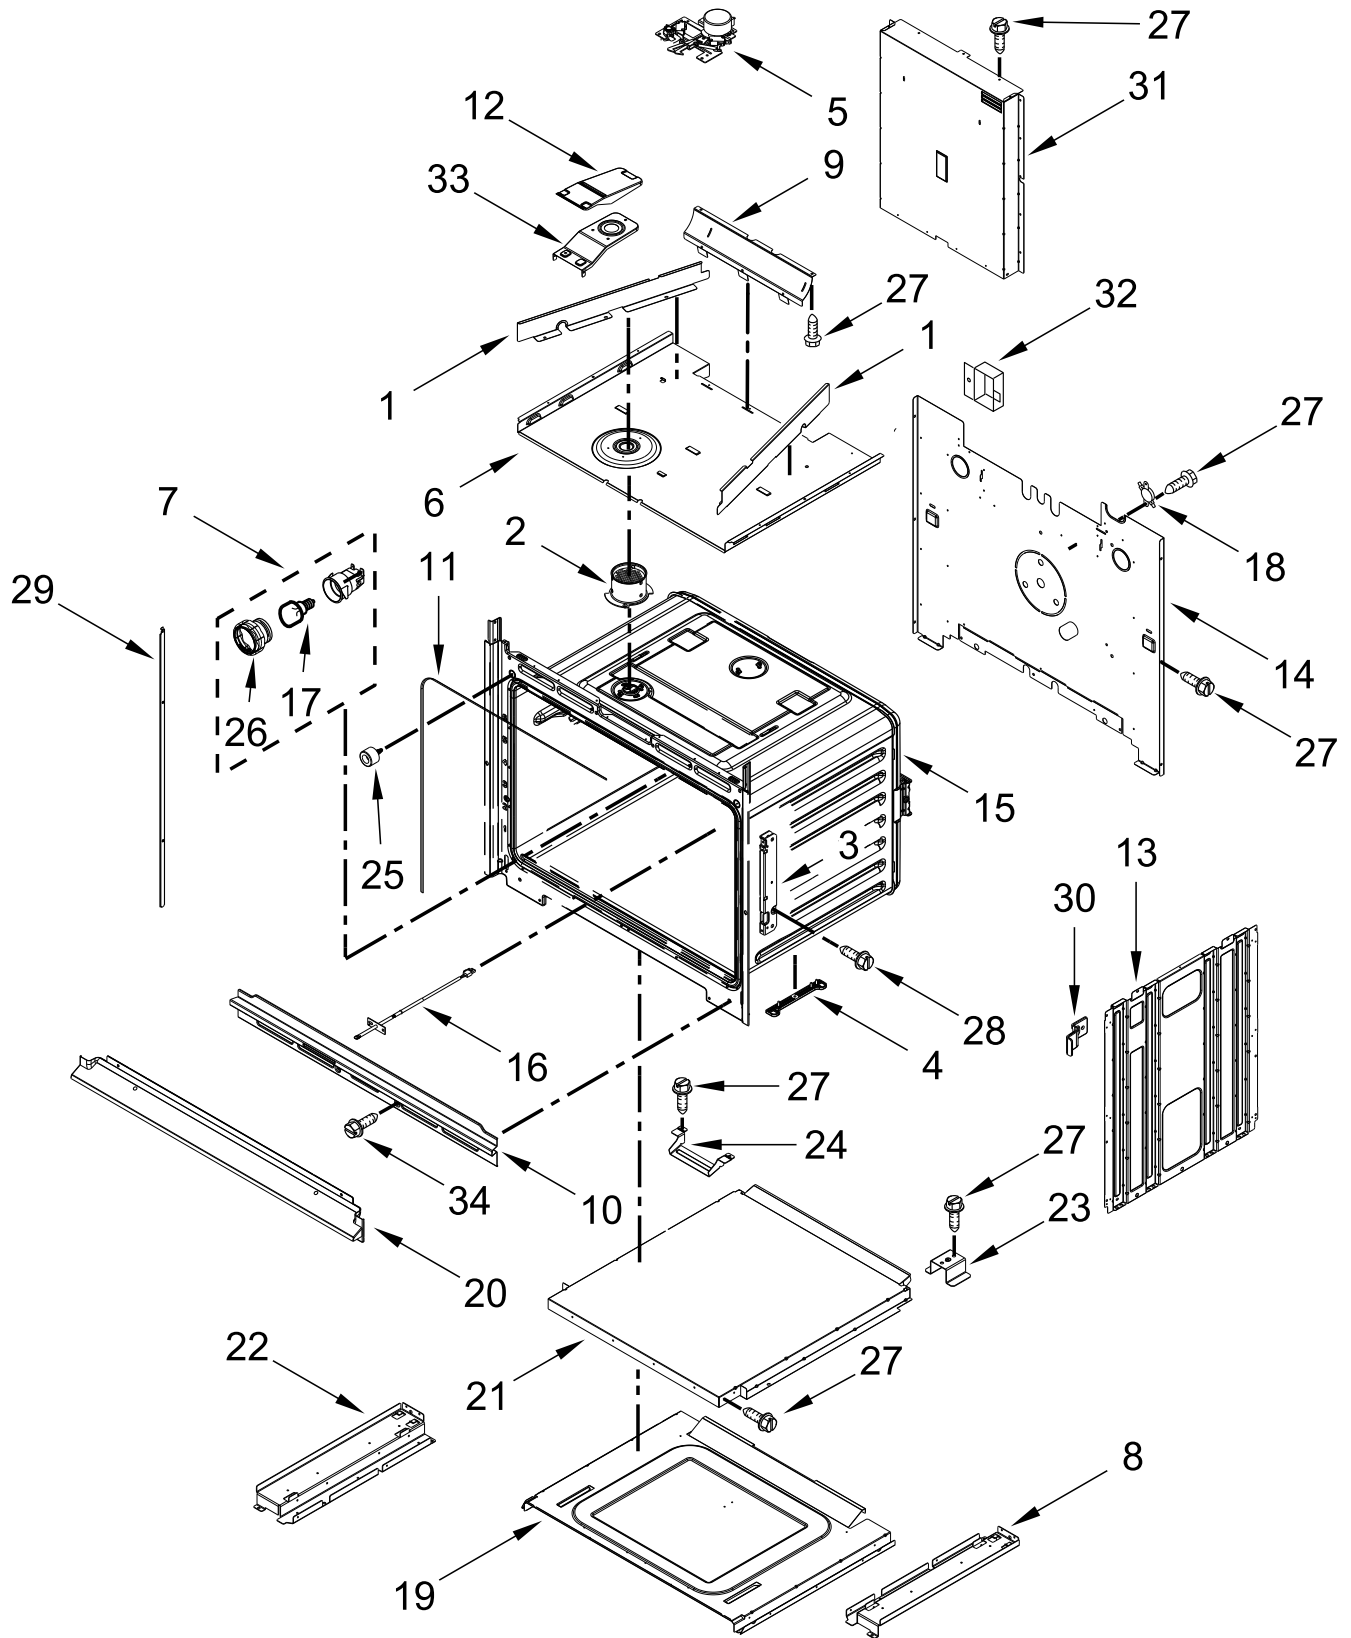

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10681156	Deflector, Chassis	16	W10622170	Probe, Sensor	27	7101P426-60	Screw
2	W11085298	Tube, Vent	17	W10412711	Bulb, Light	28	W10254050	Screw
3	W10616802	Receiver, Hinge	18	4449751	Thermostat (TOD)	29		Trim, Side
4	W10618102	Spacer, Base	19	W10282901	Base, Chassis		W10344483	Black (Left)
5	W10618131	Latch, Motorized	20		Assembly, Bottom Vent		W10344482	Black (Right)
6	W10904159	Chassis, Top		W10327375	Black	30	W10347649	Spacers, Front
7	W10734063	Assembly, Light		W10506345	White	31	W10519707	Cover, Back Duct
8	W10283021	Support, Base (Right)		W10351280	Stainless	32	8285593	Cover, Connector
9	W10904163	Deflector, Blower	21	W10283008	Chassis, Bottom Duct	33	W10616809	Base, Vent Exhaust
10	W10495155	Vent, Center 27"	22	W10283020	Support, Base (Left)	34	7101P427-60	Screw
11	W10282961	Gasket						FOLLOWING PARTS NOT ILLUSTRATED
12	W10616810	Cover, Vent Exhaust	23	W10213759	Support, Air Channel		W10282945	Insulation, Back
13	W10318190	Side, Chassis	24	W10351308	Spacer, Chassis Bottom Duct		W10520716	Insulation, Wrap
14	W10904162	Back, Chassis	25	W10351278	Bumper & Screw			
15		Liner, Oven (Not Serviceable)	26	W10412722	Lens, Light			



OVEN DOOR PARTS

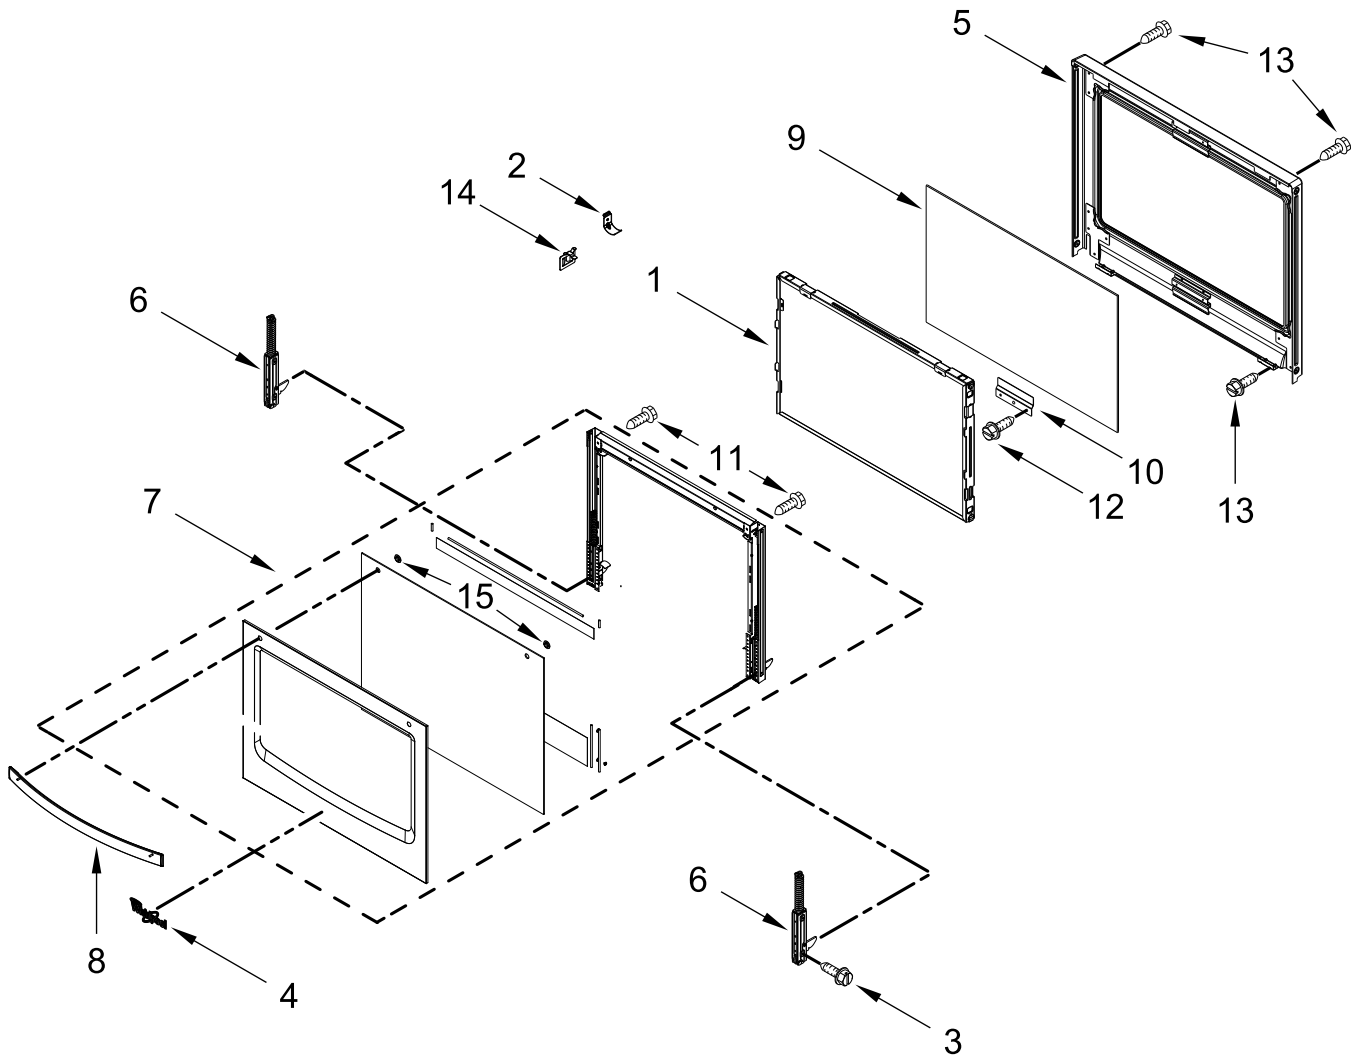

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347597	Assembly, Window Pack	7		Assembly, Door	9	W10284902	Glass, Inner
				W10866269	Black	10	W10284297	Bracket, Glass
2	W10284285	Spring, Door Glass Fixation		W10866270	White	11	W10480830	Screw
				W10866268	Stainless	12	7101P426-60	Screw
3	3196183	Screw	8		Handle, Door	13	7101P633-60	Screw (Black)
4	W10884775	Nameplate		W11022641	Black	14	W10653954	Clip, Spring Metal
5	W10320793	Assembly, Liner		W11022642	White	15	W10319024	Washer, Door
6	W10639067	Hinge, Door		W10880280	Stainless			


INTERNAL OVEN PARTS

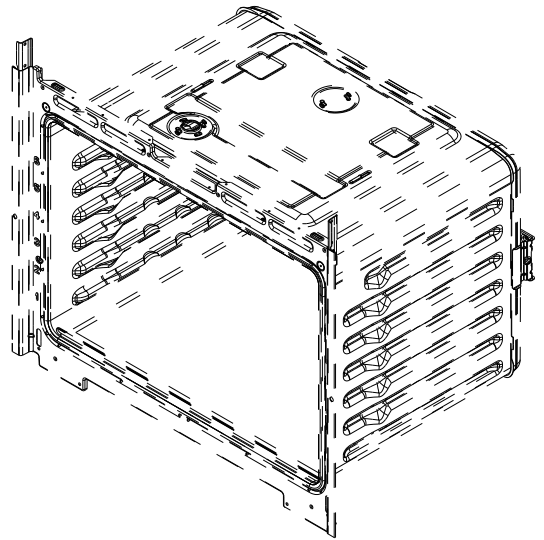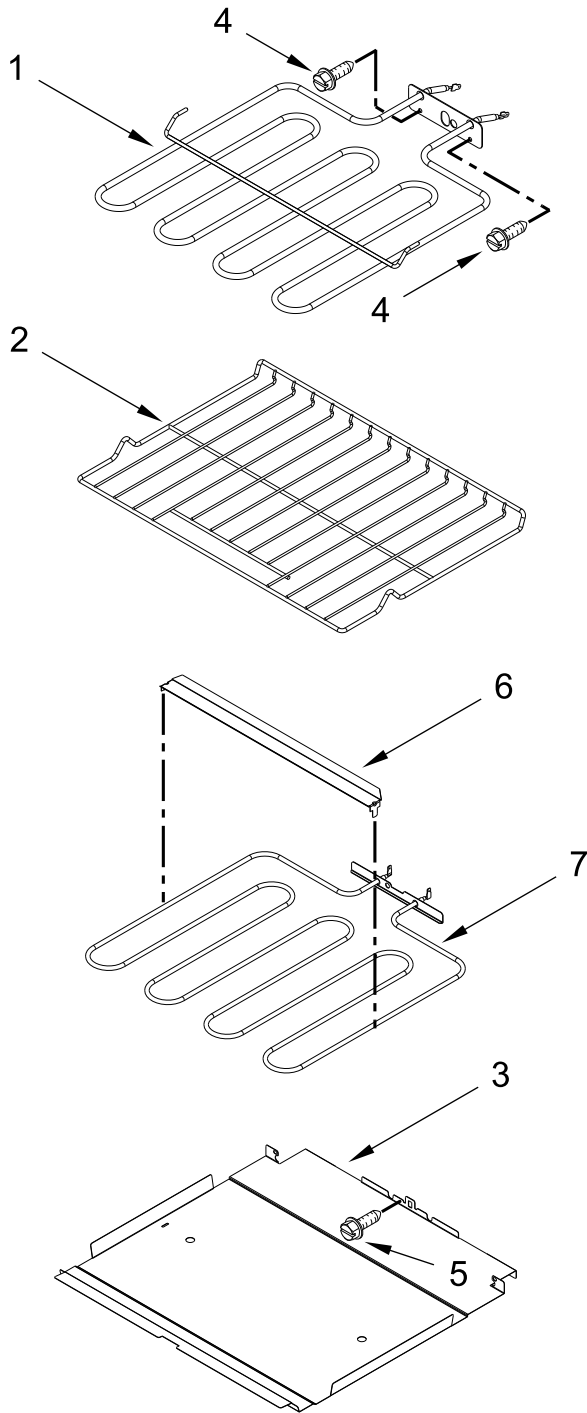

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil	4	7101P434-60	Screw	6	W10282957	Crossbar, Hidden Bake Tray
2	W10317431	Rack, Oven	5	7101P426-60	Screw	7	W10546517	Element, Bake
3	W10318198	Tray, Hidden Bake						


CABINET AND STIRRER PARTS

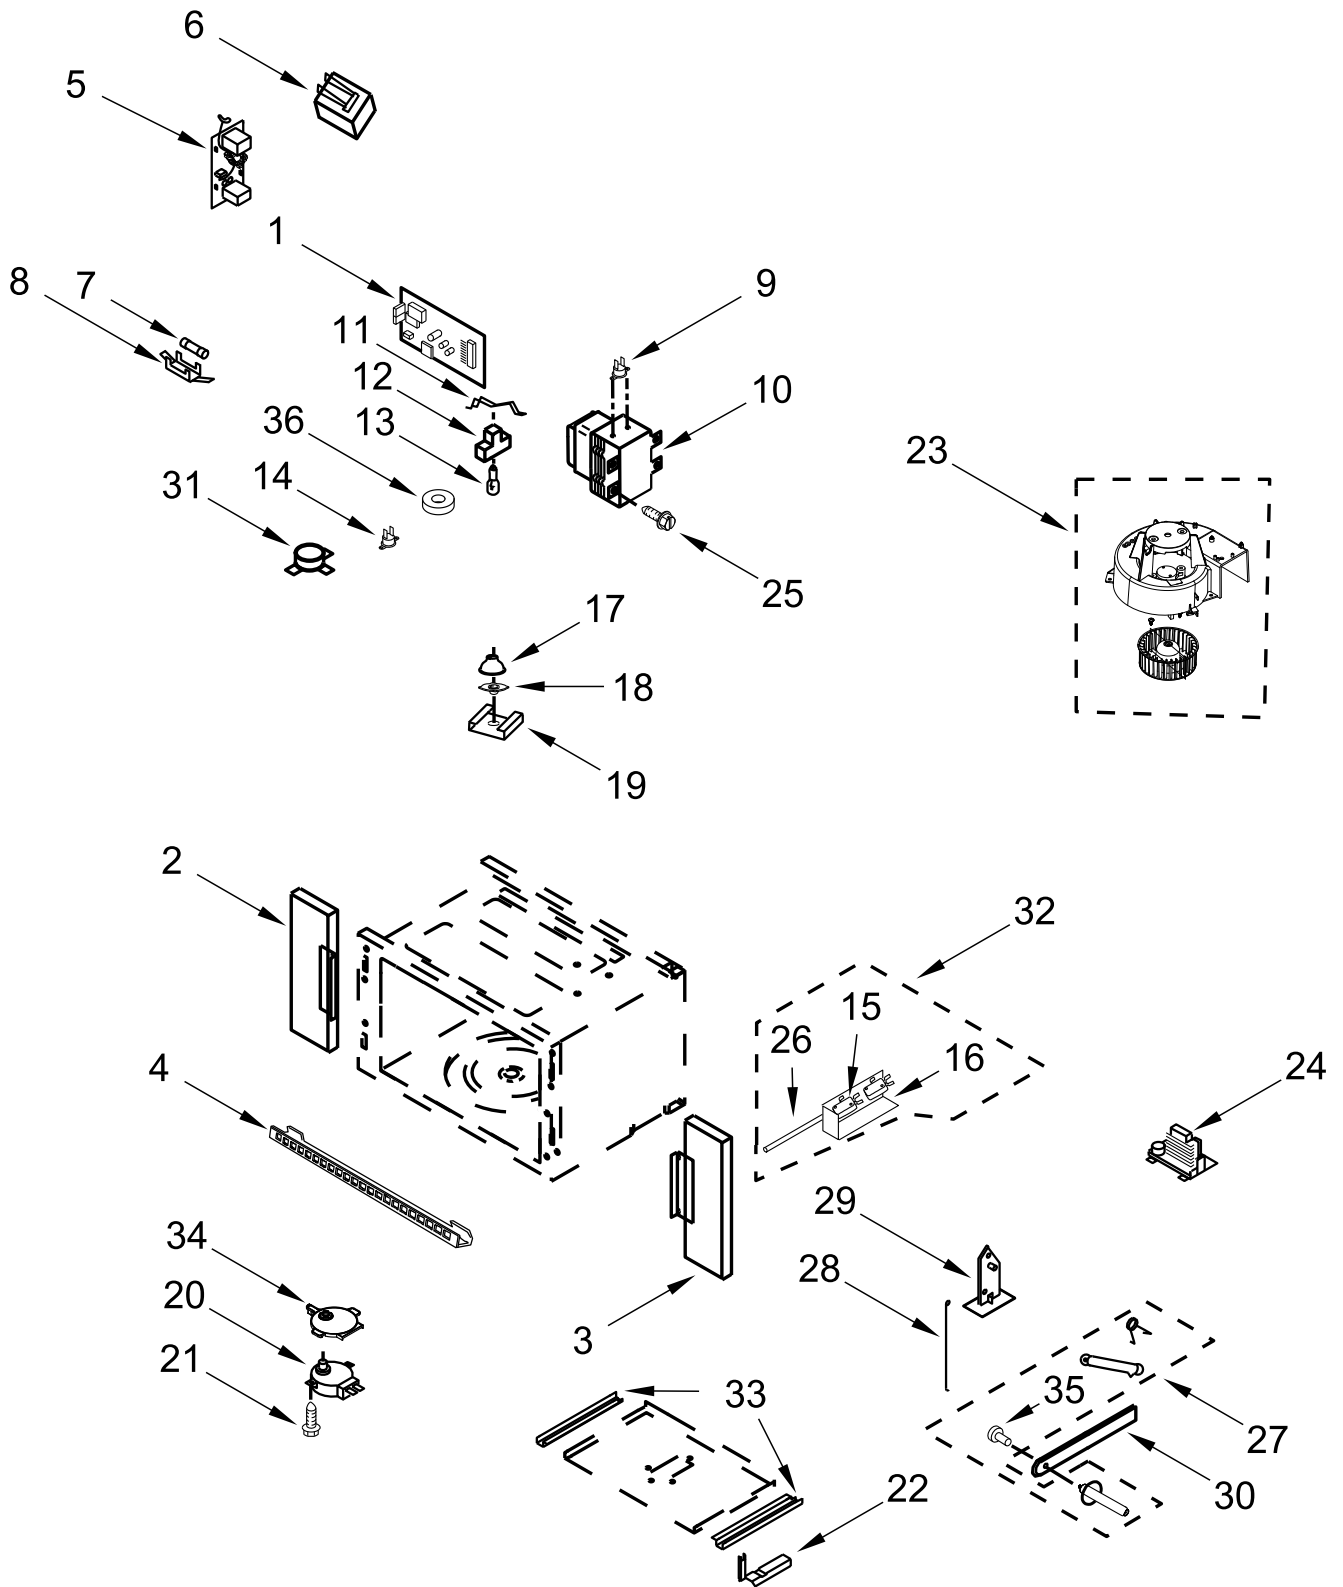

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10913742	Control, Electric	13	W10795595	Lamp, Halogen	27	W10128850	Assembly, Sliding Arm
2	461967017511	Trim, Side (Left)	14	W10389447	Thermostat	28	461967570351	Spring, Torsion
3	W11044584	Trim, Side (Right)	15	W10330566	Switch	29	461967750494	Support
4	461968973251	Vent, Top	16	8205683	Holder, Switch	30	461967750483	Arm, Sliding
5	W10692851	Filter, Noise	17	423107022541	Reflector	31	W10460457	Sensor, Humidity
6	461967848621	Transformer, Light (20V)	18	423107720491	Lens, Lamp	32	W10358241	Assembly, Interlock Switch
7	241908600053	Fuse	19	461967010591	Clip, Spring	33	461967008461	Support, Bottom
8	4375231	Block, Fuse	20	461967848971	Motor, Turntable	34	461967753742	Adapter, Turntable Motor
9	461967846741	Thermostat, Magnetron	21	461967825321	Screw	35	461967510191	Bushing
10	461967847321	Magnetron	22	46196897960	Hinge, Door	36	W10769147	Sealing, Lamp
11	W10465869	Spring, Lamp	23	461968969271	Assembly, Cooling Fan			
12	W10490593	Holder, Lamp	24	W10468206	Inverter			
			25	461967825971	Screw			
			26	W10120235	Rod, Release			

INTERNAL MICROWAVE PARTS

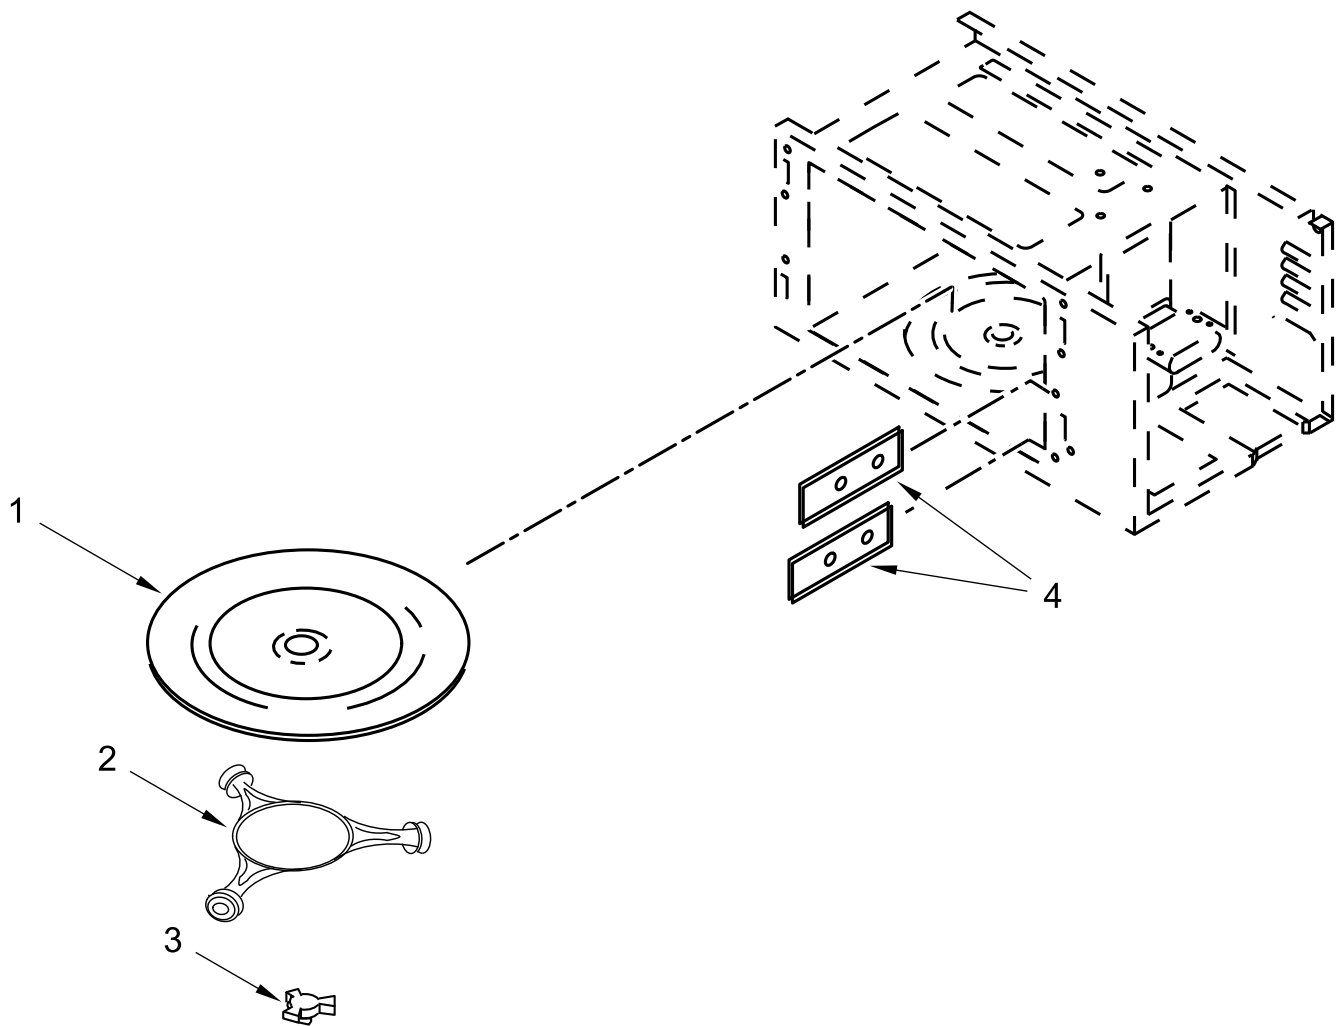


INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461967720541	Tray, Cook
2	W10367316	Ring, Turntable

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10545578	Drive, Turntable
4	461967451001	Plate, Cover


TOP VENTING PARTS

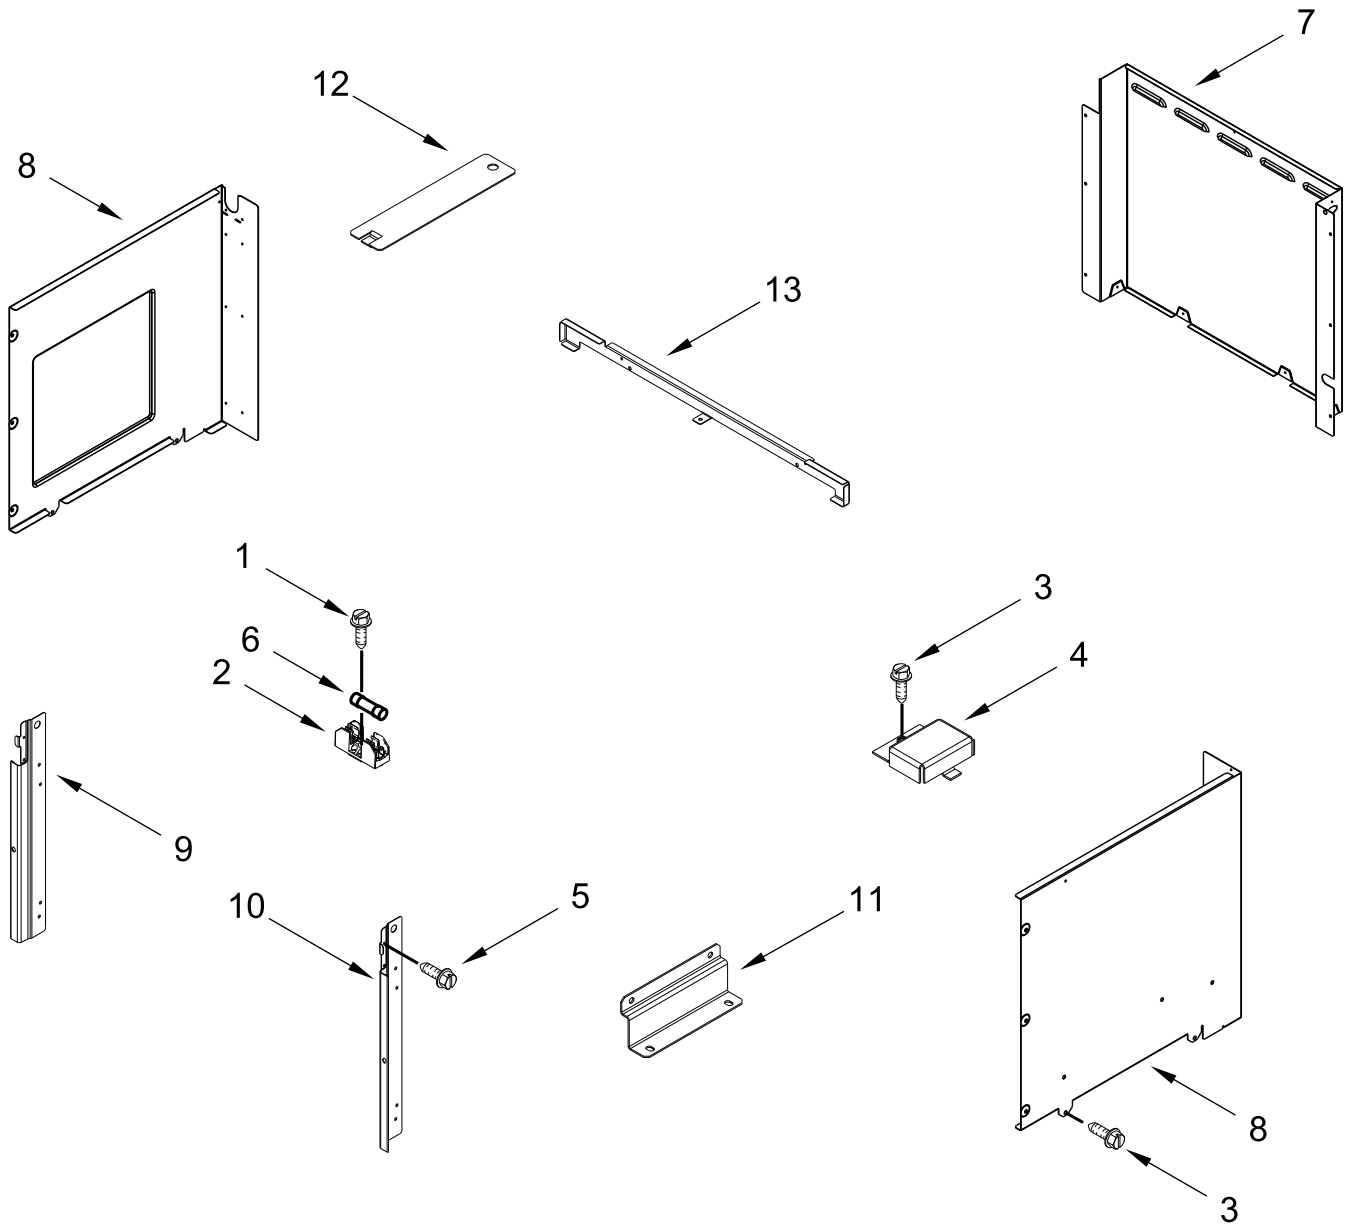

TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P060-60	Screw	7	W11037653	Cover, Combo Chassis Back Duct (With Hole)	9	W10360516	Rail, Side (Left)
2	4454949	Holder, Fuse				10	W10360518	Rail, Side (Right)
3	7101P426-60	Screw	8	W10655466	Chassis, Combo Side (Left)	11	W10283025	Side, Bracket
4	8285593	Cover, Connector		W11037649	Chassis, Combo Side (Right)	12	W10356437	Cover, Slot Module
5	7101P633-60	Screw (Black)				13	W10283023	Support, Crossbar
6	W10017410	Fuse, Time Delay						

MICROWAVE DOOR PARTS

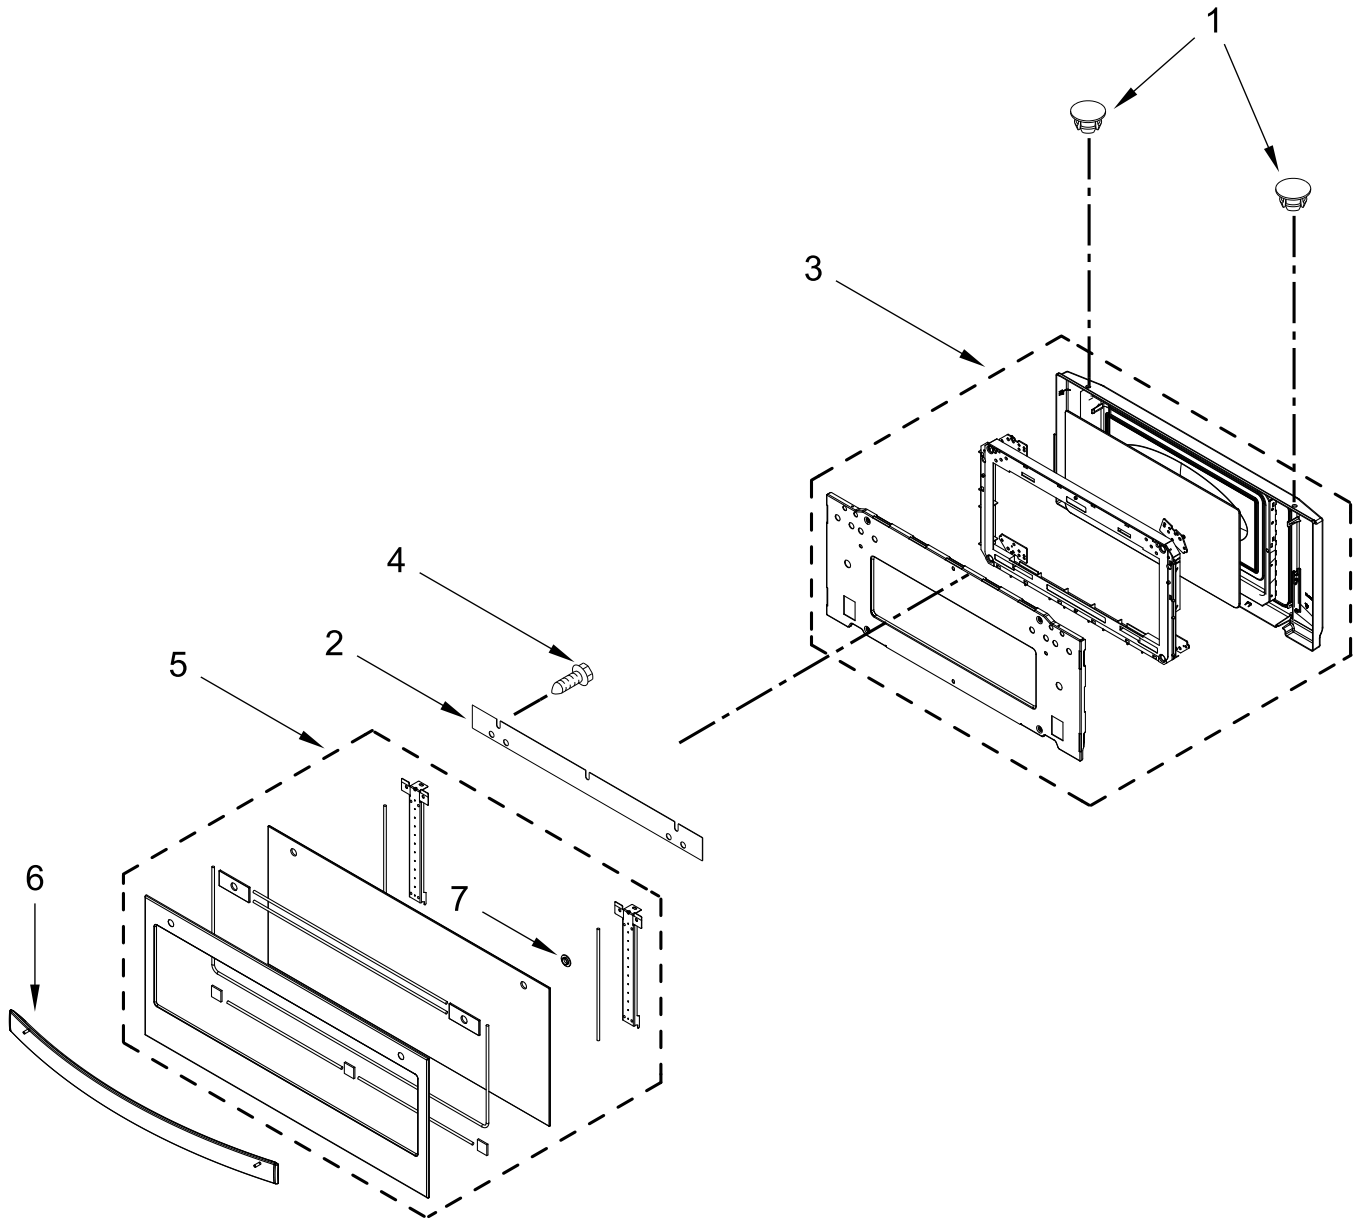

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5		Assembly, Outer Door	6		Handle, Door
2	W10359769	Foam, Door Handle		W10866277	Black		W11022641	Black
3	W10737653	Assembly, Inner Door		W10866278	White		W11022642	White
4	W10480830	Screw		W10866276	Stainless		W10880280	Stainless
						7	W10319024	Washer, Door

OPTIONAL PARTS (NOT INCLUDED)

PAIN, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

PAIN, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

MISCELLANEOUS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4448950	Screw, Door Installation