


## **Undercounter Refrigerator**

## PRODUCT MODEL NUMBERS

WUR50X24EM WUR50X24HZ


**Electrical:** A 115-Volt, 60-Hz., AC-only 15- or 20- amp fused (or circuit breaker), grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

## **OVERALL DIMENSIONS**

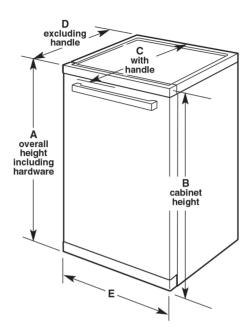

Model	Maximum Height "A"	Minimum Height "B"	Depth - With Handles "C"	Depth - Without Handles "D"	Width - Cabinet "E"	Depth - With Door Open 90°
WUR50X24EM	351/4"	34%"	26¾"	24%"	23¾"	47"
	(89.2 cm)	(87.3 cm)	(67 cm)	(61.9 cm)	(60.3 cm)	(119.38 cm)
WUR50X24HZ	35"	34 ½ "	25 5/8 "	24"	23 <sup>15/16</sup> "	46 ¼"
	(88.9 cm)	(87.63 cm)	(65.08 cm)	(60.96 cm)	(60.80 cm)	(117.47 cm)

## **LOCATION REQUIREMENTS**

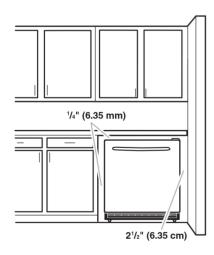

If your refrigerator is to be built-in, to ensure proper ventilation for your refrigerator, allow for  $\frac{1}{2}$  in. (6.35 mm) space on each side and at the top. When installing your refrigerator next to a fixed wall and the hinge side is next to the wall, leave  $2\frac{1}{2}$  (6.35 cm) minimum to allow for the door to swing open. To open door wider, leave more space.

**NOTE:** Do not install the refrigerator near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 55°F (13°C).

For best performance, do not install the refrigerator behind a cabinet door or block the base grille.