

## Initial commissioning

⚠ Before using the machine for the first time, ensure that it is correctly installed and connected. Please read the separate Operating Instructions supplied with the appliance.

For safety reasons, spinning is not possible until the machine has been prepared for use for the first time. To activate the spinning function, you must run a wash program without laundry and without detergent.

Using detergent could result in an excessive build-up of foam!

The ball valve is activated at the same time. The ball valve prevents detergent escaping from the suds container into the sump during a wash program, thus making maximum use of the detergent.


### Running the first program

- Turn on the water supply.
  - Turn the program selector to *Normal*.
- The washing machine is now switched on and the temperature *hot+* lights up on the control panel.
- Touch the *Start/Stop* sensor button.
- The program starts and the symbol lights up on the control panel.

### At the end of the program

- The symbol lights up on the control panel, *0:00* appears on the time display, and the drum occasionally rotates.
- Touch the *Start/Stop* sensor button.
- The door will be unlocked.
- Reach under the recessed grip and pull the door open.
- Note: Leave the door slightly open to allow the drum to dry.**
- When the program has ended, turn the program selector to .

## Operation

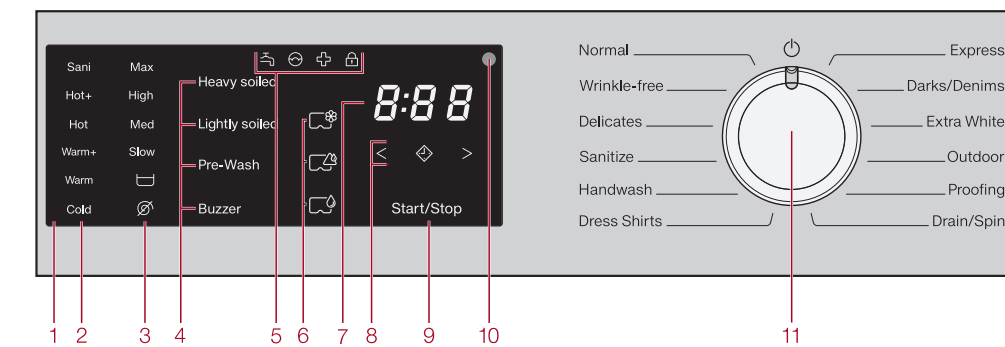

- Control panel**
- Sensor buttons – temperature** for selecting the wash temperature.
- Sensor buttons – spin speed** for selecting the spin speed.
- Sensor buttons – extra options** for the various extra options that can be added to the wash programs.
- Indicator lights**
  - = Water intake or drain fault
  - = Excess detergent used
  - = Hygiene info
  - = Flashes: Laundry can be added  
Lights up: Door is locked
- CapDosing sensor buttons**
  - = Fabric care (e.g., fabric softener, proofing agent)
  - = Additives (e.g., detergent enhancers)
  - = Detergent (for the main wash only)
- Time display** After the program has started, the program duration will appear in the display in hours and minutes.
- Sensor buttons < >** for the Delay Start function
- Start/Stop sensor button** Touching the Start/Stop sensor button starts the selected program or cancels a program that has already started. The sensor button flashes slowly as soon as it is possible for a program to be started and then lights up constantly after the program has started.
- Optical interface** for service technicians
- Program selector** for selecting programs and for switching off. The washing machine is switched on when you select a program, and switched off by turning the program selector to the position.

### Environmentally friendly washing

- Make use of the maximum load that the wash program can accommodate.
- When smaller amounts of laundry are washed, the washing machine's automatic load control system will reduce the amount of water and energy used.
- Use the *Express* program for small, lightly soiled loads.
- Modern detergents make it possible to wash at lower temperatures (e.g., 70°F/20°C). Using the corresponding temperature settings will save energy.
- Use the correct amount of detergent in accordance with the manufacturer's recommendations. Reduce the amount of detergent with smaller loads (approx. 1/3 less than the amount recommended can be used when washing a half load).
- Select the highest possible spin speed for the wash program to save energy in the subsequent tumble dryer cycle.

## Washing

### 1. Preparing the laundry

- Empty all pockets.
- ⚠ Foreign objects (e.g. nails, coins, paper clips, etc.) can cause damage to garments and components in the machine.
- Sort the laundry by color and by care label. Most garments have a textile care label in the collar or side seam.
  - Pre-treat stains and badly soiled areas (see the Miele website for advice).

### 2. Loading the washing machine


Check the drum for pets or foreign objects before loading it with laundry.

#### Opening the door

- Take hold of the door and pull it open. Loosely load the laundry in the drum.
- 

#### Closing the door

- Make sure that no items are caught between the door and the seal.
  - Shut the door.
- 

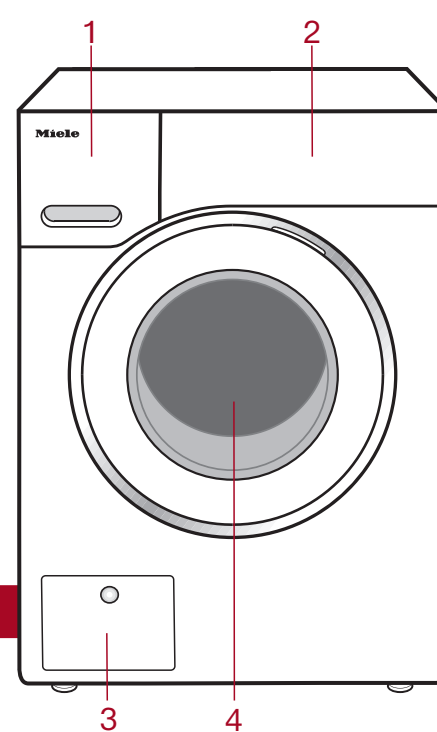

- Detergent dispenser drawer**
- Control panel**
- Drain filters**
- Door**

### 3. Selecting a program

The washing machine is switched on by turning the program selector to a wash program.

#### Program selection

- Turn the program selector to the required program.
- The estimated wash time is shown on the time display and the pre-set temperature and spin speed light up on the control panel.

#### Selecting a temperature and spin speed

- The wash program's pre-set temperature and spin speed light up brightly. The choice of temperatures and spin speeds selectable for the wash program light up dimly.
- Touch the sensor button for the temperature desired. It will then light up brightly.
  - Touch the sensor button for the spin speed desired. It will then light up brightly.

#### Selecting extra options

- The selection of extra options available for the wash program lights up dimly.
- Touch the sensor button for the required extra option. It will then light up brightly.


**Tip: You can select multiple extra options for a wash program.**

### 4. Adding detergent

There are several options for adding detergent to the washing machine.

#### Detergent drawer

This washing machine requires high-efficiency (HE) detergent

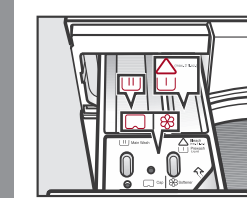

- Pull out the detergent drawer and add detergent to the compartments.

Chlorine bleach for removing stains or liquid detergent for the pre-wash

Detergent for the main wash, including Soak if selected

/ Fabric softener, liquid starch, or caps

#### Using chlorine bleach

⚠ Chlorine bleach is a very aggressive substance. It can cause damage to the colors and fibers of textiles. Only use chlorine bleach on suitable textiles.

Chlorination **must** be activated in the settings before chlorine bleach is first used.

#### Dispensing chlorine bleach

Follow the manufacturer's instructions on the packaging.

The extra option *Pre-wash* **must not be selected.**

- Pour max. 1/4 cup (60 ml) of chlorine bleach into the chamber.
- The chlorine bleach is added automatically 10 minutes before the end of the main wash.

#### Using powder detergent

The detergent drawer contains an insert for liquid detergent in the compartment. This insert must be removed to use powder detergent. Using powder detergent in the compartment is **not** possible.

#### CapDosing

Three different types of capsule are available:

- Fabric care (e.g., fabric softener, proofing agent)
- Additives (e.g., detergent enhancers)
- Detergent (for the main wash only)

Each cap contains the correct amount for one wash cycle.

#### Switching on CapDosing

- Touch the sensor button for the cap you want to use

Sensor button		Cap
	for	
	for	
	for	


### 5. Starting a program

- Touch the flashing *Start/Stop* sensor button.
- The door will lock (the symbol will appear on the control panel to show this) and the program will start.

### 6. Program end

- The time display shows *0:00*. The symbol will remain lit up on the control panel. The door is locked in the Anti-crease phase.
- Touch the *Start/Stop* sensor button.
  - The door unlocks and the symbol on the control panel goes out.
  - Pull open the door.
  - Remove the laundry.

⚠ Check that all items have been removed from the drum.

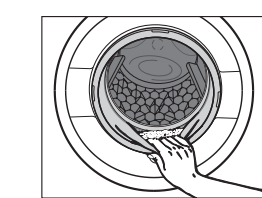

- Check the folds in the door seal for any small articles, such as buttons, which might be lodged there.
- Turn the program selector to the position. This switches the washing machine off.
- If applicable, remove the used cap from the detergent drawer and leave the drawer slightly open.


## Delay Start/Extra options

### Delay Start

With Delay Start, you can delay the start of a program from 30 minutes up to a maximum of 24 hours..

#### Selecting Delay Start

- Select the program required.
- Touch the sensor button.

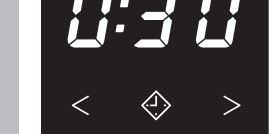

- Touch the < or > sensor button repeatedly until the required Delay Start time appears on the time display.
- In the case of settings below 10 hours, the Delay Start time changes in increments of 30 minutes
- In the case of settings above 10 hours, the Delay Start time changes in increments of 1 hour
- Touch the flashing *Start/Stop* sensor button.

The Delay Start process starts and counts down on the time display.

**Tip:** Delay Start cannot be selected in the Drain/Spin or Proofing programs.

### Extra options

Extra options are selected and deselected using the relevant sensor buttons on the control panel.

#### Heavy soiling

For laundry that is very heavily soiled. The extended wash duration enhances the stain-removing effect.

#### Light soiling

For slightly soiled textiles that are not stained. The wash duration is reduced.

#### Pre-wash

For laundry with large amounts of dirt, e.g., dust and sand.

#### Buzzer

A buzzer sounds at the end of the program. The buzzer will sound until the washing machine is switched off. The buzzer volume can be changed.

DELAY START/EXTRA OPTIONS

Temperature	Spin speed	Laundry type
Normal hot+; hot; warm+; warm; cold	max.; 1; 2	Full load (17.6 lb/8 kg) Cotton, linen, and mixed fiber textiles made of both cotton and linen.
Wrinkle-free hot+; hot; warm+; warm; cold	fast; medium; slow; 1; 2	Half load (8.8 lb/4 kg) Synthetic or mixed fiber fabric, or wrinkle-free cotton.
Delicates hot+; hot; warm+; warm; cold	medium; slow; 1; 2	Small load (6.6 lb/3 kg) For fine textiles made from synthetic fibers.
Sanitize hot+; hot; warm+; warm; cold	max.; fast; 1; 2	Full load (17.6 lb/8 kg) Cotton or linen fabrics with direct skin contact or for which special hygiene requirements apply.
Handwash warm+; warm; cold	fast; medium; slow; 1; 2	Small load (4.4 lb/2 kg) For fine textiles which are only suitable for hand washing.
Dress Shirts hot+; hot; warm+; warm; cold	medium; slow; 1; 2	Small load (4.4 lb/2 kg) Pre-treat collars and cuffs depending on the level of soiling.
Express warm+; warm; cold	fast; medium; slow; 1; 2	Half load (7.7 lb/3.5 kg) Cotton textiles that have hardly been worn or are only very lightly soiled. Selecting the Lightly soiled extra option will reduce the washing time by 10 minutes.
Darks/Denims warm+; warm; cold	fast; medium; slow; 1; 2	Small load (4.4 lb/2 kg) Black and dark garments made from cotton, mixed fibers, and denim.
Extra White hot+	max.; fast; 1; 2	Full load (17.6 lb/8 kg) For white textiles made of cotton or linen without special hygiene requirements.
Outdoor warm+; warm; cold	medium; slow; 1; 2	Small load (5.5 lb/2.5 kg) Performance outerwear (e.g., jackets and trousers) made from membrane fabric.
Proofing warm+	fast; medium; slow; 1; 2	Small load (5.5 lb/2.5 kg) Treating microfiber fabric, ski wear, or table linens/drapes made from mainly synthetic fibers to provide a finish which is resistant to water and dirt.
Drain/Spin Cold	max.; fast; medium; slow; 1; 2	Full load (17.6 lb/8 kg) Drain only. Set spin speed to 1. Make sure you select the appropriate spin speed.

**Miele recommended detergents**  
The Miele detergents have been developed by Miele especially for the Miele washing machine. You can order the Miele detergents from Miele's online store.

Programs	Miele UltraWhite	Miele UltraColor	Miele Cap	Miele Cap	Miele Cap
Normal	✓	✓	-	F	H
Wrinkle-free	-	✓	-	F	H
Delicates	-	✓	A, B, C	F	-
Sanitize	✓	-	-	F	H
Handwash	-	-	A, D, E	F	-
Dress Shirts	✓	✓	-	F	H
Express	-	✓	-	F	-
Darks/Denims	-	✓	-	F	-
Extra White	✓	✓	-	F	H
Outdoor	-	-	C	-	-
Proofing	-	-	-	G	-

✓ = Recommended; - = Not recommended  
 A = Sportswear; B = Downs; C = Outdoor; D = WoolCare; E = SilkCare; F = Fabric Softener; G = Proofing; H = Booster

**Cleaning the detergent dispensing drawer**

Washing at low temperatures and the use of liquid detergent can lead to a build-up of bacteria in the detergent dispensing drawer.

- Remove and clean the siphon.
- Pull the siphon out of the chamber
- Clean all parts and the detergent drawer with warm water.

**Cleaning the detergent dispenser drawer housing**

- Use a bottle brush to remove detergent residues and limescale from the jets inside the detergent dispenser drawer housing.

**Cleaning the drum (hygiene info)**

Washing at low temperatures and/or using liquid detergent can cause bacteria and unpleasant odors to build up in the washing machine. Use the Normal program to clean the machine. This should be done at the latest when the indicator light comes on.

**Removing and cleaning the insert for liquid detergents**

An insert for liquid detergents is located in the compartment of the detergent dispenser drawer.

- Remove the insert. Clean the insert thoroughly with warm water.

**Cleaning the compartment**

The compartment has a siphon for better dispensing of the chlorine bleach.

- Remove the release catch.

Problem/Fault message	Possible cause and solution
-0- lights up	The program selector was moved to a different position after the program had started. <ul style="list-style-type: none"> <li>Turn the program selector back to the original position.</li> </ul> The program has been interrupted. <ul style="list-style-type: none"> <li>Open the door.</li> <li>Close the door. Close the door.</li> </ul> Excessive foam has built up during washing. <ul style="list-style-type: none"> <li>Use less detergent next time and follow the manufacturer's instructions on dosage given on the packaging.</li> </ul>
The indicator light lights up.	A temperature program above 140°F (60°C) has not been run for a long period of time. <ul style="list-style-type: none"> <li>In order to prevent bacteria and unpleasant odors building up in the machine, run the Normal program using Miele washing machine cleaner or universal powder detergent.</li> </ul>
The indicator light lights up.	The drum is locked during a program. <ul style="list-style-type: none"> <li>Touch the Start/Stop button and cancel the program. The program is canceled, the door will unlock, and you will be able to pull it open.</li> </ul> There is still water in the drum and the machine is unable to drain. <ul style="list-style-type: none"> <li>Clean the drain filter and the drain pump (see the operating instructions).</li> </ul> To protect the user against scalding, the door cannot be opened if the suds temperature is higher than 130°F (55°C). <ul style="list-style-type: none"> <li>Wait until the temperature in the drum has decreased and the bars have stopped flashing on the time display.</li> </ul> The door lock has jammed. <ul style="list-style-type: none"> <li>Contact Technical Service.</li> </ul>
The door cannot be pulled open during a program.	The door is not closed properly. The door lock could not engage. <ul style="list-style-type: none"> <li>Close the door again.</li> <li>Start the program again. If the fault message appears again, contact Technical Service.</li> </ul> The water intake is blocked or restricted. <ul style="list-style-type: none"> <li>Check whether the water supply is turned on properly.</li> <li>Check whether the intake hose is kinked.</li> <li>Check whether there is sufficient water pressure.</li> </ul> The filter in the water intake is blocked. <ul style="list-style-type: none"> <li>Clean the filter (see the Operating Instructions).</li> </ul> The drain is blocked or restricted. The drain hose has been fixed too high. <ul style="list-style-type: none"> <li>Clean the filter and the pump.</li> <li>The maximum drain height is 1 m.</li> </ul>
F and 34 appear alternately on the time display.	The water protection system has reacted. The washing machine is switched off. <ul style="list-style-type: none"> <li>Clean the water supply.</li> <li>Contact Technical Service.</li> </ul> There is a fault. <ul style="list-style-type: none"> <li>Disconnect the washing machine from the power supply, either by unplugging the machine or by disconnecting it at the breaker</li> <li>Wait at least 2 minutes before reconnecting the washing machine to the electricity supply.</li> <li>Then switch the washing machine on again.</li> <li>Restart the program.</li> </ul> If the fault message appears again, contact Technical Service.
The fault indicator light lights up, and F and 10 appear alternately on the time display, and the buzzer sounds.	The water intake is blocked or restricted. <ul style="list-style-type: none"> <li>Check whether the water supply is turned on properly.</li> <li>Check whether the intake hose is kinked.</li> <li>Check whether there is sufficient water pressure.</li> </ul> The filter in the water intake is blocked. <ul style="list-style-type: none"> <li>Clean the filter (see the Operating Instructions).</li> </ul> The drain is blocked or restricted. The drain hose has been fixed too high. <ul style="list-style-type: none"> <li>Clean the filter and the pump.</li> <li>The maximum drain height is 1 m.</li> </ul>
The fault indicator light lights up, and F and 138 appear alternately on the time display, and the buzzer sounds.	The water protection system has reacted. The washing machine is switched off. <ul style="list-style-type: none"> <li>Clean the water supply.</li> <li>Contact Technical Service.</li> </ul> There is a fault. <ul style="list-style-type: none"> <li>Disconnect the washing machine from the power supply, either by unplugging the machine or by disconnecting it at the breaker</li> <li>Wait at least 2 minutes before reconnecting the washing machine to the electricity supply.</li> <li>Then switch the washing machine on again.</li> <li>Restart the program.</li> </ul> If the fault message appears again, contact Technical Service.
F and 35 appear alternately on the time display.	The door is not closed properly. The door lock could not engage. <ul style="list-style-type: none"> <li>Close the door again.</li> <li>Start the program again. If the fault message appears again, contact Technical Service.</li> </ul> The water intake is blocked or restricted. <ul style="list-style-type: none"> <li>Check whether the water supply is turned on properly.</li> <li>Check whether the intake hose is kinked.</li> <li>Check whether there is sufficient water pressure.</li> </ul> The filter in the water intake is blocked. <ul style="list-style-type: none"> <li>Clean the filter (see the Operating Instructions).</li> </ul> The drain is blocked or restricted. The drain hose has been fixed too high. <ul style="list-style-type: none"> <li>Clean the filter and the pump.</li> <li>The maximum drain height is 1 m.</li> </ul>
After the program is canceled, flashing bars appear on the time display.	To protect the user against scalding, the door cannot be opened if the suds temperature is higher than 130°F (55°C). <ul style="list-style-type: none"> <li>Wait until the temperature in the drum has decreased and the bars have stopped flashing on the time display.</li> </ul> The door lock has jammed. <ul style="list-style-type: none"> <li>Contact Technical Service.</li> </ul>
F and 35 appear alternately on the time display.	The door is not closed properly. The door lock could not engage. <ul style="list-style-type: none"> <li>Close the door again.</li> <li>Start the program again. If the fault message appears again, contact Technical Service.</li> </ul> The water intake is blocked or restricted. <ul style="list-style-type: none"> <li>Check whether the water supply is turned on properly.</li> <li>Check whether the intake hose is kinked.</li> <li>Check whether there is sufficient water pressure.</li> </ul> The filter in the water intake is blocked. <ul style="list-style-type: none"> <li>Clean the filter (see the Operating Instructions).</li> </ul> The drain is blocked or restricted. The drain hose has been fixed too high. <ul style="list-style-type: none"> <li>Clean the filter and the pump.</li> <li>The maximum drain height is 1 m.</li> </ul>

Quick Guide Washer



These short instructions are not a substitute for the Operating Instructions supplied with the appliance! Please read the Operating Instructions supplied with your washing machine before using it for the first time and take note of the IMPORTANT SAFETY INSTRUCTIONS, as well as the full descriptions on how to use your appliance.