



AR1733B Explosion View and Parts List

NO	Parts No.	Part Name	Qty
1	BC48.2/B	Foamed Door/Black	1
2	BC48.2-1	Gasket	1
3	BC48.1	Cabinet	1
4	BC48.0-4	Upper Hinge cover	1
5		Self Tapping Screw	2
6	BC48.0.2	Top Hinge	1
7	BC48.4-1	Paper Mat	1
8	BC48.0.6.1	Thermostat	1
9	BC48.0-11	Thermostat Box	1
10	BC48.0-7	Thermostat Knob	1
11	BC48.0-9b	Small Shelf	1
12	BC48.0.3	Under Hinge	1
13		Self Tapping Screw	3
14	BC48.0-18	Adjustable Foot	1
15	BC48.0-10	Fixed Leg	1
16	BC48.0.5	Power Supply Cord	1
17	BC48.0-13	Terminal Box	1
18		Self Tapping Screw	2
19	BC48.0.5	Drier	1
20		Self Tapping Screw	4
21	BC48.0.1	Compressor Base	1
22	BC48.0-25	Compressor	1
23	BC48.0-25/1	Overload Protec	1
24	BC48.0-25/2	PTC Starter	1
25	BC48.0-25/3	Relay Cover	1
26	BC48.0-25/4	Relay Band	1
27		Self Tapping Screw	1
28	BC48.0-19	Wire Clip	1
29		Bolt	4
30		Rivet	2
31	BC48.0-24	Big Bottle Bar	1
32	BC48.0-24	Small Bottle Bar	1
33	BC48.0-9a	Big Glass Shelf	1