

 
QUICK START GUIDE

DishDrawer™ dishwasher (Classic)

NZ AU US CA

- Keep this document handy for easy reference.
- For detailed information on the features of your dishwasher, see your ‘User guide’.
  - Before using your dishwasher, make sure you read the full ‘User guide’, with special attention to the ‘Safety and warnings’ section.
  - For contact information or if you require service, assistance or replacement parts, see the end of this document or your ‘Service & warranty’ booklet.


YOUR MODEL

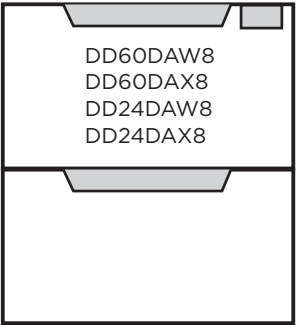

Note: each drawer can run independently of the other drawer.


Fisher & Paykel

 WASH PROGRAM CONTROLS

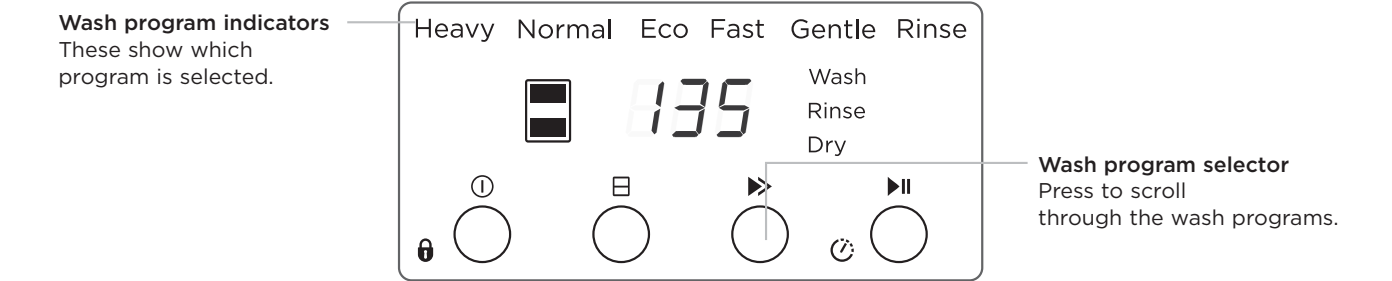


| HEAVY                                 | NORMAL  | NORMAL ECO  | FAST                   | GENTLE                                      | RINSE                                      |
|---------------------------------------|---|---|------------------------|---|--|
| Heavily soiled pots, pans and dishes. | Dishes that are quite heavily soiled or food soils that have been left to dry overnight. This is the default setting. | Normal soiled dishes for optimum water and energy usage. The Energy Guide is based on this cycle. | Lightly soiled dishes. | Lightly soiled and heat sensitive crockery. | Prevents odors and soils drying on dishes. |

 CONTROLS AND DISPLAY

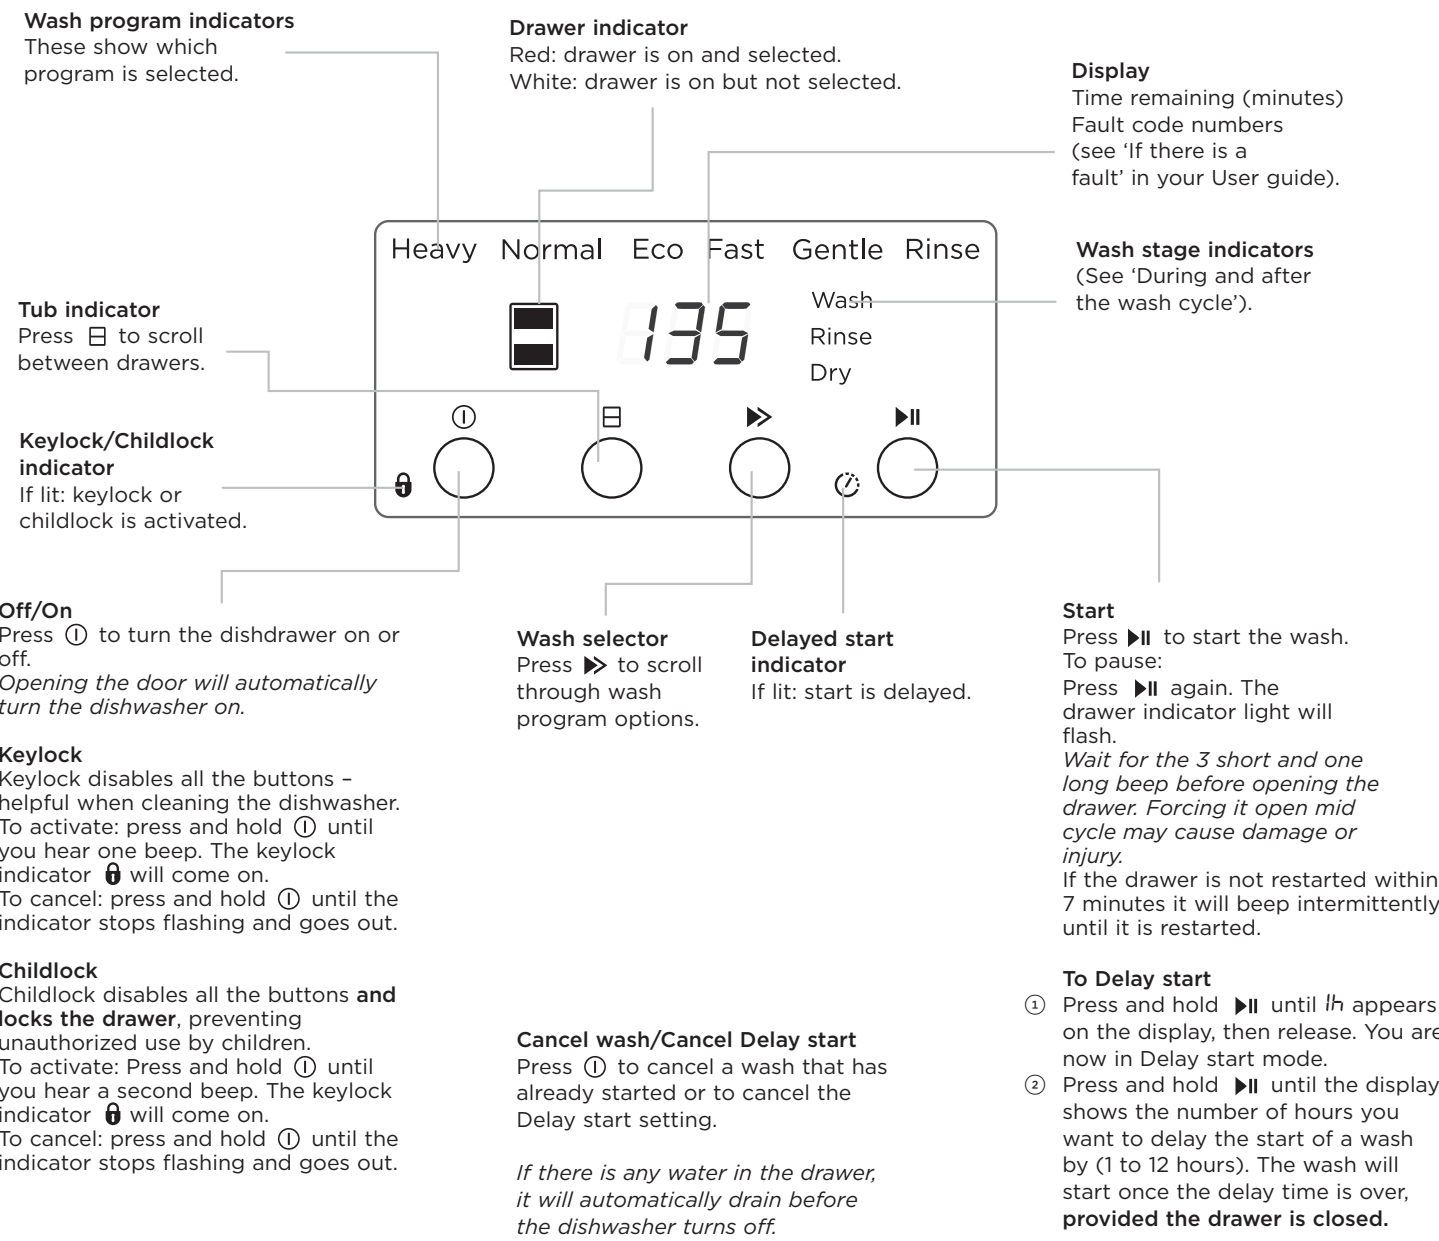


 OPERATING INSTRUCTIONS - STARTING A WASH

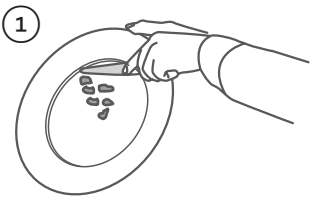


**Discard scraps**

 Scrape large food particles off (e.g. bones, fruit stones) and remove any foreign objects (e.g. toothpicks, strings, paper).

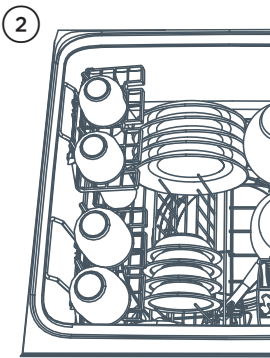


**Load dishes carefully**

 To help with wash performance, arrange dishes so they are evenly spaced and not nesting.

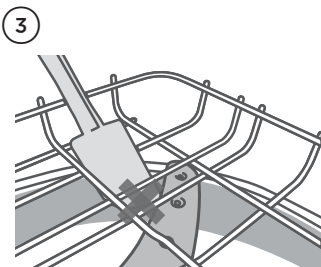

**Check spray arm(s)**

 Ensure there are no items blocking the spray arm(s) from rotating.

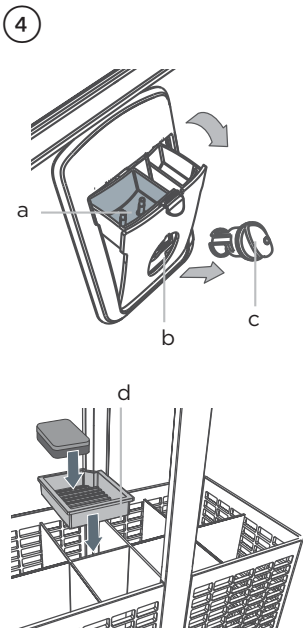

Add detergent and check rinse aid

Fill the detergent dispenser (a) with powdered detergent and close the dispenser door.

**IMPORTANT!**  
**Do not place liquid detergent or tablets in the detergent dispenser.**

 
If the indicator on its plug (c) glows bright red, refill the rinse aid dispenser (b) with liquid rinse aid. Make sure you then refit the rinse aid plug back into its original position.

If using a tablet, place it in the cutlery basket (d) or at the bottom of the drawer.



Select wash


Power the dishwasher on [On/Off icon] then select wash program [Wash selector icon] .



Start wash or set Delay start

Close the drawer and press [Start icon] .

DURING AND AFTER THE WASH

 
As the wash progresses, the display will count down the minutes remaining and show what stage the program is at. When the program has finished, the display will show  and the dishwasher will beep. After 30 seconds the display will go out.

- You may notice the following noises at the end of the wash. These are all part of normal operation:
- Both drawers may be draining simultaneously.
  - The drying fan may continue to run after a wash program has finished for a set time or until the drawer is opened. The fan assists with drying and uses negligible amounts of energy.


For best drying results, we recommend unloading the dishes once they have cooled.

Wash  
Rinse  
Dry


DOS AND DON'TS OF LOADING

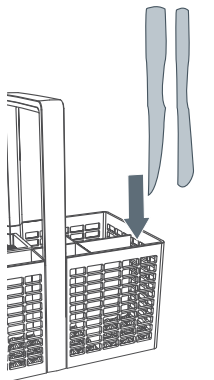

 
Sharp or pointed items must be placed horizontally or with sharp edges/points facing down to avoid risk of injury.

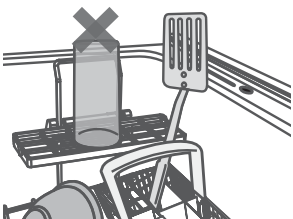

 
Protruding items will stop the internal lid of the dishwasher from sealing properly, which could result in a service call.

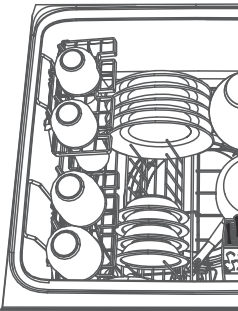

 
A neatly arranged load with evenly spaced dishes helps wash performance.

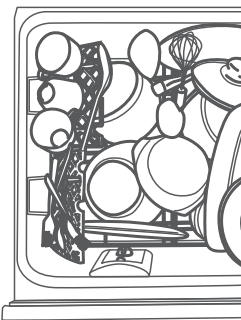


Overcrowding reduces wash performance.

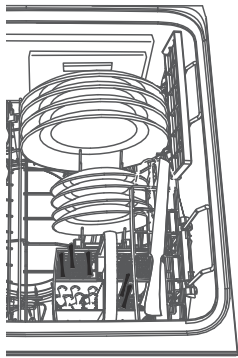 

 
Ensure there is enough space between plates. Mix spoons, knives and forks within the cutlery basket to prevent them from nesting.

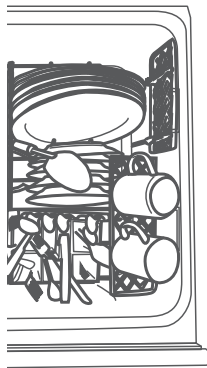

 If plates and cutlery are nesting, they are less likely to be cleaned well.

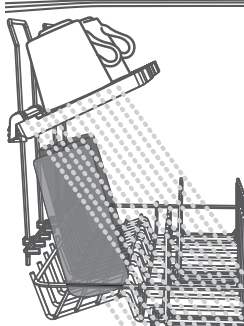

 
Ensure that water reaches all items on the racks.

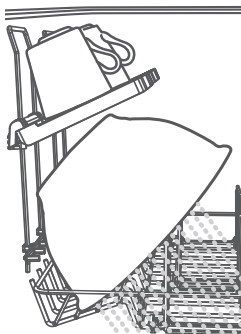




Dishware is blocking water from reaching items on the racks.


PREFERENCE OPTIONS













You can change the setting of these options to suit your preferences or circumstances. We recommend selecting the most suitable settings before you start using your dishwasher.




| OPTION           | RINSE AID   | OPEN DRAWER<br>AUTO POWER-ON   | TURN BEEPS OFF                                    | CLOSED DRAWER AUTOLOCK   |
|------------------|---|--|---|--|
| What does it do? | Regulates the amount of rinse aid dispensed. Reduce this setting if there is excess foam after a wash. Increase this setting if dishes are wet or streaky after a wash. | Your dishwasher is factory-set to automatically power on for 30 seconds whenever you open the drawer. You can turn this setting off. | This turns all beeps off except for fault alerts. | When this setting is on, the drawer will automatically lock 30 seconds after it's closed. It can then be unlocked by pressing  (unless Keylock or Childlock is also activated). Useful in boats or motor homes. |

How to change the setting of an option

- ① CHECK  
Check that there is no wash underway, press 
- ② ENTER MENU & SCROLL TO OPTION  
To enter the menu: Press and hold the  and  together for 5 seconds.
- You are now in the Rinse aid option of the preference options menu.
  - If you want to change the Rinse aid setting, go to step 3 now.
  - If you want to change the setting of another option, you will need to scroll to that option first.

To scroll to the next option: press . To know which option you're in, watch the letters in the display (see table below). When you have scrolled to the end of the sequence, it will start again with Rinse aid (after the lower tone).

| OPTION                | RINSE AID  | OPEN DRAWER<br>AUTO POWER-ON  | BEEPS AT END<br>OF WASH   | CLOSED DRAWER<br>AUTOLOCK   |
|-----------------------|--|---|---|---|
| Which option am I in? |    |   |   |   |
| Possible settings     | Off to Max (rA5)   | On or Off   | On or Off   | On or Off   |
| Example               | setting is 1<br><br>setting is 4<br> | On<br><br>Off<br> | On<br><br>Off<br> | On<br><br>Off<br> |

- ③ CHANGE SETTING  
Press  to change the setting within an option. For example, to change the Rinse aid setting from 4 (factory default) to 2, you need to press  3 times.
- ④ SAVE SETTING & QUIT MENU  
Press . This will save the new setting and quit the preference options menu.

FOR MORE INFORMATION

For detailed information on the features of your dishwasher

 see your 'User guide'

For warranty information

 see your 'Service and warranty' booklet

If you...

- have any questions or comments
- need a Fisher & Paykel authorized technician to service your product
- need replacement parts or accessories
- want to register your product

 see your 'Service and warranty' booklet or contact us

|     |                 |                |
|-----|-----------------|----------------|
| NZ  | toll-free, 24/7 | 0800 372 273   |
| AU  | toll-free, 24/7 | 1300 650 590   |
| USA | toll-free, 24/7 | 1 888 936 7872 |
| CA  | toll-free, 24/7 | 1 888 936 7872 |

[www.fisherpaykel.com](http://www.fisherpaykel.com)