 


WARNING

To avoid electric shock, which can cause death or severe personal injury, do not connect your refrigerator to an electrical power source until you have completed Step 3 of these instructions.



NOTE

are provided only as a possible customer option. We recommend that you use a service or kitchen your refrigerator

Prepare The Installation Site

Include these minimum guidelines in your site preparation:

- Choose a place near a grounded electrical outlet.
- Do not use an extension cord or an adapter plug.
- · Avoid direct sunlight and close proximity to a range, dishwasher or other heat source.
- Floor should be level and able to support a fully loaded refrigerator.

Allow the following clearances for ease of installation, proper air circulation, and plumbing and electrical connections:

Sides & Top: 3/8 inch

Rear: 1 inch



CAUTION

Room temperatures below 55°F (13°C) or above 110°F (43°C) will impair cooling ability of your refrigerator's compressor.

Transport Unpackaged Refrigerator To Site

By now, you have already removed your refrigerator's shipping carton You may still need to use a hand truck to move it through close spaces or entrances. If the refrigerator is larger than an entrance, consider two options:

- · Remove the entrance door if one exists.
- Remove the refrigerator doors (see how in your Use & Care Guide).

When using a hand truck:

- · Load refrigerator from side of cabinet only.
- Do not run retaining straps over handles. · Do not over-tighten retaining straps.
- Never use refrigerator handles to move the refrigerator.
- Remove tape from doors only after unit is in place.



CAUTION

Shifting the refrigerator from side to side may damage flooring.

Place In Permanent Position

If possible, use a hand truck to position the refrigerator directly in front of its cabinet enclosure. Plug in the power cord, and push the refrigerator straight back into place.



CAUTION

- Shifting the refrigerator from side to side may damage flooring.
- · Do not block the toe grille on the lower front of your refrigerator. Sufficient air circulation is essential for proper operation.

 
4 Level Refrigerator & Adjust Doors (if necessary)

 
Guidelines for final positioning of your refrigerator:

- · All four corners of the cabinet must rest firmly on the floor.
- The cabinet should be level at the front and rear.
- The sides should tilt 1/4-inch (6 mm) from front-toback (to ensure that doors close and seal properly).
- Doors should align with each other and be level.

To level the cabinet using the front rollers:

- 1 Remove the toe grille (Figure 1).
- 2 Use a flat-blade screwdriver or 3/8 inch socket wrench to raise or lower the front rollers (Figure 2).





NOTE

Raise the front of the refrigerator enough so the doors close freely when opened halfway. The refrigerator should slope 1/4 inch to 1/2 inch from front-to-back. Then level the refrigerator from side-to-side.



3 Lower the anti-tip bracket clockwise until it contacts the floor. (Figure 3).

5 Remove Internal Shipping Materials

We use packing foam and tape to secure the internal parts of your refrigerator for shipping. Once the refrigerator is in position, you can remove this materia


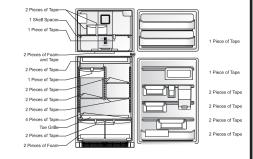


Figure 3


Location of these materials may vary depending on your model.

6 Controls

When changing controls, wait 24 hours before making additional adjustments.

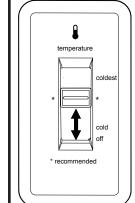




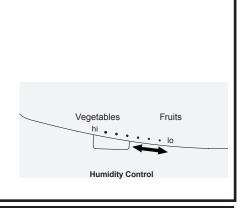

Door Removal (if necessary)

 If you need to remove the doors to get your refrigerator into the house, please see "Door Removal Instructions" in your Use & Care Manual





8 Installation Checkoff List

Doors

- ☐ Handles are secure and tight
- ☐ Door seals completely to cabinet on all sides
- ☐ Freezer door is level across the top

- ☐ Refrigerator is level, side to side and tilted 1/4" (6mm) front to back
- Toe grille is properly attached to refrigerator
- Cabinet is setting solid on all corners

Electrical Power

☐ House power turned on ☐ Refrigerator plugged in

Final Checks

- Shipping material removed Fresh Food and Freezer controls set
- Crisper Humidity controls set
- Registration Card sent in

P/N: 41014306-EN rev A 11/1/15