

KitchenAid®

Mixer

MODELS:

KSM55SXXXAG0 (Agave)

KSM55SXXXBM0 (Black Matte)

KSM55SXXXCU0 (Contour Silver)


KSM55SXXXER0 (Empire Red)

KSM55SXXXOB0 (Onyx Black)

KSM55SXXXPL0 (Porcelain White)

KSM55SXXXWH0 (White)


COLOR VARIATION PARTS

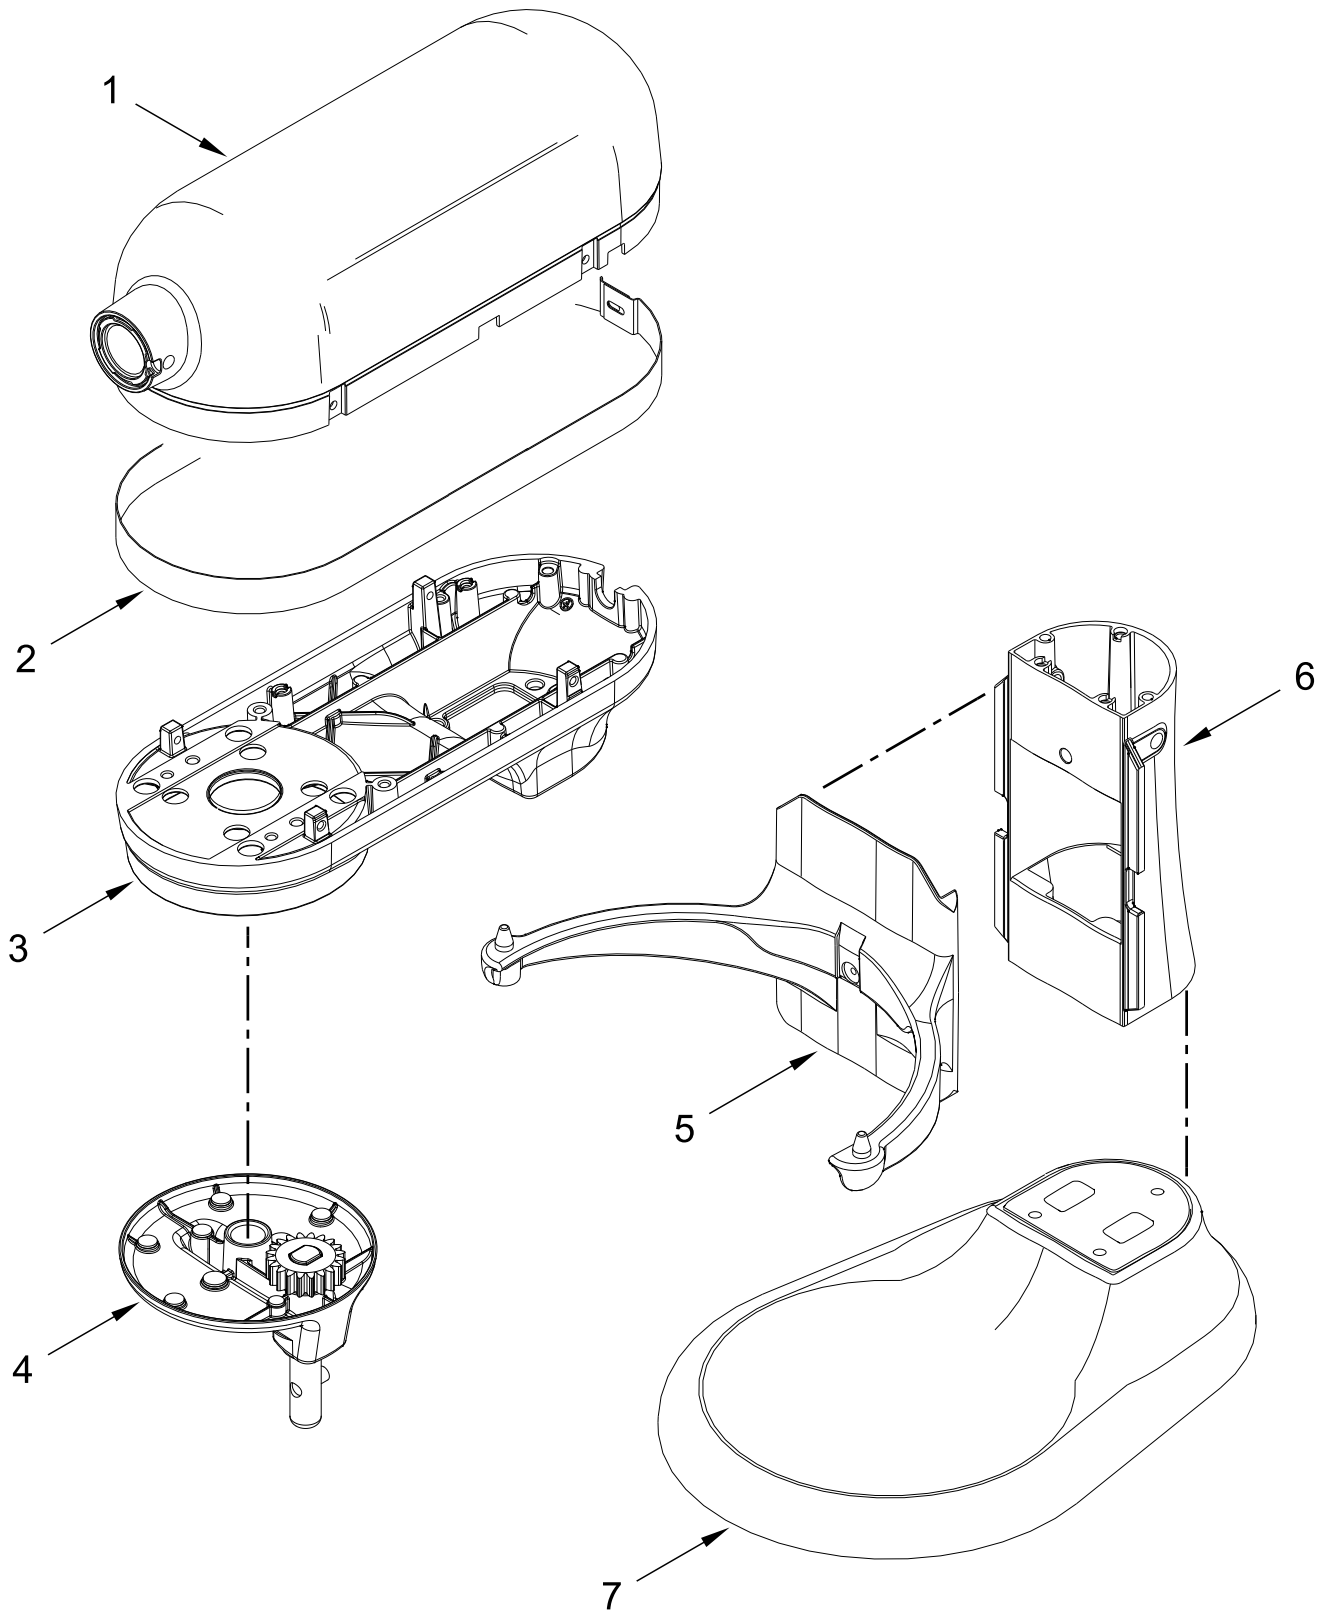

COLOR VARIATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Motor Housing	4		Planetary	6		Column and Pins
	W11714138	Agave		W11714145	Agave		W11714140	Agave
	W11123176	Black Matte		W11513622	Black Matte		W11123140	Black Matte
	W10327951	Contour Silver		W11513269	Contour Silver		W10328003	Contour Silver
	9705300	Empire Red		W11513270	Empire Red		9705324	Empire Red
	9705296	Onyx Black		W11513268	Onyx Black		9705320	Onyx Black
	W11691227	Porcelain White		W11714148	Porcelain White		W11691229	Porcelain White
	9703311	White		W11513267	White		9703673	White
2		Trim Band	5		Bowl Support and Pins	7		Base and Foot Assembly
	W11420346	Bright Aluminum		W11714142	Agave		W11714137	Agave
3		Lower Gearcase		W11328664	Black Matte		W11123131	Black Matte
	W11714133	Agave		W10327966	Contour Silver		W10328017	Contour Silver
	W11520136	Black Matte		9705360	Empire Red		9705348	Empire Red
	W11520143	Contour Silver		9705356	Onyx Black		9705344	Onyx Black
	W11520142	Empire Red		W11691232	Porcelain White		W11691226	Porcelain White
	W11421149	Onyx Black		9703674	White		9703690	White
	W11691225	Porcelain White						
	W11520144	White						


CASE, GEARING AND PLANETARY UNIT PARTS

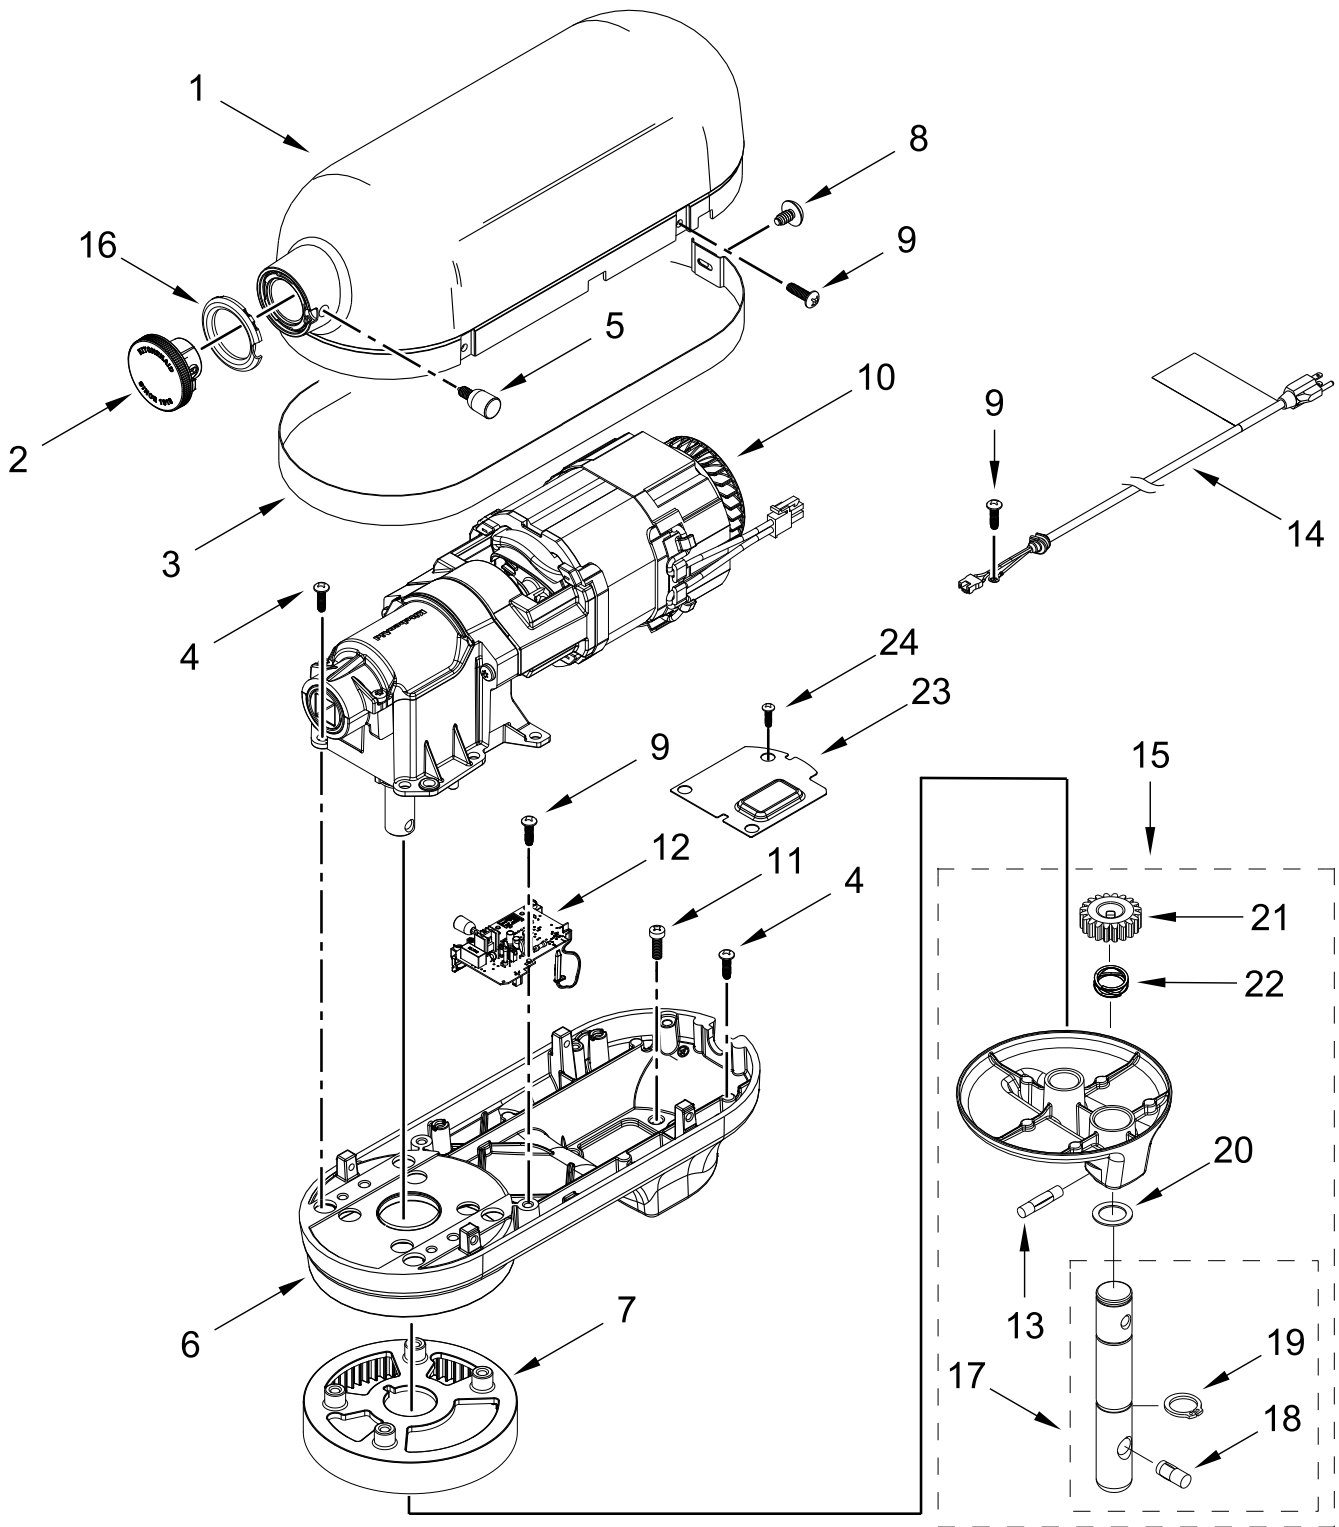

CASE, GEARING AND PLANETARY UNIT PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Motor Housing (Refer to Color Variation Parts Page)	8	3400617	Screw	17	W11531546	Shaft, Agitator
			9	3400814	Screw	18	W11533778	Pin, Groove
			10	W11523176	Motor, 120 Volt Assembly	19	9703680	Clip, Retaining
2	W11618094	Cap, Attachment Hub				20	8533910	Washer
3		Trim Band (Refer to Color Variation Parts Page)	11	3400200	Screw	21	W11553110	Gear, Pinion
			12	W11503693	Control Assembly, 120 Volt	22	W11537260	Spring, Wave
4	W10351843	Screw	13	W10234531	Pin, Groove	23	W11560130	Plate, Lower Housing
5		Thumb Screw	14		Cord, Power	24	W10419037	Screw
	W11521861	Black		W11459236	Black			
6		Lower Gearcase (Refer to Color Variation Parts Page)	15		Planetary Assembly (Refer to Color Variation Parts Page)			
7	W11454895	Gear, Ring and Plate Assembly	16	9706141	Ring, Attachment Hub			

BASE AND PEDESTAL UNIT PARTS

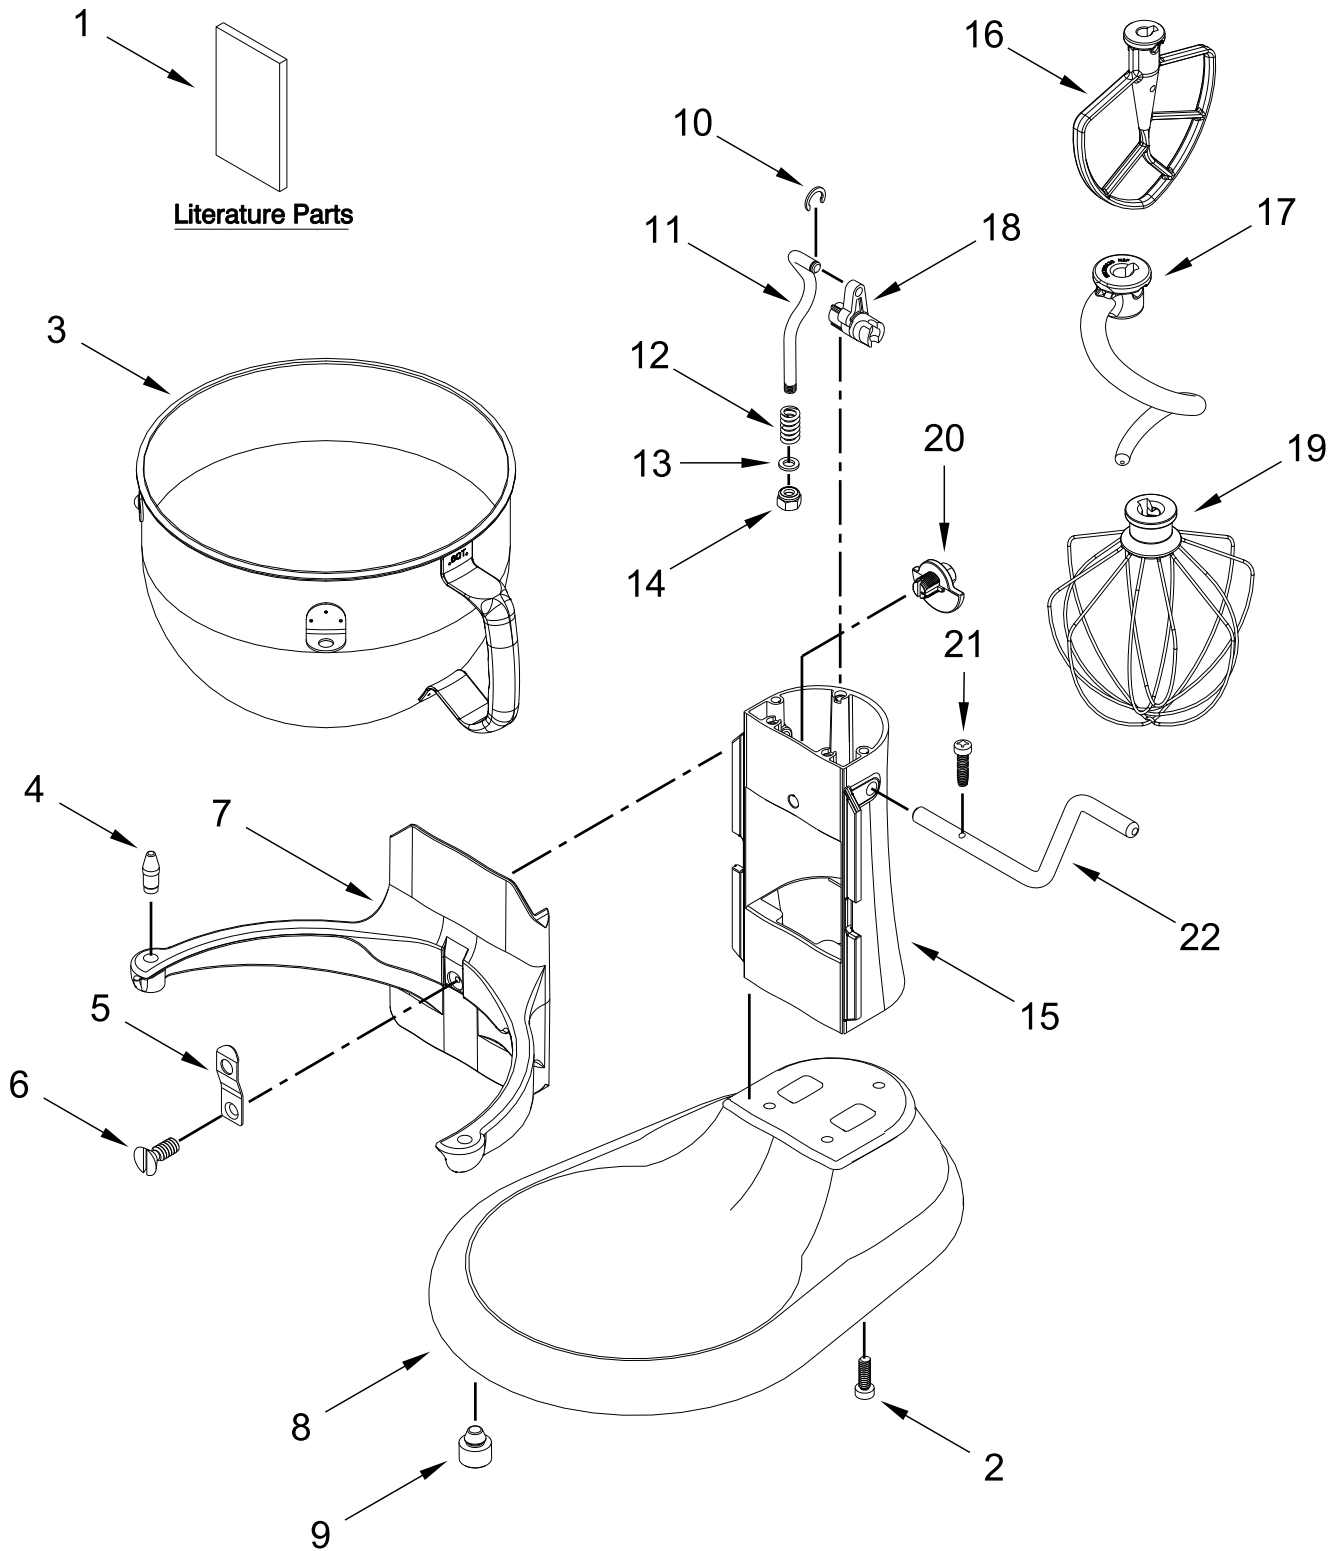

BASE AND PEDESTAL UNIT PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Base and Foot Assembly	15		Column and Pins
	W11519607	Use and Care Guide			(Refer to Color Variation Parts Page)			(Refer to Color Variation Parts Page)
2	3400200	Screw			(Refer to Color Variation Parts Page)	16	W10672616	Beater, Flat (Coated)
3	W10717235	Bowl, 5 Quart (Polished)	9	9708649	Foot	17	W10674617	Hook, Dough
4	240185	Pin, Retaining Bowl	10	9703307	Ring, Retaining	18	9706885	Arm, Bowl Lift
5	W10504114	Clip, Bowl Retainer	11	W11376364	Rod, Bowl Lift	19	9703491	Whip, Wire
6	3400018	Screw	12	9237	Spring, Lift Rod	20	9703426	Cam, Adjusting
7		Bowl Support and Pins	13	9703439	Washer	21	3400863	Screw
		(Refer to Color Variation Parts Page)	14	8533907	Nut	22	W11376371	Handle, Bowl Lift