

VAPamore®



MR-50 STEAM-VAC

 
USERS GUIDE AND INSTRUCTIONS

SAFETY INFORMATION

(Read and understand all safety information before using the MR-50 Steam - Vac)

- 1. Make sure the power outlet is rated to correct voltage for the MR-50 Steam - Vac.**
- 2. Do not leave the MR-50 Steam -Vac unattended when plugged in to wall outlet.**
- 3. Use the MR-50 Steam - Vac only for its intended use and only as described in this users guide.**
- 4. Never operate the MR-50 Steam - Vac in dry steam or wet steam modes without water in the tank. This can cause permanent damage to the water pump and void the warranty.**
- 5. Never operate the MR-50 Steam - Vac with a damaged power cord.**
- 6. Do not handle the MR-50 Steam - Vac with wet hands.**
- 7. Never allow water / liquid level in the removable dust collection reservoir to fill past the MAX level.**
- 8. Do not use without the water tank cap in place.**
- 9. The MR-50 Steam - Vac is for residential use only.**
- 10. The MR-50 Steam - Vac emits steam and may heat up some areas of the unit during use.**
- 11. Always make sure the dust collection reservoir and dust collection filter are in place before use.**
- 12. Always operate the MR-50 Steam - Vac in a horizontal position when extracting liquid.**
- 13. When operating do not turn the MR-50 Steam - Vac upside down.**
- 14. Never use the power cord for carrying or lifting the machine.**
- 15. Use close supervision when used around children.**
- 16. Never immerse the MR-50 Steam - Vac in water or other liquids.**
- 17. Never fill the water tank with anything other than water. Using any additives such as cleaners or perfumes will damage the machine and void the warranty.**
- 18. Do not overfill the water tank. Use measuring cup and fill to MAX line on tank.**
- 19. Do not put hands or body parts over the steam outlet or into the vacuum inlet.**

MR-50 OVERVIEW

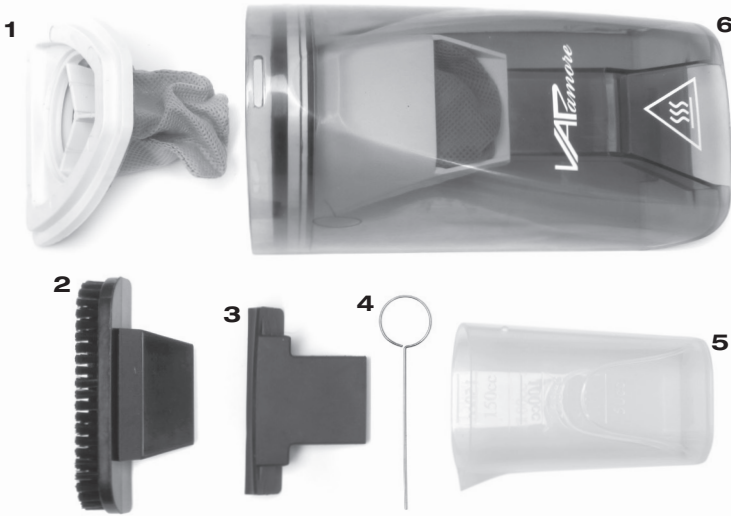

PARTS

1. Dust collection filter x 2.

Captures and filters small dust particles. Easily removable and washable.

2. Nylon carpet and upholstery brush x 1.

Use with steam for scrubbing stains on most any surface.

3. Smooth surface squeegee x 1.

Use on smooth surfaces to remove spills.

4. Steam outlet cleaning tool X 1.

For cleaning mineral deposits from the steam outlet hole.

5. Measuring / filling cup x 1.

For easy filling of the water tank.

6. Removable Dust Collection Reservoir x 1.

Holds both wet and dry spills. Easily removed for cleaning.

MR -50 Steam - Vac Features

Easy Glide Wheels

Helps to position and glide over spills for optimal cleaning results.

Water Tank

Holds 300mm of water to supply continuous steam.

Selector Switch

Four positions wet steam for deep stains, dry steam for general cleaning, off, and Vacuum for powerful wet - dry vacuum.

Specifications

Model: MR-50
Power Supply: 120v 60hz
Vacuum Motor: 120w
Vacuum Suction: .05bar
Heating Element Power: 1300w
Steam Pressure: 1.2bar
Volume Of Water Tank: 300cc
Pre Heating Time 20-30sec

OPERATION

WET - DRY VACUUM



1. Slide the power switch to Vacuum mode.
2. Using the easy glide wheels, position the MR-50 Steam - Vac over the spill (wet or dry) until it has been removed and stored into the removable dust collection reservoir.
3. Use the Nylon brush by inserting into the mouth of the MR-50 Steam - Vac to aid in cleaning tough spills or stains.
4. Use the smooth surface squeegee by inserting into the mouth of the MR-50 Steam - Vac to aid in cleaning up liquid spills.

DRY STEAM / WET STEAM


***Dry Steam mode produces a steam with less moisture and is used for sanitizing and light stain removal.**

 ***Wet Steam mode produces a steam with heavy moisture and is used to help saturate and soak the stained area to aid in removal.**

1. Fill the water tank using the supplied measuring cup to the MAX fill line. Using distilled or purified water will help prevent scale and mineral deposits and extend the life of the machine. (Never use any additives such as cleaners or perfumes in the water tank).



2. Slide the power switch to Dry Steam or Wet Steam mode.



3. After 20 seconds the MR-50 Steam - Vac will produce ultra heated, sanitizing steam. (Steam will not start immediately. Steam starts in approximately 20 seconds after the power switch is set to a steam mode. This 20 second delay is to allow the internal heating element to reach maximum temperature).
4. Using the easy glide wheels, position the MR-50 Steam - Vac over the spill (wet or dry) until it has been removed and stored into the removable dust collection reservoir.
5. Use the Nylon brush by inserting into the mouth of the MR-50 Steam - Vac to aid in cleaning tough spills or stains.
6. Use the smooth surface squeegee by inserting into the mouth of the MR-50 Steam - Vac to aid in cleaning tough spills.

***Note: In most cases the power of steam will be able to eliminate the stain with the lowest possible risk of damaging fabrics and carpets. Always use cleaning chemicals as a last resort and color test in a concealed area first.**

TROUBLESHOOTING GUIDE

WET - DRY VACUUM

 
1. Connect power cord to a known good wall outlet.
2. Slide power switch to the vacuum mode.
3. Check power cord for any damage. (If damaged do not operate, have cord replaced by a qualified technician).
4. Empty the dust collection reservoir and remove any blockage in the dust tank mouth.
5. Clean or replace the dust filter.

DRY STEAM / WET STEAM

1. Connect power cord to a known good wall outlet.
2. Make sure water tank is filled.
3. Check power cord for any damage. (If damaged do not operate, have cord replaced by a qualified technician).
4. Slide power switch to the dry steam or wet steam mode.
5. Clean steam outlet with supplied tool. (Make sure the MR-50 Steam - Vac is unplugged from outlet during cleaning)
6. Wait 20 seconds for steam to be produced.

CLEANING THE MR-50 STEAM VAC

(Make sure the MR-50 Steam - Vac is unplugged from outlet)

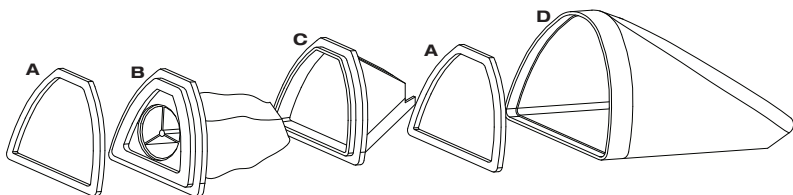

DUST COLLECTION RESERVOIR

- A. Rubber Gaskets x 2
- B. Dust collection Filter
- C. Plastic Dust Filter Adapter
- D. Dust collection Reservoir

1. To remove the dust collection reservoir by releasing the locking tab located on the underside and between the easy glide wheels.
2. Always have the MR-50 Steam - Vac nozzle facing the ground when removing the dust collection reservoir.
3. Rinse the washable dust filter and dust collection reservoir under running hot water. Allow dust filter to dry completely before use.

STEAM OUTLET

Clean the steam outlet hole using the supplied tool to remove any mineral deposits or build up. The steam outlet hole is located on the underside and between the easy glide wheels.

I YEAR LIMITED WARRANTY

The Vapamore Steam Cleaner is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use by the original purchaser only. The included warranty registration card must be filled out and returned within 15 days of purchase in order to qualify for warranty issues if a problem should arise with this product.

Should any defect covered by the terms of the limited warranty be discovered within one year from purchase date, Vapamore will repair or replace any defective part provided the unit is returned by the original purchaser on file with warranty card information, freight prepaid. For customer service support visit www.vapamore.com or e-mail us at customersupport@vapamore.com. Proof of purchase and a \$15.00 fee for return shipping must be included. Valid only in the USA.

The liability under this warranty is limited solely to the cost of the replacement parts or the complete unit at our discretion. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purpose. This limited warranty does not cover damage caused by misuse, negligent handling, or damage due to faulty packaging or mishandling in transit to our facility.

This warranty is extended to the original purchaser only and excludes all other legal and / or conventional warranties. The responsibility of Vapamore, if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is Vapamore liable for incidental or consequential damages of any kind whatsoever.

IMPORTANT: Carefully pack returned items for repair to avoid damage in shipping. Be sure to attach tag to item with your name, complete shipping address, phone number, and proof of purchase information. Please explain in detail the problems you are experiencing with your steam cleaner.

THIS WARRANTY DOES NOT COVER DAMAGE TO THE STEAMER OR STEAMER COMPONENTS DUE TO THE USE OF ADDED CHEMICALS, HARD WATER, OR CALCIUM DEPOSIT BUILD UP. AS RECOMMENDED IN THESE INSTRUCTIONS, ONLY MINERAL FREE WATER SHOULD BE USED AT ALL TIMES.



VAPamore®

**7464 East Tierra Buena Ln Suite 108
Scottsdale, Arizona 85260
tel. 480.951.8900 / fax. 480.951.8902
www.vapamore.com**