


**KitchenAid<sup>®</sup>**

**30" SLIDE IN DUAL FUEL RANGE**

**MODELS:**

KSDB900ESS3 (Stainless)


# COOKTOP PARTS

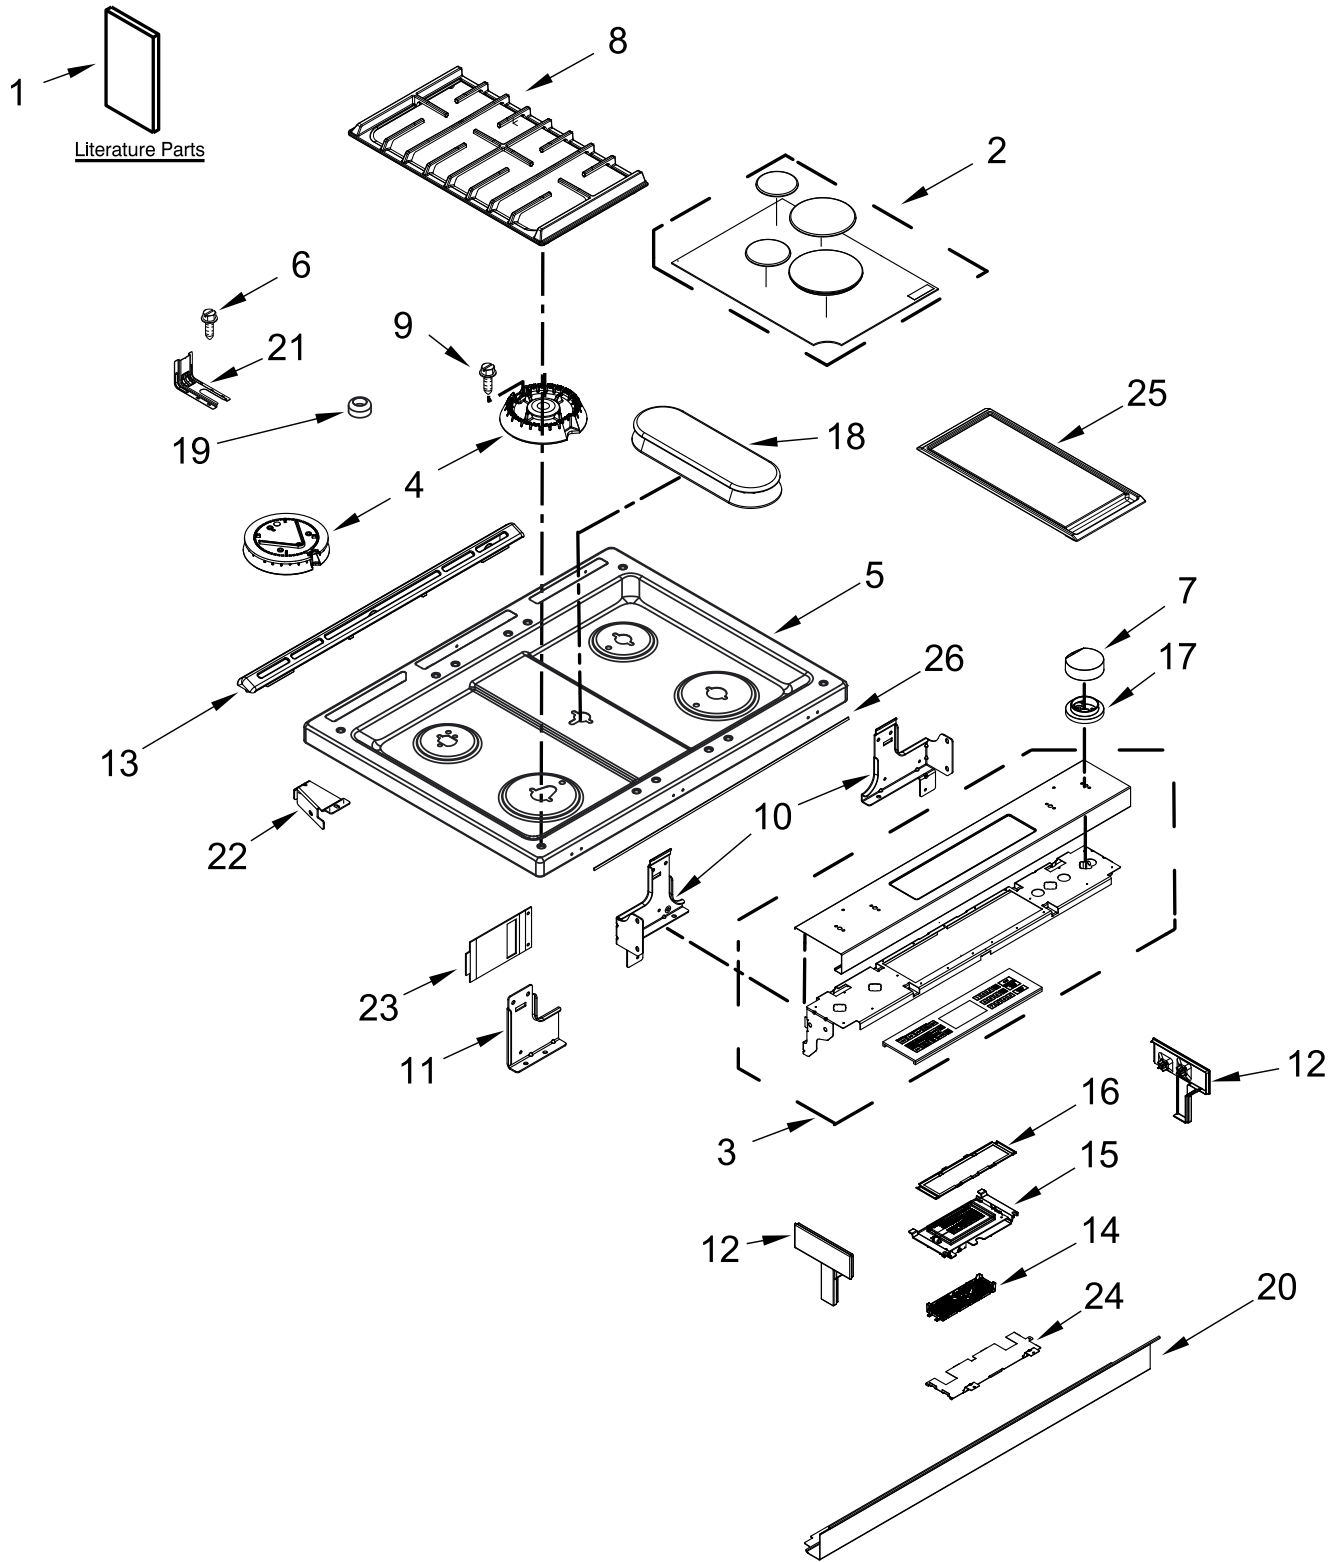

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7		Knob	17		Bezel
	W11124011	Use and Care Guide		W10786065	Stainless		W10785119	Stainless (Kit of 5)
	W11124008	Instructions, Installation			(Right Front, Right Rear, Left Rear and Center)	18	W11030664	Flame, Spreader Fish (Center)
	W10844271	Sheet, Tech		W10786064	Stainless	19	W10664705	Bumper
	W10400066	Guide, Quick Start (English)			(Left Front)	20		Panel, Lower Console
	W10400067	Guide, Quick Start (French)	8		Set, Grate		W10555934	Stainless
	W10903849	Wiring Diagram		W11188538	Black	21	W10606241	Bracket, Anti-Tip
2		Kit, Burner Cap	9	3196169	Screw	22	W10162253	Brace, Corner (Left)
	W10432498	Black	10	W10289170	Support, Cooktop (Left)		W10162252	Brace, Corner (Right)
3		Console		W10289169	Support, Cooktop (Right)	23	W10757531	Keypad, Shield
	W10901118	Stainless		W10598048	Bracket, Console (Center)	24	W10558372	Bracket, Control
4	W10495853	Spreader, Flame (Left Front)	11			25	W10432544	Griddle
	W10464795	Spreader, Flame (Right Rear)	12		Endcap	26	W10612719	Gasket, Console/ Cooktop
	W10256028	Spreader, Flame (Right Front)		W10555937	Stainless (Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W10256025	Spreader, Flame (Left Rear)		W10555940	Stainless (Right)		W10911850	Harness, Main
		Cooktop	13		Trim, Vent		W10575120	Harness, Keypad
5	W10536174	Stainless		W10636529	Stainless		W10598169	Harness, Display
6	7101P485-60	Screw, Anti-Tip Kit	14	W10759278	Control, MRC2		W10580316	Harness, Bake Drawer
			15	W10759323	Assembly, Display		W10653092	Suppressor
			16	W10555923	Bracket, User Interface		313438	Clip, Harness
							3196520	Clip, Wire


# CHASSIS PARTS

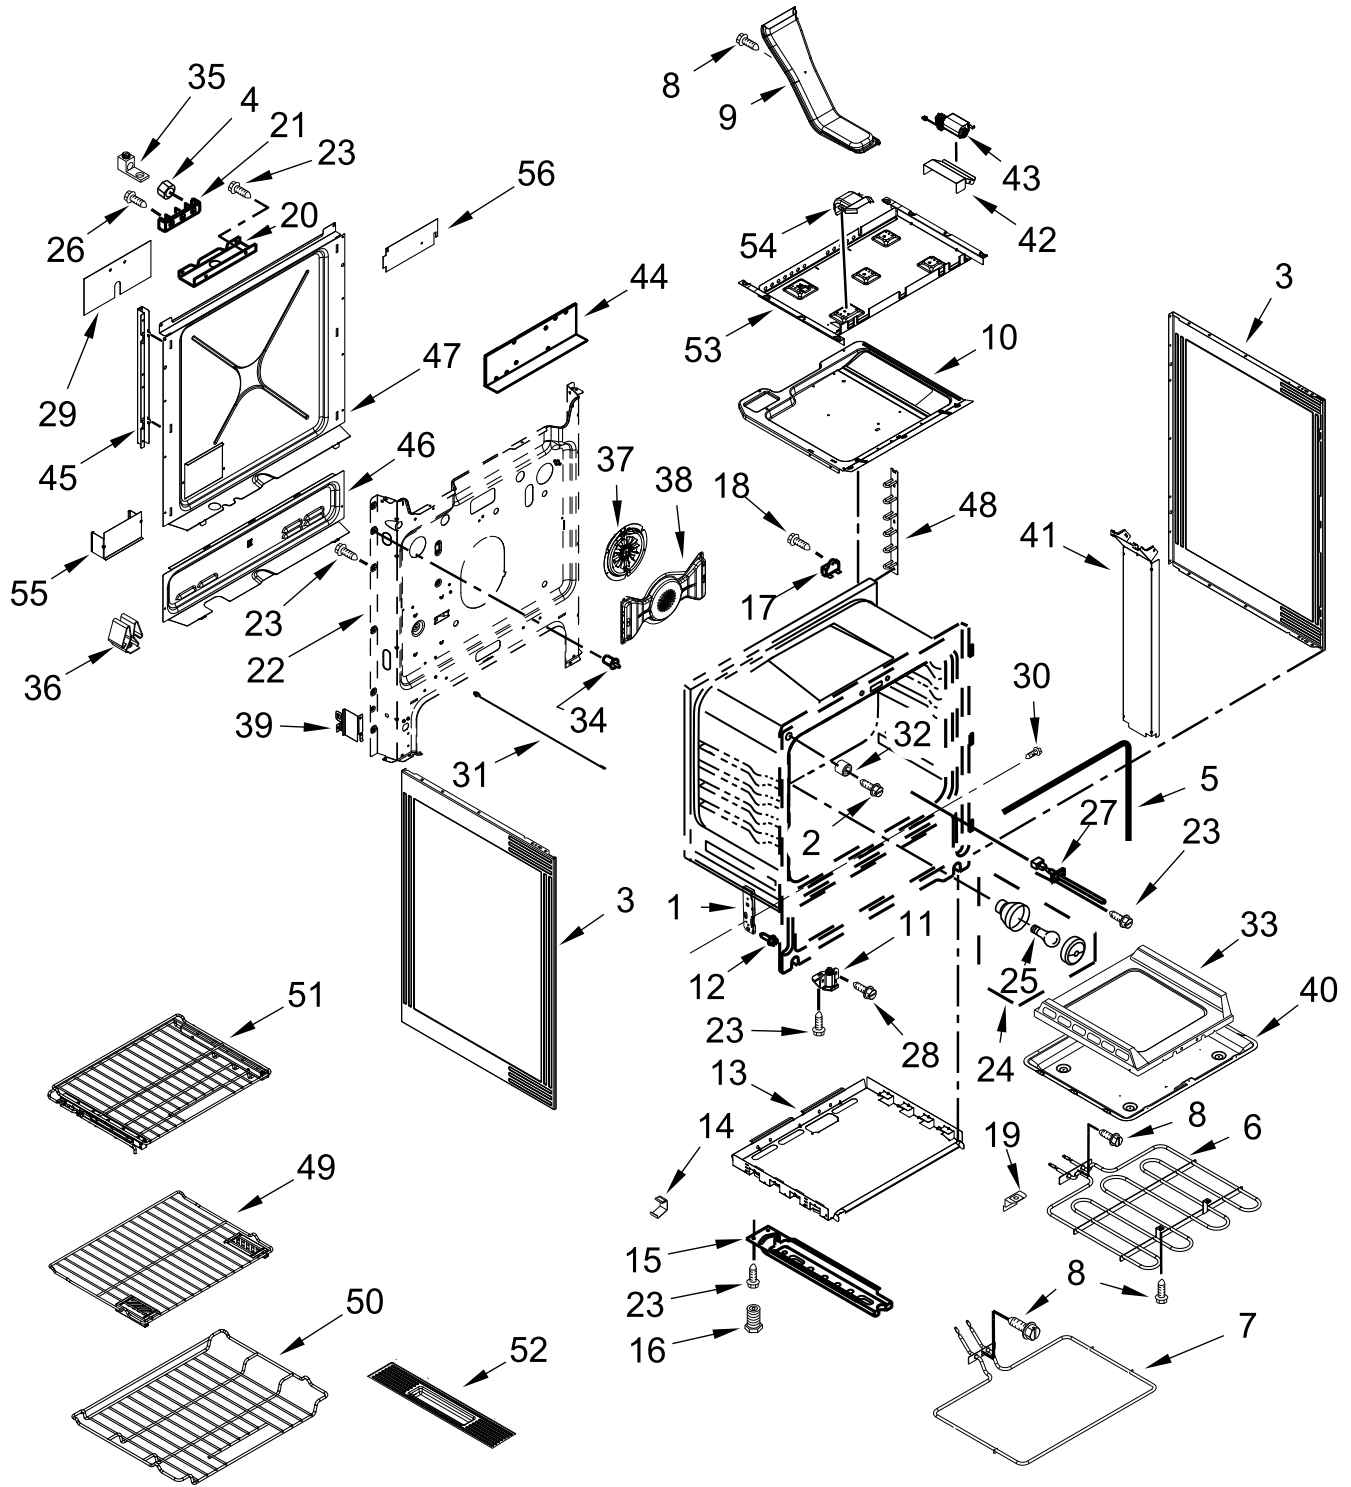

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	23	3196178	Screw	46	W10575377	Cover, Wire
2	W10362924	Screw	24	W10454648	Assembly, Light	47	W10289172	Cover, Back
3		Panel, Side	25	311255	Bulb, Oven Light	48	W10603482	Rack, Ladder
	W10162245	Black	26	3400016	Screw	49	W10554007	Rack, Steam
4	3400029	Nut	27	W10586204	Sensor	50	W10554006	Rack, Maximum Capacity
5	W10162385	Gasket, Door	28	3196169	Screw	51	W10911366	Rack, Sliding
6	W10544952	Element, Broil	29	W10655441	Shield, Power Cord	52	W10686408	Kit, Reservoir (Steam Rack)
7	W10774342	Element, Bake	30	W10031780	Screw	53	W10558276	Box, Burner Gas
8	W10362924	Screw	31	W10273192	Rod, Door Switch	54	W10162257	Duct, Cooktop
9	W11122085	Assembly, Flue	32	9758701	Spacer, Door	55	W10162258	Cover, Regulator
10	W10289168	Box, Burner SI	33	W10774446	Bottom, Oven	56	W11117035	Shield, Wire
11	W10341186	Assembly, Front Foot	34	W10627802	Switch, Door			FOLLOWING PARTS NOT ILLUSTRATED
12	W10067840	Screw	35	W10281322	Kit, Bare Wire Adapter Block			
13	W10541959	Shield, Bake	36	W10866583	Panel, Clip		W10655489	Insulation, Wrapper
14	W10137382	Clip, Panel	37	W10874472	Assembly, Convection		W10655490	Insulation, Main Back
15	W10390008	Assembly, Base Rail (Left)	38	W10346153	Baffle, Full Convection		W10575374	Insulation, Bottom
	W10390007	Assembly, Base Rail (Right)	39	W10273002	Bracket, Oven Support		4820F015-59	Insulation, Strap
16	W10058460	Foot, Leveling	40	W10346147	Pan, Bake		W10655442	Insulation, Heat Shield
17	3196548	Fuse, Thermal	41	W10162255	Duct, Cover		7111P017-60	Clamp, Wire
18	3196172	Screw	42	W10162254	Duct, Cooling			
19	W10035900	Support, Oven Bottom	43	W10877642	Assembly, Cooling Fan			
20	3186034	Bracket, Service	44	W10162260	Shield, Heat			
21	W10245259	Block, Terminal	45	W10162241	Channel, Rear			
22	W10289166	Back, Main						


# MANIFOLD PARTS

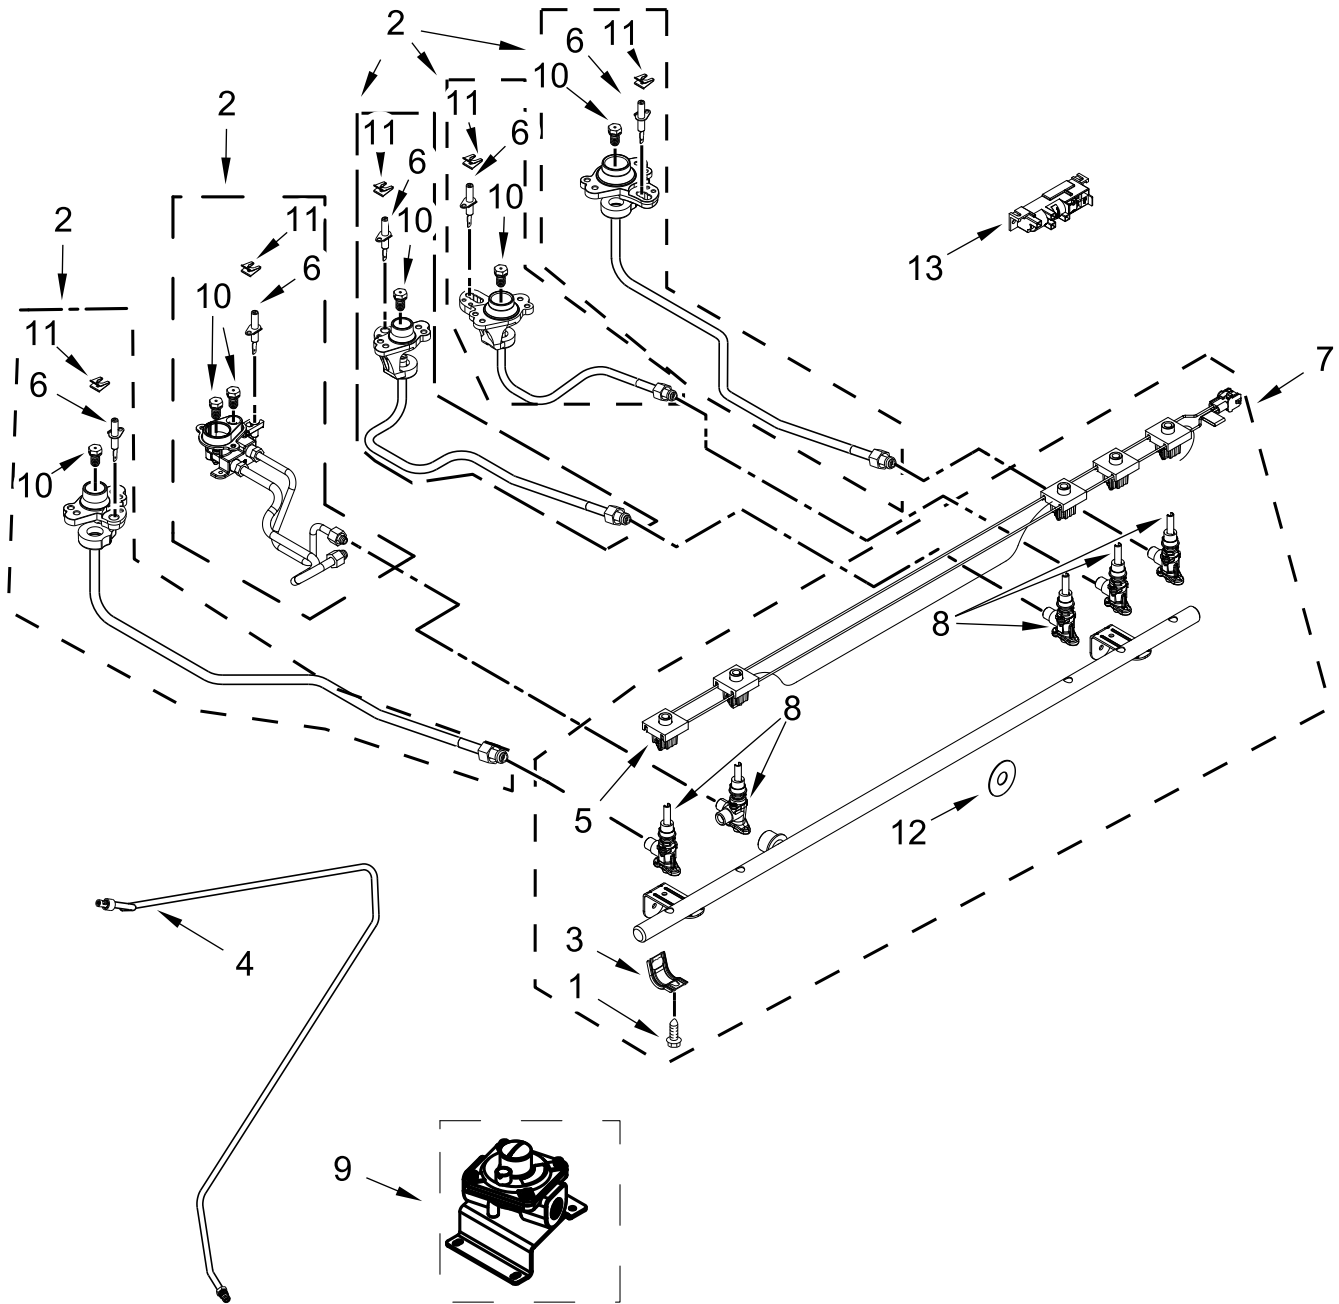

# MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	6	W10496872	Electrode (Right Rear)	10	W10434277	Orifice (1.8MM) (Right Front)
2	W10552120	Assembly, Orifice (Right Front)		W10496870	Electrode (Right Front & Center)		W10657949	Orifice (9.2K) (Right Rear)
	W10552119	Assembly, Orifice (Right Rear)		W10464799	Electrode (Left Rear)		W10256132	Orifice (1.2K) (Left Front)
	W10552121	Assembly, Orifice (Left Rear)		W10496874	Electrode (Left Front)		W10566082	Orifice (19K) (Left Front)
	W10552122	Assembly, Orifice (Left Front)	7	W10826727	Assembly, Manifold		W10432324	Orifice (8K) (Center)
	W11045553	Assembly, Orifice (Center)	8	W10566057	Valve, Gas (Right Rear & Center)		W10515054	Orifice (5K) (Left Rear)
3	W10295996	Bracket, Saddle Valve		W10566062	Valve, Gas (Right Front)	11	W10575401	Clip, Spring (Electrode)
4	W10552945	Tube, Supply		W10831591	Valve, Gas (Left Rear)	12	W10140571	Seal, Switch Shaft
5	W10432517	Harness, Switch Spark		W10432224	Valve, Gas Duel (Left Front)	13	W10475149	Module, Spark (5+0)  FOLLOWING PARTS NOT ILLUSTRATED
			9	W10661850	Assembly, Regulator & Bracket		W10681410	Kit, LP Conversion

# DOOR PARTS

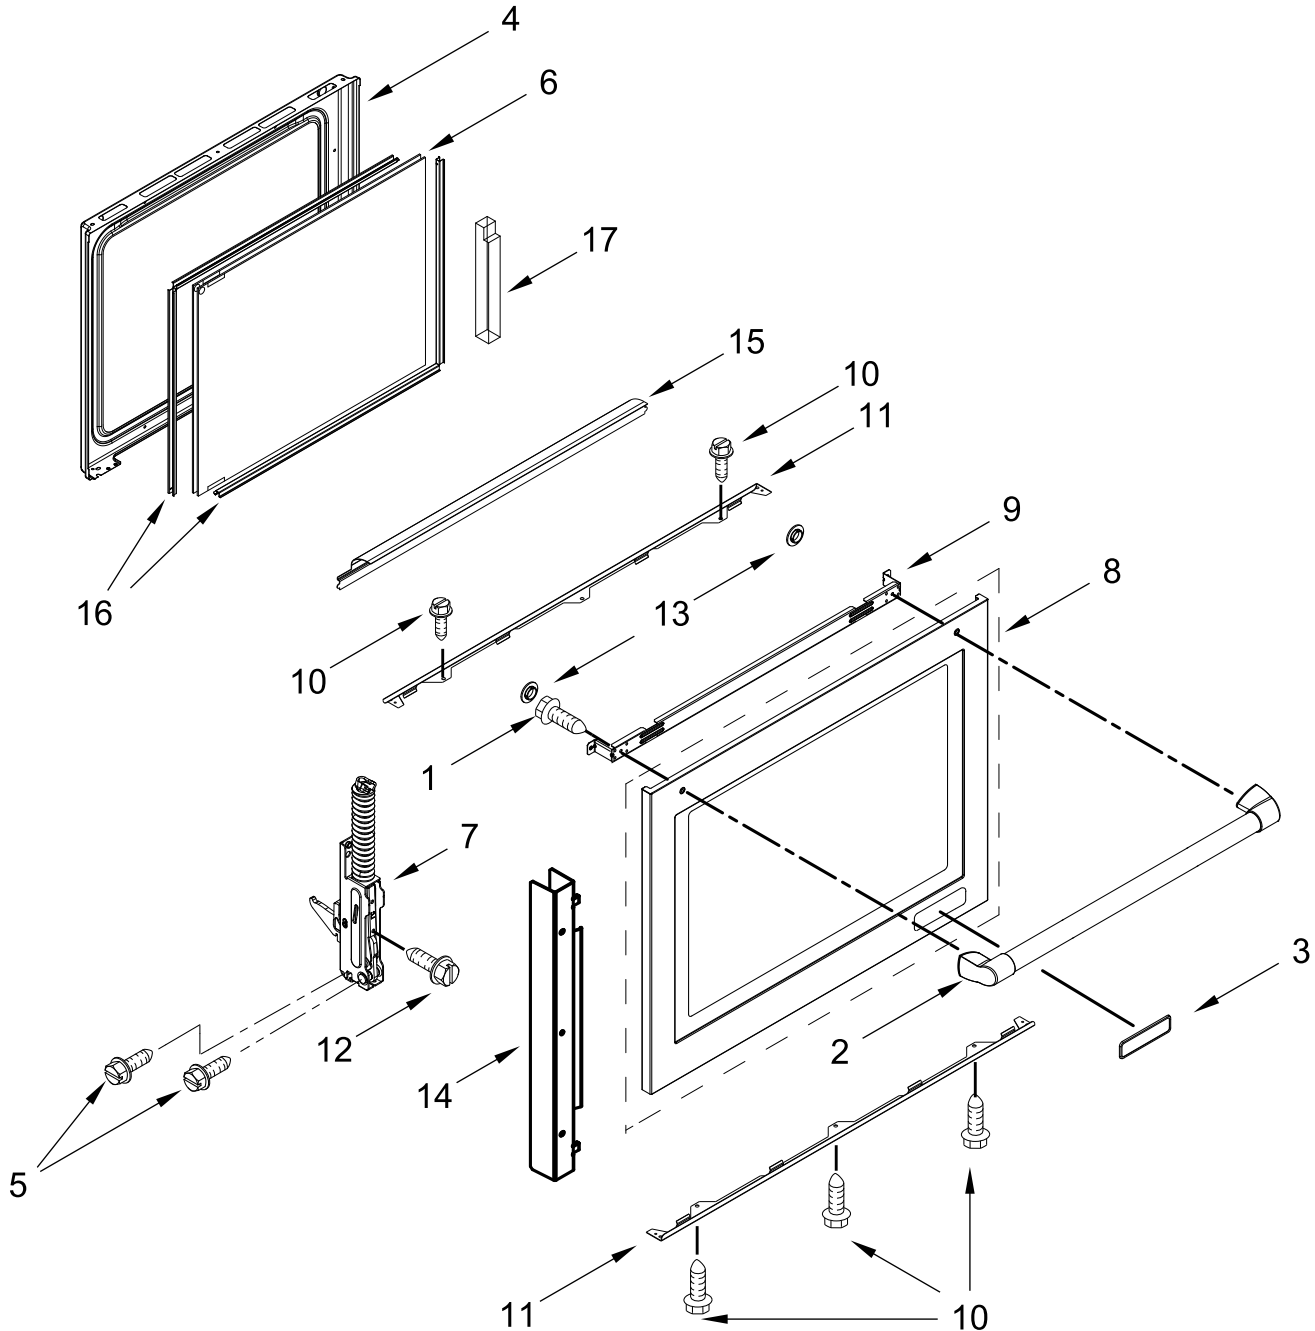




# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	9780274	Screw
2		Assembly, Door Handle
	W10551000	Stainless
3	W10518672	Badge
4	W10826568	Liner, Door
5	W10031790	Screw
6	W10813616	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10885519	Hinge, Door (Active)
8		Assembly, Outer Door
	W10634271	Stainless
9	W10541911	Bracket, Glass Upper Handle
10	W10327235	Screw
11	W10813140	Rail, Horizontal Support

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10031780	Screw
13	W10319024	Washer, Door
14	W10813139	Rail, Vertical Support
15		Scoop, Door
	W10551024	Stainless
16	W10813142	Spacer, Glass
17	W10766562	Insulation, Door

# DRAWER PARTS

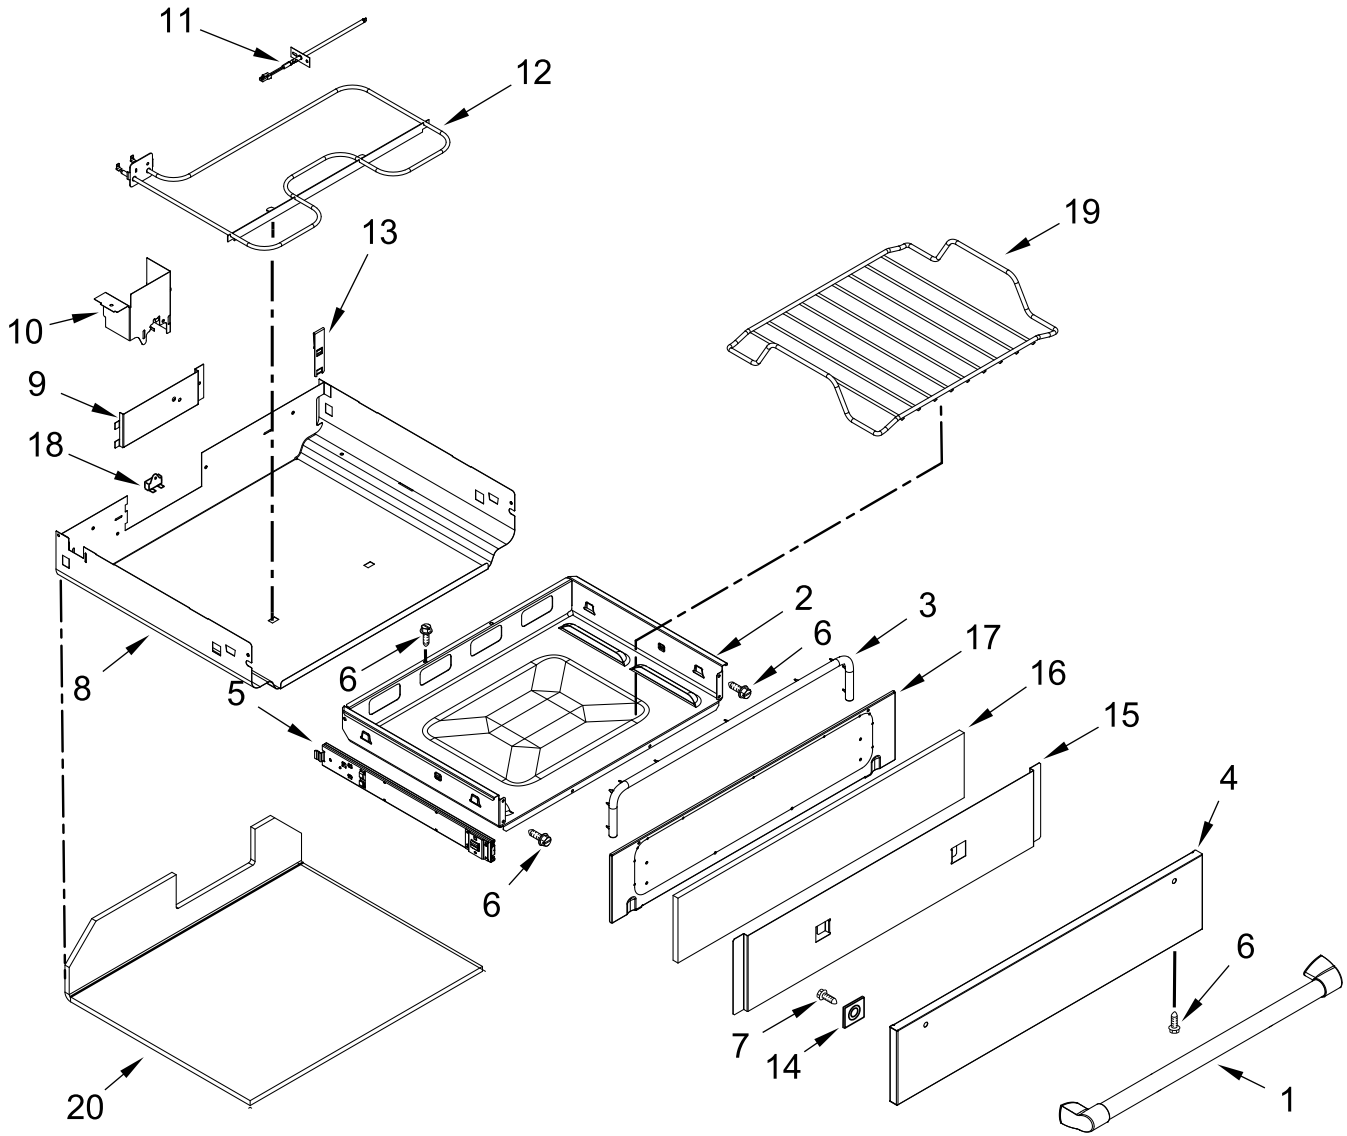

# DRAWER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	7	3400882	Screw	16	W10550982	Insulation, Drawer
	W10551000	Stainless	8	W10634260	Enclosure, Warming	17	W10541947	Panel, Front Inner
2	W10757442	Drawer, Bake	9	W10727084	Cover, Gas Valve	18	W10729897	Fuse, Thermal
3	W10550987	Seal, Drawer	10	W10634259	Cover, Wire	19	W10602493	Rack, Bake Drawer
4		Panel, Drawer Front	11	W10720530	Sensor	20	W10551011	Insulation, Bake Drawer Bottom
	W10541954	Stainless	12	W10541944	Element, Bake			
5	W10921904	Slide, Drawer (Left)	13	W10551019	Cover, Side			
	W10921905	Slide, Drawer (Right)	14	3823F017-45	Spacer, Handle			
6	W10327235	Screw	15	W10551018	Insulation, Drawer Front			

# OPTIONAL PARTS (NOT INCLUDED)

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS / POLISHES
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
	242905	Kit, Canning Unit
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless