



KitchenAid®

30" ELECTRIC DOUBLE OVEN RANGE

MODELS:

KFED500EBS03 (Black Stainless)


COOKTOP PARTS

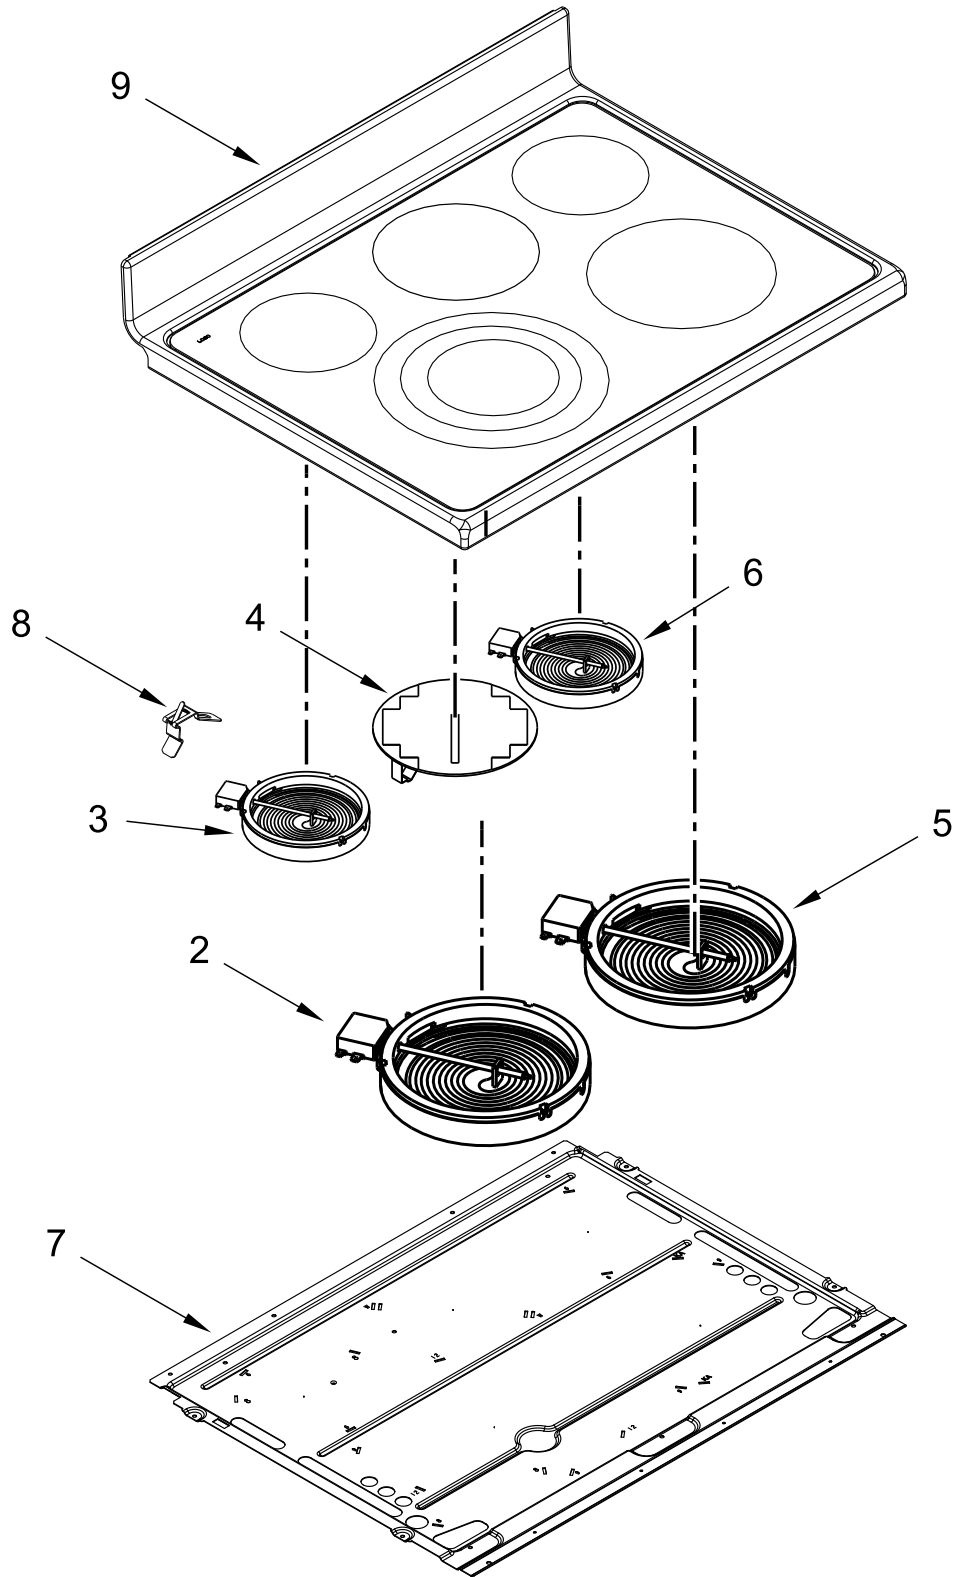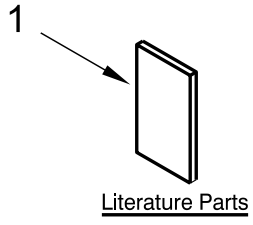

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W10260946	Panel, Element Support	9		Cooktop
	W10694055	Guide, Use & Care					W10687990	Black
	W10694065	Instructions, Installation	8	W10225448	Spring, Element			FOLLOWING PARTS NOT ILLUSTRATED
	W10647745	Sheet, Tech					W11171888	Harness, Main
	9762761	Tips, Safe Cooking (English)					W11172425	Harness, Infinite Switch (Left)
	W10065852	Tips, Safe Cooking (French)					W11172427	Harness, Infinite Switch (Right)
2	W10670279	Element (2700W) (Left Front)					W11172428	Harness, EOL (DOFSR)
3	W10270604	Element (700W) (Left Rear)					W11172531	Harness, Sensor & Locks
4	W10799048	Element, Warm Zone (Center Rear)					W11171874	Harness, Cooktop
5	W10251108	Element (3200W) (Right Front)					7101P027-60	Screw, Ground
6	8273994	Element (1200W) (Right Rear)					7401P157-60	Block, Bare Wire Adapter
							8019P013-60	Clip, Wire Lock


CONTROL PANEL PARTS

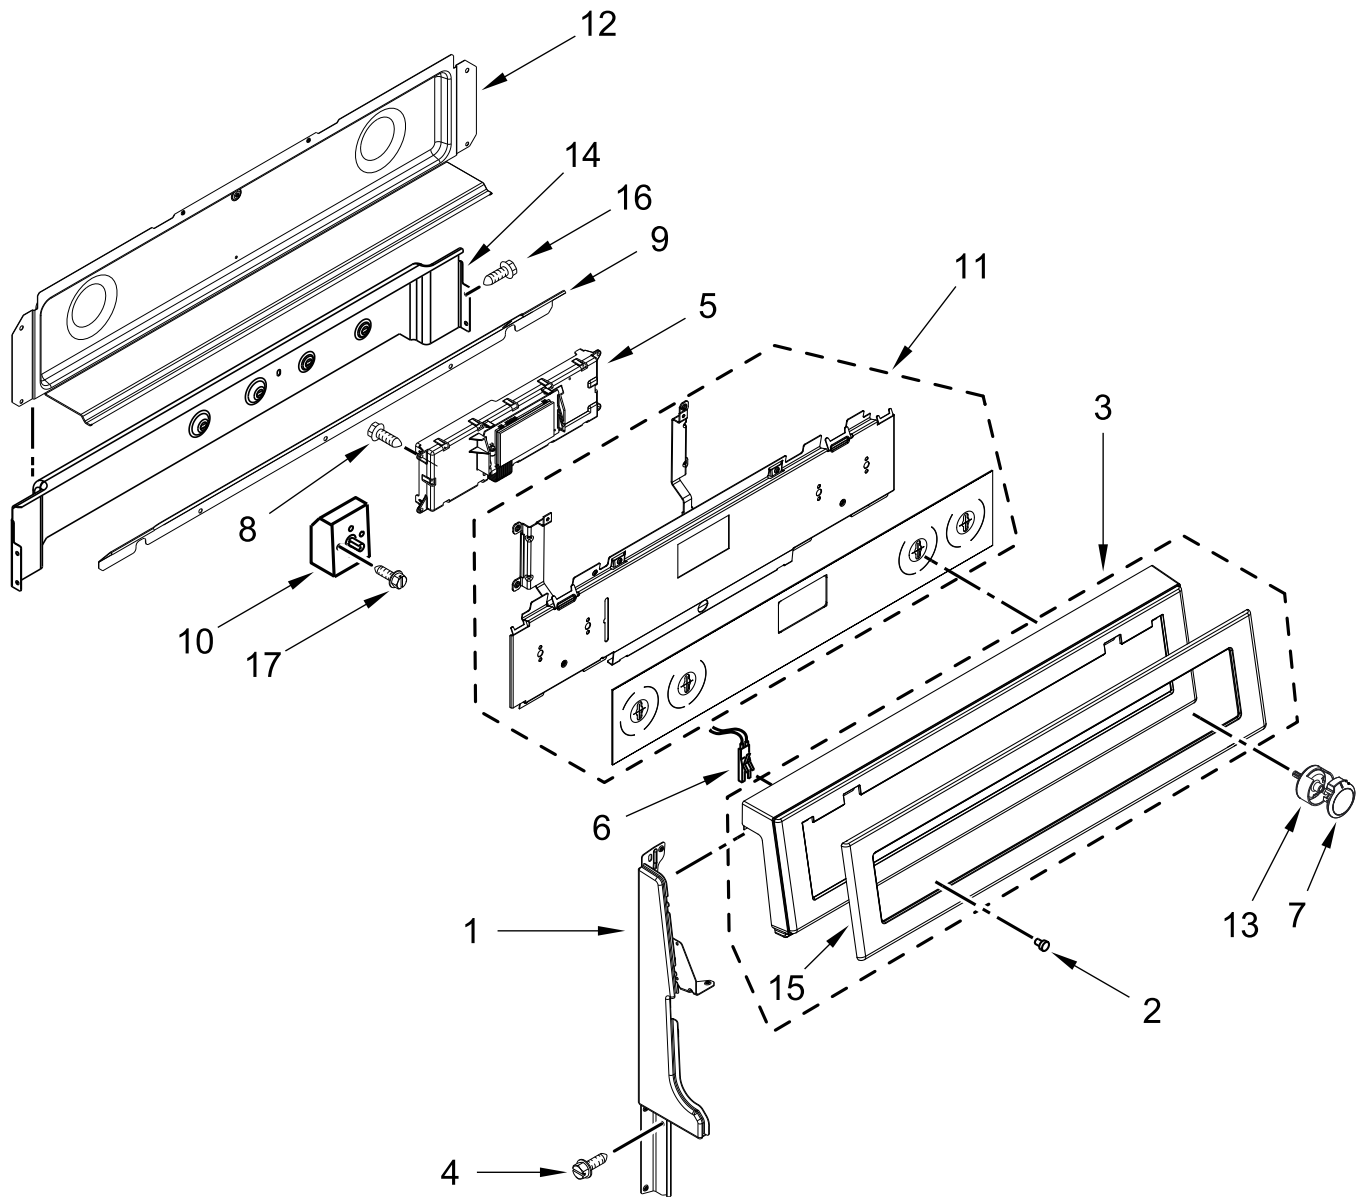

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard	9	W10299338	Shield, Wire Cover	12	W10776098	Cover, Backguard
	W10319109	Black (Left)	10	W10296657	Switch, Infinite (Left Front)	13	W10645811	Bezel, Knob
	W10319111	Black (Right)		W10295048	Switch, Infinite (Left Rear)	14	W10278697	Shield, Vent
2	3196068	Lens, Indicator		W10312185	Switch, Infinite (Right Front)	15		Skin, Control Panel (Not Serviced)
3		Console		7403P373-60	Switch, Infinite (Right Rear)	16	9780274	Screw
	W11024860	Black Stainless		11	Assembly, User Interface (Includes Light Feature)	17	W10674068	Screw
4	7101P633-60	Screw (Black)		W10692155	Black			
5	W11095717	Control, Electronic						
6	7407P136-60	Light, Indicator						
7		Knob						
	W10823529	Stainless						
8	7101P434-60	Screw						


CHASSIS PARTS

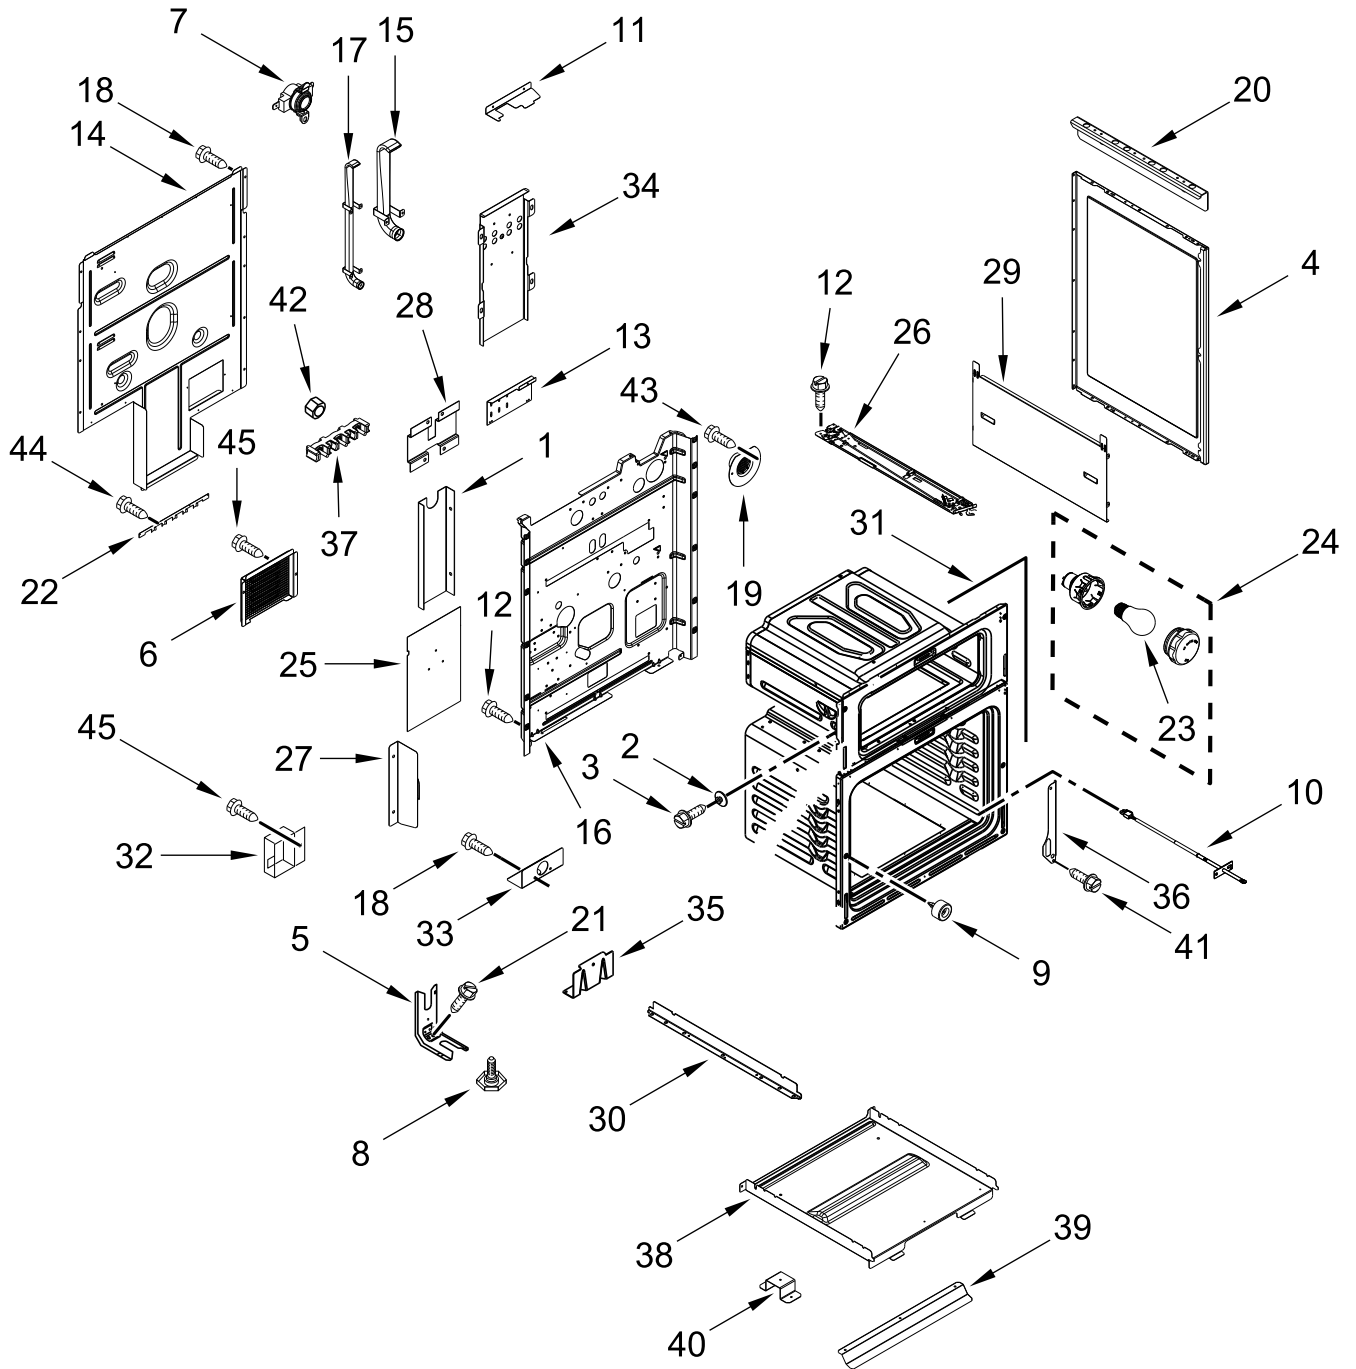

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	20	W10319087	Bracket, U Channel	36	W10410463	Cover, Hinge (Left)
2	W10237689	Spacer, Side Panel	21	7101P485-60	Screw, Anti-Tip Kit		W10410461	Cover, Hinge (Right)
3	W10267456	Screw, Shoulder	22	8036P012-60	Shield, Power Cord	37	7401P039-60	Block, Terminal
4	W10668723	Panel, Side Black	23	311255	Bulb, Oven Light	38	W10548601	Pan, Element
5	3801F656-51	Bracket, Anti-Tip	24	W10454648	Assembly, Light	39	W10253470	Bracket, Retaining
6	W10312612	Cover, Access (Terminal Block)	25	W10311987	Shield, Cord (Right)	40	W10260545	Clip, Retaining
7	7403P899-60	Switch, High Limit	26	W10683517	Lock, Rear Mount	41	4449743	Screw
8	7101P507-60	Foot, Leveler	27	W10268560	Cover, Wire Lower	42	3400029	Nut
9	W10105790	Bumper & Screw	28	7003P104-60	Insulator, Heat Shield	43	W10720084	Screw
10	7430P044-60	Sensor, Oven	29	W10538516	Shield, Side Insulation	44	489290	Screw
11	W10268559	Cover, Lower Wire	30	W10357697	Bracket, Side Panel	45	7101P338-60	Screw
12	7101P426-60	Screw	31	W10337392	Gasket, Oven Door (Upper)			INSULATION
13	W10332449	Shield, Cord		W10269069	Gasket, Oven Door (Lower)	W10271637		Insulation, Floor
14	W10261386	Cover, Main Wire				W10308393		Insulation, Wrapper
15	W10337391	Tube, Vent (Upper)	32	8285593	Cover, Connector	W10322111		Insulation, Back
16	W10668730	Back, Main	33	W10190166	Bracket, Power Supply	W10204079		Insulation, Middle
17	W10323793	Tube, Vent (Lower)	34	W10261388	Bracket, Terminal	W10204085		Insulation, Main Front Strip
18	7101P434-60	Screw	35	W10863342	Support, Lower Oven	W10272326		Insulation, Hidden Bake Pouch
19	W10322408	Adapter, Vent Tube						


INTERNAL OVEN PARTS

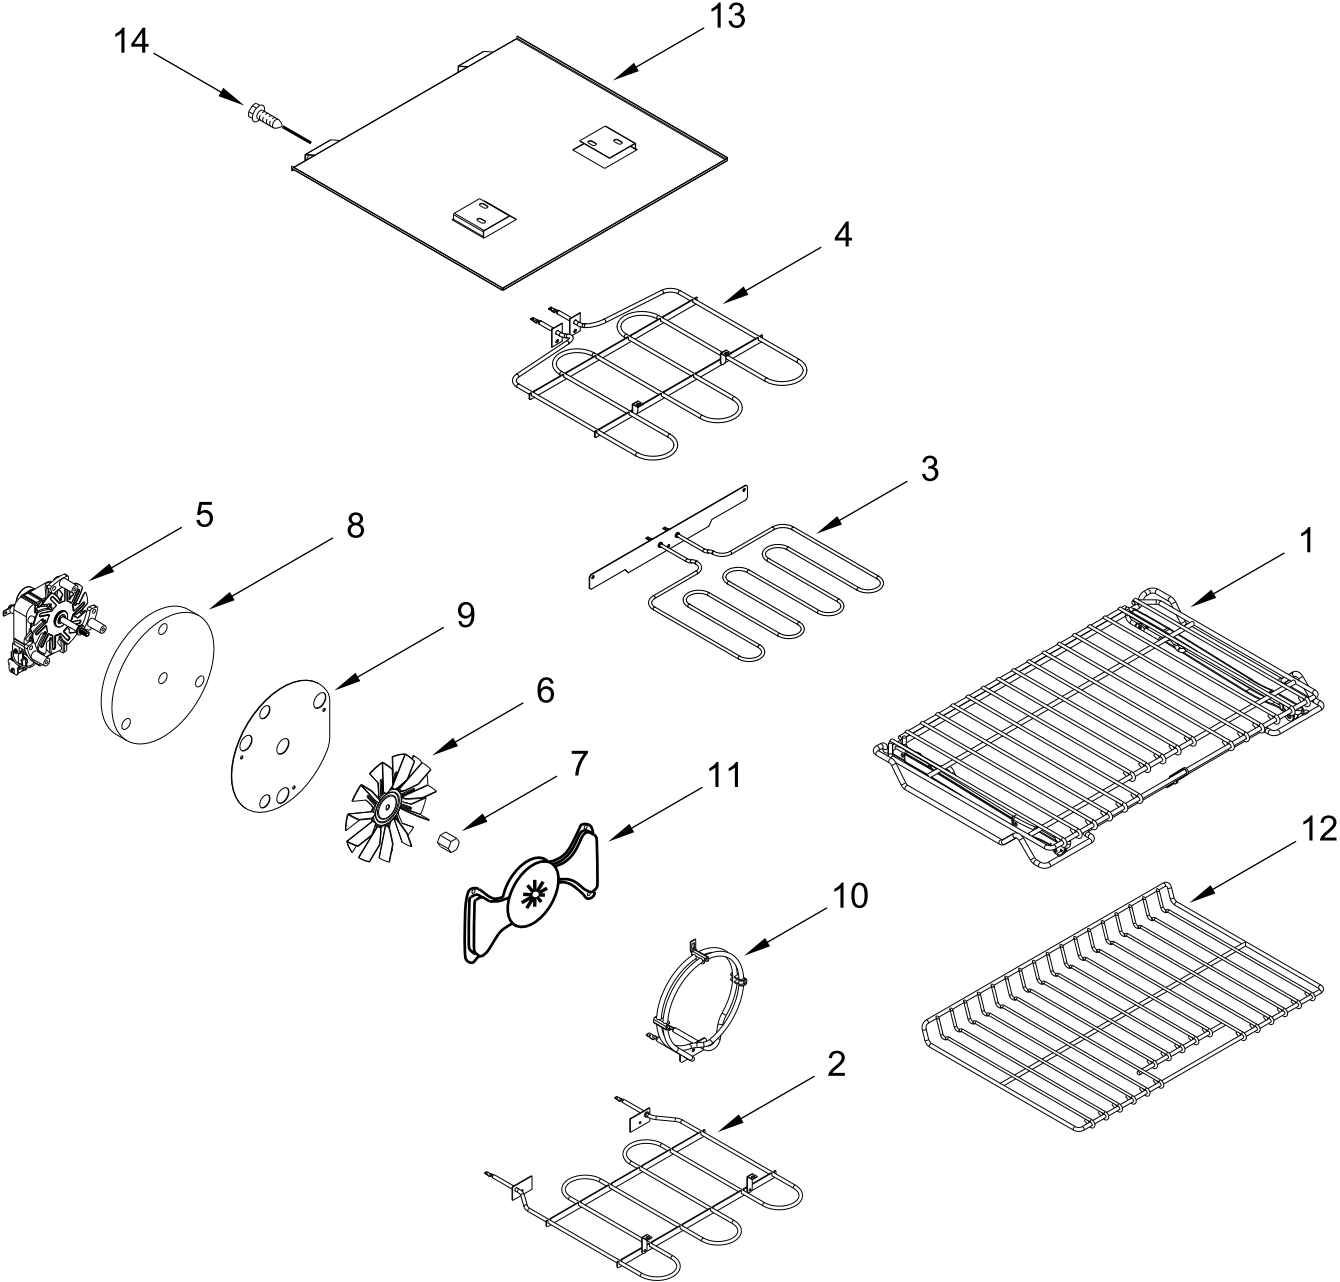

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10570870	Rack, Oven (Telescoping)	5	W11190725	Motor, Convection	11	W10160868	Baffle, Convection
2	W10249979	Element, Broil (Lower)	6	W10631503	Blade, Fan	12	W10570887	Rack, Oven
3	W10249981	Element, Bake (Upper & Lower)	7	W10631504	Nut, Acorn (LH)	13	W10319762	Shield, Broil
4	W10317476	Element, Broil (Upper)	8	W10274268	Insulation, Convection Motor	14	7101P434-60	Screw
			9	W10339476	Plate, Insulation			
			10	W10271639	Element, Convection (240VAC)			


UPPER DOOR PARTS

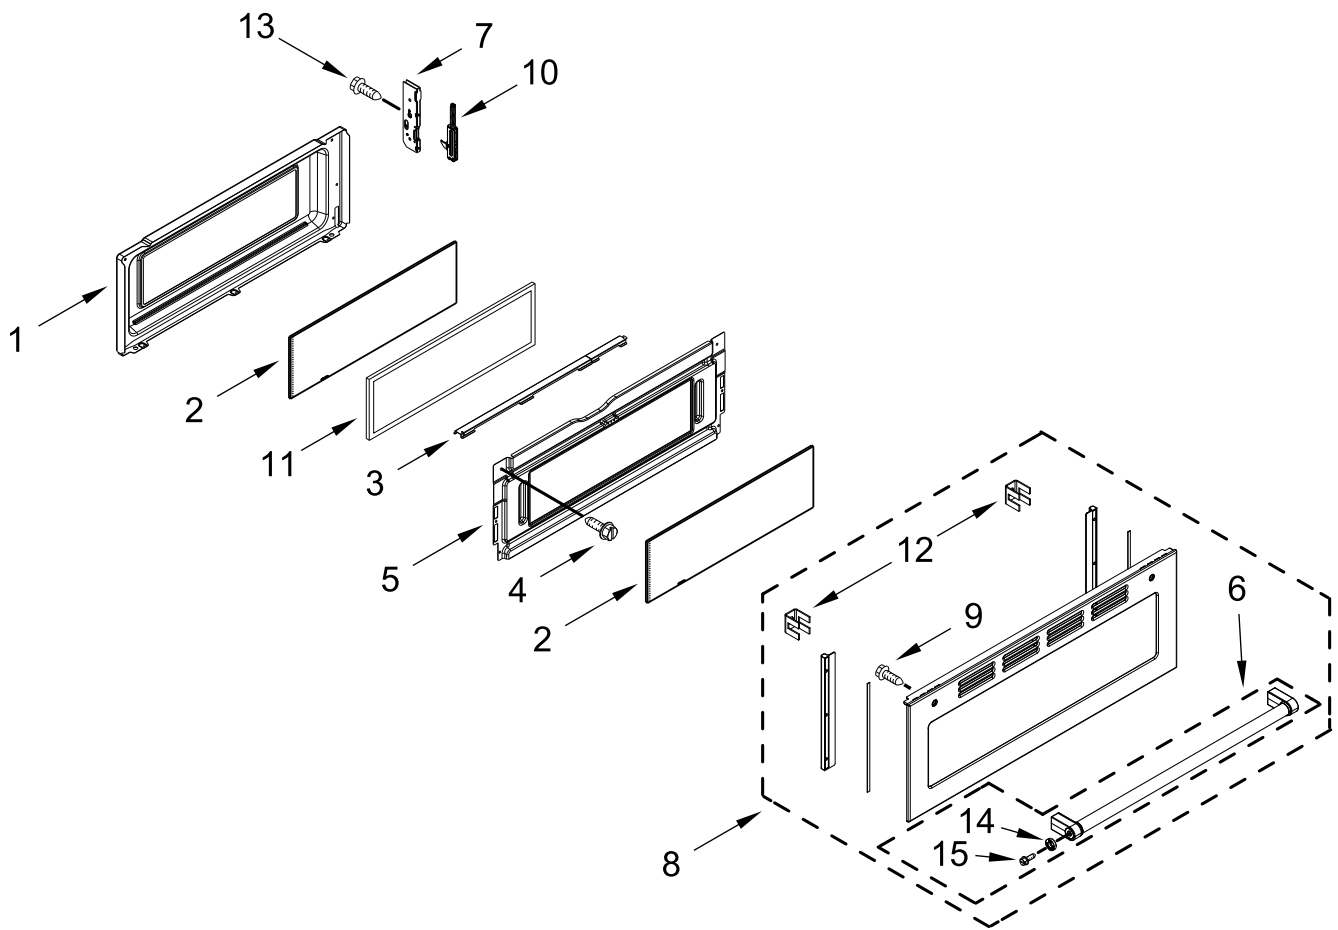

UPPER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11051040	Lining, Door	7	W10289077	Receiver, Hinge	12	W10575917	Spacer, Vent Trim
2	W11099272	Glass, Inner	8		Assembly, Door	13	W10031780	Screw
3	W10272708	Frame, Glass		W10861414	Black Stainless	14	W10551026	Medallion, Handle
4	W10292297	Screw	9	W10480830	Screw	15	W10656499	Screw
5	W10485723	Retainer, Insulation	10	W10485733	Hinge, Door (Left)			
6		Assembly, Handle		W10485732	Hinge, Door (Right)			
	W10674700	Black	11	W10321271	Insulation, Door			

LOWER DOOR PARTS

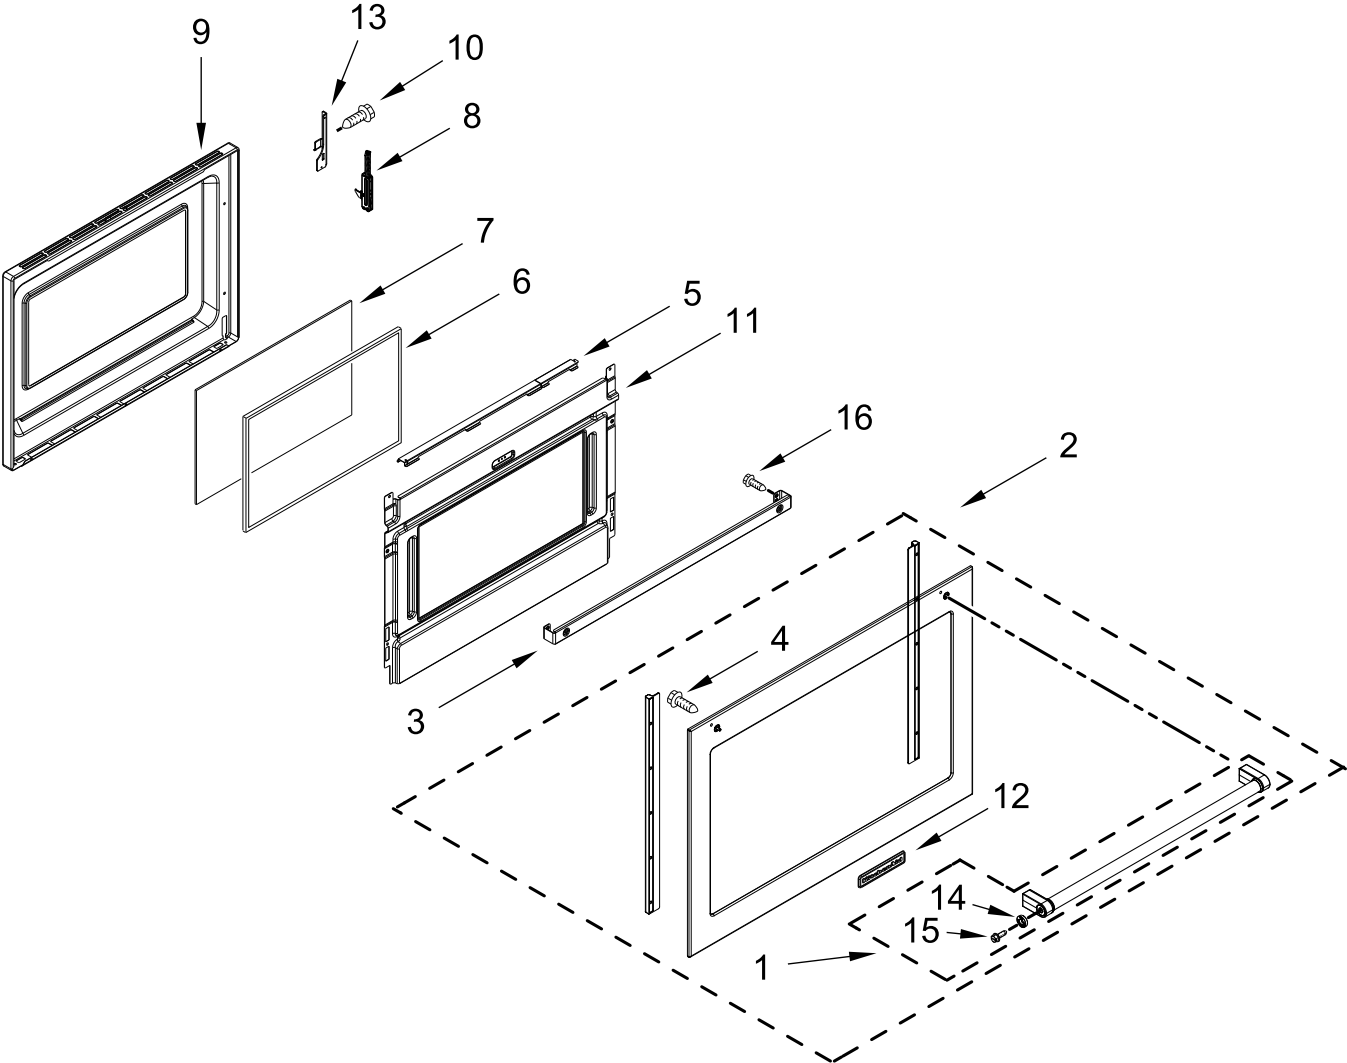

LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Handle	7	9757706	Glass, Inner	13	W10272329	Receiver (Left)
	W10674700	Black	8	W10335434	Hinge, Door (Left)		W10272328	Receiver (Right)
2		Assembly, Door		W10335433	Hinge, Door (Right)	14	W10551026	Medallion, Handle
	W10861412	Black Stainless	9	W10272698	Lining, Door	15	W10656499	Screw
3	W10575689	Bracket, Handle	10	4449040	Screw	16	W10284411	Screw with Washer
4	W10480830	Screw	11	W10340464	Retainer, Insulation			
5	W10272594	Frame, Glass	12	W10518672	Badge			
6	W10321285	Insulation, Door						

OPTIONAL PARTS (NOT INCLUDED)

PAIN, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAIN, SPRAY

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	350942	White Primer

ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning