


KitchenAid®

30" FREE STANDING ELECTRIC RANGE CONVECTION

MODELS:

KFEG500EBS3 (Black Stainless)


COOKTOP PARTS

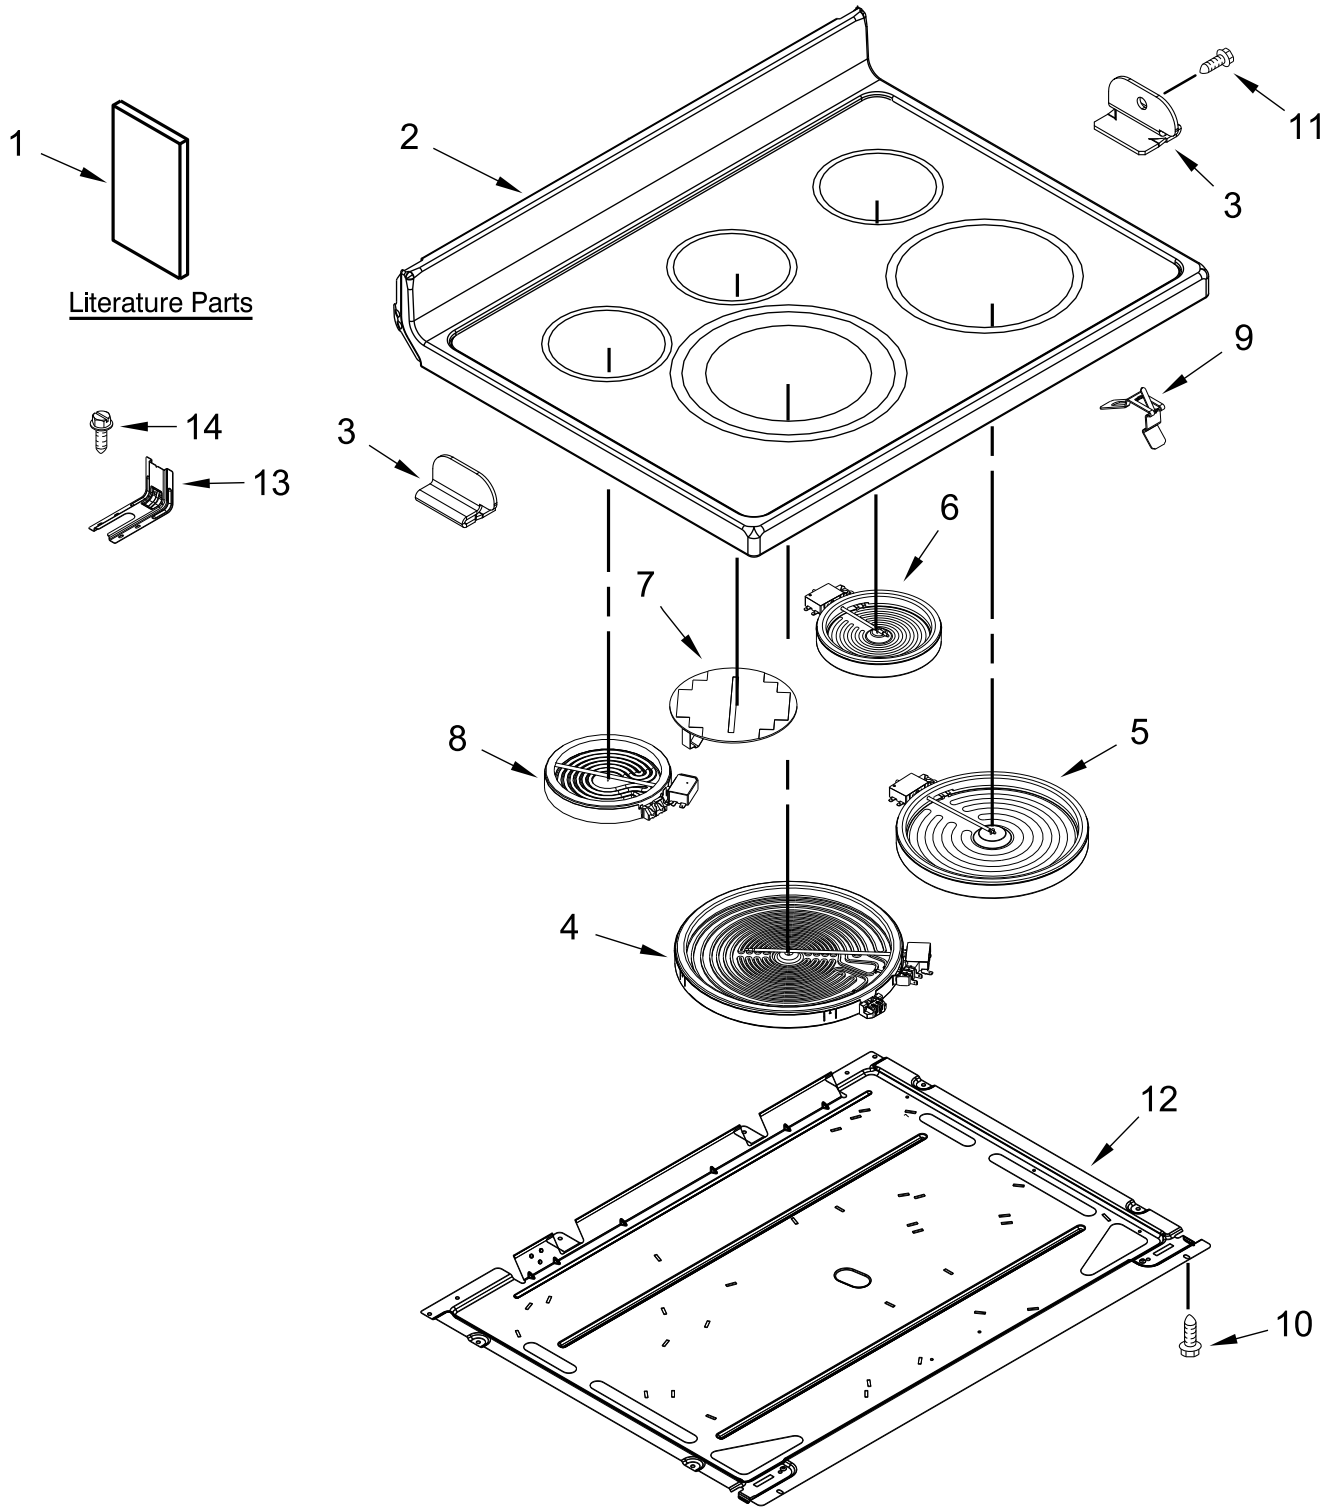

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	14	7101P485-60	Screw, Anti-Tip Kit
	W10694003	Use and Care Guide			(Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W10400064	Guide, Quick Start (English)	6	8273994	Element (1200W)	W11188424		Harness, Cooktop (Left)
	W10694021	Tech Sheet			(Right Rear)	W11134550		Harness, Cooktop (Right)
	W11047685	Installation Instructions	7	W10799048	Element, Warm Zone	W11188432		Harness, Main
	9762761	Tips, Safe Cooking (English)			(Center Rear)	W11212183		Harness, Sensor
2		Cooktop	8	W10342780	Element (1300W)	W11134592		Harness, Warm Zone
	W10697351	Black	9	W10225448	Spring, Element			
3	W10607641	Bracket, Cooktop (Left)	10	3196169	Screw			
	W10607642	Bracket, Cooktop (Right)	11	3196172	Screw			
4	W10711900	Element (3000W) (Left Front)	12	W10691223	Pan, Radiant Element			
			13	W10306542	Bracket, Anti-Tip			


CONTROL PANEL PARTS

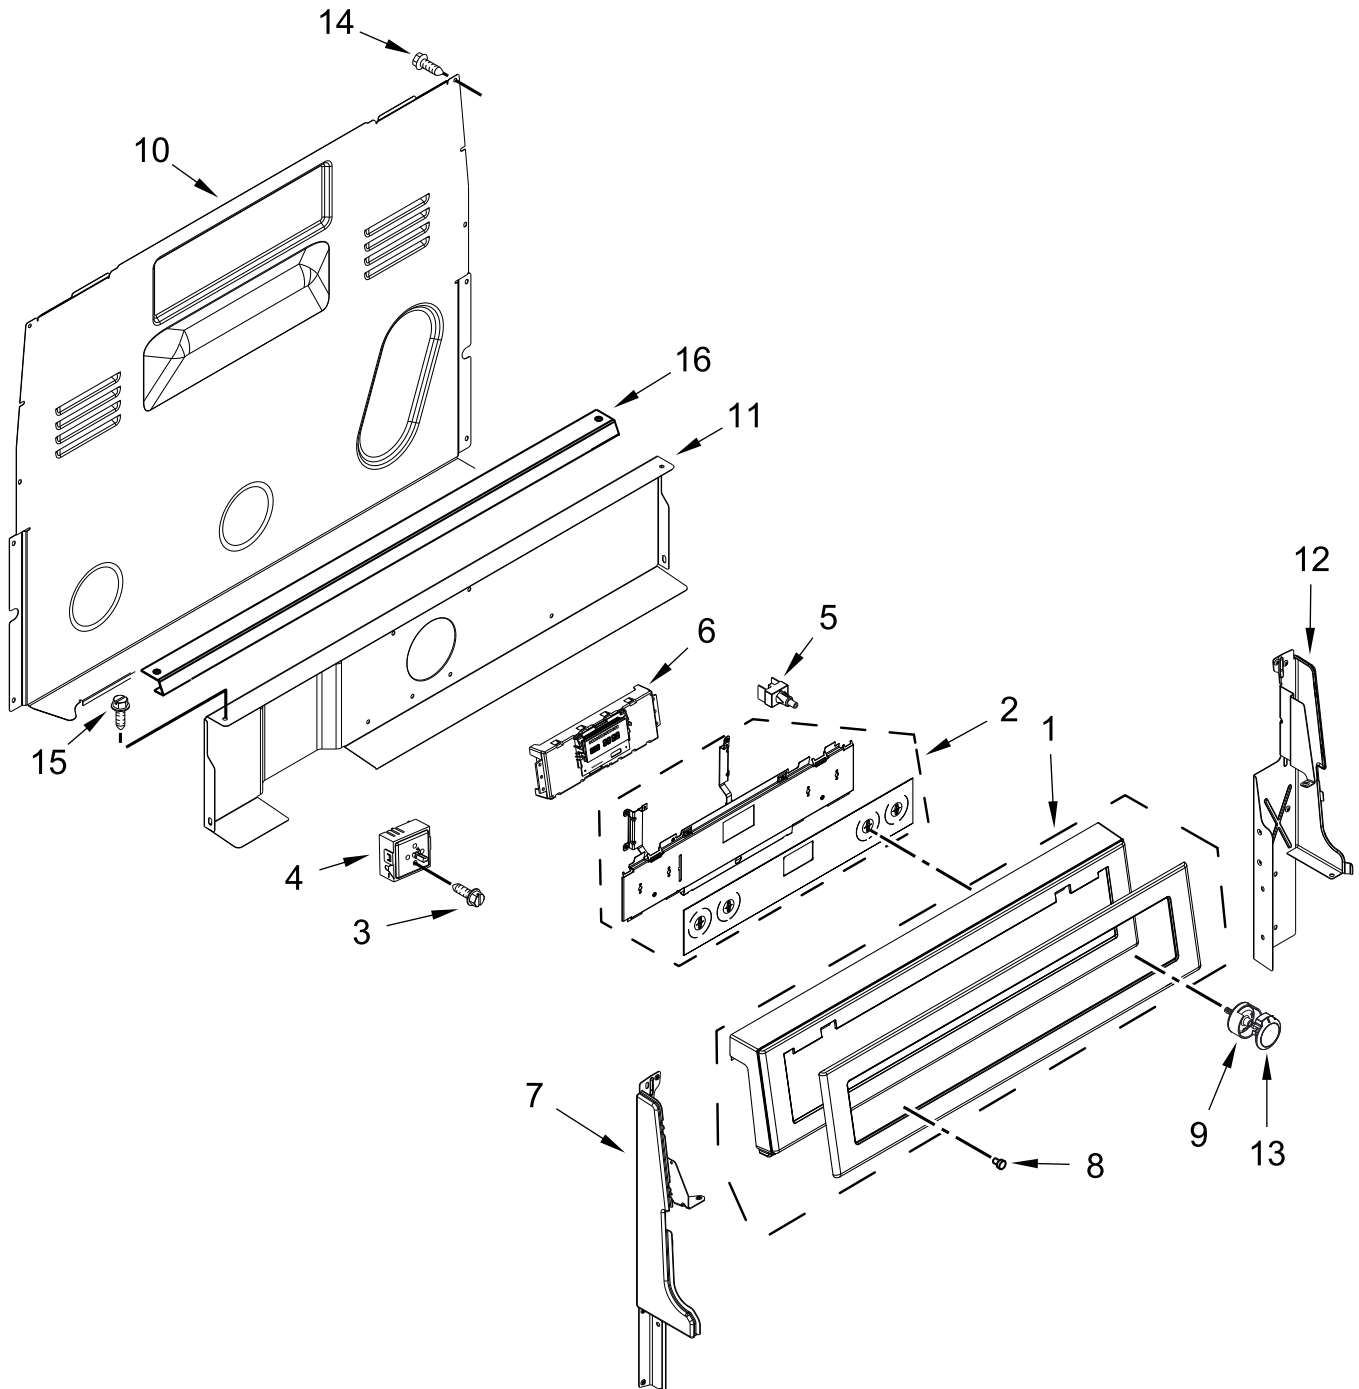

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	5	8523265	Light, Indicator (125V)	14	3196178	Screw
	W11024860	Black Stainless	6	W10894863	Control, Maxwell	15	W10362924	Screw
2		Assembly, Active Overlay	7		Endcap	16	W10525121	Bracket, Console Mounting
	W10692149	Black		W11130372	Black (Left)			
	W10674068	Screw	8	3196068	Lens, Indicator			
3			9	W10645811	Bezel, Knob			
4	W10437092	Switch, Infinite (Left Front & Right Front)	10	8272473	Cover, Upper Rear			
	W10437094	Switch, Infinite (Left Rear)	11	W10134247	Shield, Heat Endcap			
	W10578768	Switch, Infinite (Right Rear)	12	W11130379	Black (Right)			
			13		Knob			
				W10823535	Stainless			


CHASSIS PARTS

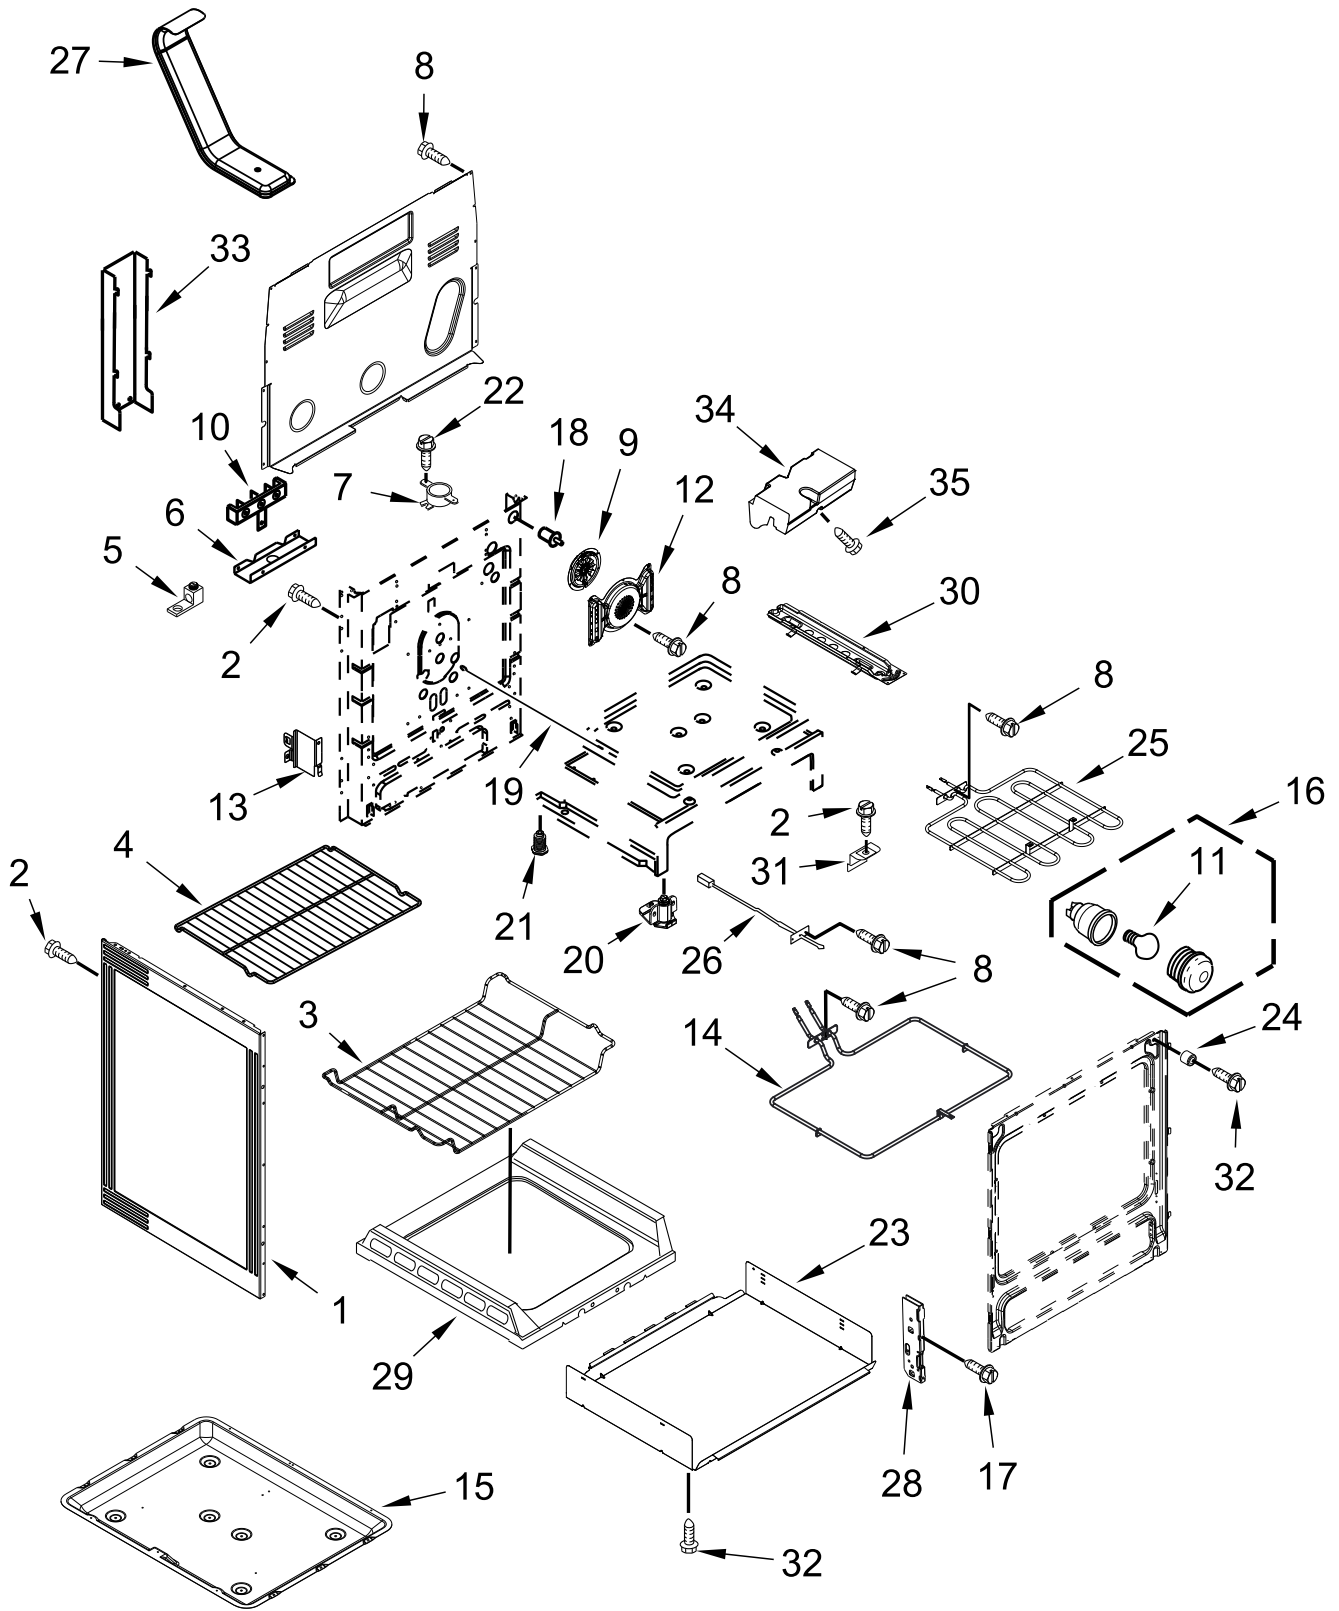

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Side	16	W11175594	Assembly, Light	32	W10516115	Screw
	W10162245	Black	17	W10031780	Screw	33	W10326122	Cover, Terminal Block
2	3196172	Screw	18	W10627802	Switch, Door	34	W10910404	Counterweight
3	W10289145	Rack, Oven (Gull-Wing)	19	W10273192	Rod, Door Switch	35	W11034869	Screw
4	W10531060	Rack, Oven	20	W10341186	Assembly, Front Foot			INSULATION
5	W10281322	Kit, Bare Wire Adapter Block	21	W10058460	Foot, Leveling		W10194393	Insulation, Wrap
6	3186034	Bracket, Service	22	3196172	Screw		W10225524	Insulation, Back
7	3196548	Fuse, Thermal	23	W10726740	Shield, Heat		W10225523	Insulation, Bottom
8	W10362924	Screw	24	9758701	Spacer, Door		4820F015-59	Insulation, Strap
9	W10756304	Assembly, Convection	25	W10544951	Element, Broil			
10	W10245259	Block, Terminal	26	W10586204	Sensor			
11	311255	Bulb, Oven Light	27	W10134285	Tube, Vent			
12	W10346153	Baffle, Full Convection	28	W10289077	Receiver, Hinge			
13	W10273002	Bracket, Oven Support	29	W10774446	Bottom, Oven			
14	W10774342	Element, Bake	30	W10390008	Assembly, Base Rail (Left)			
15	W10346147	Pan, Bake		W10390007	Assembly, Base Rail (Right)			
			31	W10035900	Support, Oven Bottom			


DOOR PARTS

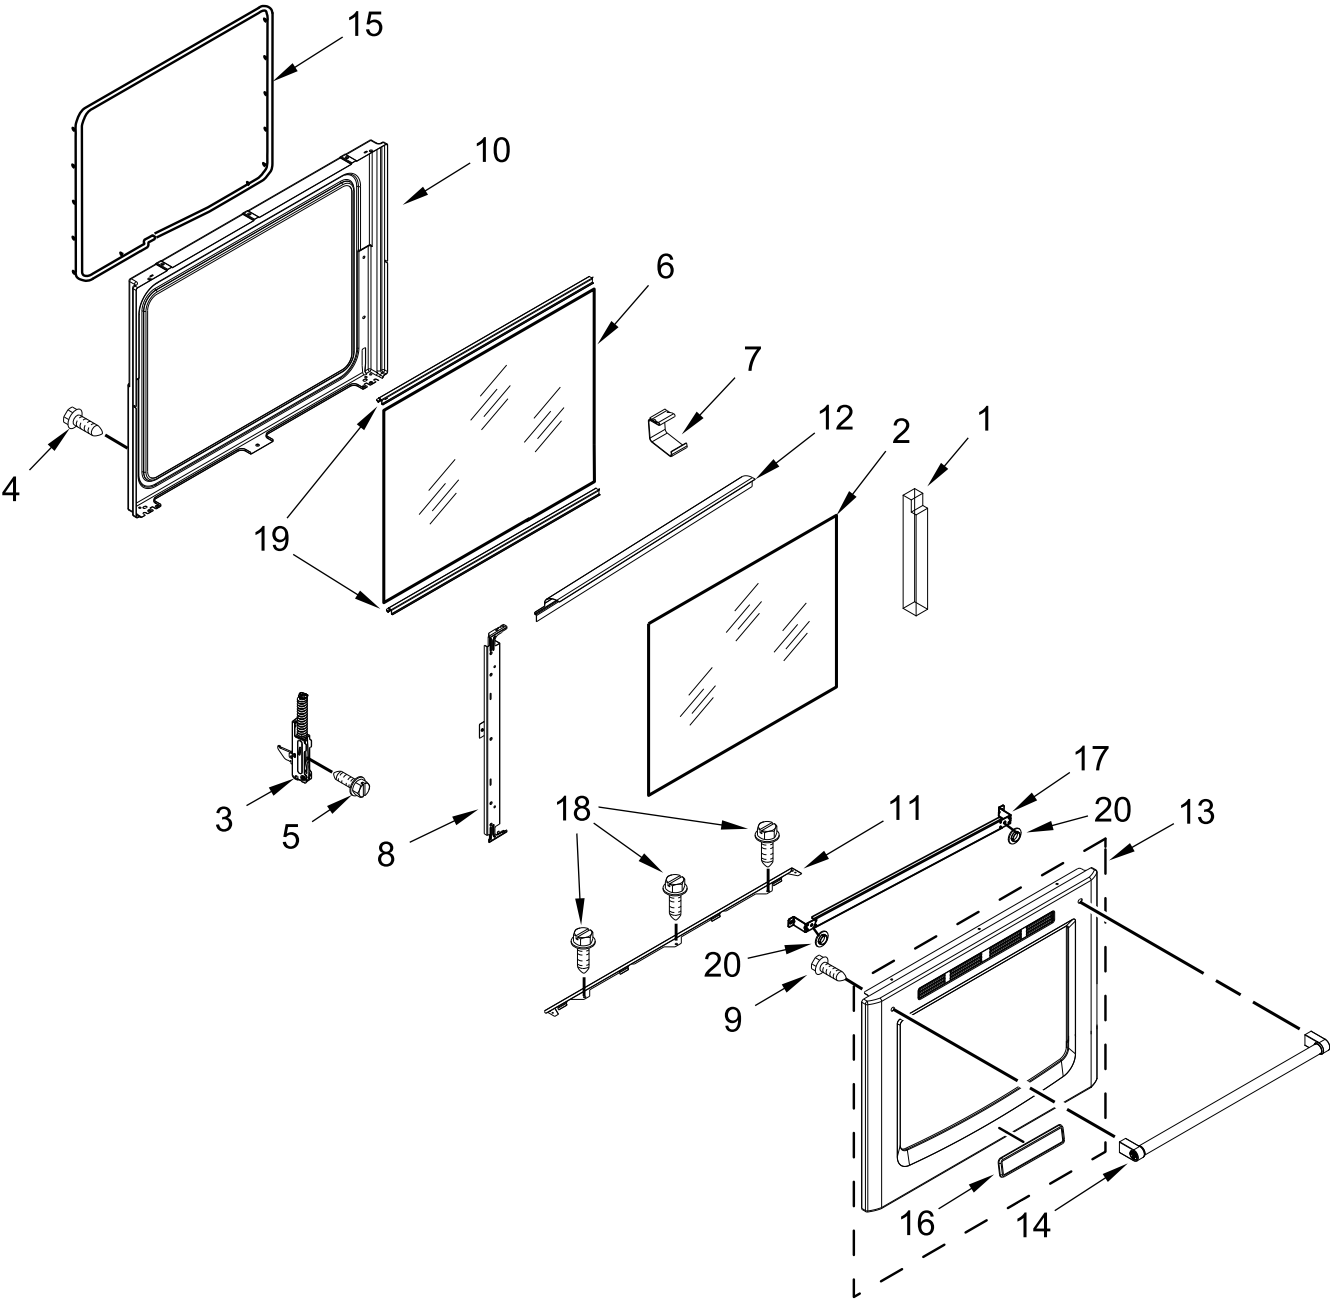

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10766562	Insulation, Door	10	W10826568	Liner, Door	16	W10518672	Badge
2		Glass, Outer Door	11	W10813140	Rail, Horizontal Support	17	W10541911	Bracket, Glass Upper Handle
	W10693388	Stainless	12		Liner, Door Scoop	18	9780274	Screw
3	W10885519	Hinge, Door (Active)		W10613791	Black	19	W10813142	Spacer, Glass
4	W10031790	Screw	13		Glass Assembly, Outer Door	20	W10319024	Washer, Door
5	W10362924	Screw		W10861703	Black Stainless			
6	W10813616	Glass, Inner	14		Handle, Door			
7	W10137382	Clip, Panel		W10551000	Stainless			
8	W10813139	Rail, Vertical Support	15	W10162385	Gasket, Door			
9	W10241367	Screw						

DRAWER PARTS

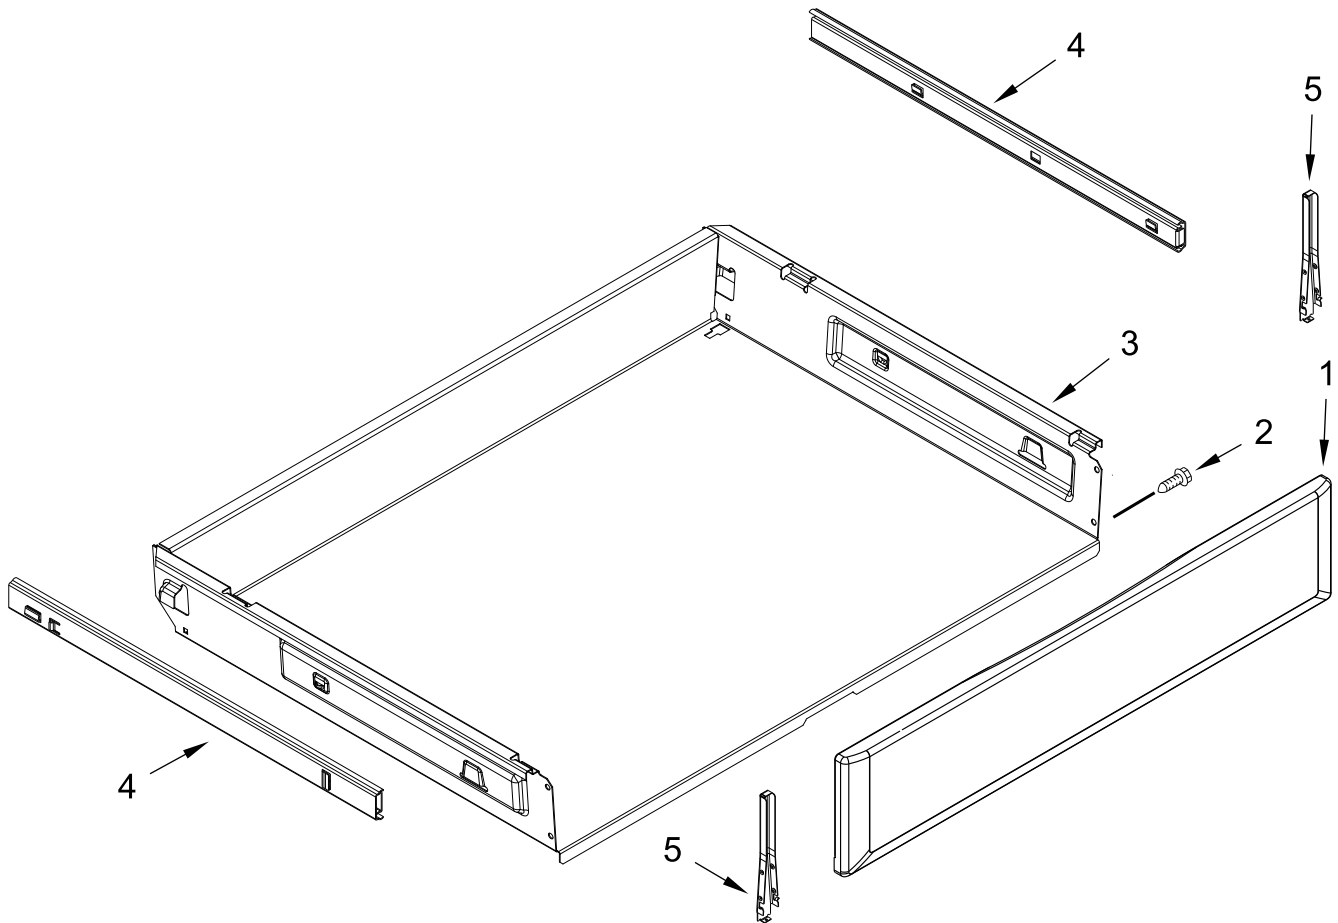

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W10865723	Black Stainless
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318027	Bracket, Drawer

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	31463	Protectant, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	W10432019	Alt Cleaning Kit
	WA906B	Scraper, Cooktop
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	W10205524	Split Oven Rack
	W10289145	Rack, Oven (Gull-Wing)
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	241430	Aluminum Foil

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	350938	Gray Primer
	350942	White Primer