


**KitchenAid®**

**30" ELECTRIC SLIDE-IN SELF-CLEAN CONVECTION RANGE**

**MODELS:**

KSEB900ESS3 (Stainless)


# COOKTOP PARTS

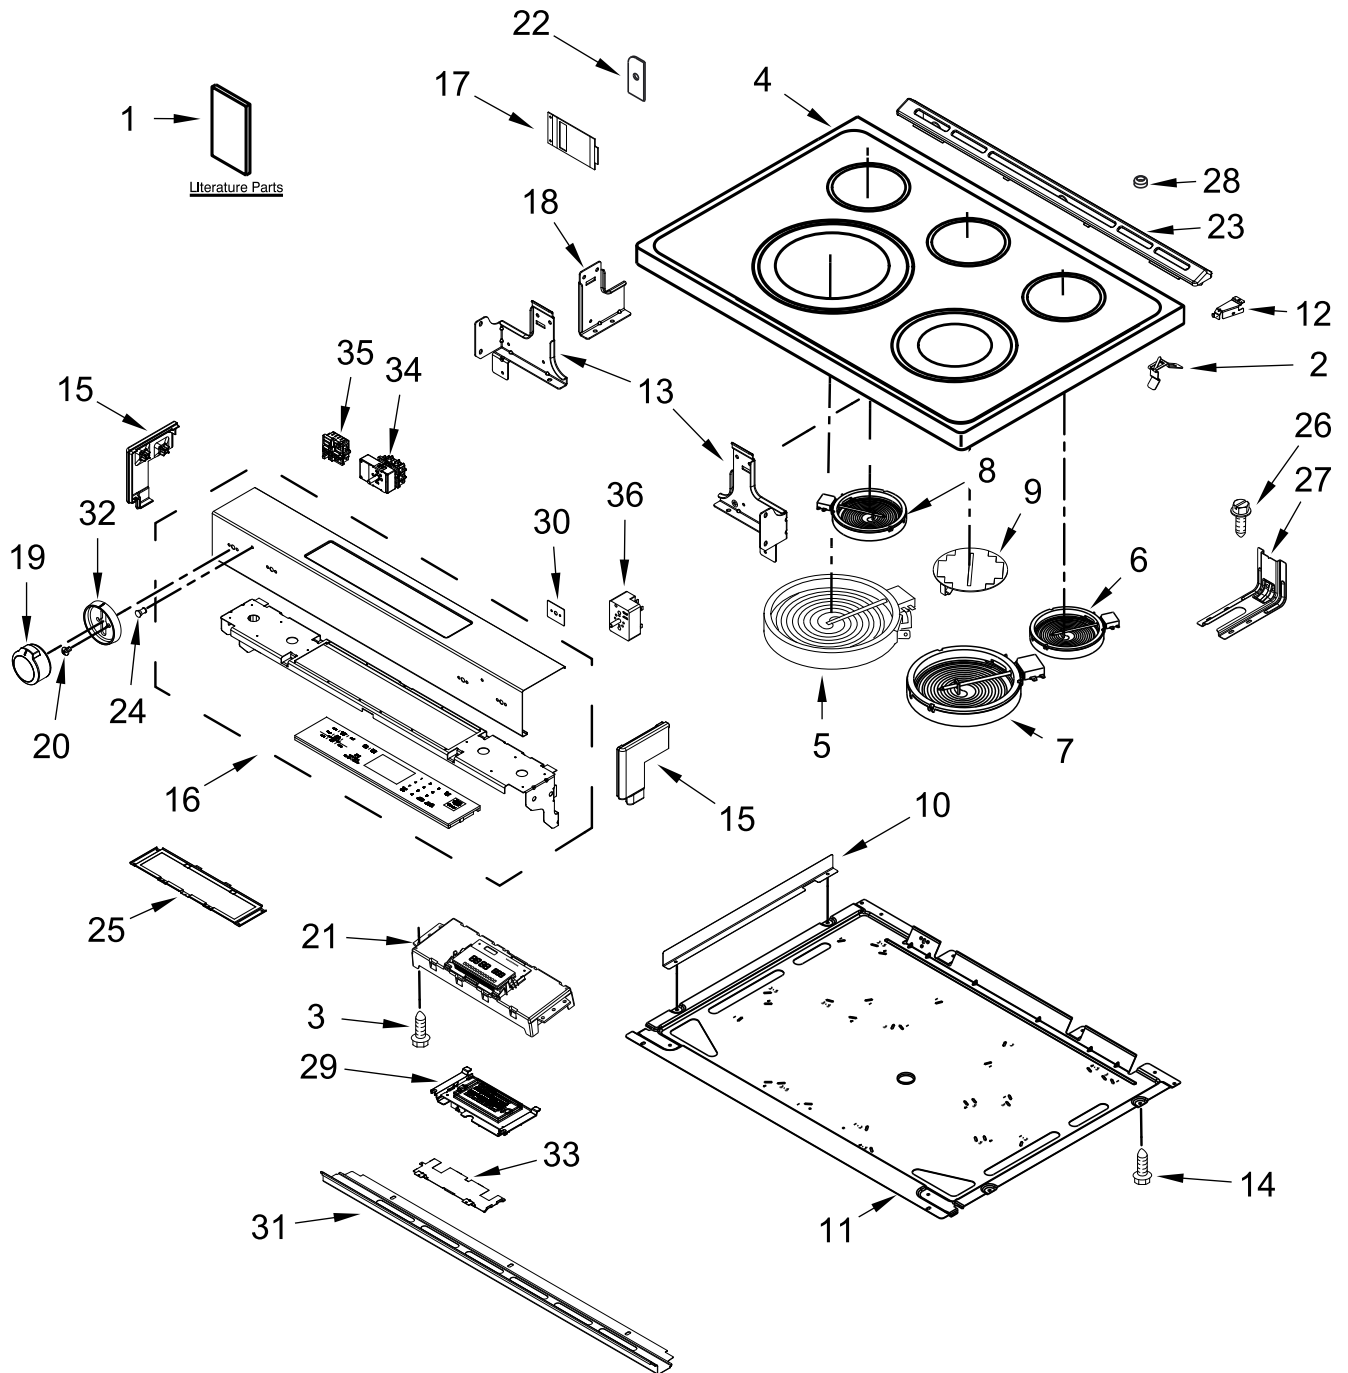

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	14	3196173	Screw	31		Console, Lower Panel
	W11047682	Instructions, Installation	15		Endcap		W10555934	Stainless
	W10844271	Sheet, Tech		W10555937	Stainless (Left)	32		Bezel
	W10896665	Use and Care Guide		W10555940	Stainless (Right)		W10663809	Stainless
	W10400064	Guide, Quick Start (English)	16		Console	33	W10558372	Bracket, Control
	W10400065	Guide, Quick Start (French)	17	W10901121	Stainless	34	W10437097	Switch, Infinite (Left Front)
	W10903848	Wiring Diagram	18	W10757531	Keypad, Shield	35	W10437094	Switch, Infinite (Right Front and Left Rear)
2	W10225448	Spring, Element	19		Knob	36	W10578768	Switch, Infinite (Right Rear)
3	3196178	Screw		W10823543	Stainless (Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
4		Cooktop		W10823541	Stainless (Left Rear)		W11196719	Harness, Main
	W10536296	Stainless		W10823538	Stainless (Right Front)		W10575120	Harness, Keypad
5	W10187839	Element (3000W) (Left Front)		W10823536	Stainless (Left Front)		W11172426	Harness, Display
6	8273994	Element (1200W) (Right Rear)		W10823536	Stainless (Left Front)		W11172417	Harness, Console
7	W10251108	Element (3200W) (Right Front)	20	3400882	Screw		W10664316	Clip, Harness (Cooktop)
8	W10342780	Element (1300W) (Left Rear)	21	W10759277	Control, MRC2		W11172530	Harness, Bake Drawer
9	W10799048	Element, Warm Zone (Center Rear)	22	W10882900	Gasket		W11134658	Harness, Cooktop
			23		Vent, Trim Top		3196520	Clip, Wire
				W10636529	Stainless		313438	Clip, Harness
10	W10613286	Bracket, Radiant	24	3196068	Lens, Indicator			
11	W10536275	Pan, Radiant	25	W10555923	Bracket, User Interface			
12	W10162253	Brace, Corner (Left)	26	7101P485-60	Screw, Anti-Tip Kit			
	W10162252	Brace, Corner (Right)	27	W10606241	Bracket, Anti-Tip			
13	W10289169	Support, Cooktop (Right)	28	W10664705	Bumper			
	W10289170	Support, Cooktop (Left)	29	W10759323	Assembly, Display			
			30	7201P077-60	Gasket, Infinite Switch			


# CHASSIS PARTS

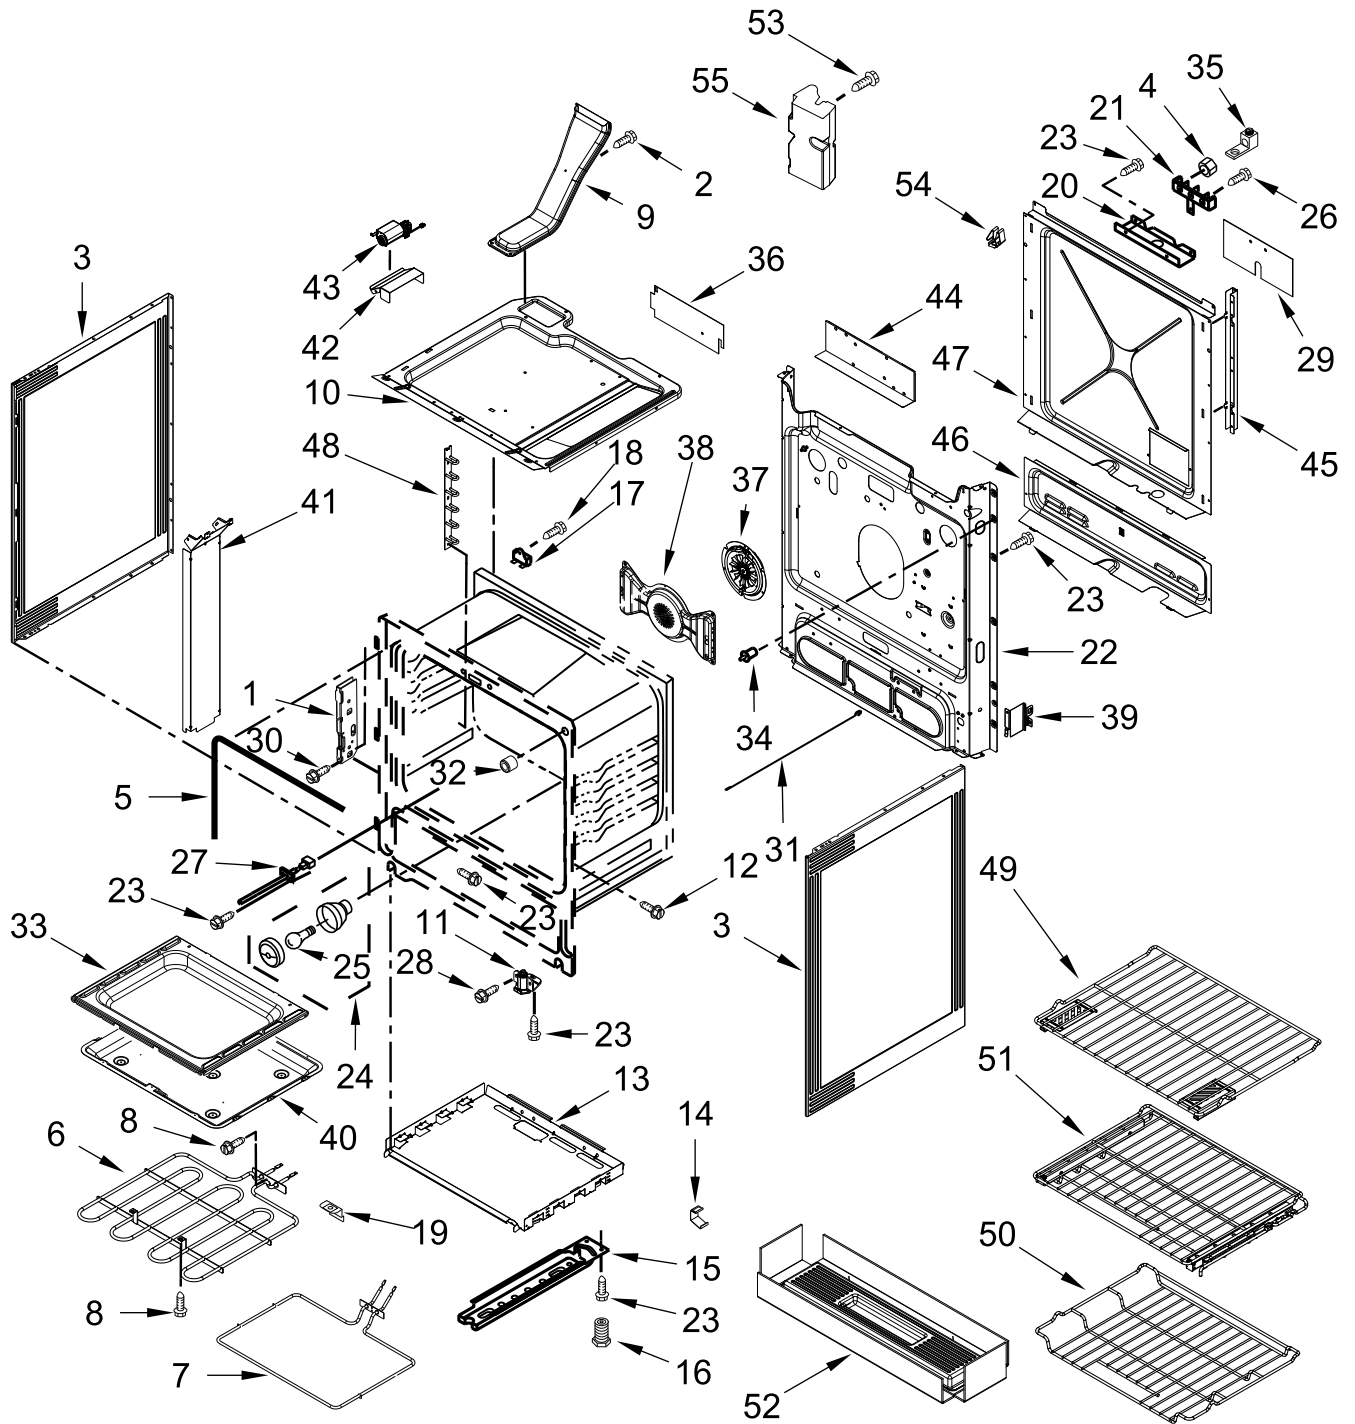

# CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	22	W10289166	Back, Main	44	W10162260	Shield, Heat
2	W10362924	Screw	23	3196178	Screw	45	W10162241	Channel, Rear
3		Panel, Side	24	W10454648	Assembly, Light	46	W10162248	Cover, Wire
	W10162245	Black	25	311255	Bulb, Oven Light	47	W10289172	Cover, Back
4	3400029	Nut	26	3400016	Screw	48	W10603482	Rack, Ladder
5	W10162385	Gasket, Door	27	W10586204	Sensor	49	W10554007	Rack, Steam
6	W10544952	Element, Broil	28	3196169	Screw	50	W10554006	Rack, Maximum Capacity
7	W10774342	Element, Bake	29	W10655441	Shield, Power Cord	51	W10911366	Rack, Sliding
8	W10362924	Screw	30	W10031780	Screw	52	W10686408	Kit, Reservoir (Steam Rack)
9	W11122085	Assembly, Flue	31	W10273192	Rod, Door Switch	53	W11034869	Screw
10	W10289168	Box, Burner SI	32	9758701	Spacer, Door	54	W10866583	Panel, Clip
11	W10341186	Assembly, Front Foot	33	W10774446	Bottom, Oven	55	W10914589	Counterweight
12	W10067840	Screw	34	W10627802	Switch, Door			FOLLOWING PARTS NOT ILLUSTRATED
13	W10541959	Shield, Bake	35	W10281322	Kit, Bare Wire Adapter Block		W10655489	Insulation, Wrapper
14	W10137382	Clip, Panel	36	W11117035	Shield, Wire		W10575374	Insulation, Bottom
15	W10390008	Assembly, Base Rail (Left)	37	W10874472	Assembly, Convection		4820F015-59	Insulation, Strap
	W10390007	Assembly, Base Rail (Right)	38	W10346153	Baffle, Full Convection		W10655490	Insulation, Main Back
16	W10058460	Foot, Leveling	39	W10273002	Bracket, Oven Support		W10655442	Insulation, Heat Shield
17	3196548	Fuse, Thermal	40	W10346147	Pan, Bake		7111P017-60	Clamp, Wire
18	3196172	Screw	41	W10162255	Duct, Cover			
19	W10035900	Support, Oven Bottom	42	W10162254	Duct, Cooling			
20	3186034	Bracket, Service	43	W11190724	Assembly, Cooling Fan			
21	W10245259	Block, Terminal						

# DOOR PARTS

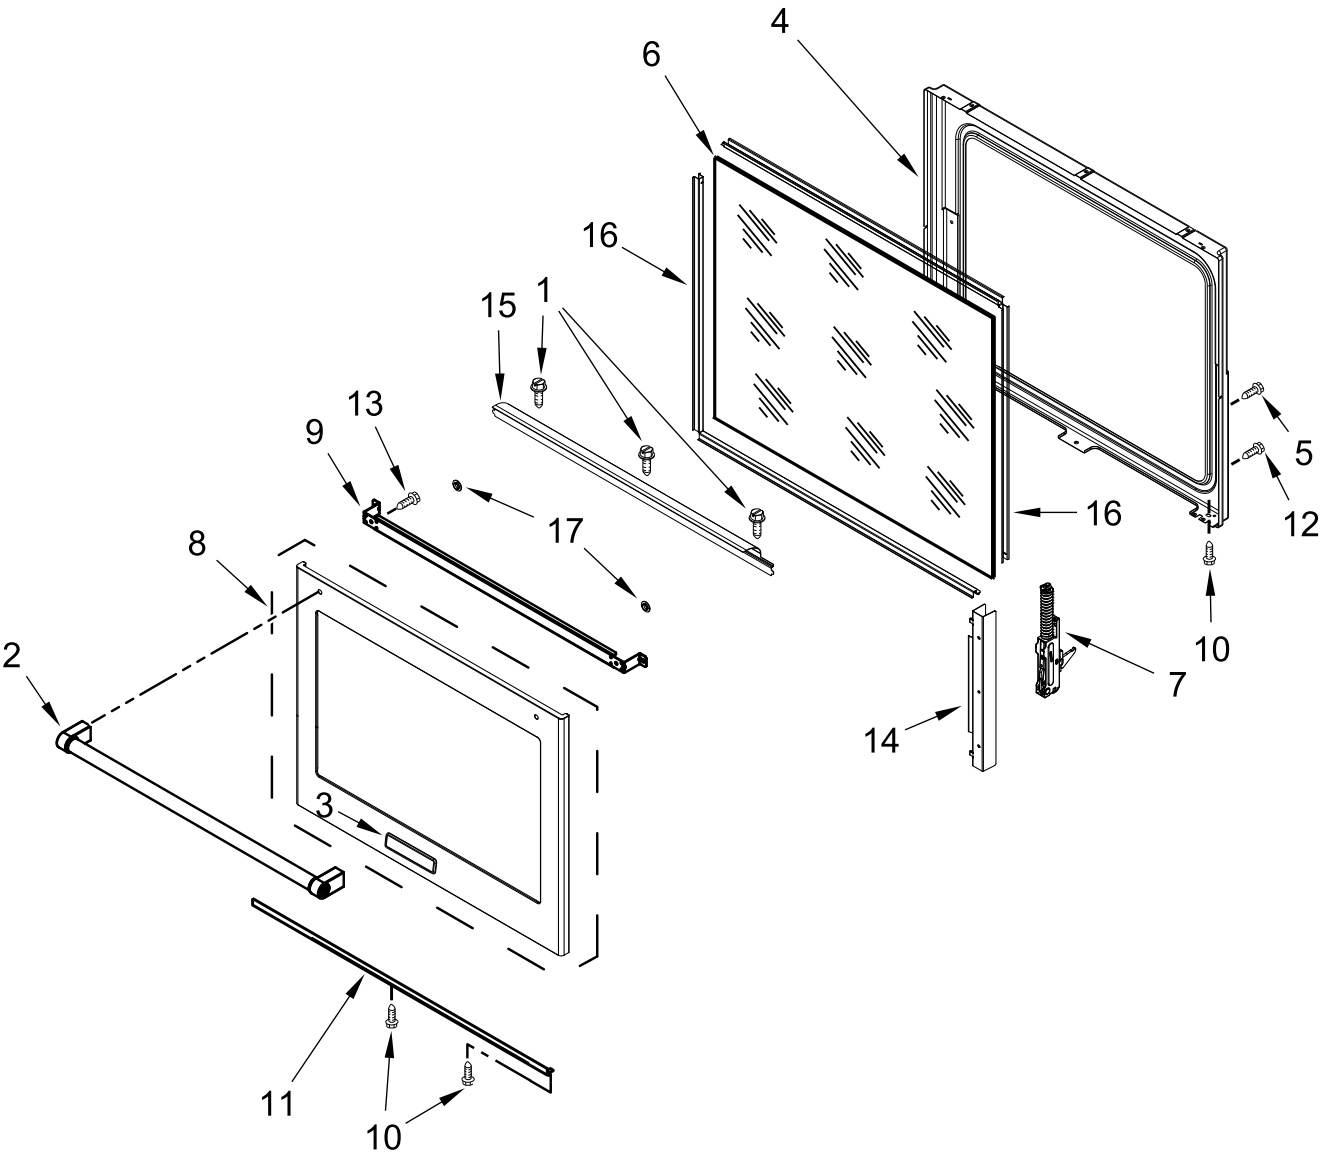


# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	9780274	Screw
2		Assembly, Door Handle
	W10551000	Stainless
3	W10518672	Badge
4	W10826568	Liner, Door
5	W10031790	Screw
6	W10813616	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10885519	Hinge, Door (Active)
8		Assembly, Outer Door
	W10634271	Stainless
9	W10541911	Bracket, Glass Upper Handle
10	W10327235	Screw
11	W10813140	Rail, Horizontal Support

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10031780	Screw
13	8533988	Screw
14	W10813139	Rail, Vertical Support
15		Scoop, Door
	W10551024	Stainless
16	W10813142	Spacer, Glass
17	W10319024	Washer, Door

# DRAWER PARTS

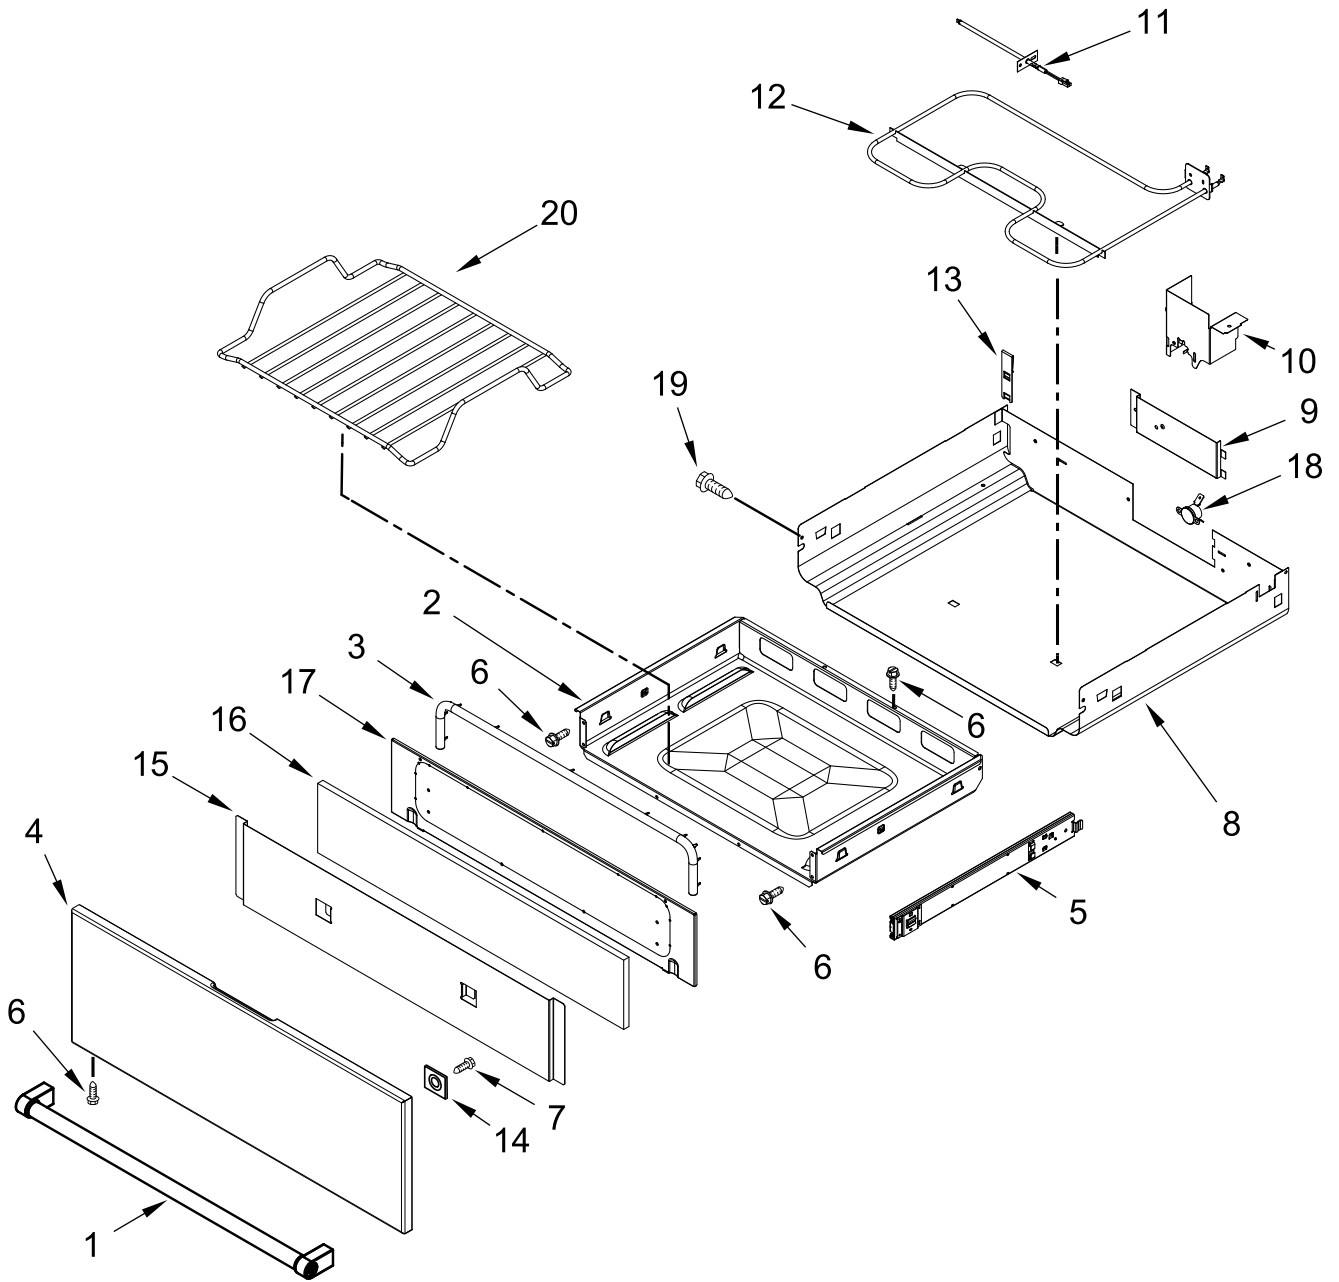



# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	6	W10327235	Screw	14	3823F017-45	Spacer, Handle
	W10551000	Stainless	7	3400882	Screw	15	W10551018	Insulation, Drawer Front
2	W10757442	Drawer, Bake	8	W10634260	Enclosure, Warming	16	W10550982	Insulation, Drawer
3	W10550987	Seal, Drawer	9	W10727084	Cover, Gas Valve	17	W10541947	Panel, Front Inner
4		Panel, Drawer Front	10	W10634259	Cover, Wire	18	W10729897	Fuse, Thermal
	W10541954	Stainless	11	W10720530	Sensor	19	3196560	Screw
5	W10921904	Slide, Drawer (Left)	12	W10541944	Element, Bake	20	W10602493	Rack, Bake Drawer
	W10921905	Slide, Drawer (Right)	13	W10551019	Cover, Side			

# OPTIONAL PARTS (NOT INCLUDED)

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS / POLISHES
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
	242905	Kit, Canning Unit
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless