

**KitchenAid®**

**30" ELECTRIC SLIDE-IN SELF-CLEAN CONVECTION RANGE**

**MODELS:**

 
KSEG700ESS3 (Stainless)



# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	13	W10289169	Support, Cooktop (Right)	24	3196068	Lens, Indicator
	W11047682	Instructions, Installation		W10289170	Support, Cooktop (Left)	25	W10555923	Bracket, User Interface
	W10896665	Use and Care Guide	14	3196173	Screw	26	7101P485-60	Screw, Anti-Tip Kit
	W10844271	Sheet, Tech	15		Endcap	27	W10606241	Bracket, Anti-Tip
	W10400064	Guide, Quick Start (English)		W10555937	Stainless (Left)	28	W10664705	Bumper
	W10400065	Guide, Quick Start (French)		W10555940	Stainless (Right)	29	W10759325	Assembly, Display
	W10903848	Wiring Diagram	16		Console	30	7201P077-60	Gasket, Infinite Switch
2	W10225448	Spring, Element		W10901128	Stainless	31		Console, Lower Panel
3	3196178	Screw	17	W10578768	Switch, Infinite (Right Rear)		W10555934	Stainless
4		Cooktop				32		Bezel
	W10536295	Black	18	W10437094	Switch, Infinite (Right Front and Left Rear)		W10663809	Stainless
5	W10187839	Element (3000W) (Left Front)				33	W10558372	Bracket, Control
6	8273994	Element (1200W) (Right Rear)	19		Knob	34	W10437097	Switch, Infinite (Left Front)
7	W10251108	Element (3200W) (Right Front)		W10823543	Stainless (Right Rear)	35	W10757531	Keypad, Shield
8	W10342780	Element (1300W) (Left Rear)		W10823541	Stainless (Left Rear)			FOLLOWING PARTS NOT ILLUSTRATED
9	W10799048	Element, Warm Zone (Center Rear)		W10823538	Stainless (Right Front)		W11188445	Harness, Main
10	W10613286	Bracket, Radiant		W10823536	Stainless (Left Front)		W10575120	Harness, Keypad
11	W10536275	Pan, Radiant	20	W10598048	Bracket, Console (Center)		W11172426	Harness, Display
12	W10162253	Brace, Corner (Left)					W11172417	Harness, Console
	W10162252	Brace, Corner (Right)		W10759276	Control, MRC2		W10664316	Clip, Harness (Cooktop)
				W10882900	Gasket		313438	Clip, Harness
			21		Vent, Trim Top		W11134658	Harness, Cooktop
			22				W10653092	Suppressor
			23	W10636528	Black			


# CHASSIS PARTS

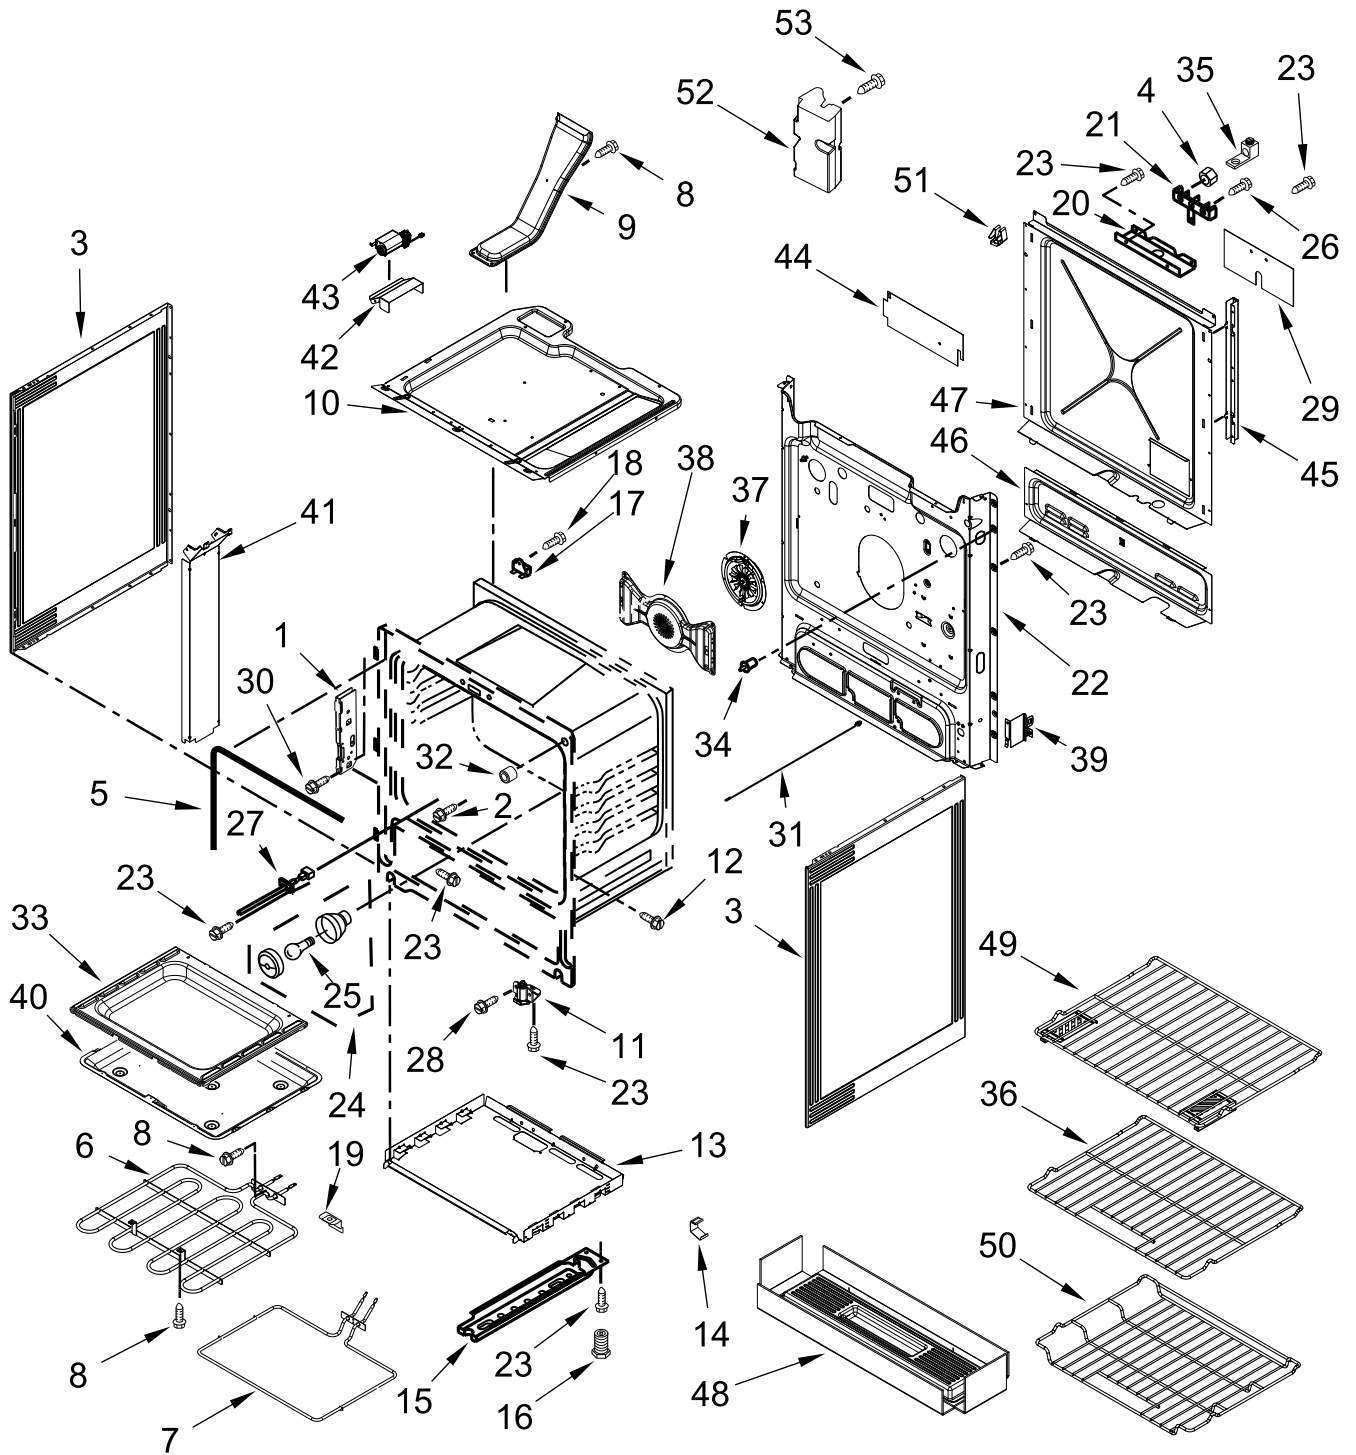

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	20	3186034	Bracket, Service	41	W10162255	Duct, Cover
2	3196560	Screw	21	W10245259	Block, Terminal	42	W10162254	Duct, Cooling
3		Panel, Side	22	W10289166	Back, Main	43	W11190724	Assembly, Cooling Fan
	W10162245	Black	23	3196178	Screw	44	W11117035	Shield, Wire
4	3400029	Nut	24	W10454648	Assembly, Light	45	W10162241	Channel, Rear
5	W10162385	Gasket, Door	25	311255	Bulb, Oven Light	46	W10162248	Cover, Wire
6	W10544952	Element, Broil	26	3400016	Screw	47	W10289172	Cover, Back
7	W10774342	Element, Bake	27	W10586204	Sensor	48	W10686408	Kit, Reservoir (Steam Rack)
8	W10362924	Screw	28	3196169	Screw	49	W10554007	Rack, Steam
9	W11122085	Assembly, Flue	29	W10655441	Shield, Power Cord	50	W10554006	Rack, Maximum Capacity
10	W10289168	Box, Burner SI	30	W10031780	Screw	51	W10866583	Panel, Clip
11	W10341186	Assembly, Front Foot	31	W10273192	Rod, Door Switch	52	W10914589	Counterweight
12	W10067840	Screw	32	9758701	Spacer, Door	53	W11034869	Screw
13	W10541959	Shield, Bake	33	W10774446	Bottom, Oven			FOLLOWING PARTS NOT ILLUSTRATED
14	W10137382	Clip, Panel	34	W10627802	Switch, Door	W10289173		Insulation, Wrap
15	W10390008	Assembly, Base Rail (Left)	35	W10281322	Kit, Bare Wire Adapter Block	W10575374		Insulation, Bottom
	W10390007	Assembly, Base Rail (Right)	36	W10554005	Rack, Heavy Duty	4820F015-59		Insulation, Strap
16	W10058460	Foot, Leveling	37	W10874472	Assembly, Convection	W10162240		Insulation, Back
17	3196548	Fuse, Thermal	38	W10346153	Baffle, Full Convection	7111P017-60		Clamp, Wire
18	3196172	Screw	39	W10273002	Bracket, Oven Support			
19	W10035900	Support, Oven Bottom	40	W10346147	Pan, Bake			
 
# DOOR PARTS

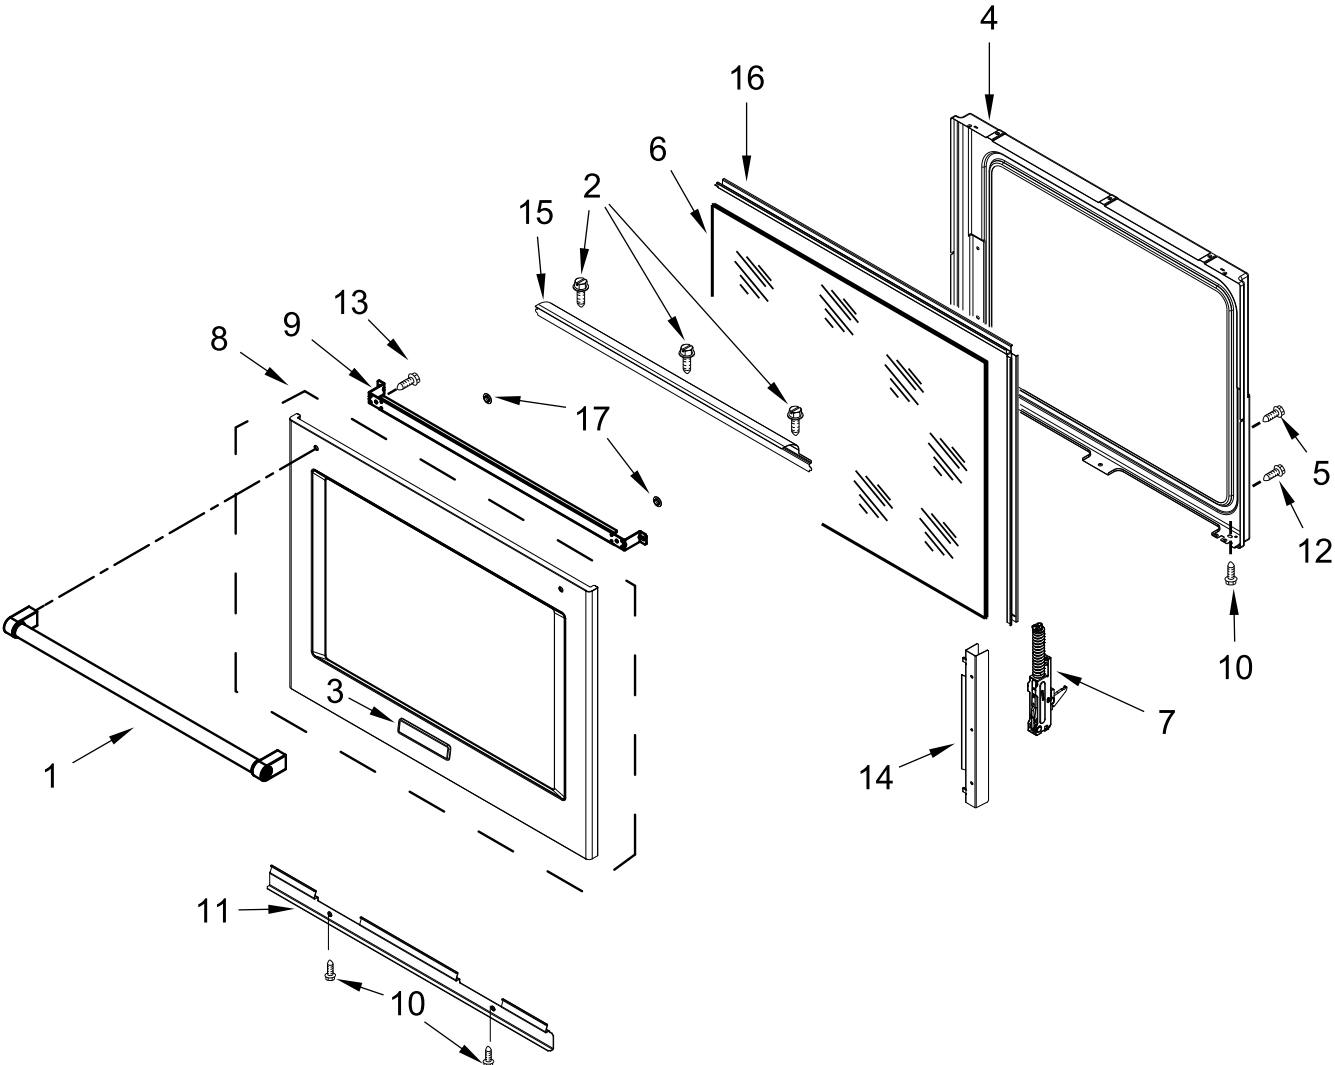


# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door Handle
	W10551000	Stainless
2	9780274	Screw
3	W10518672	Badge
4	W10826568	Liner, Door
5	W10031790	Screw
6	W10813616	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10885519	Hinge, Door (Active)
8		Assembly, Outer Door
	W10634271	Stainless
9	W10541911	Bracket, Glass Upper Handle
10	W10327235	Screw
11	W10813140	Rail, Horizontal Support

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10031780	Screw
13	8533988	Screw
14	W10813139	Rail, Vertical Support
15		Scoop, Door
	W10551024	Stainless
16	W10813142	Spacer, Glass
17	W10319024	Washer, Door
 
# DRAWER PARTS

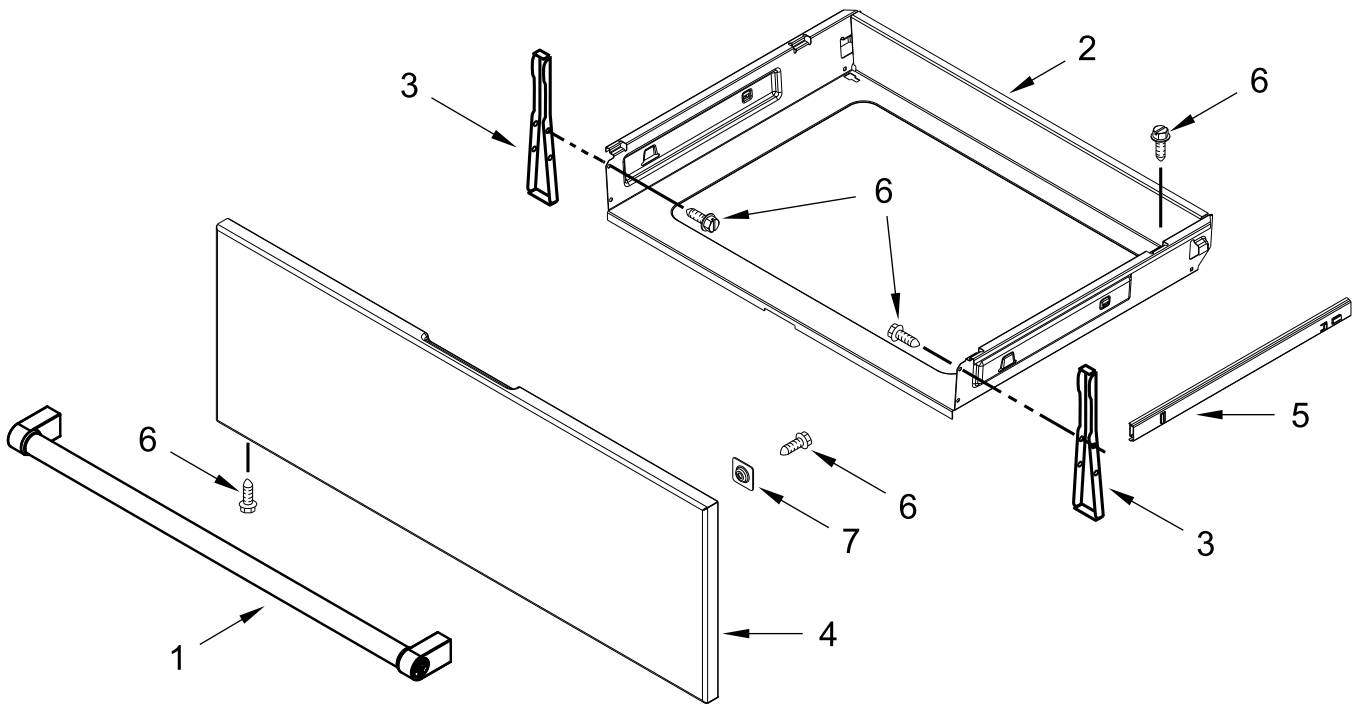



# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	5	W10441804	Slide, Drawer (Left)	6	3196169	Screw
	W10551000	Stainless		W10441805	Slide, Drawer (Right)	7	3823F017-45	Spacer, Handle
2	W10688022	Drawer, Storage						
3	W10318026	Bracket, Mounting						
4		Panel, Drawer Front						
	W10541954	Stainless						

# OPTIONAL PARTS (NOT INCLUDED)

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS / POLISHES
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
	242905	Kit, Canning Unit
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless